




ASSEMBLY INSTRUCTION
VESPERA BEDSIDE
ITEM CODE 85175

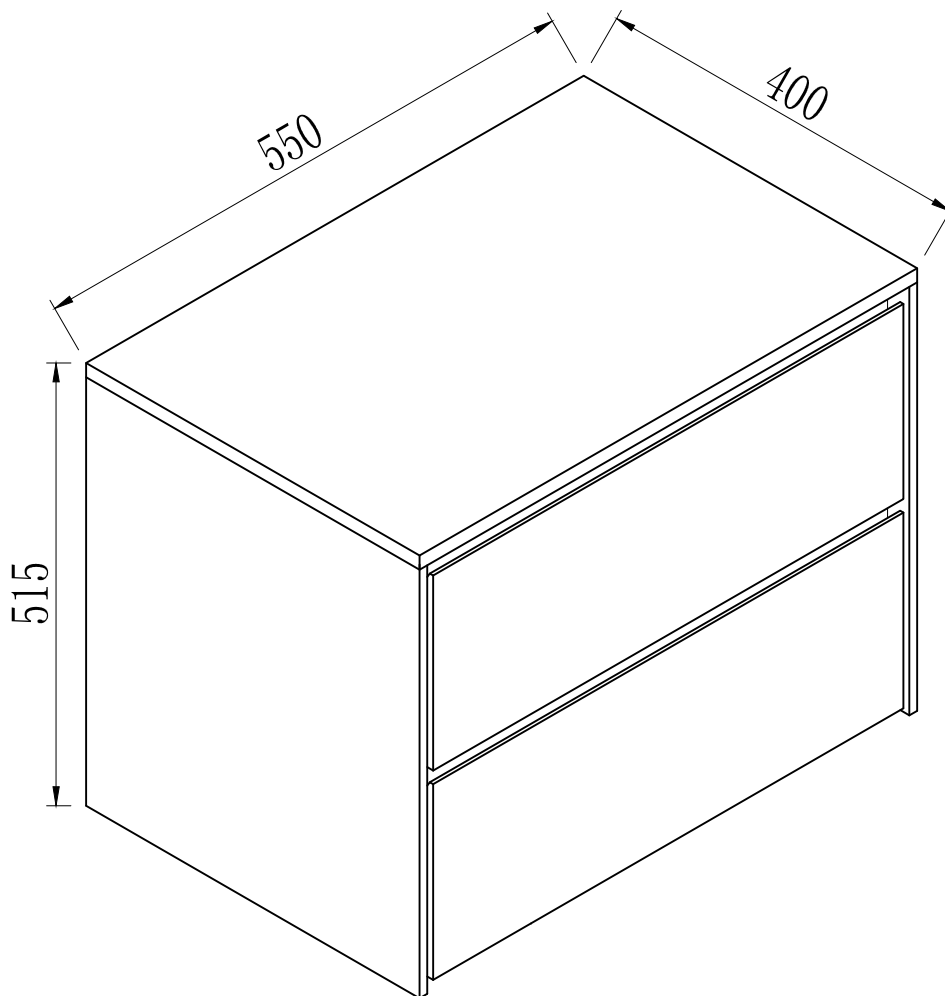

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.



For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084


85175

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

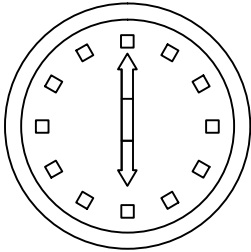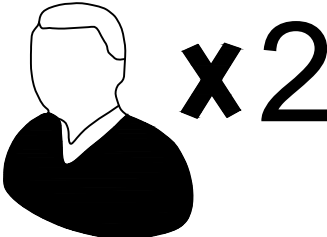
 ALLOW 30 MINUTES	 2 PEOPLE REQUIRED
 ⊕ ADDITIONAL TOOLS REQUIRED	

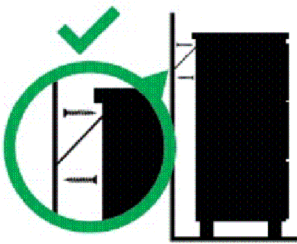⚠ WARNING		
		Children have died from furniture tipover. • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low NEVER put a TV on this furniture  This is a permanent label. Do not remove!

PARTS LIST

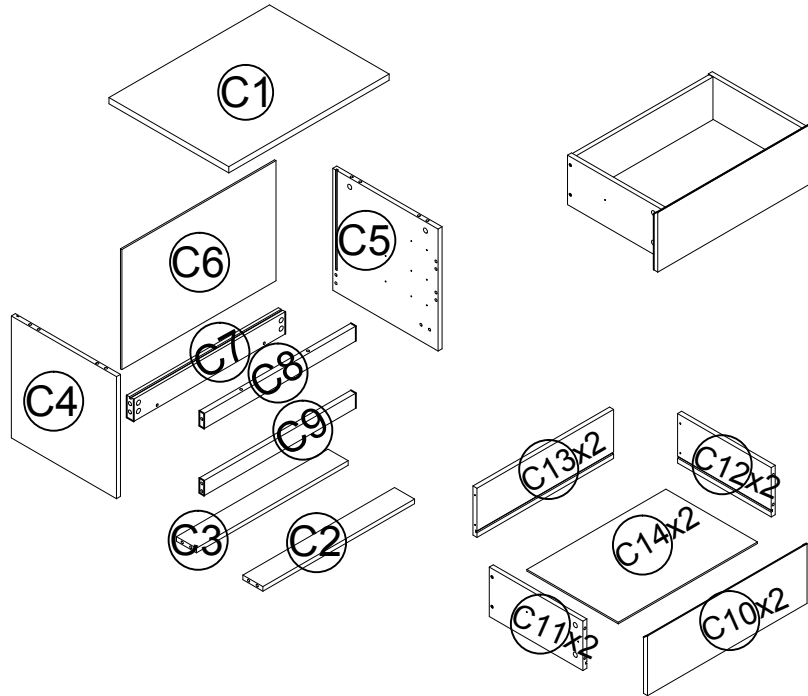


C1	Top Panel	C8	Front Rail
C2	Bottom Panel	C9	Front Rail
C3	Bottom Panel	C10X2	Drawer Front Panel
C4	Left Side Panel	C11X2	Drawer Left Side Panel
C5	Right Side Panel	C12X2	Drawer Right Side Panel
C6	Back Panel	C13X2	Drawer Back Panel
C7	Back Rail	C14X2	Drawer Bottom Panel

☐ A. Cam lock and Cam pin Ø15X35  30PCS	☐ B. Dowel Ø8x30  8PCS	☐ C. Screw Ø3.5x12  24PCS	☐ D. Screw Ø3.5x30  8PCS	☐ E. Connector 18x16x10  4PCS	☐ F. Screw Ø3x18  4PCS	☐ G. Runner  4PCS
☐ H. Protect foam Ø25x5mm  6PCS	☐ I. GLUE  1PCE	☐ J. Safety Bracket Kit  1PCS				

STEP 1:


Runner slide separately ($G=G1+G2$)

Carefully pull out the runner slide ($G2$) and press plastic clip to fully separate runner slide as diagram shown

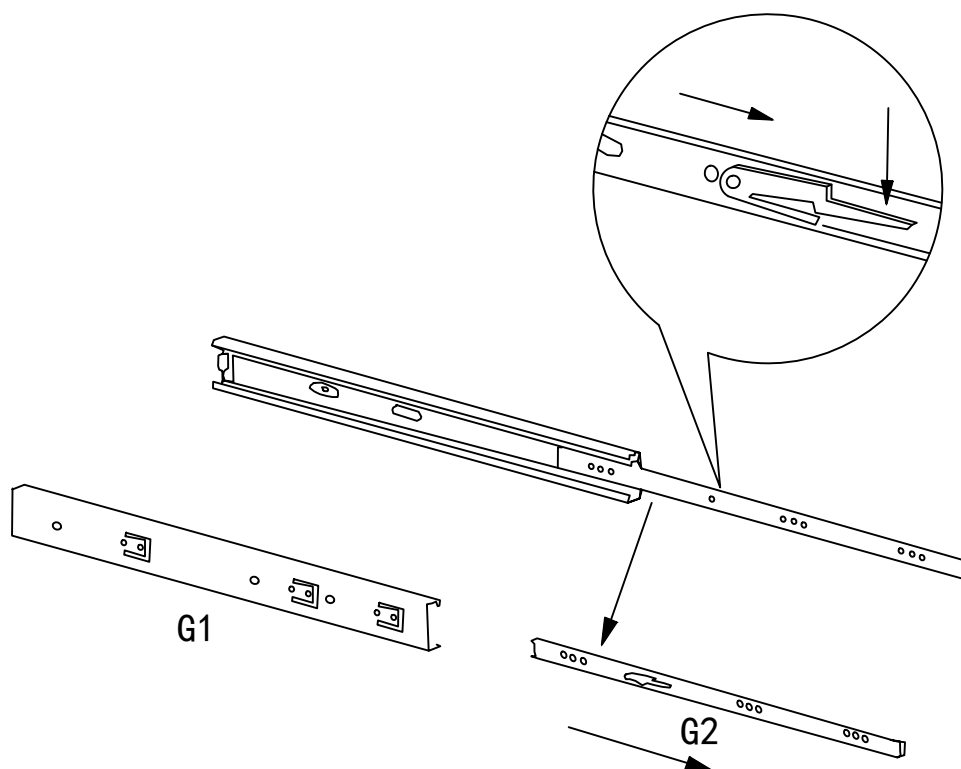


STEP 2:

Use Phillips Head Screwdriver to insert the Cam Pin(A) and Dowel(B) to the Top Panel(C1) and Left side Panel(C4) and Right Side Panel(C5) and Drawer Front Panel(C10) and Back Rail(C7). And use Phillips Head Screwdriver to attach the Runner(G1) to the Left side Panel(C4) and Right Side Panel(C5).

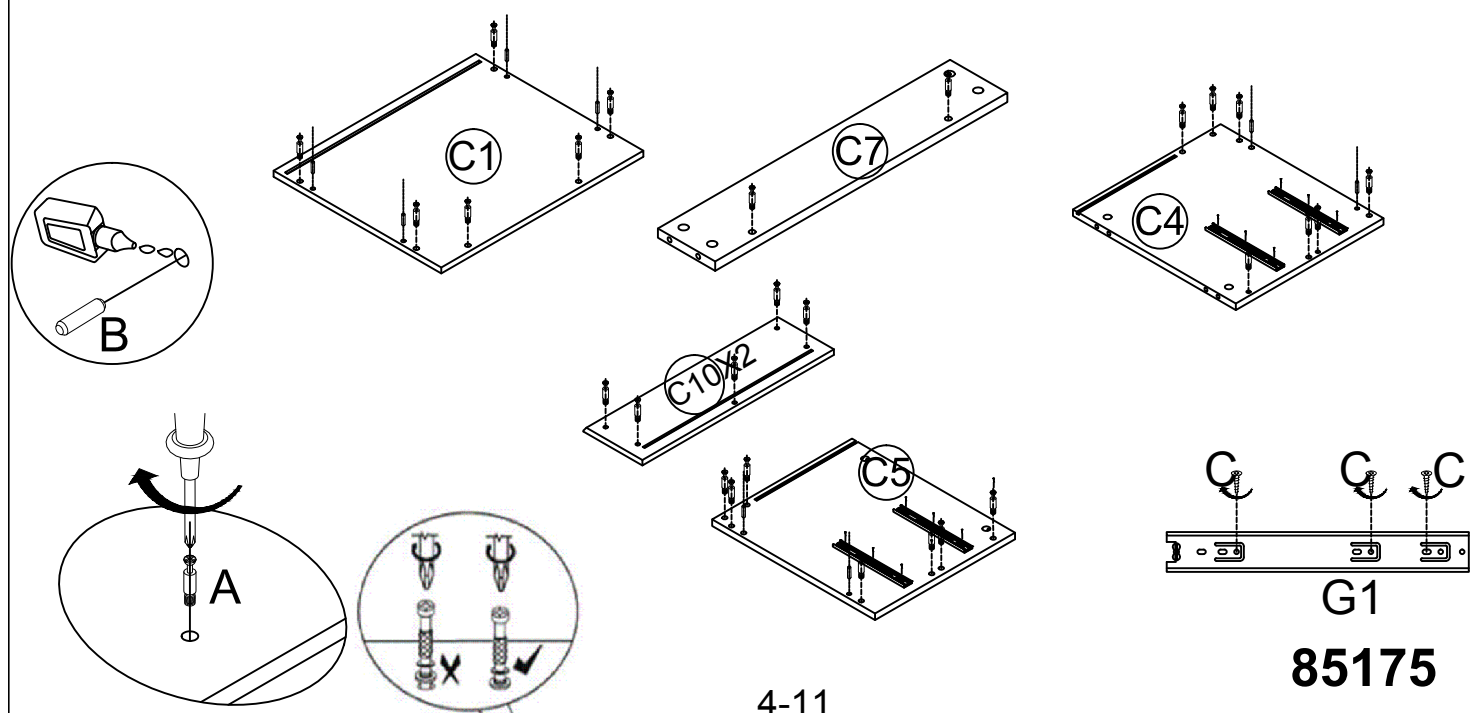


STEP 3:

Use Phillips Head Screwdriver to assemble Bottom Panel(C3) to the Back Rail(C7) with Cam Lock(A),assemble(C3,C7,C2,C8,C9) to the Left Side Panel (C4)and Rightside Panel(C5) with Cam Lock(A),Stick the Protect Foam(H) to the Bottom Panel(C2,C3). Dowel with Glue(I).

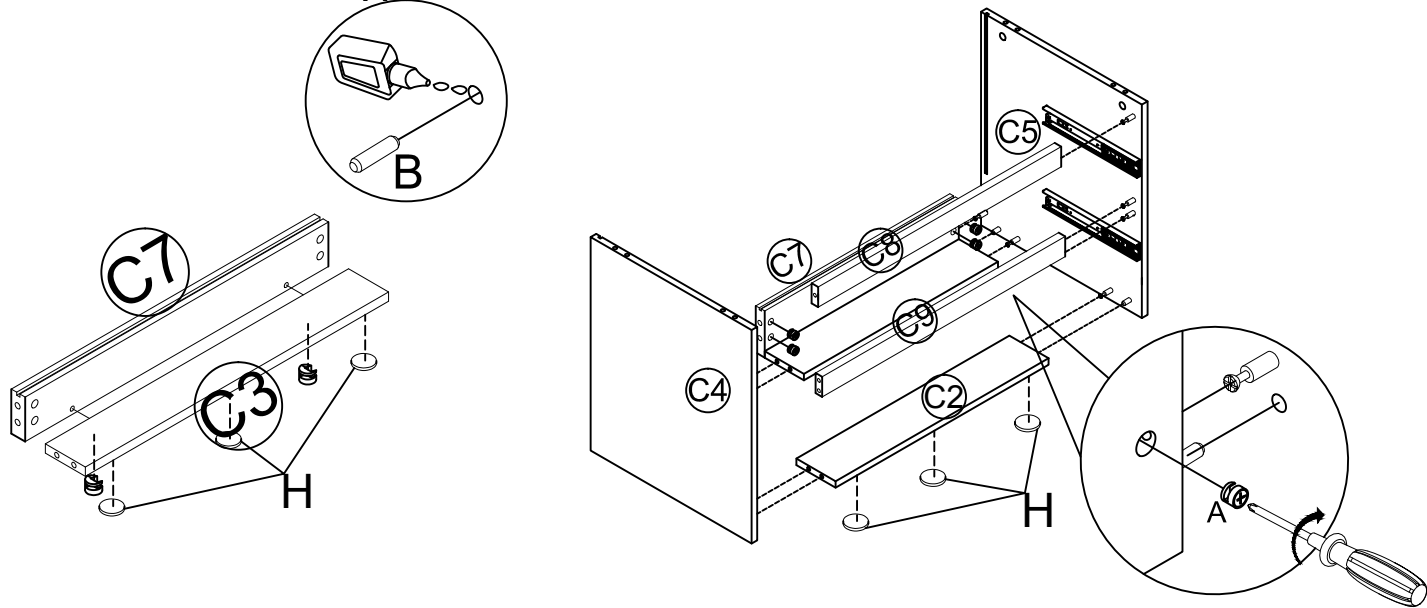


STEP 4:

Insert the Back Panel(C6) to the groove of Left Side Panel(C4) and Right Side Panel(C5).

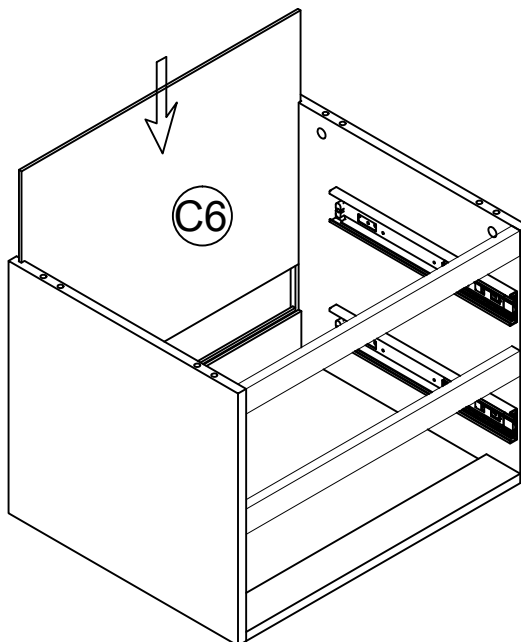


STEP 5:

Attach the Top Panel(C1) to the Left Side Panel(C4) and Right Side Panel(C5). And use Phillips Head Screwdriver to turn Cam lock(A) to lock into the head of Cam Pin(A).Dowel with Glue(I).

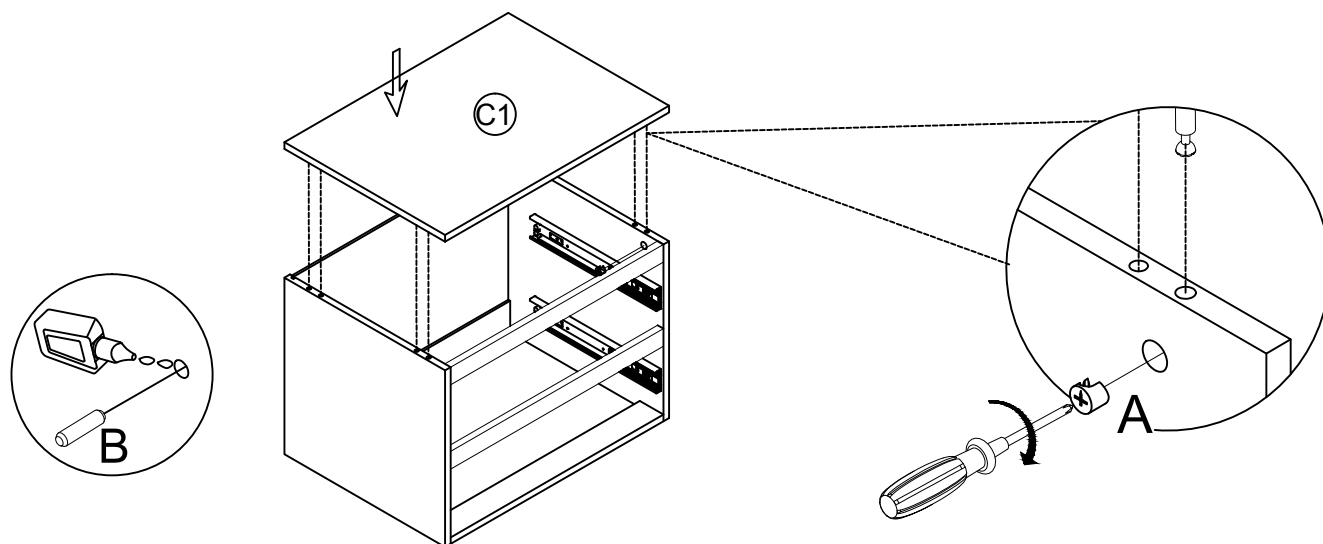

STEP 6:


Use Phillips Head Screwdriver to attach the Connector(E) to back corner with Screw(F).

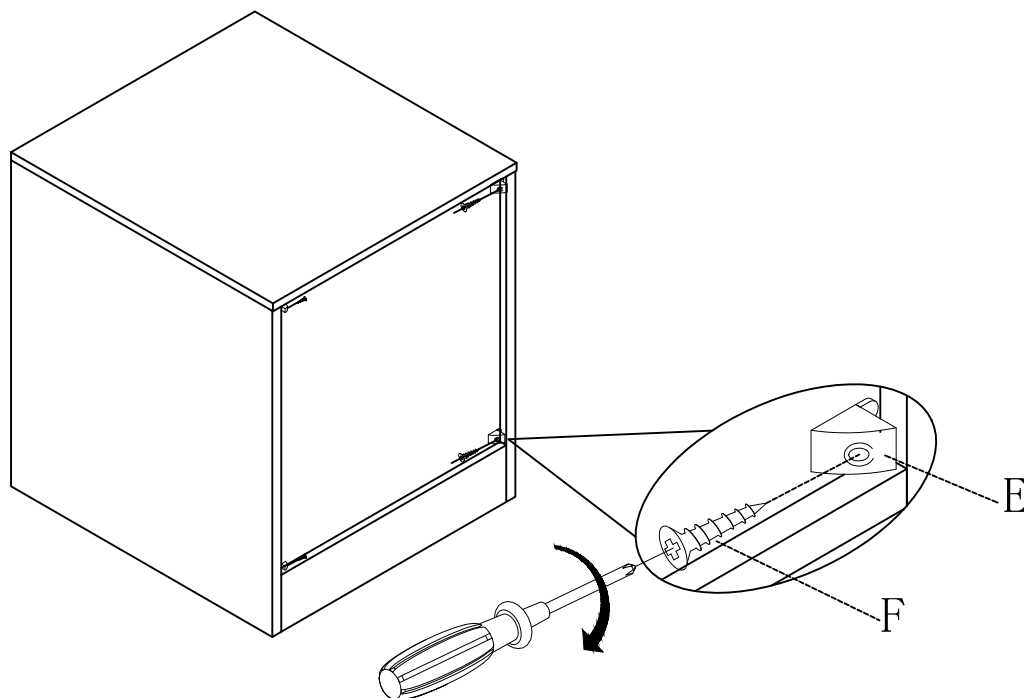

STEP 7:


Attach Panel(C13) to Panel(C11&C12) with Screw(D).

Attach Runner(G2) to Panel(C11&C12) with Screw(C).

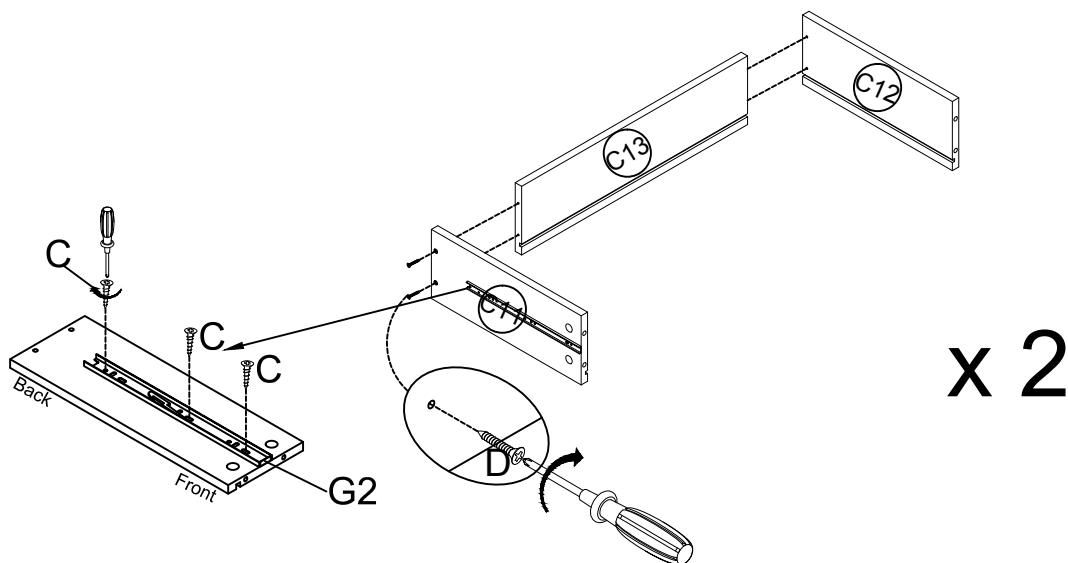

STEP 8:


Insert the Drawer Bottom Panel(C14) to the Groove, Use Phillips Head Screwdriver to assemble the Drawer Front Panel(C10) to the Drawer Side Panel(C11,C12) with Cam Lock (A).

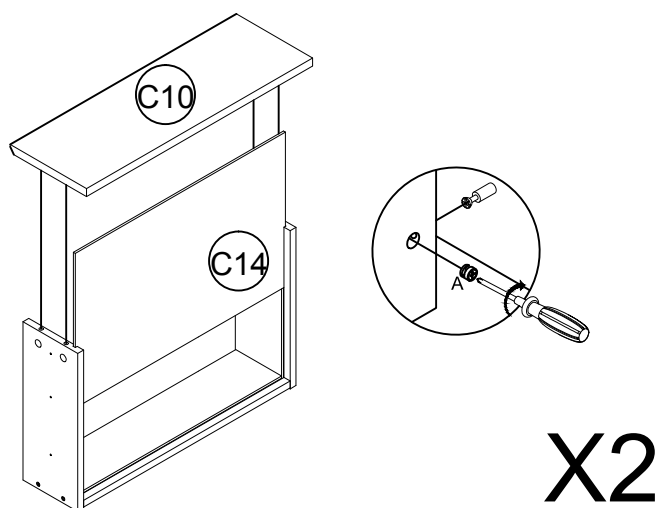

STEP 9:

Insert the drawers into the body.

Please slot in the drawer with
TIPPING WARNING STICKER
inside is slotted to top layer.

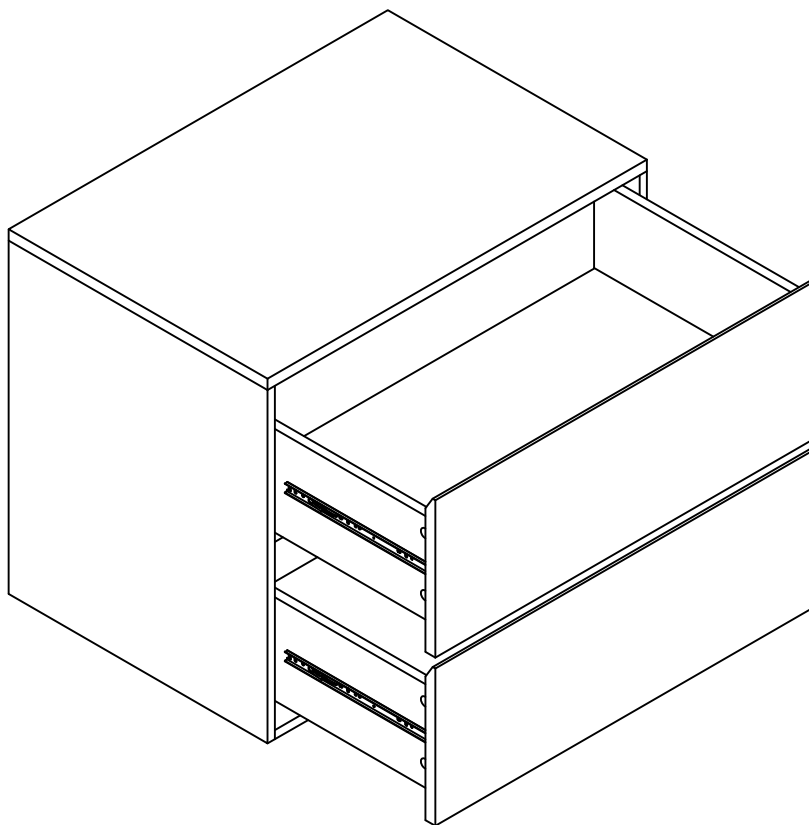

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

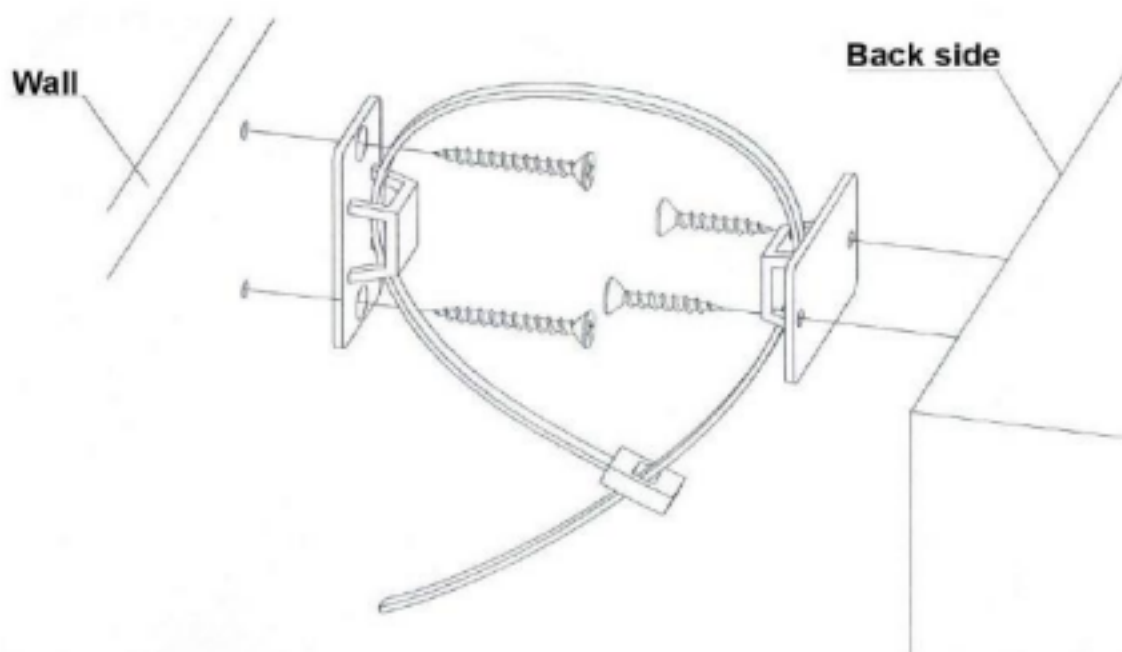


Assembly is complete

CASE GOODS/TABLE

CAUTION:

**ALWAYS LIFT YOUR PRODUCT WHEN MOVING/RELOCATING.
DO NOT DRAG. DRAGGING CAN CAUSE DAMAGE TO THE
LEGS**

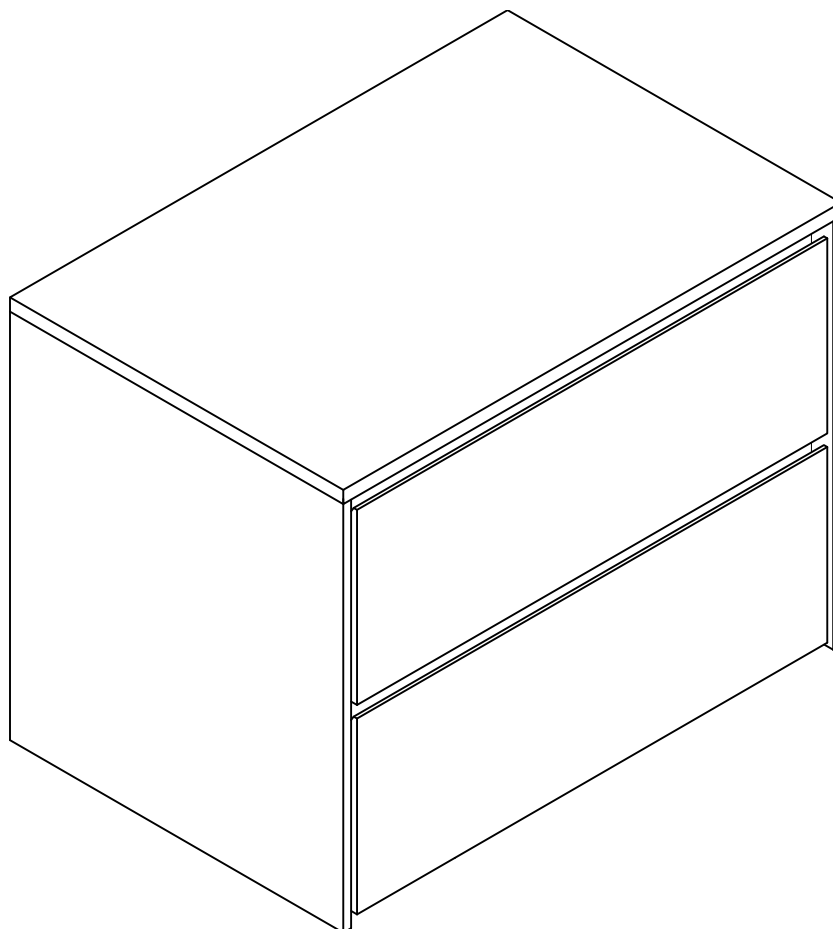

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.

General Product Care

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.