
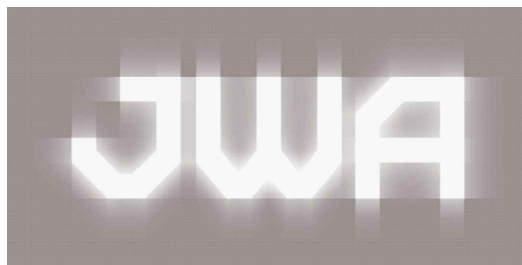


ASSEMBLY INSTRUCTION

SAXTON DOUBLE BED

Item Code **84244**


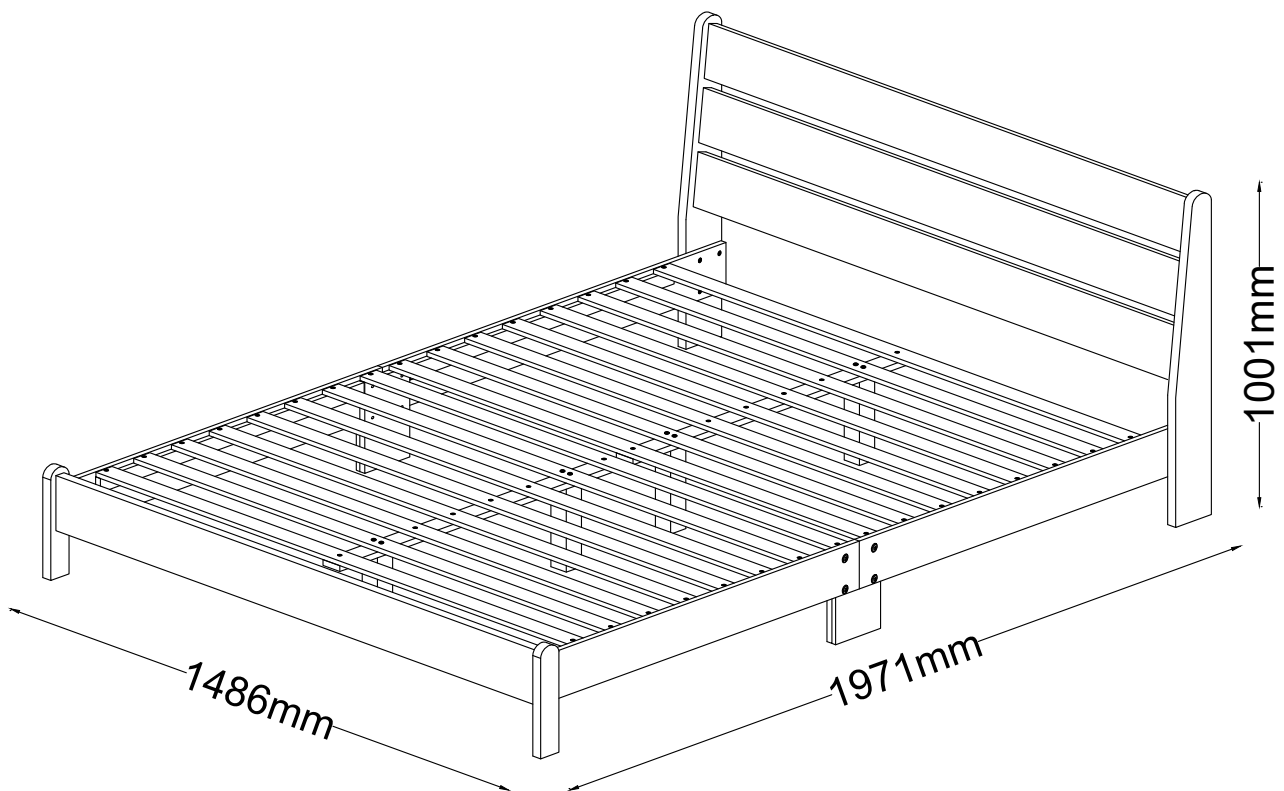


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt


PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.






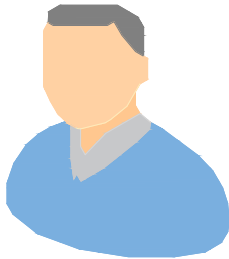
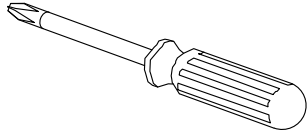
		
Allow 1 hour	For 2 person	Additional tool required

PART LIST

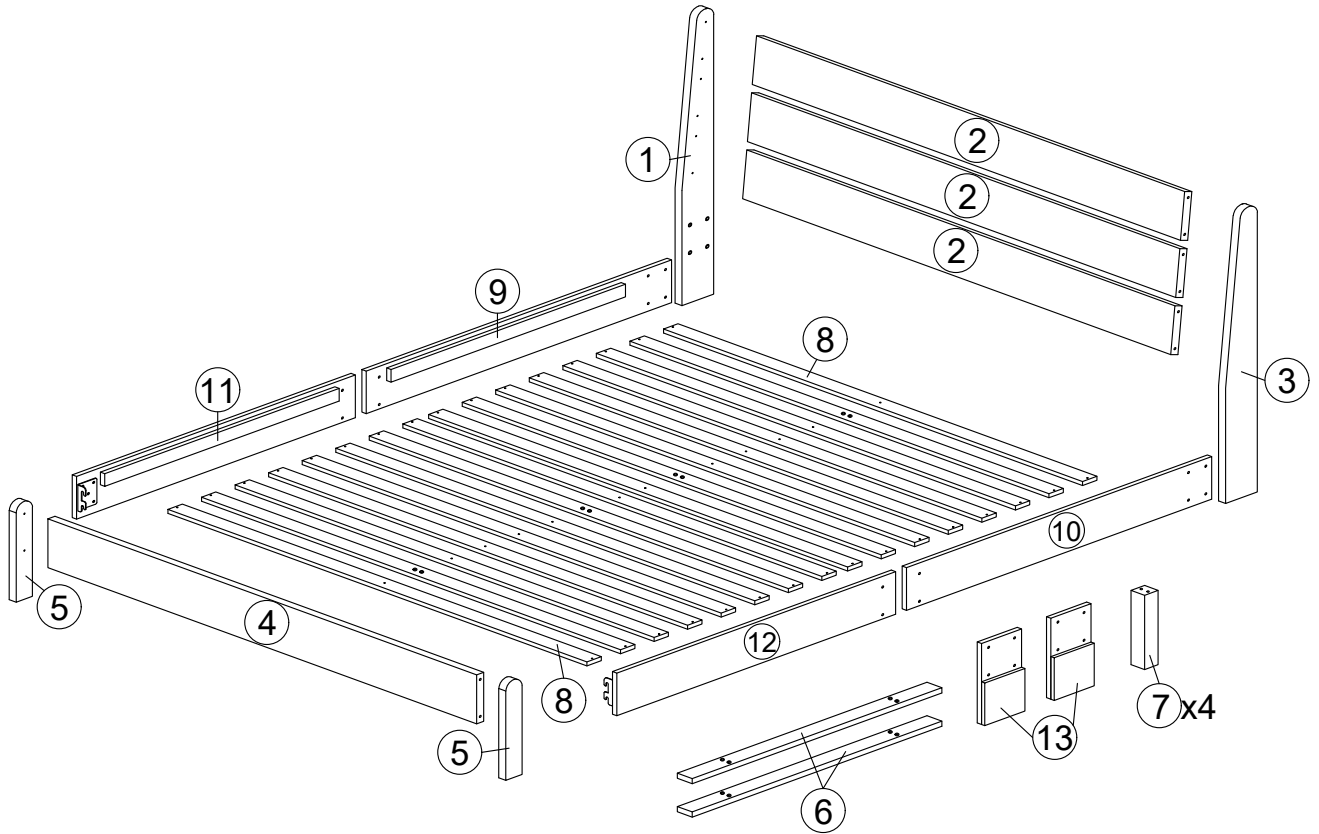


1	Bedhead Side Leg L x 1pc	8	Bed Slats x 2pcs
2	Bedhead Up Middle Panel x 3pcs	9	Bed Side Front L x 1pc
3	Bedhead Side Leg R x 1pc	10	Bed Side Front R x 1pc
4	BedEnd Middle Panel x 1pc	11	Bed Side Rear L x 1pc
5	BedEnd Side Leg L/R x 2pcs	12	Bed Side Rear R x 1pc
6	Bed Slats Center x 2pcs	13	Bed Side Legs x 2pcs
7	Bed Slats Wooden Leg x 4pcs		

PART LIST

A Camlock 15mm x 16pcs 	B Camlock Bolts 15mm x 16pcs 	C M4x30mm Screw x 44pcs 
D M6x30mm Bolts x 8pcs 	E M6x40mm Bolts x 8pcs 	F M8x20mm Bolts x 4pcs 
G M8x30mm Bolts x 8pcs 	H M4 Allen Key x 1pc (used with M6 bolts) 	I M5 Allen Key x 1pc (used with M8 bolts) 


Step 1:

- Prepare bedhead parts, as shown bellow.
- Thread 12x camlock bolts(B) to the side leg L(1) and side leg R(3). Fasten with the additional tool required.

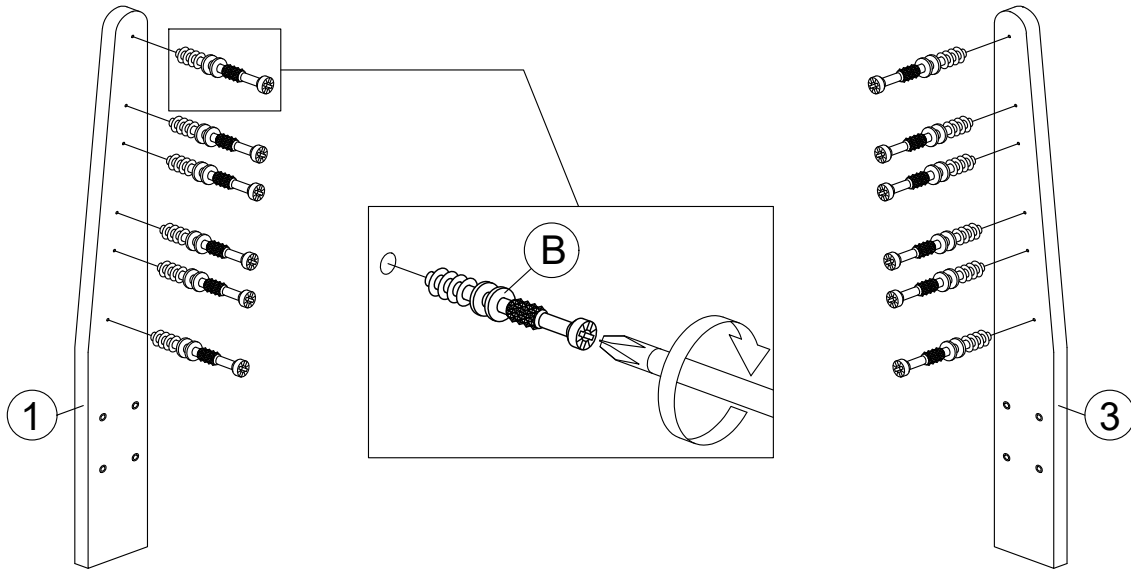


Step 2:

- Prepare bedhead parts, as shown bellow.
- Attach 12x camlocks(A) to 3x up middles(2).

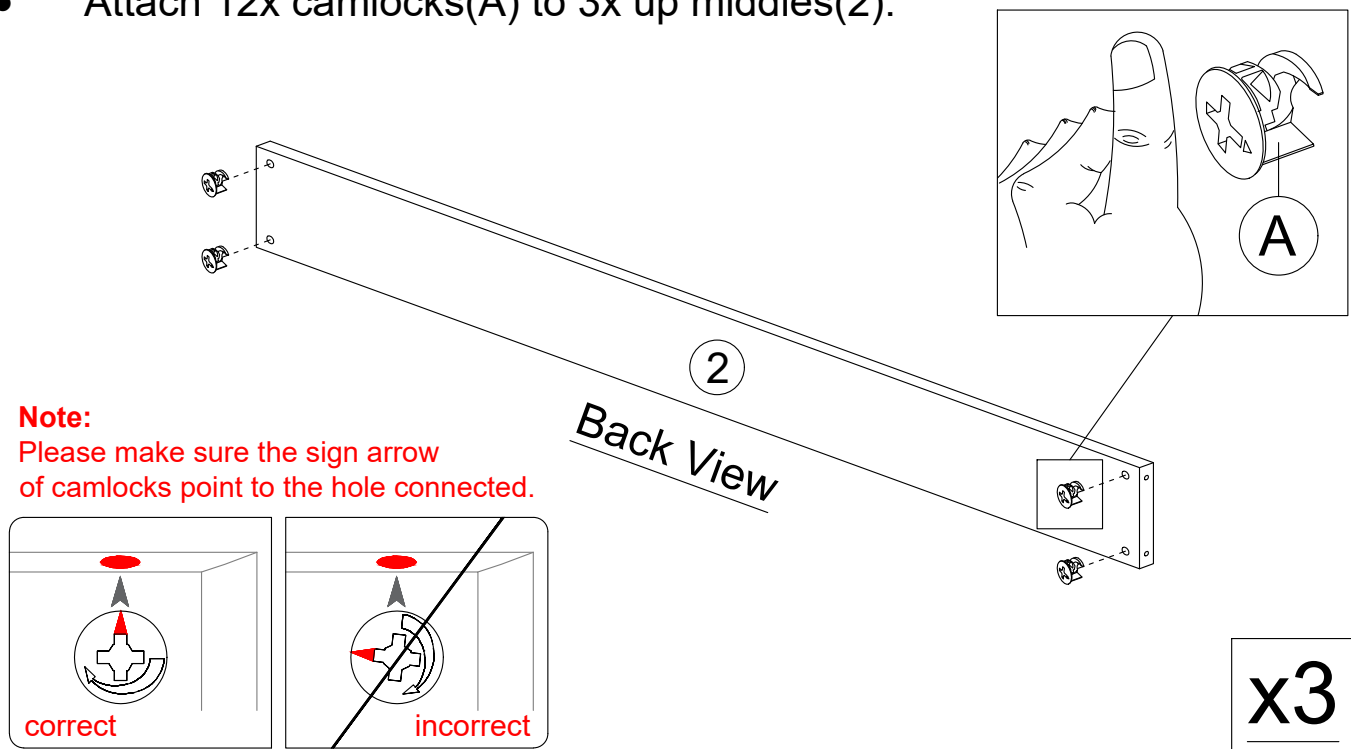


Step 3:

- Prepare bedhead parts, as shown bellow.
- Connect 3x up middles(2) to side leg L(1). Thread 2x camlocks(A) from each up middle(2). Fasten with the additional tool required.

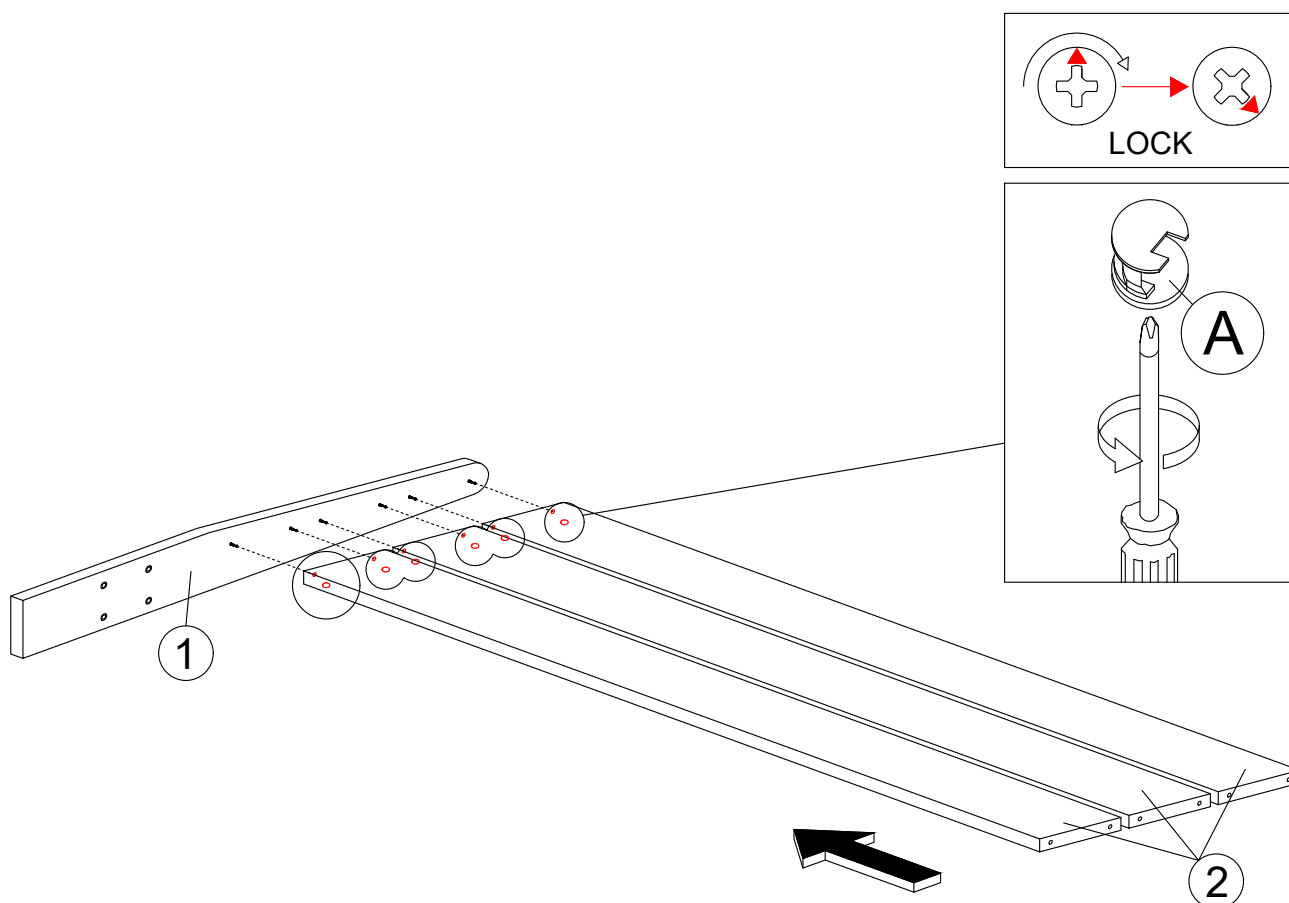


Step 4:

- Prepare bedhead parts, as shown bellow.
- Connect side leg R(3) to 3x up middles(2) . Thread 2x camlocks(A) from each panel. Fasten with the additional tool required.

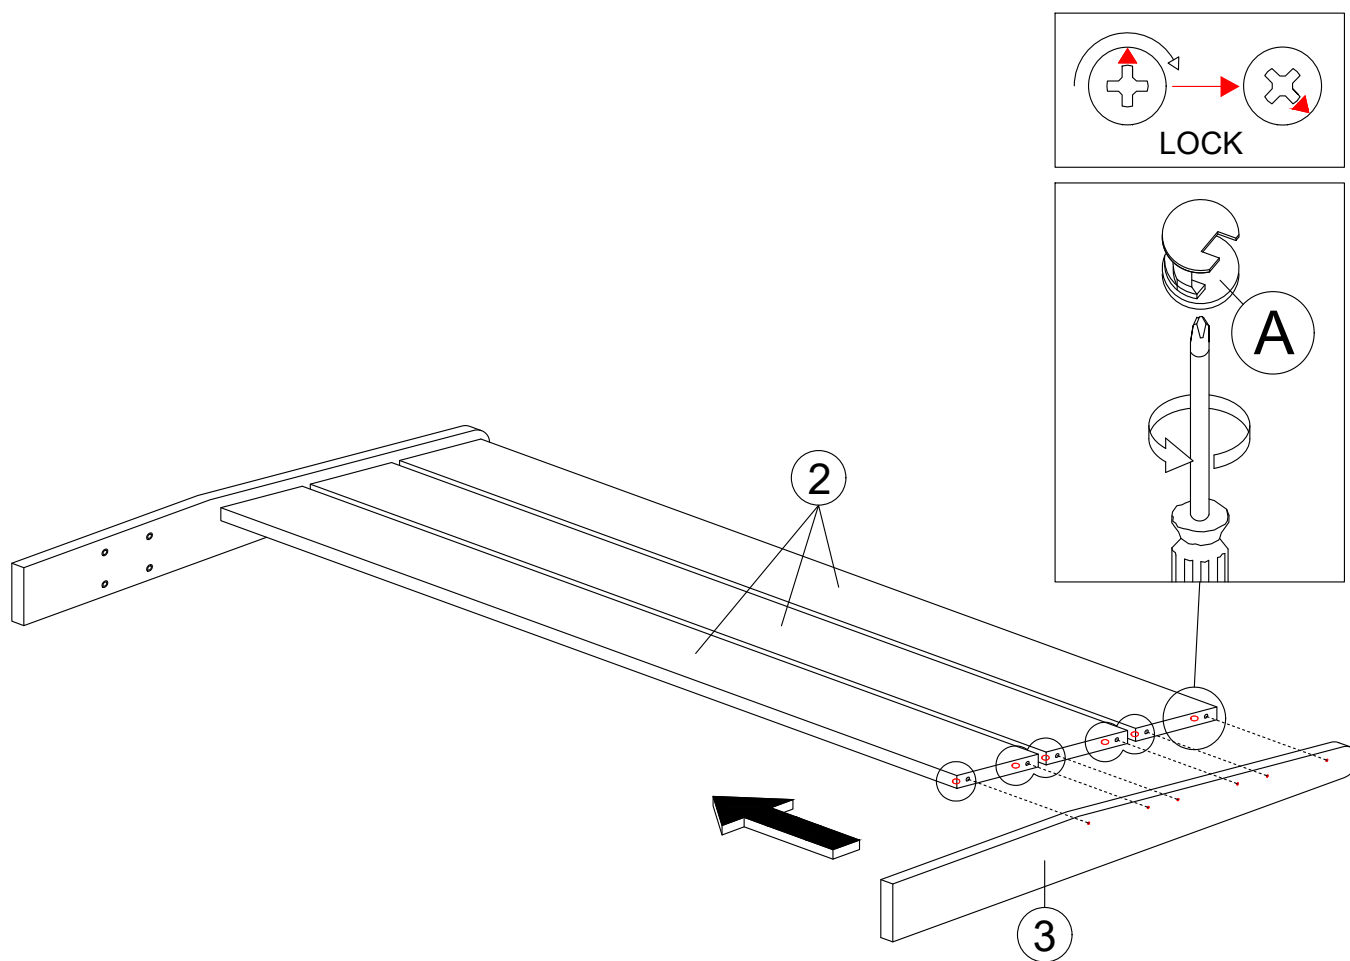


Step 5:

- Prepare bedend parts, as shown bellow.
- Thread 4x camlock bolts(B) to 2x side legs(5). Fasten with the additional tool required.

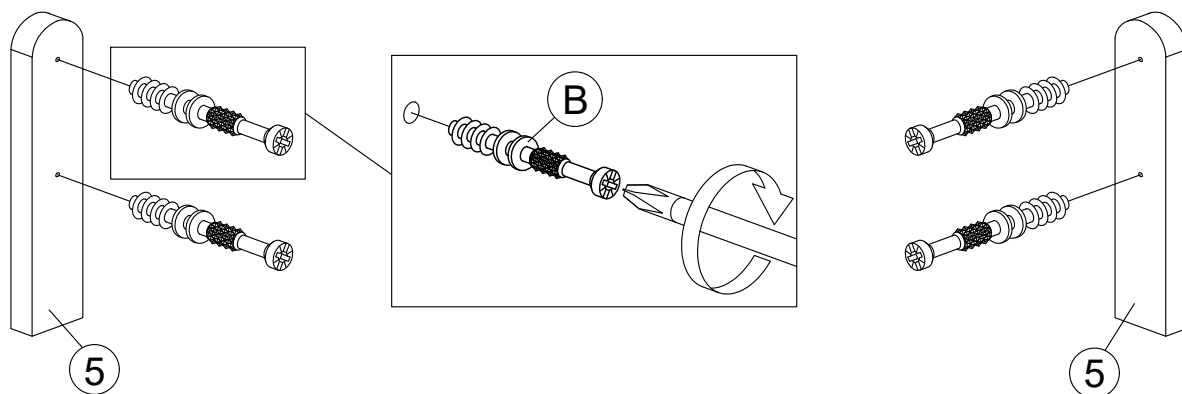


Step 6:

- Prepare bedend parts, as shown bellow.
- Attach 4x camlocks(A) to middle(4).

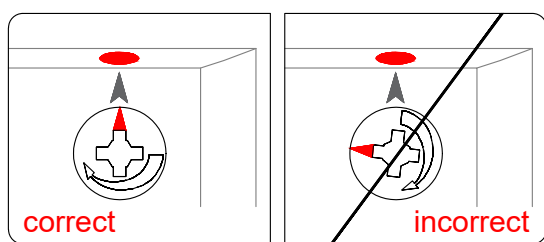


Note:
Please make sure the sign arrow
of camlocks point to the hole
connected.

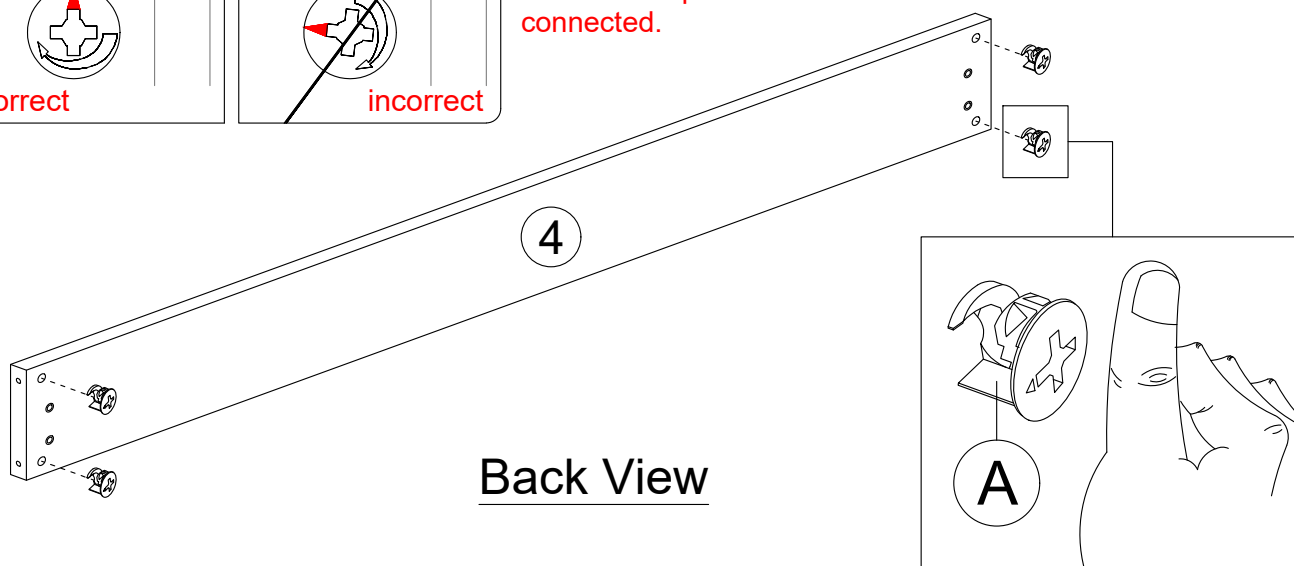

Step 7:

- Prepare bedends parts, as shown bellow.
- Connect 2x side legs(5) to middle(4). Thread 4x camlocks(A) from the middle(4). Fasten with the additional tool required.

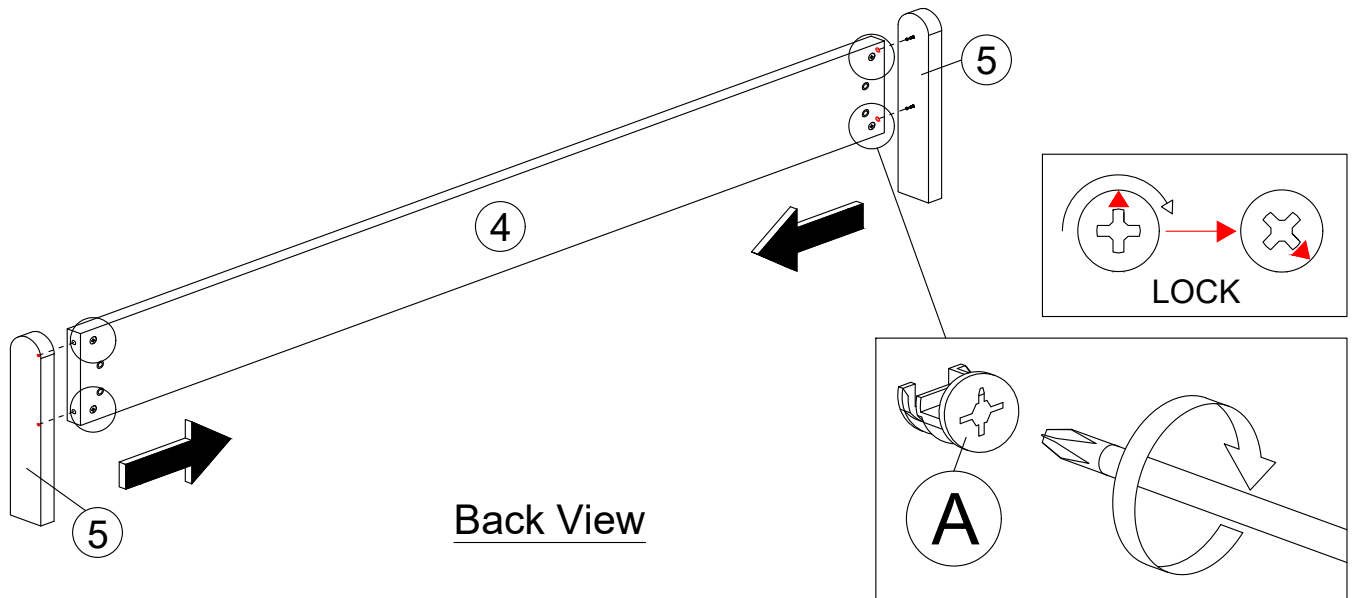


Step 8:

- Prepare bedend part, as shown bellow.
- Tighten 4x bolts(F) from the middle(4). Fasten with Alley Key(I).


Note:

Don't Tighten until end, please left
2-5mm distance for next step
assembly part

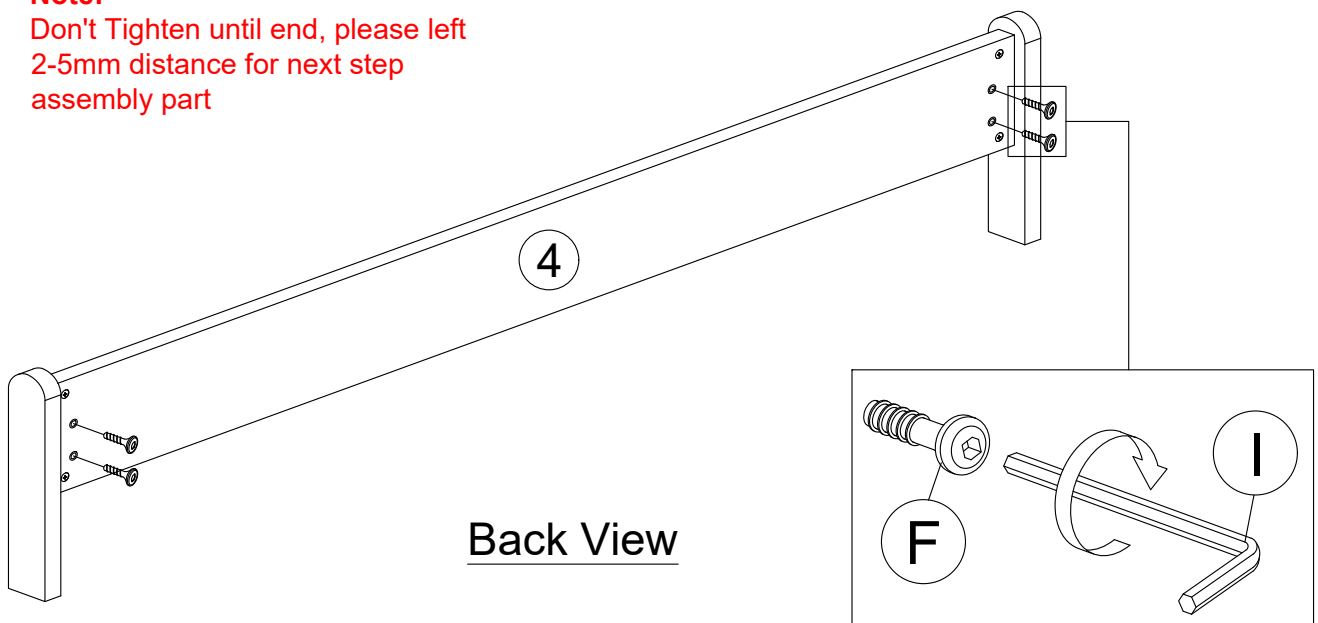


Step 9:

- Combine side leg(13) to side front L(9) and side rear L(11) by using 4x bolts(D). Fasten with Alley Key(H).
- Repeat step for the side front R(10) and side rear R(12) as shown bellow.

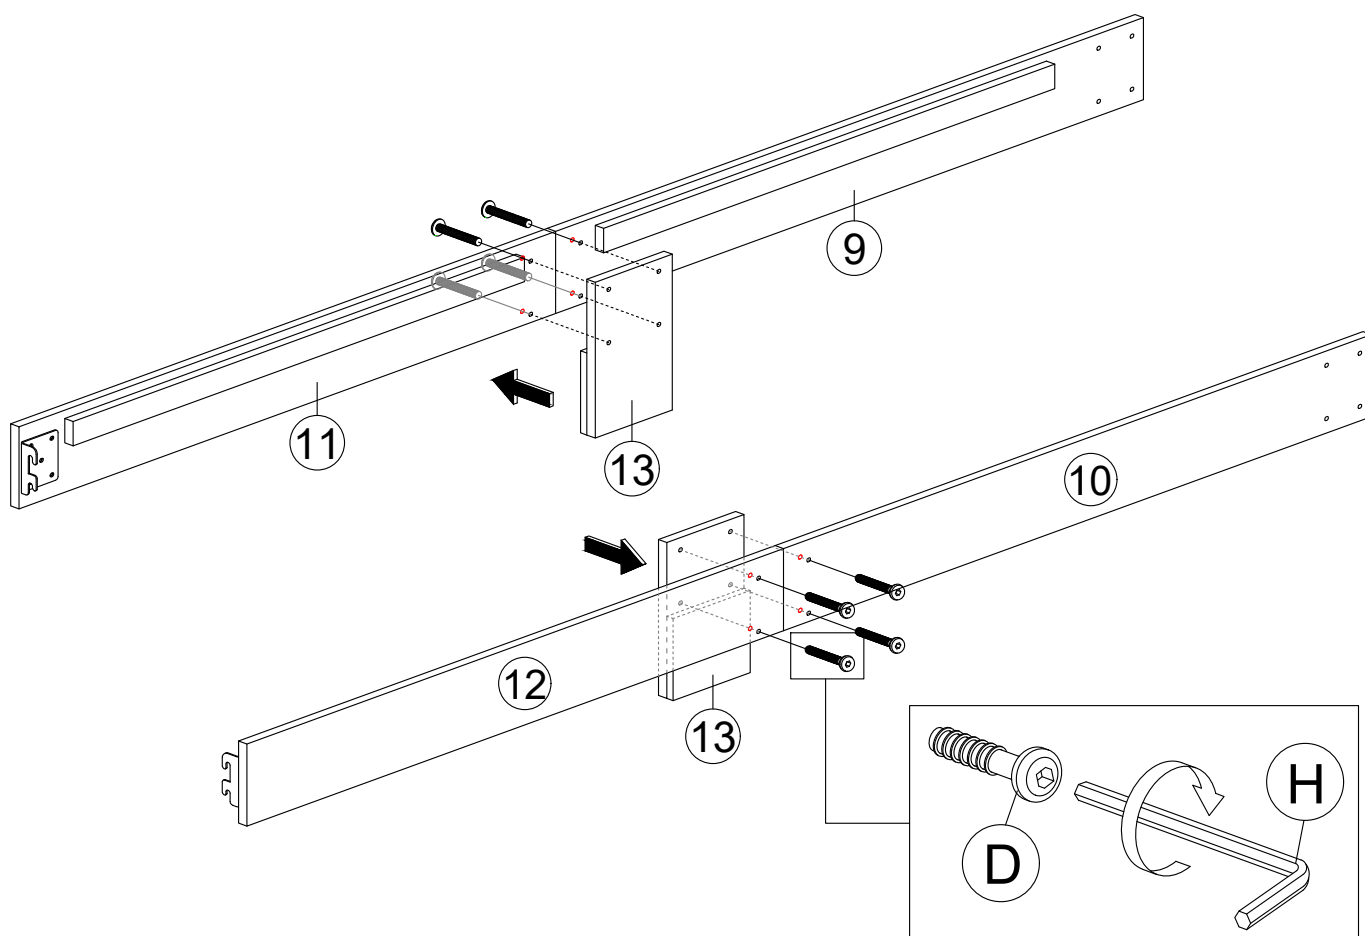



Step 10:

- Take side rear L(11) hang to the bolts(F) of bedend middle(4) that already attached. Fasten with Alley Key(I) tightly.
- Repeat the step for another side rear(12).

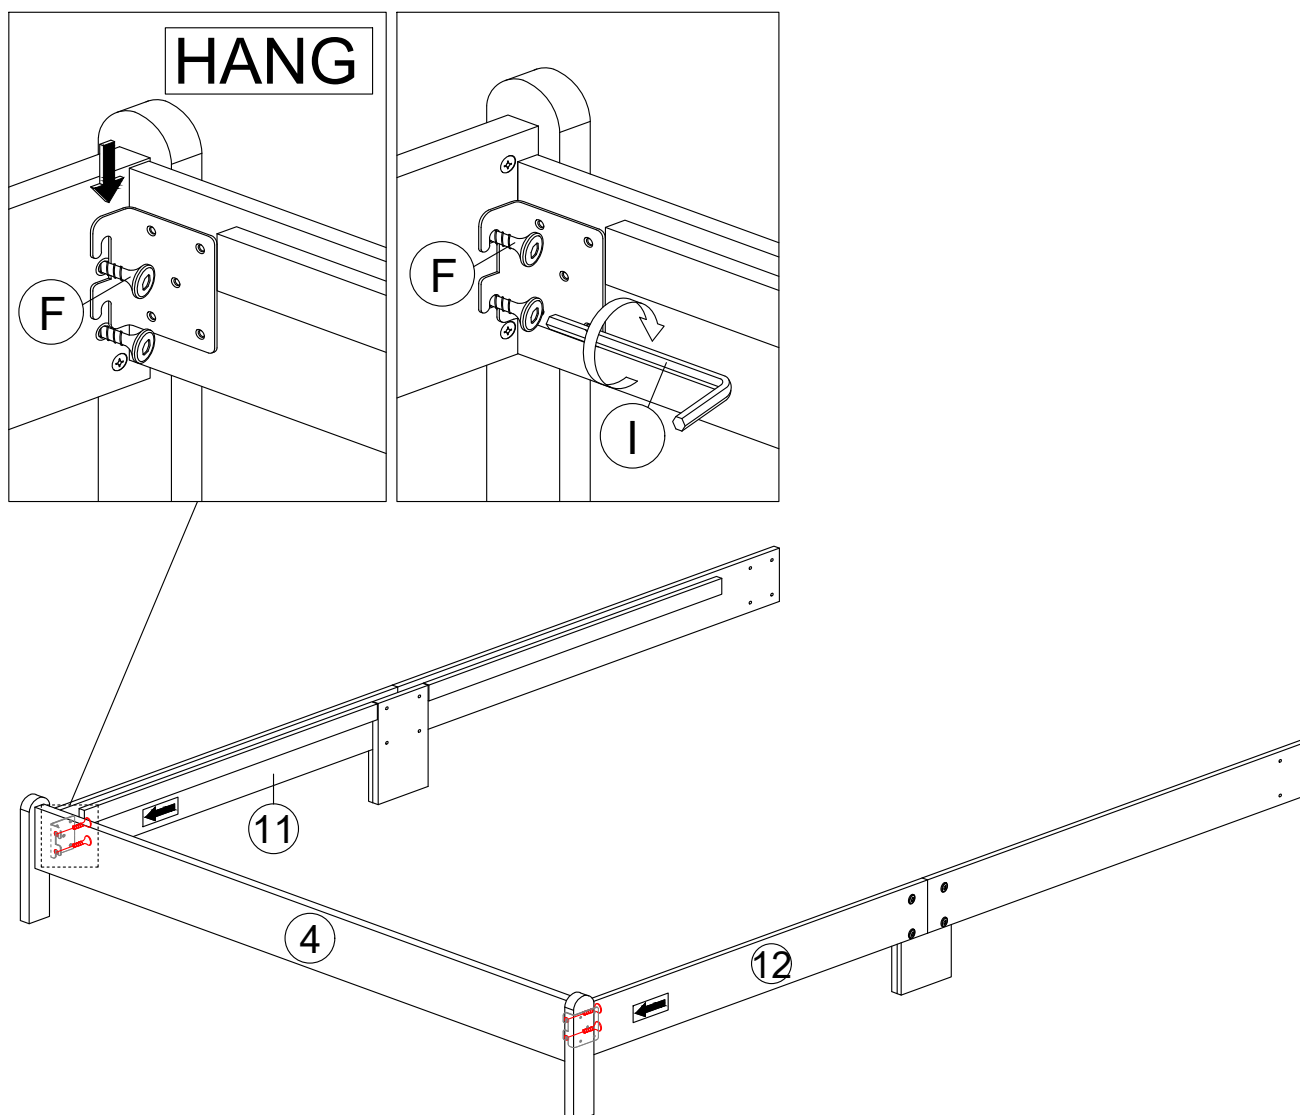


Step 11:

- Tighten 8x bolts(G) to side front L(9) and side front R(10). Fasten with Alley Key(I).

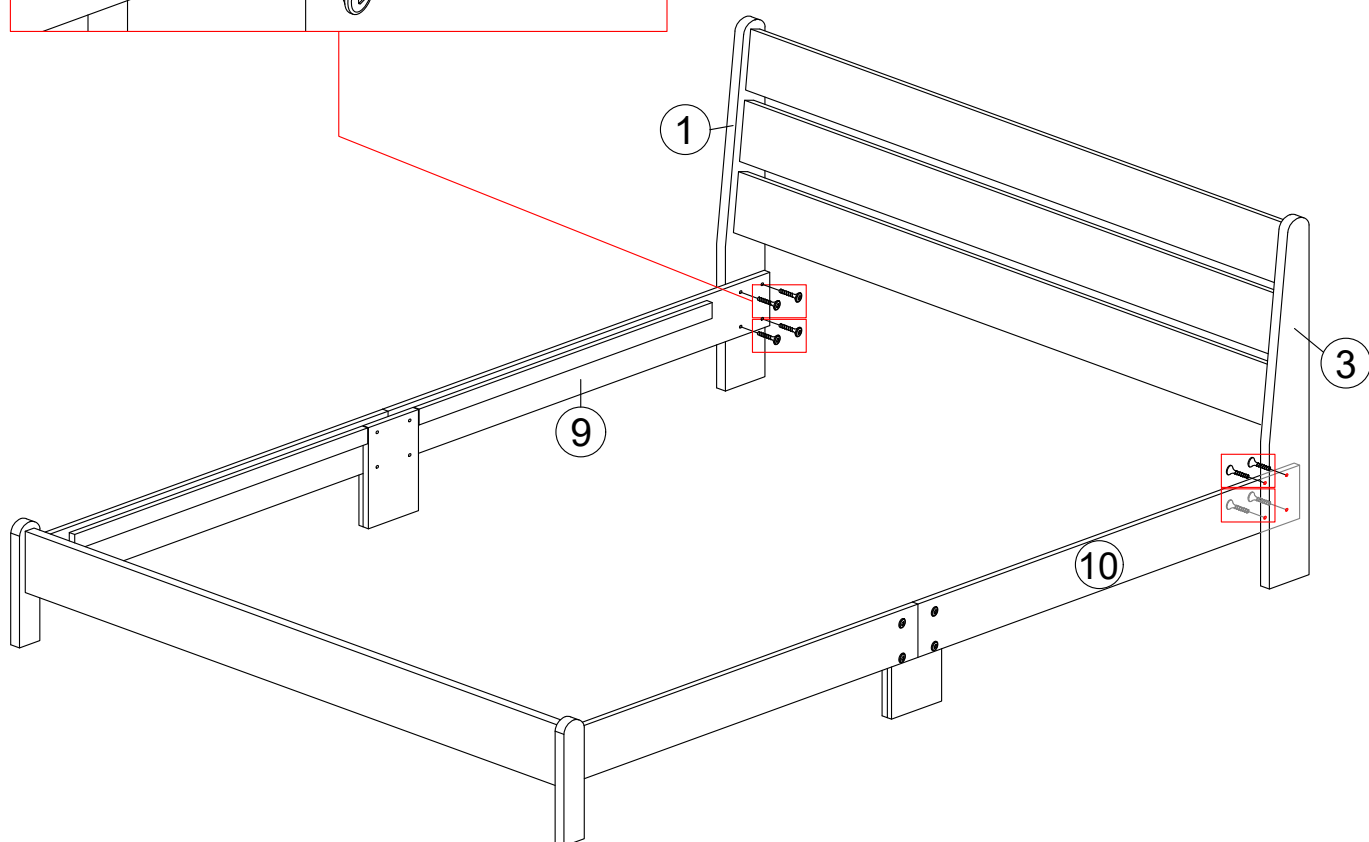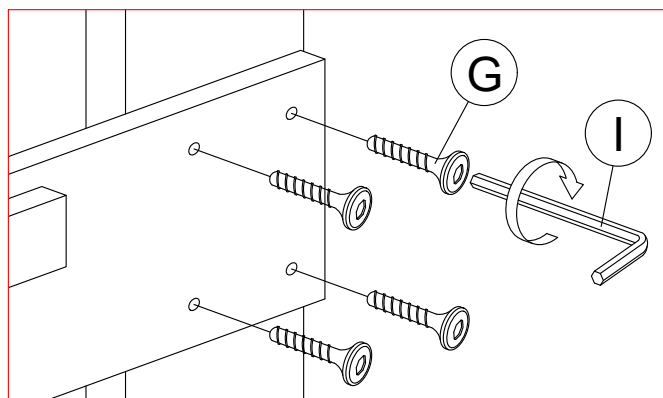

Step 12:


- Combine 2x slat legs(7), slat center(6) and bed slat(8) with 4x bolts(E). Fasten with Alley Key(H).
- Repeat step for the other slat pairs as shown bellow.

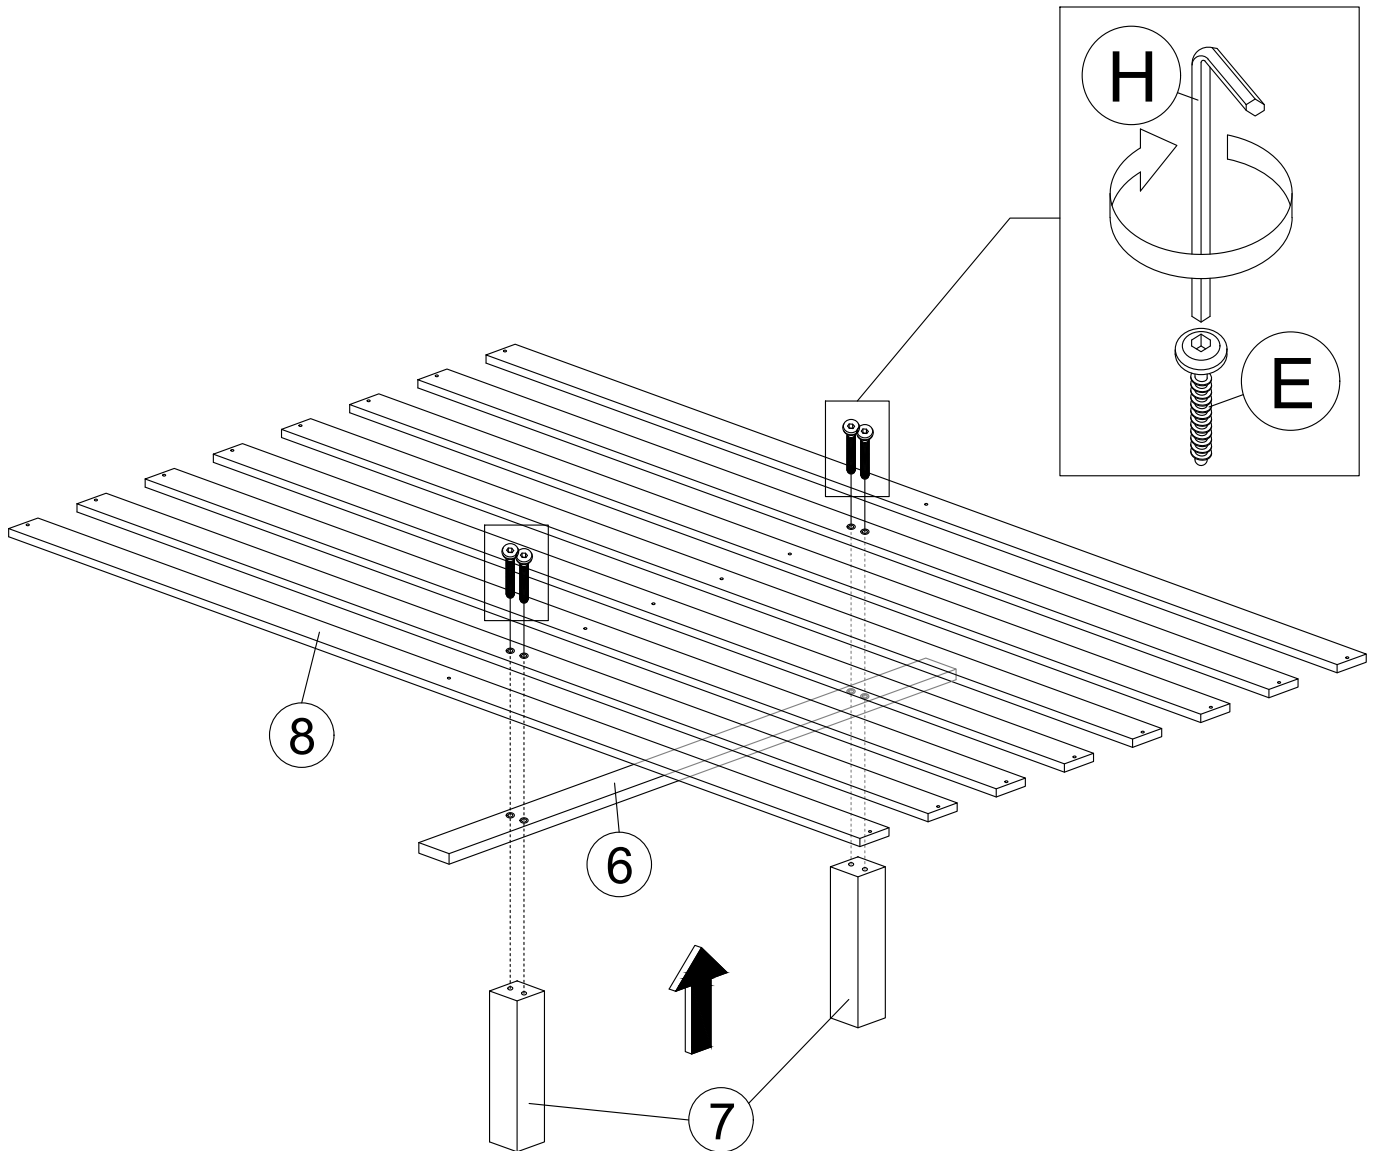


x2

Step 13:

- Attach 2x bed slats(8) to the bed as shown bellow.
- Tighten 44x screws(C) to the side and center of the slat pairs(8).
Fasten with the additional tool required.

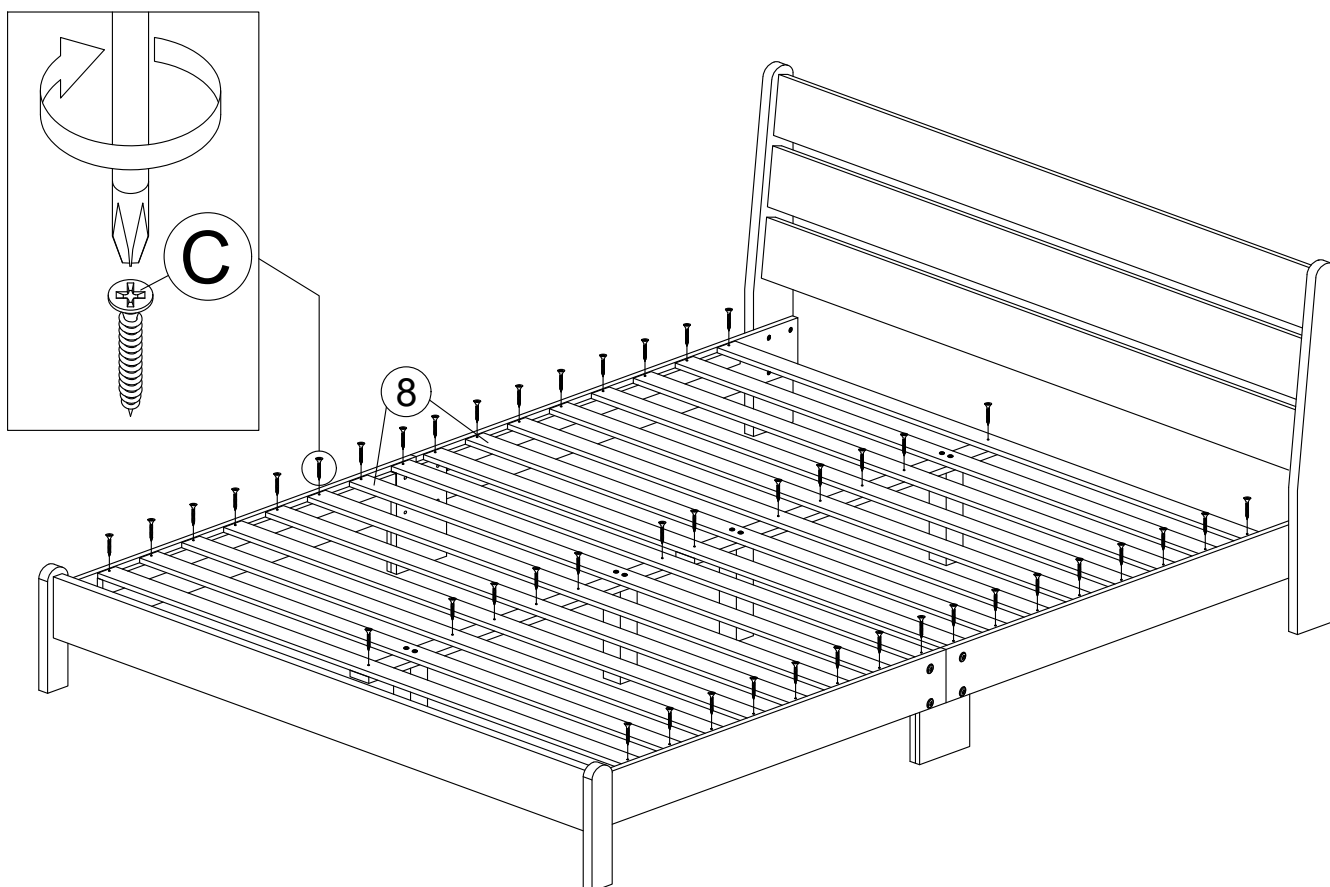

Assembly Is Completed

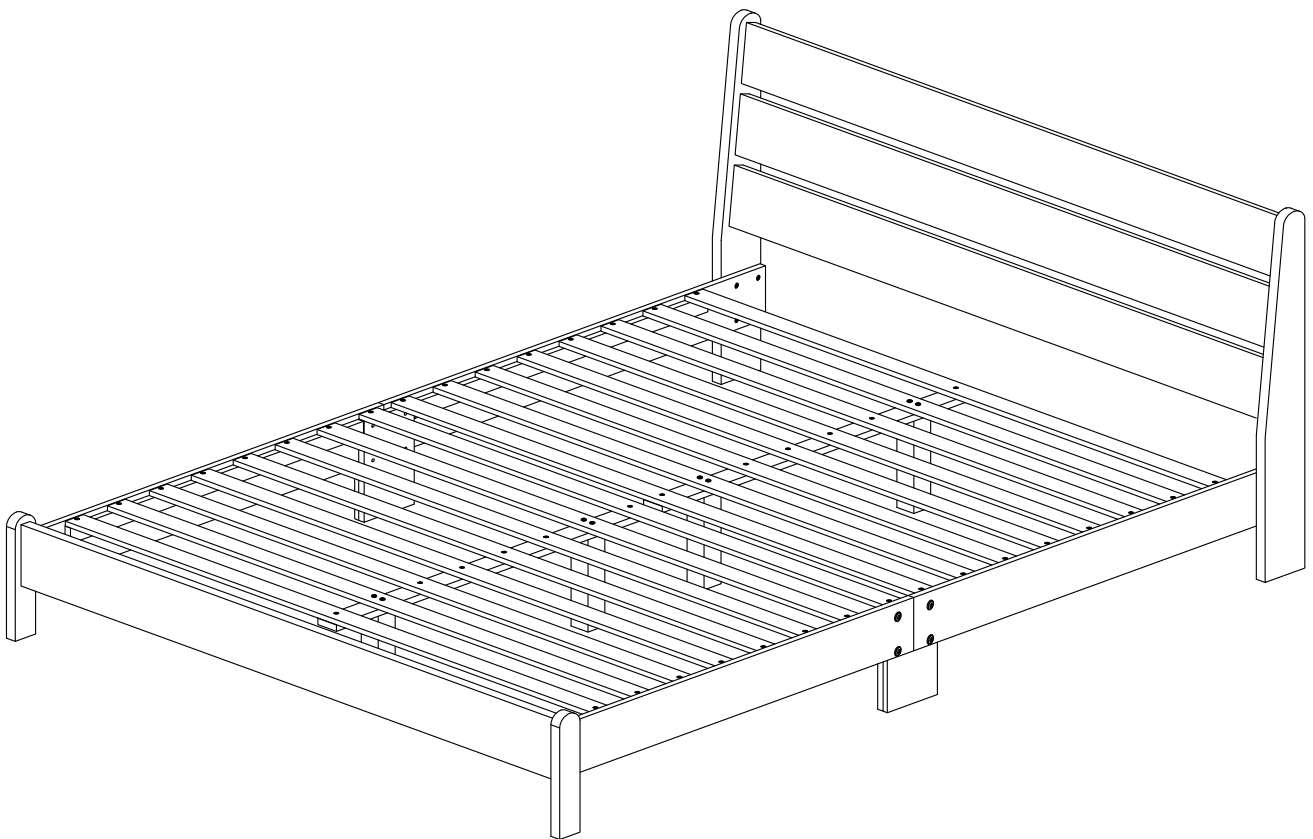

CAUTION

Always Lift Your Bed When Moving /Relocating - Do Not Drag.
Dragging Can Cause The Centre Support Legs To Bend/Break.

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.