
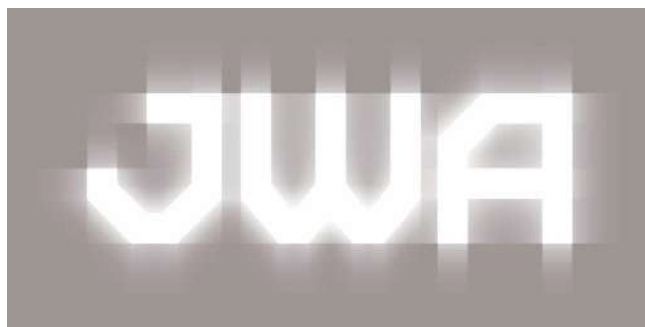


ASSEMBLY INSTRUCTION

WEISS

Hideaway Desk




ITEM CODE 85543

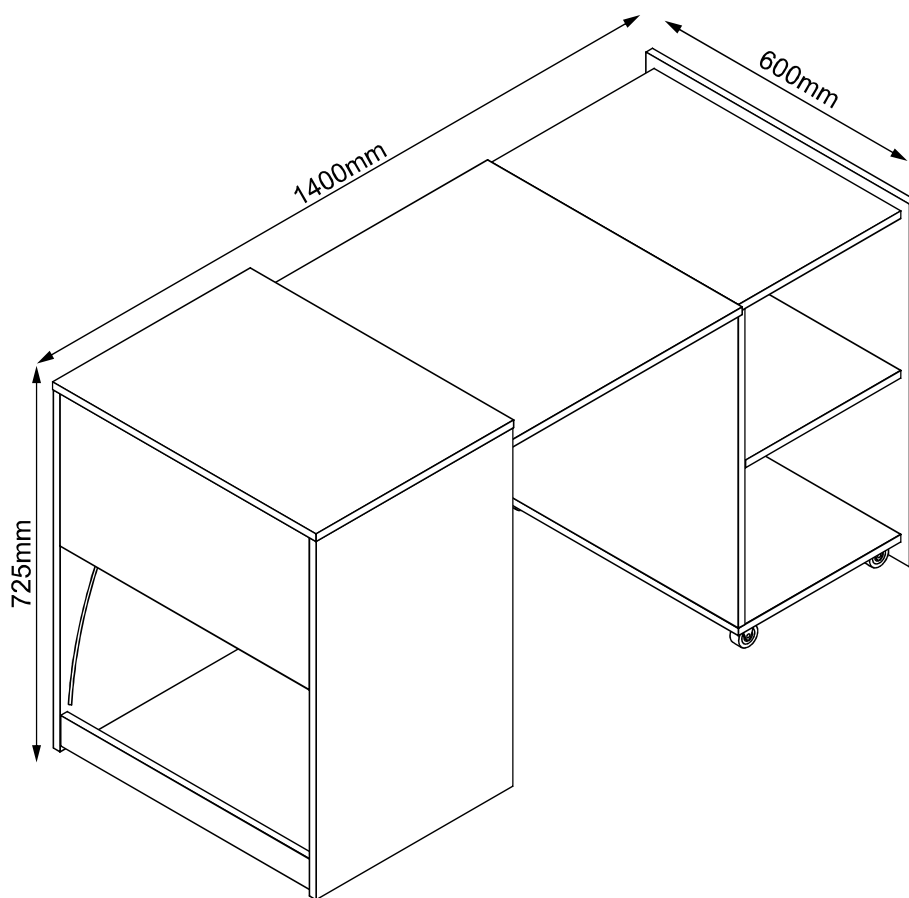

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

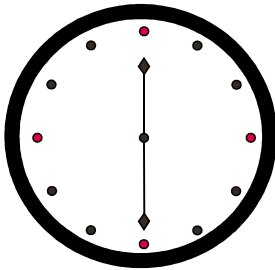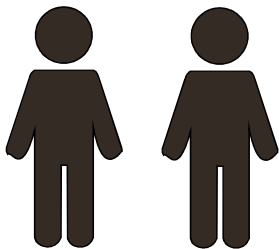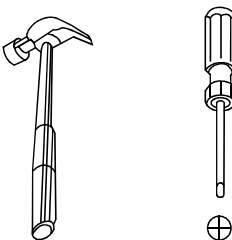		
Allow 30min	For 2 person	Additional tools required



WARNING

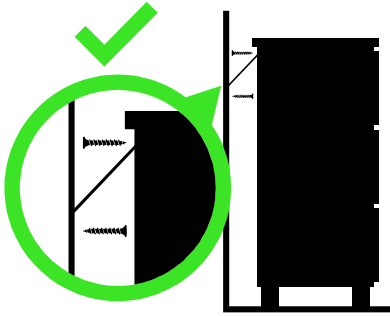
		Children have died from furniture tipover. • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low NEVER put a TV on this furniture  This is a permanent label. Do not remove!
---	---	---

SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE




2pcs












2pcs




2pcs

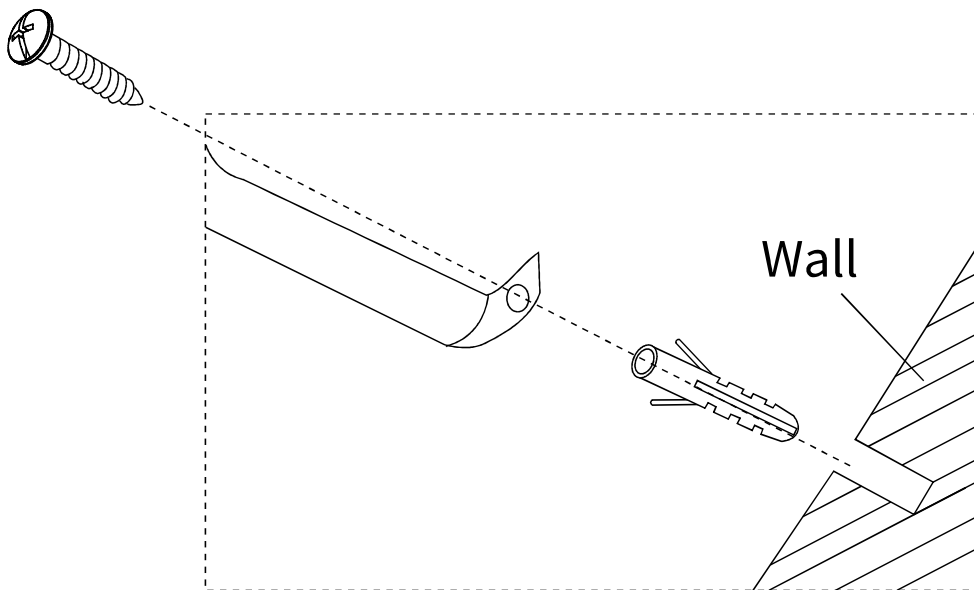

PARTS LIST

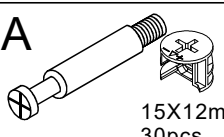
A  15X12mm 30pcs	B  8X30mm 16pcs	C  ST3.5X14mm 60pcs	D  M4X18mm 2pcs	E  1pc
F  4pcs	G  2pcs	H  1pc	I  1pc	J  ST4X25mm 2pcs
K  2pcs	L  2pcs	M  30pcs	N  6pcs	

1	Top panel
2	Front side panel
3	Back side panel
4	Back panel
5	Lower connecting panel
6	Middle top panel
7	Right top panel
8	Bottom panel
9	Left side panel
10	Right side panel
11	Shelf layer
12	Middle panel

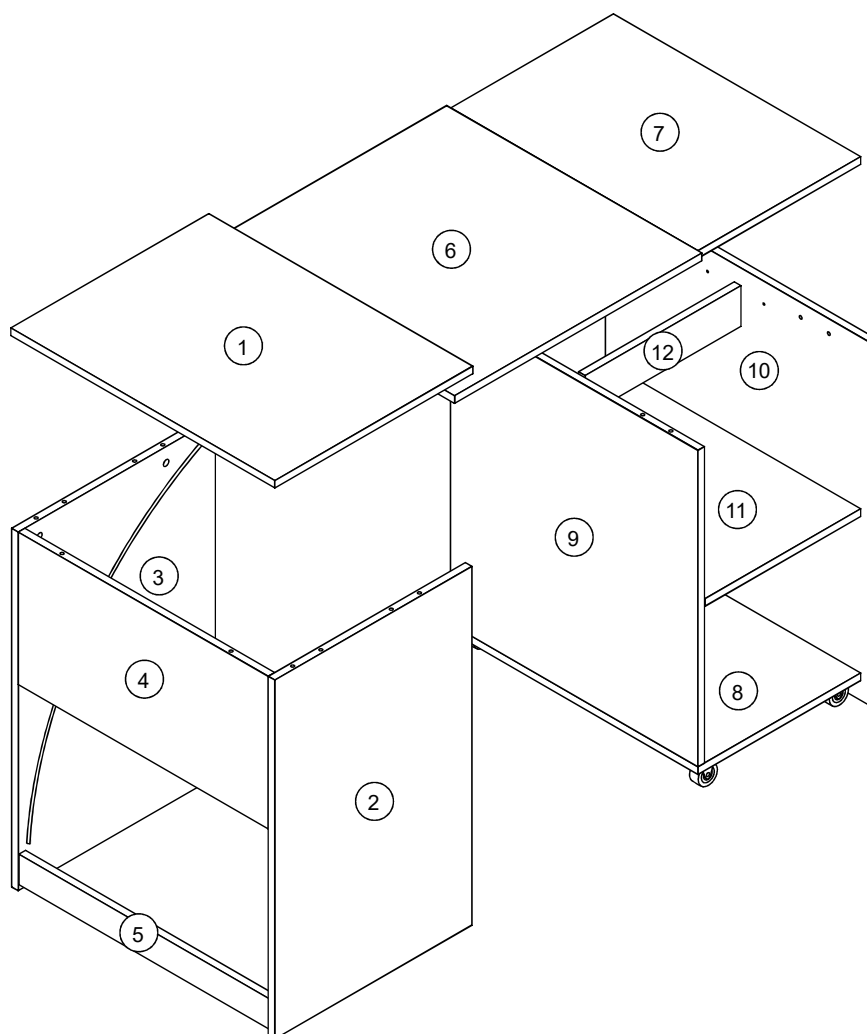


STEP 1:

1. Attach F to panel 8 with parts C.

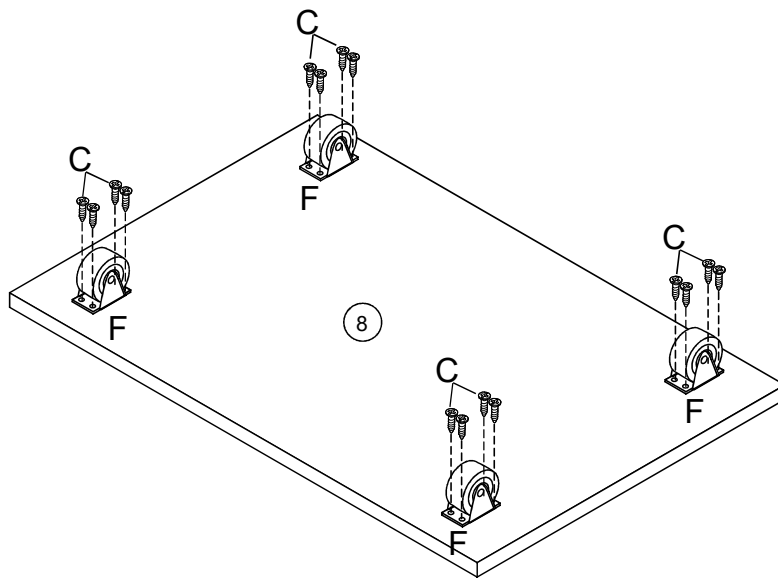


STEP 2:

1. Attach G to panel 6 with part C.
2. Attach I and H to panel 6 with part C.

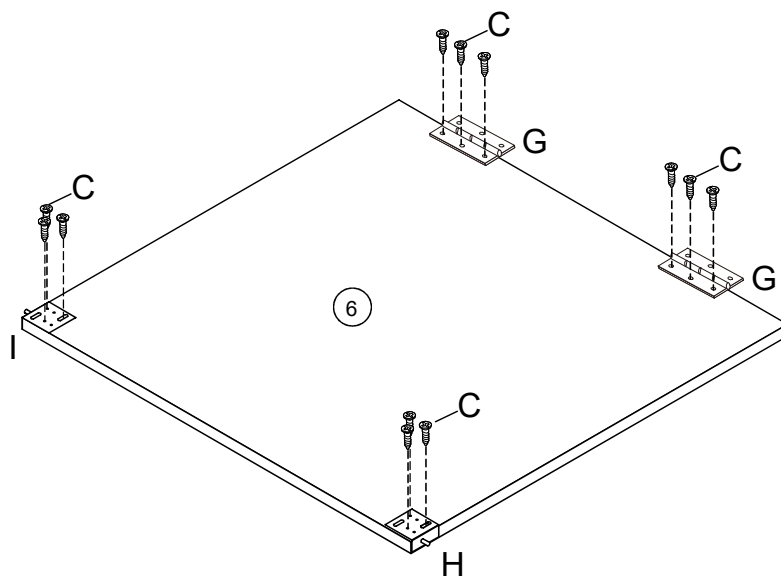



STEP 3:

1. Attach E to panel 10 with part D.

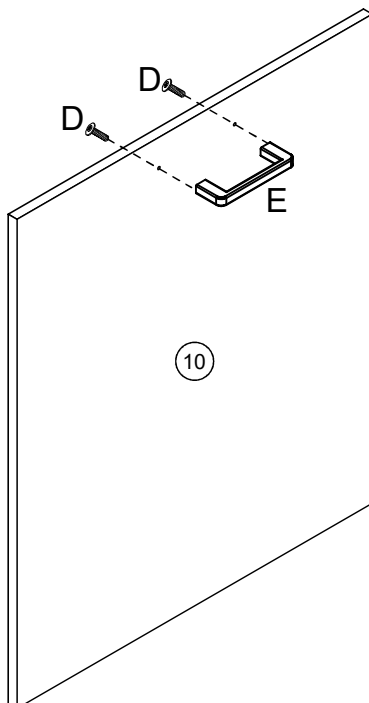



STEP 4:

1. Attach panel 8 to 9 with parts A and B.
2. Place sticker M to cover assembled cam A.

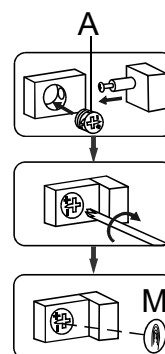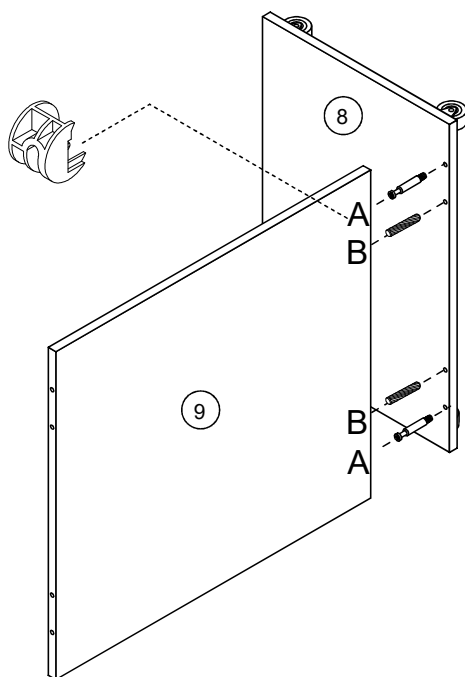



STEP 5:

1. Attach panel 12 to 11 with parts A and B.
2. Place sticker M to cover assembled cam A.

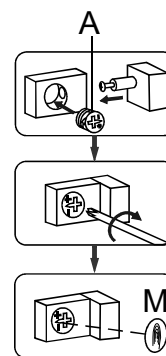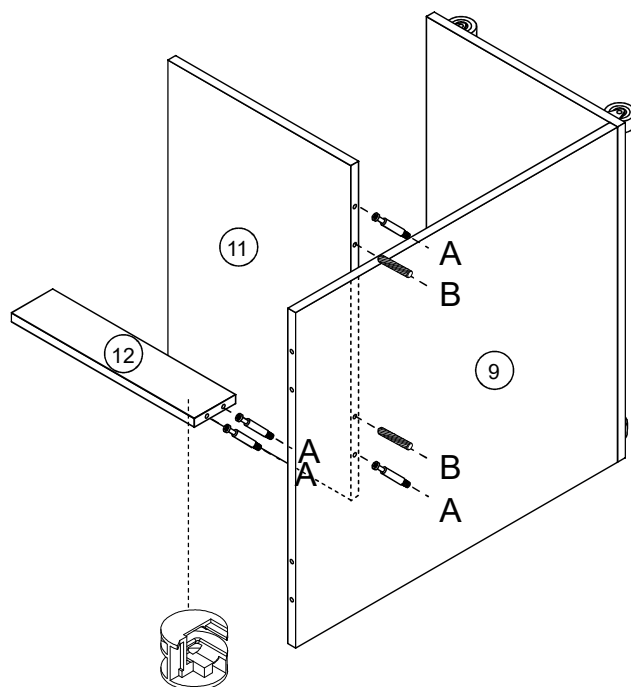



STEP 6:

1. Attach panel 7 to 9 with parts A and B.
2. Place sticker M to cover assembled cam A.

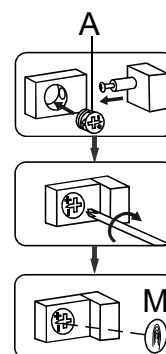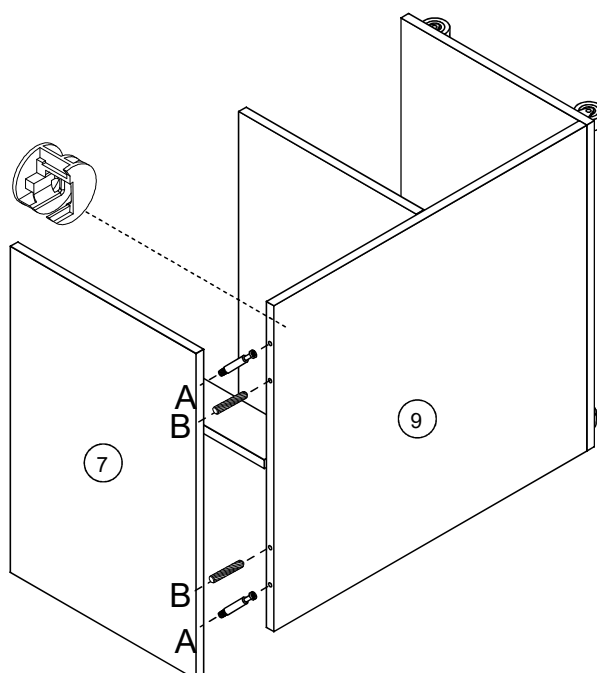


STEP 7:

1. Attach panel 10 to 7, 8, 11, 12.
2. Place sticker M to cover assembled cam A.

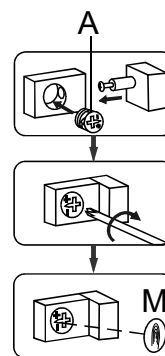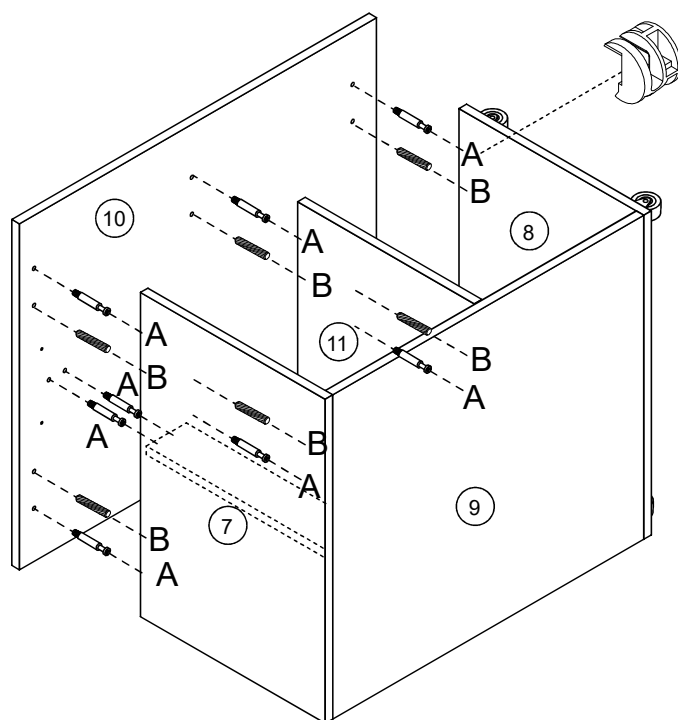


STEP 8:

1. Attach N to panel 7 and 10 with part C.
2. Attach N to panel 8 and 10 with part C.

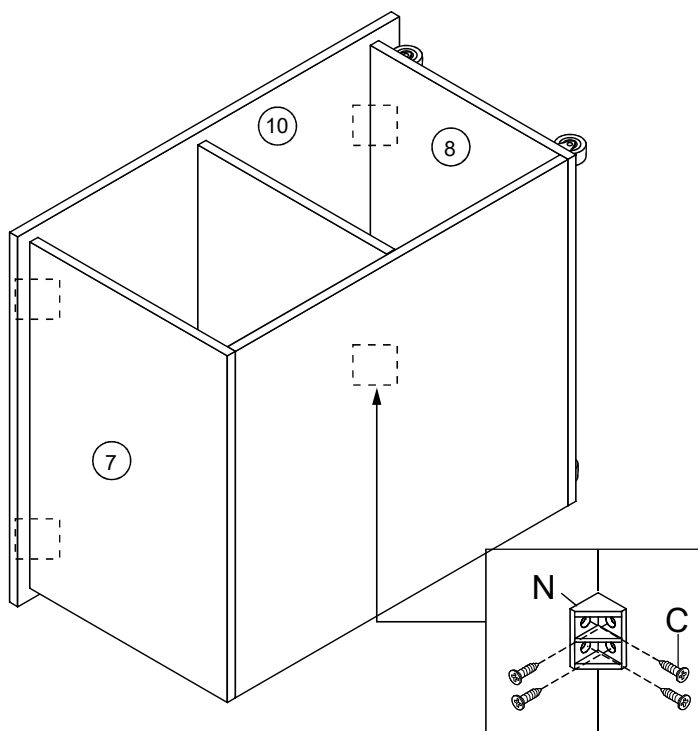



STEP 9:

1. Attach one side of G to panel 6 with part C.
2. Attach the other side of G to panel 9 with part C.

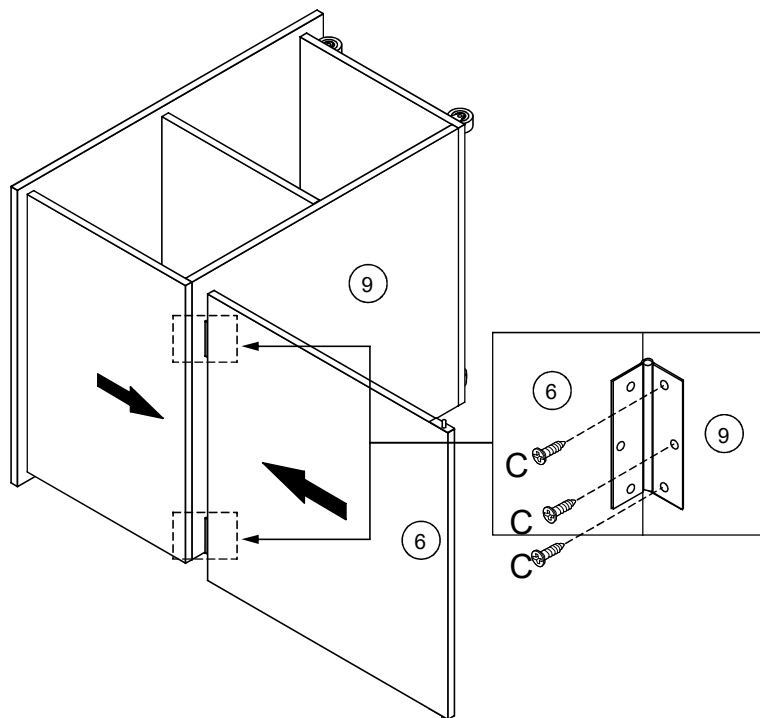


STEP 10:

1. Attach panel 4 and 5 to panel 3 with part A.
2. Place sticker M to cover assembled cam A.

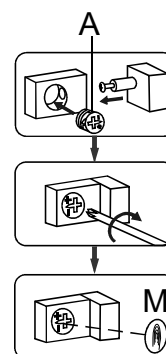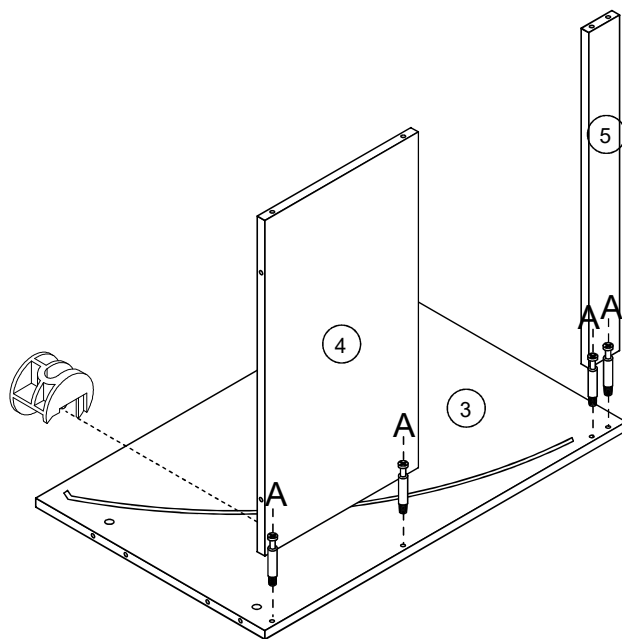


STEP 11:

1. Slide panel assembled panel 6 along slots of panel 3.

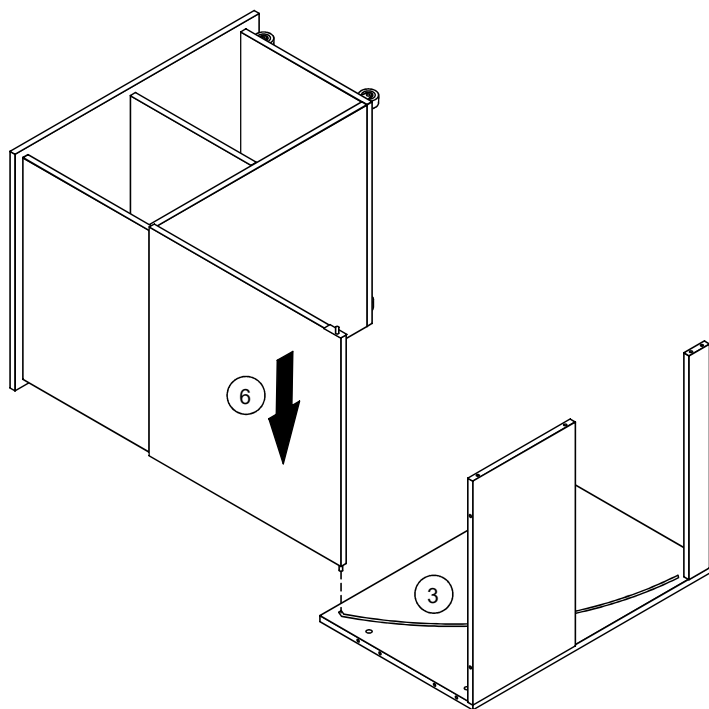



STEP 12:

1. Attach panel 2 to panel 4 and 5 with part A.
2. Align part I on panel 6 with the slot of panel 2.
3. Place sticker M to cover assembled cam A.

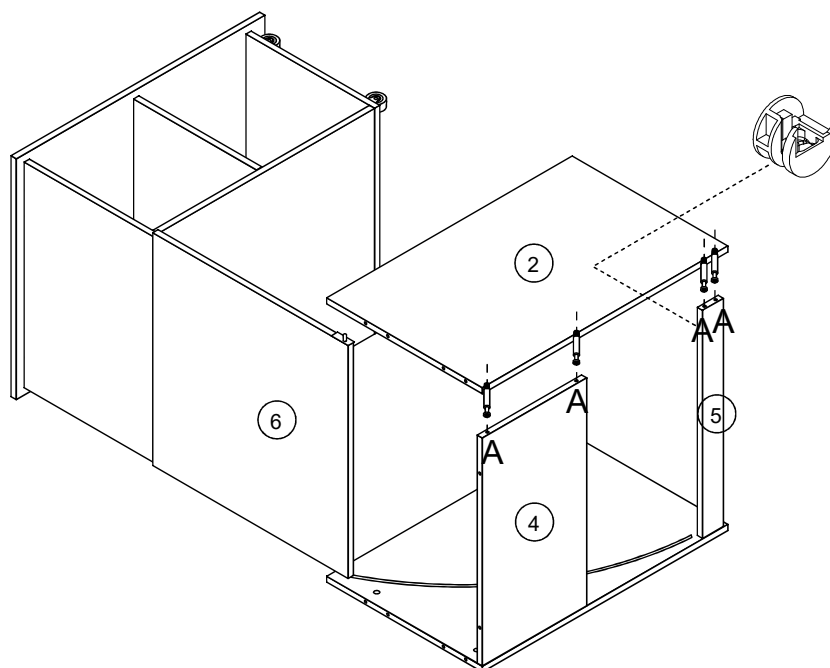


STEP 13:

1. Attach panel 1 to panel 2, 3, 4 with parts A and B.
2. Place sticker M to cover assembled cam A.
3. Attach N to panel 2, 3, 5 with part C.

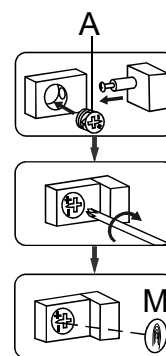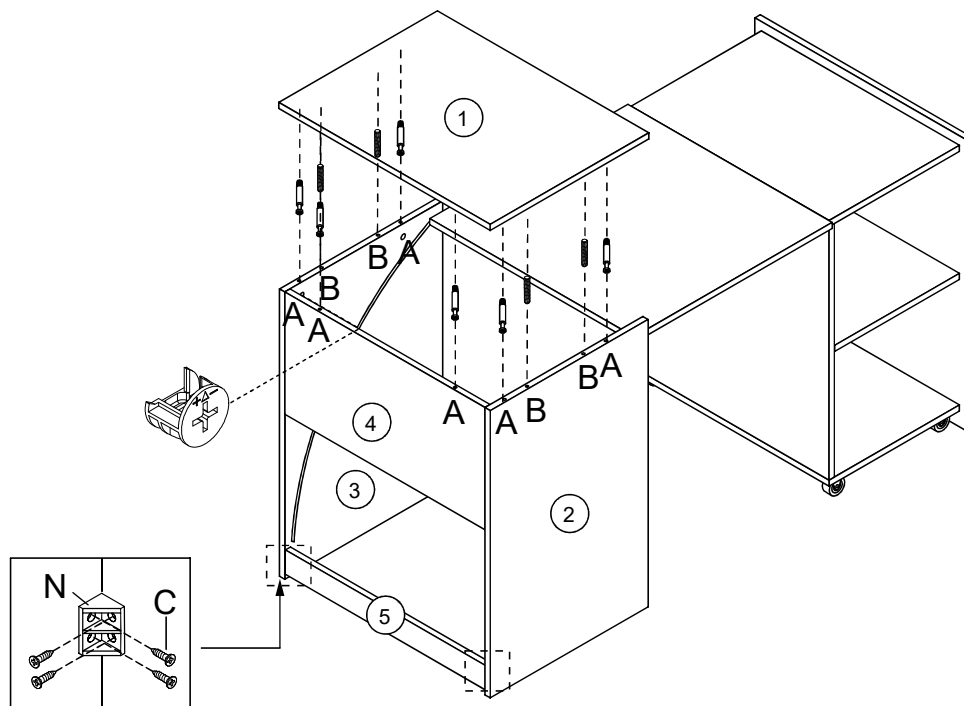



STEP 14:

1. Attach K to panel 4 with part C.
2. Insert L to the wall. Attach K to L with part J.

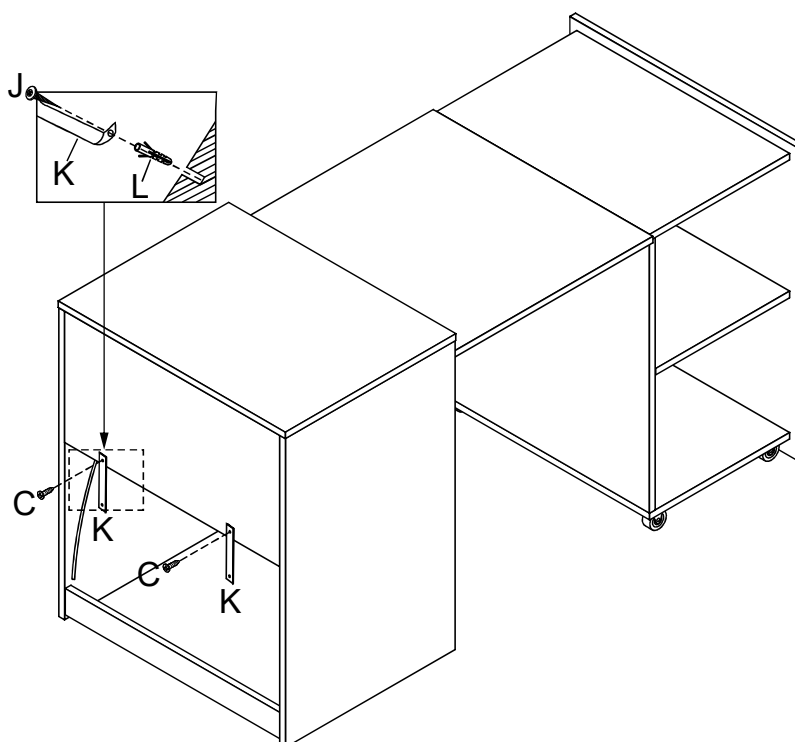

STEP 15:

Assembly
complete!

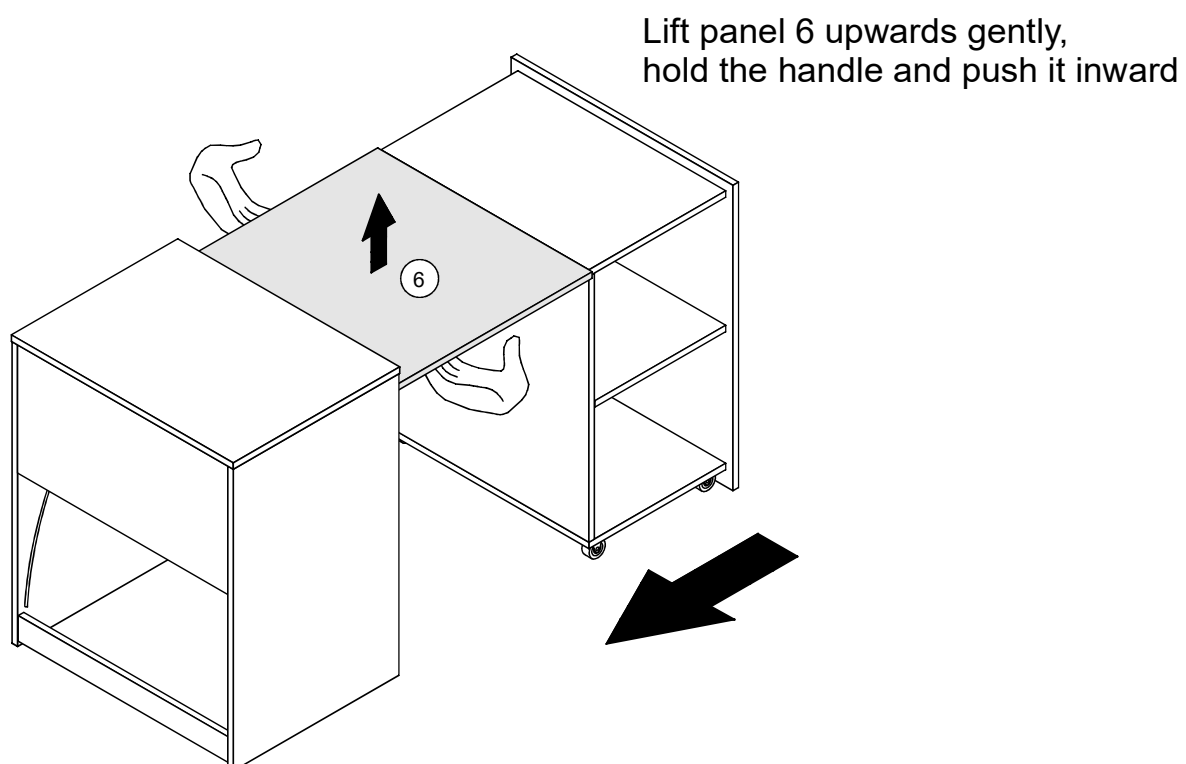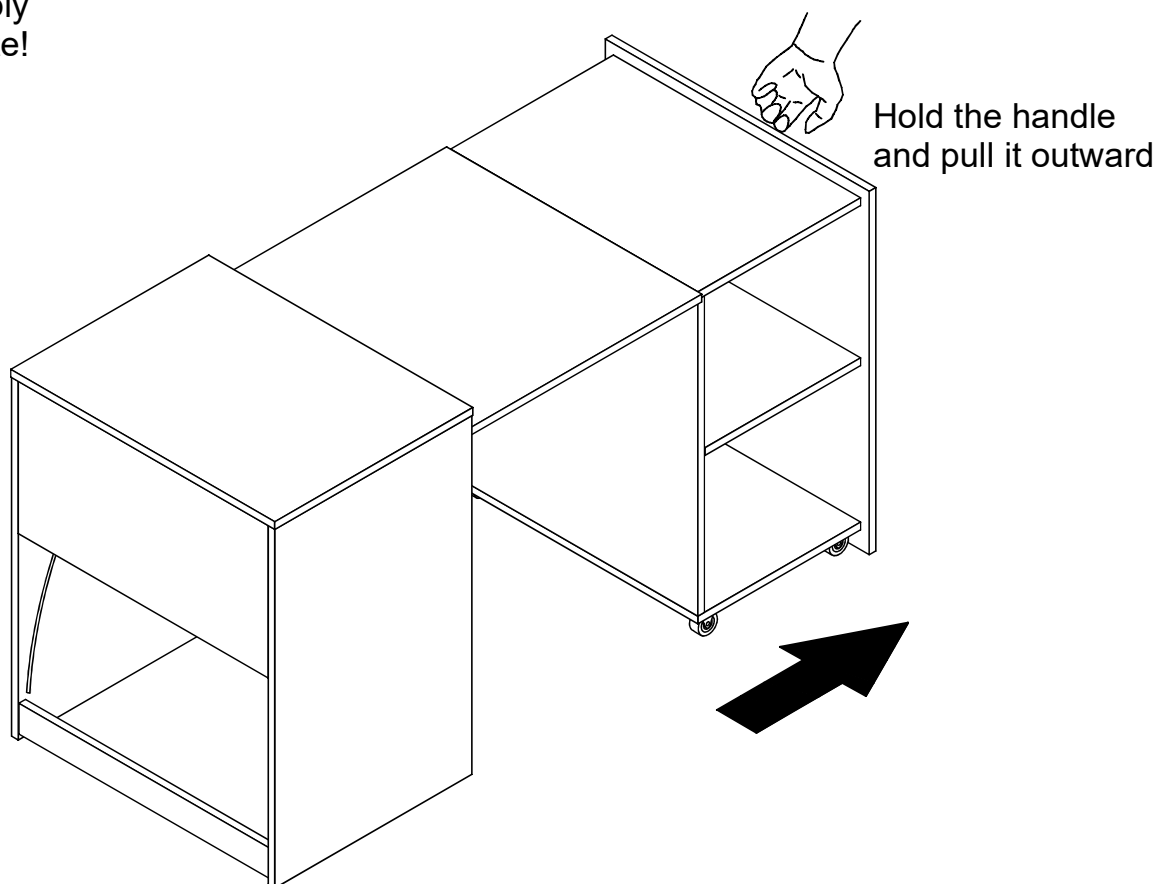

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void