

ASSEMBLY INSTRUCTION

RODRIGUEZ

Desk

ITEM CODE 85535 85536

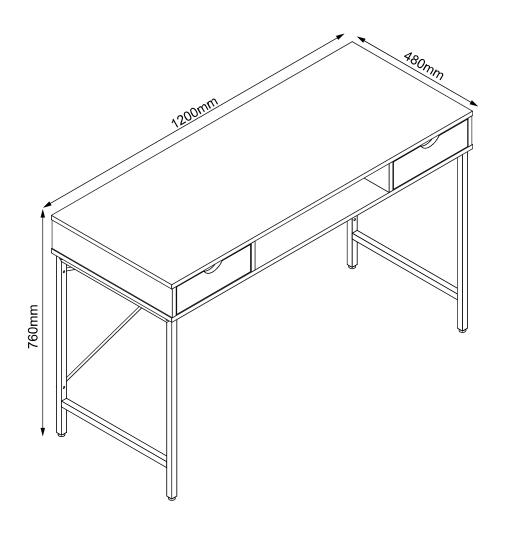


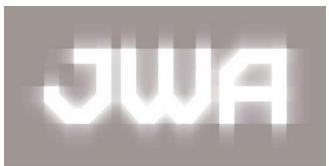

PRE-ASSEMBLY PREPARATION

Before you start:

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2.Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

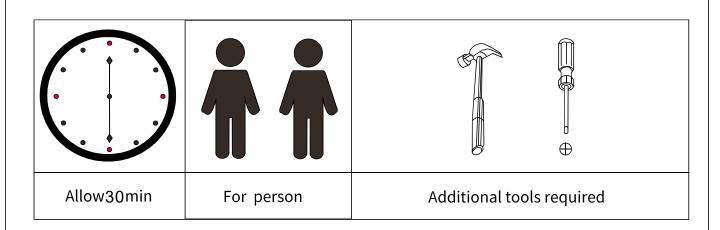





SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- 1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

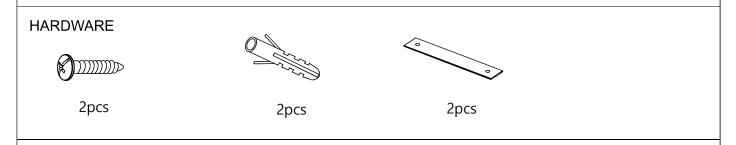


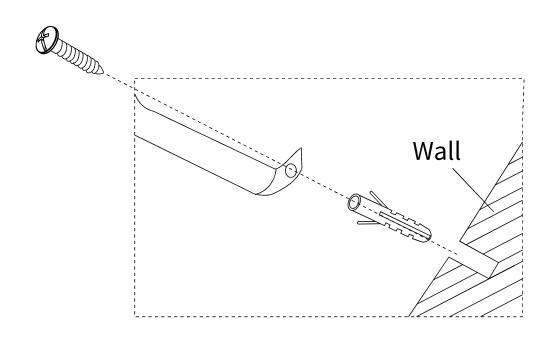

PARTS LIST

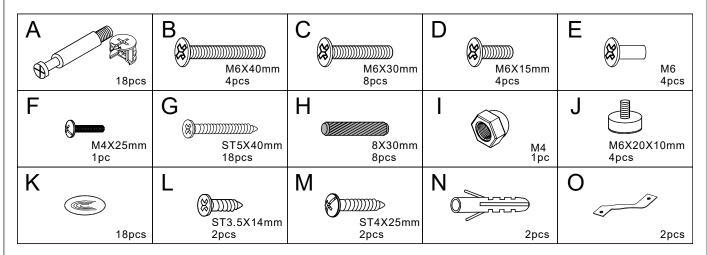


1	Top panel
2	Bottom panel
3	Left side panel
4	Right side panel
5	Left middle panel
6	Right middle panel
7	Back panel
8	Drawer front panel
9	Left drawer side panel
10	Right drawer side panel
11	Drawer back panel
12	Drawer bottom panel
13	Main frame
14	Connecting tube
15	Cross bar

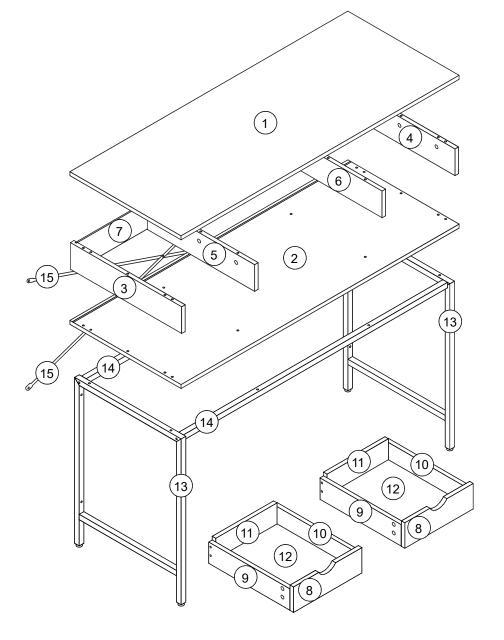


STEP 1:

- Attach panel 3, 4, 5, 6 to panel 1 with parts A and H.
 Place sticker K to cover assembled cam A.

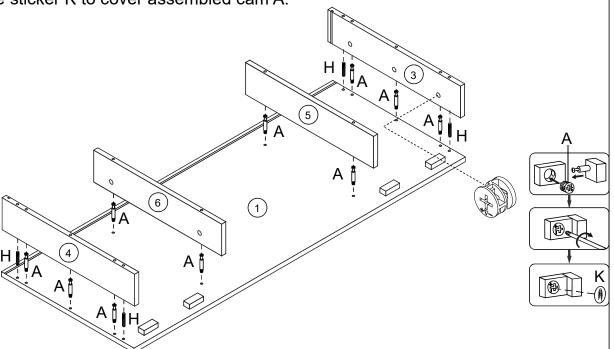


STEP 2:


- 1. Insert part H to panel 3 and 4.
- 2. Slide panel 7 along slots of panel 3 and 4.

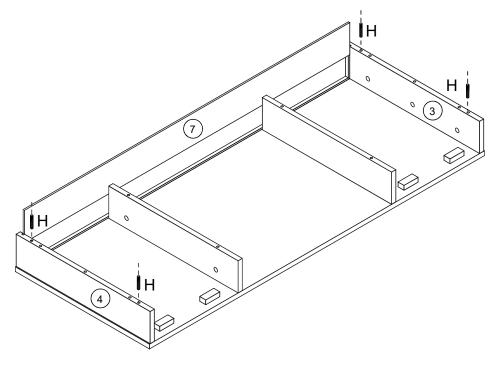

STEP 3:

Attach panel 9 and 10 to panel 8 with part A.
 Place sticker K to cover assembled cam A.

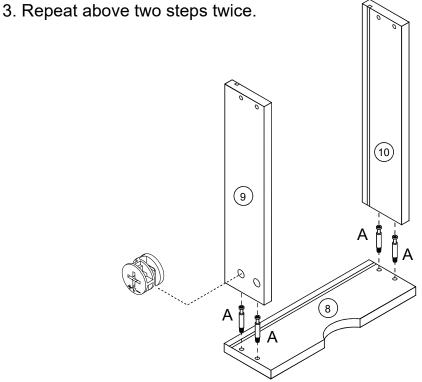


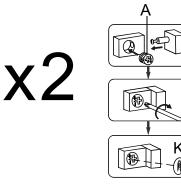

STEP 4:


1. Slide panel 12 along slots of panel 9 and 10.

2.Repeat above two steps twice.

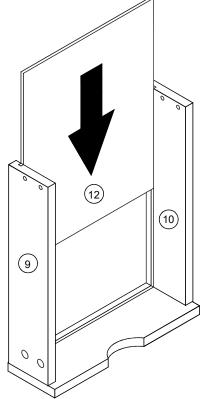


STEP 5:

1. Attach panel 11 to panel 9 and 10 with part G. 2.Repeat above step twice.

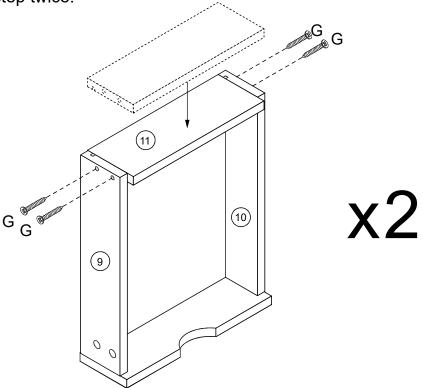


STEP 6:

1.Place assembled drawer to panel 1.

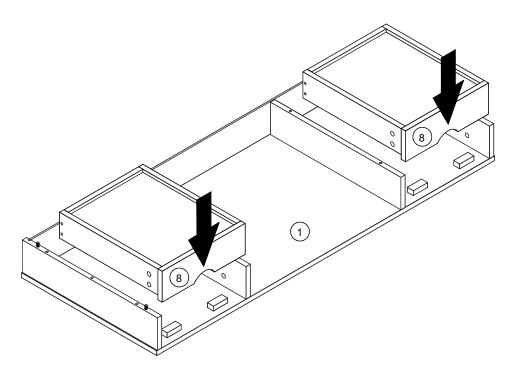


STEP 7:

1. Attach panel 2 to panel 3, 4, 5, 6 with part G.

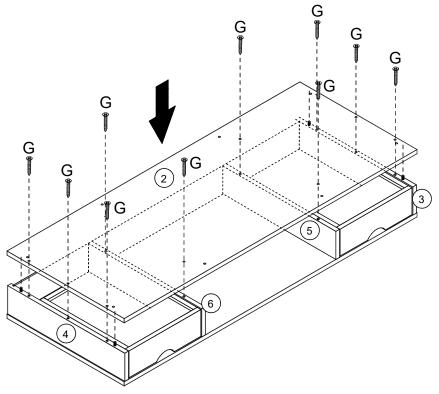


STEP 8:

1. Attach cross bar 15 with part F and I.

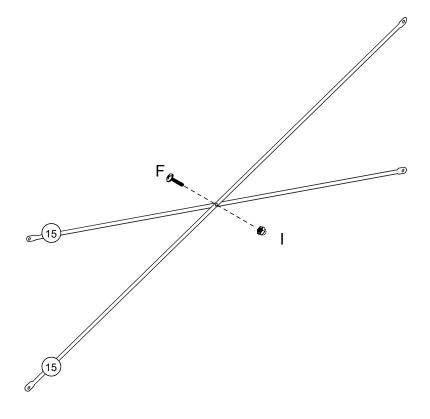


STEP 9:

1. Attach connecting tube 14 to frame 13 with part B.

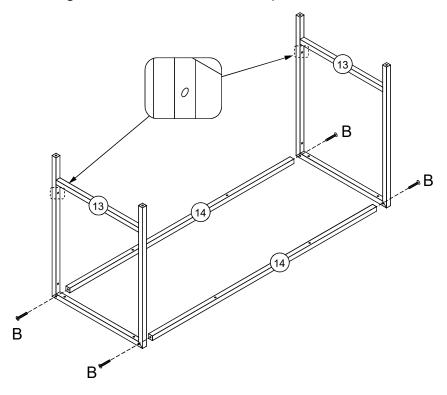


STEP 10:

- 1. Screw part J into frame 13.
- 2. Attach cross bar 15 to frame 13 with part D and E.

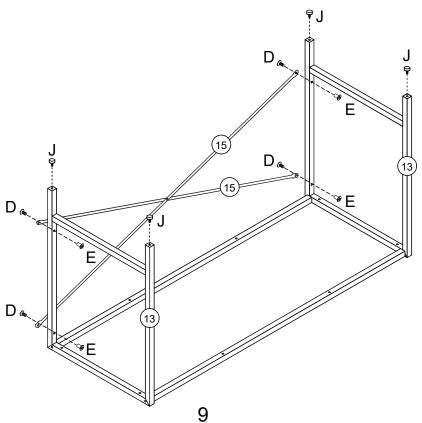


STEP 11:

1.Attach assembled frame to panel 2 with part C.

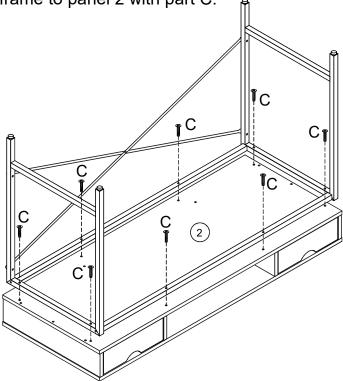


STEP 12:

1. Attach O to panel 1 two sides with part L.

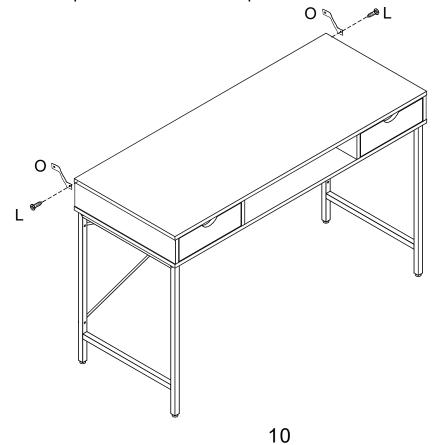


STEP 13:

1. Insert part N to the wall. Attach O to N with part M.

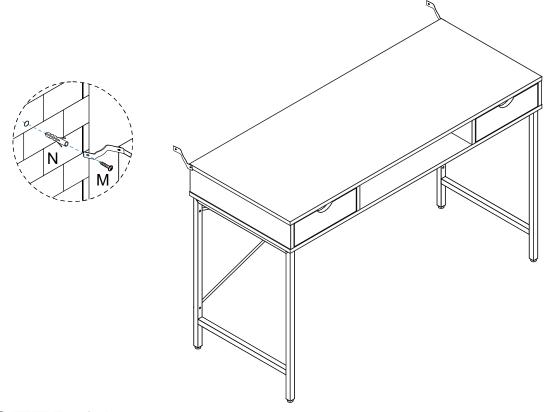

STEP 14:

Assembly complete!

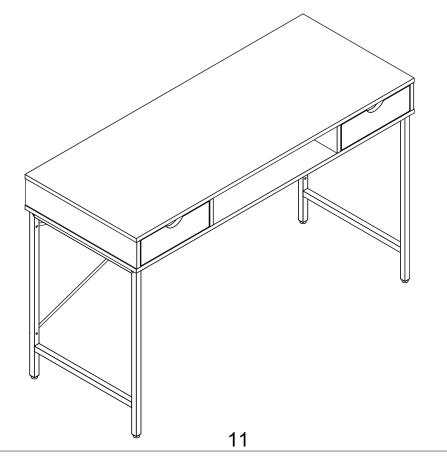

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void