

ASSEMBLY INSTRUCTION

REILLY 4 DOOR BUFFET

ITEM CODE 83455

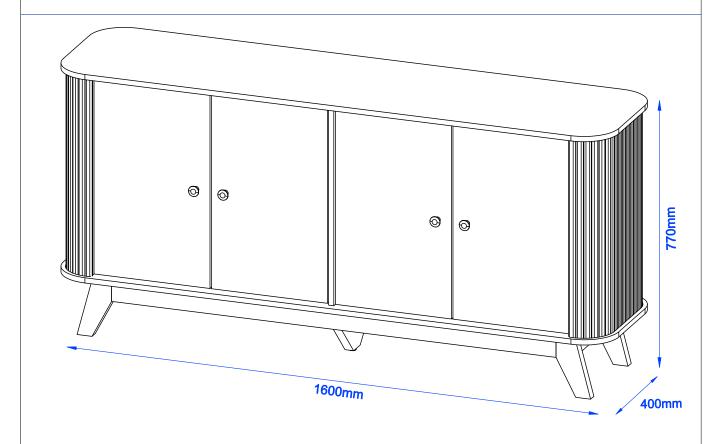

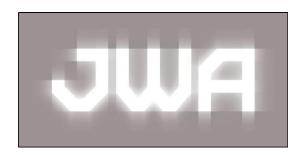


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:


- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.
- 7. Assembly is to be carried out by a competent adult(s) ONLY.
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

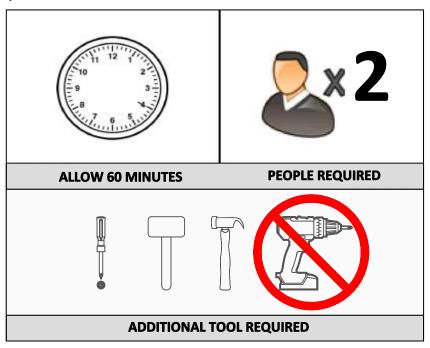




2

PARTS LIST

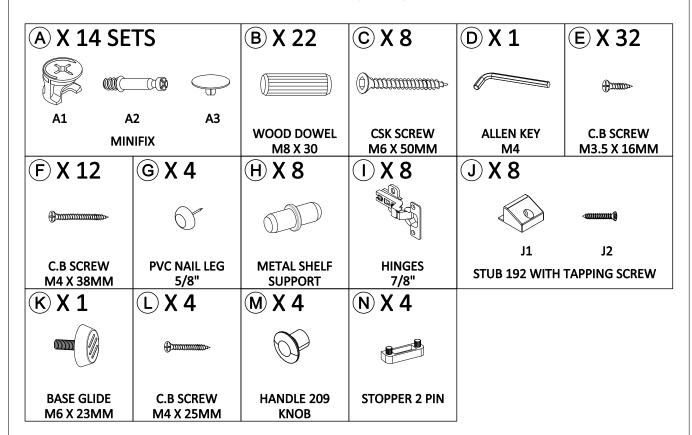


1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	BACK PANEL	1 PC
7	BACK SUPPORT	1 PC

8	SHELF PANEL (L/R)	2 PCS
9	DOOR PANEL (L/R)	4 PCS
10	CABINET FRAME	2 PCS
11	CABINET LEG	2 PCS
12	SIDE APRON	2 PCS
13	CENTER LEG	1 PC

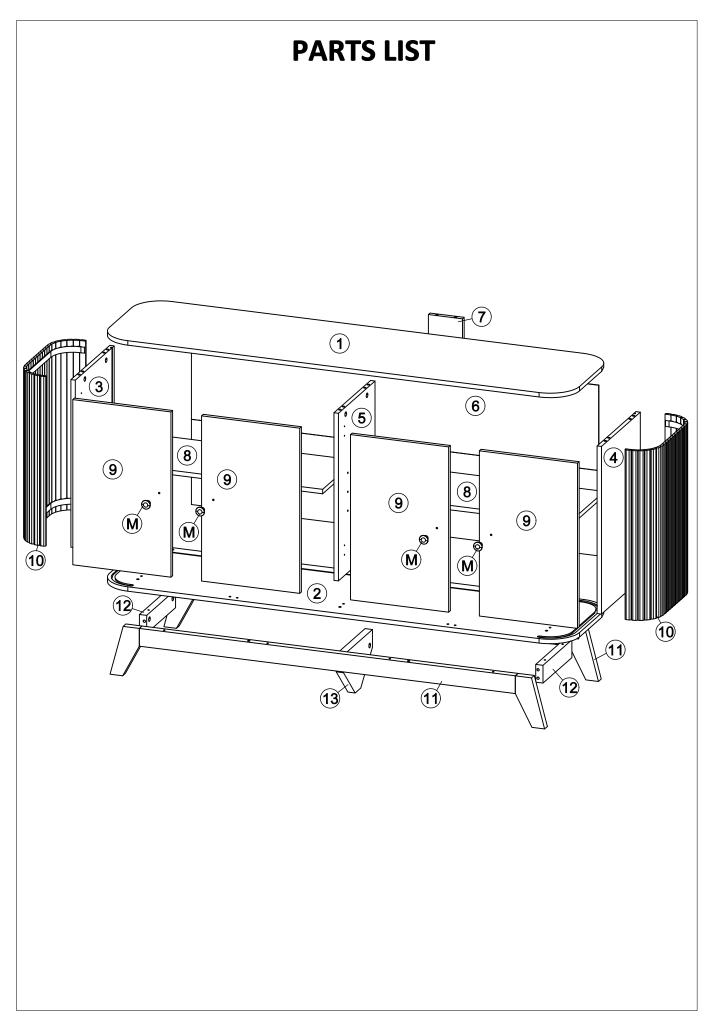




- Insert hardware N onto panel (1) and (2).

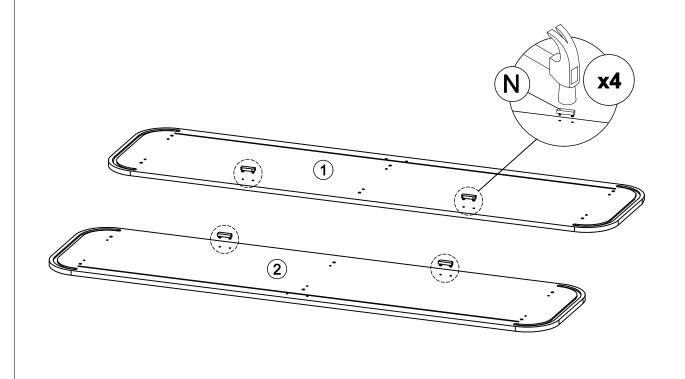




x8

- Insert hardware A1 onto panel (3), (4), (5) and (7). (Repeat 8 times.)
- Insert hardware A2 onto panel (1). (Repeat 8 times.)
- Insert hardware B onto panel (3), (4), (5) and (7). (Repeat 12 times.)

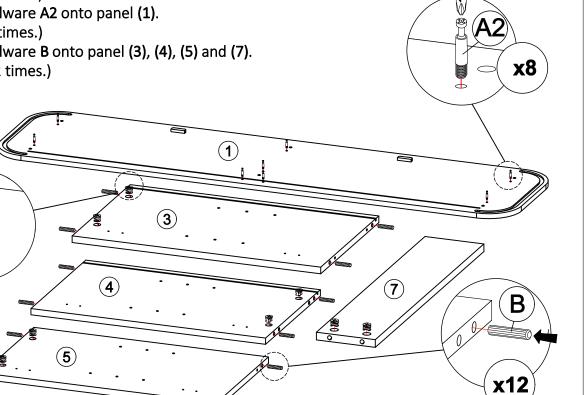


STEP 3:

- Attach panel (3), (4), (5) and (7) to panel (1).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1. (Repeat 8 times.)

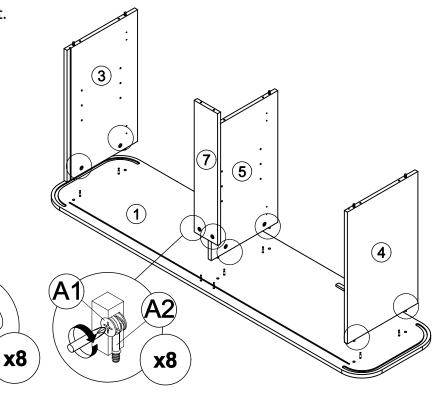


STEP 4:

-Assemble panel (6) to entire body into along the slot.

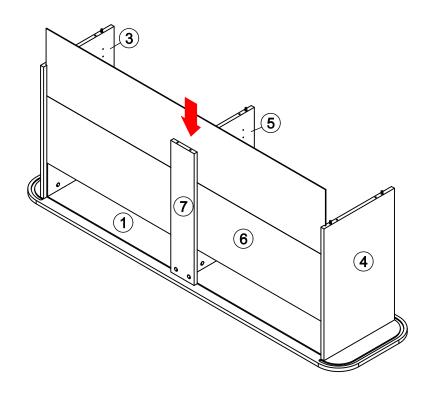


STEP 5:

- Assemble panel (10) into along the slot at panel (1). (Repeat 2 times.)

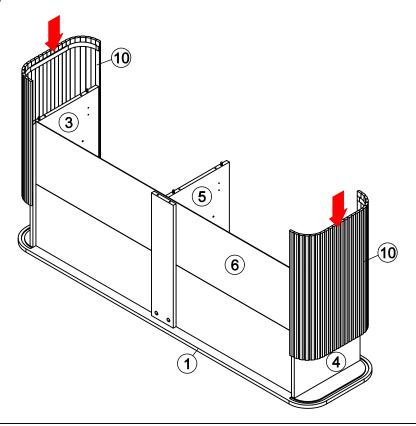


STEP 6:

-Assemble panel (2) to panel (3), (4), (5) and (7) with hardware C and D. (Repeat 8 times.)

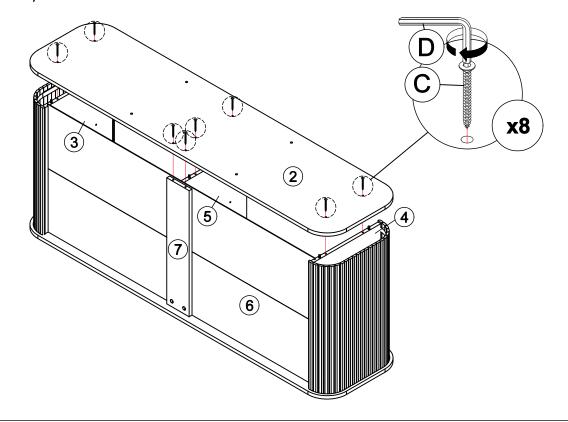




- Insert hardware J1 into slot at panel (1), (2), (3) and (4).
- Assemble hardware J1 by using hardware J2. (Repeat 8 times.)

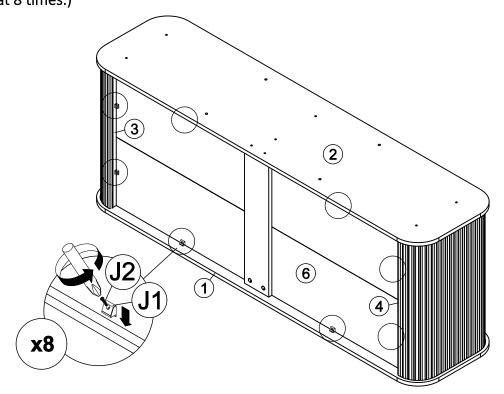


STEP 8:

- Insert hardware A1 onto panel (12) and (13). (Repeat 6 times.)
- Insert hardware A2 onto panel (11). (Repeat 6 times.)

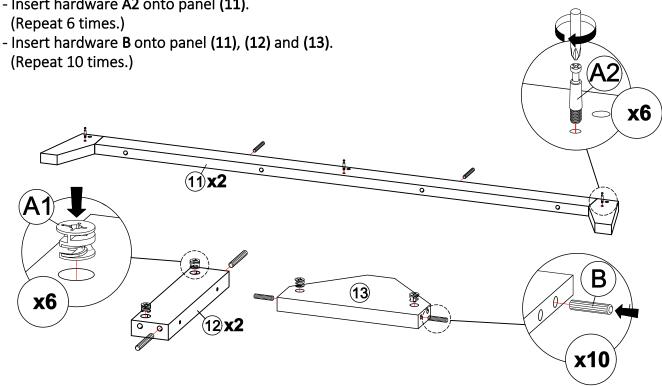


STEP 9:

- Attach panel (12) and (13) to panel (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.

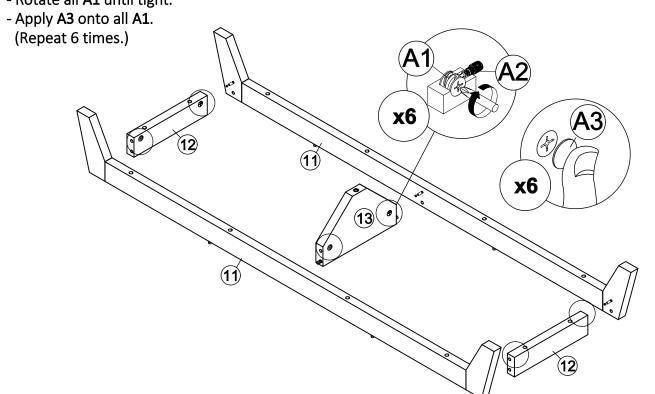


STEP 10:

-Assemble panel (11) and (12) to panel (2) with hardware F. (Repeat 12 times.)

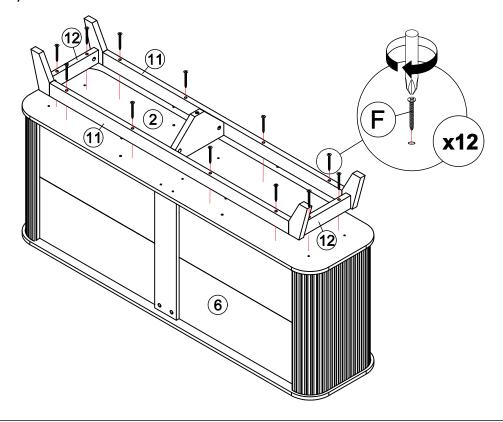


STEP 11:

- Hit hardware **G** into bottom of panel **(11)**. (Repeat 4 times.)
- Insert hardware K into bottom of panel (13). Please note that the hardware K can be adjusted to change the the height of panel (13) if necessary.

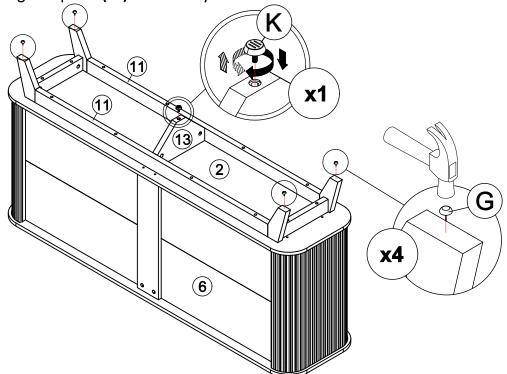


STEP 12:

-Insert hardware H into mounting positions on panel (3), (4) and (5) by hand. (Repeat 8 times.)

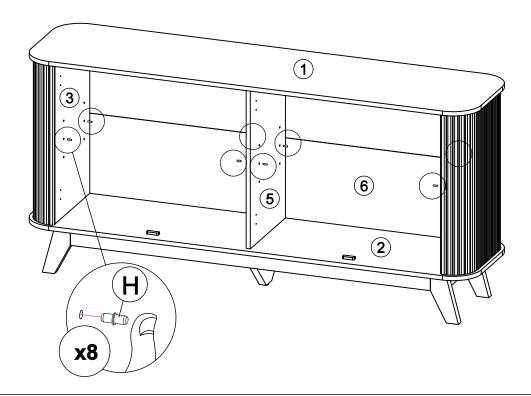


STEP 13:

Assemble the panel (8) into between panel (3) and (5) and panel (4) and (5). (Repeat 2 times.)

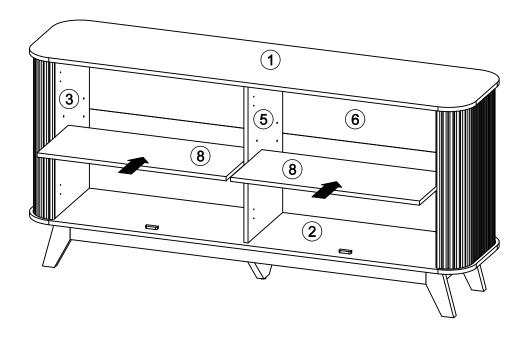

STEP 14:


- -Fix hardware I onto panel (9) by using hardware E. (Repeat 2 times for each hardware.)
- -Fix hardware **M** onto panel **(9)** by using hardware **L**. (Repeat 4 times)

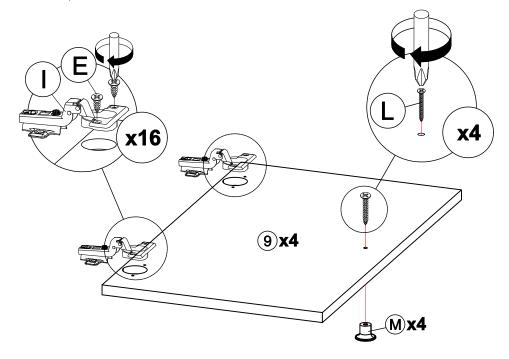


STEP 15:

- Fix hardware I onto panel (3), (4) and (5) by using hardware E. (Repeat 2 times for each hardware.)

- Tighten or loosen the screw to adjust position of panel (9).

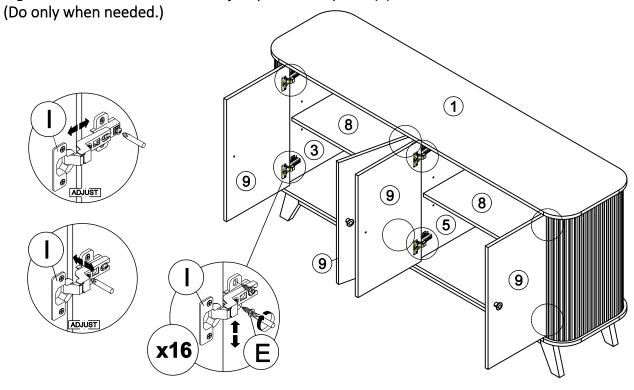


-ASSEMBLY IS COMPLETE

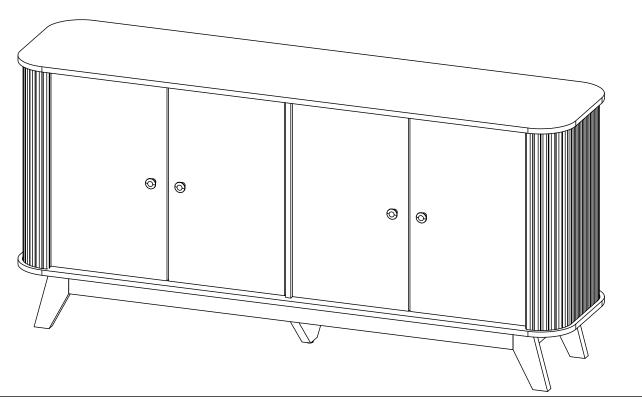

SAFETY BRACKETS INSTRUCTIONS IF YOUR PRODUCT REQUIRES THE ADDITION OF SAFETY BRACKETS OR "TIPPING KITS" PLEASE INCLUDE THESE INSTRUCTIONS BELOW.

- 1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- 2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
- 3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
- 4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.

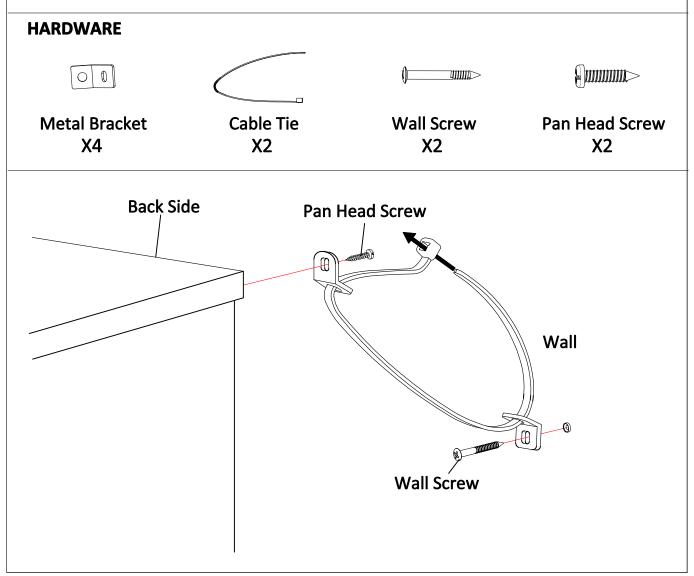

CARE AND MAINTENANCE

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under window.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause server finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.