

## **ASSEMBLY INSTRUCTION**

# MARTINEZ 4 DOOR BUFFET

**ITEM CODE 84011** 

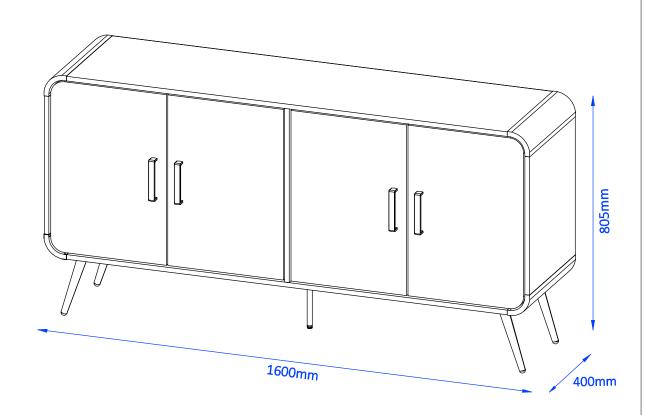

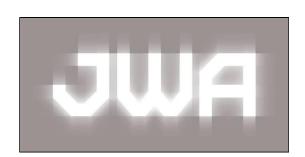


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia
For any assistance with assembly or for missing parts please refer to your receipt

#### PRE-ASSEMBLY PREPARATION


## **Before you start:**

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.
- 7. Assembly is to be carried out by a competent adult(s) ONLY.
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

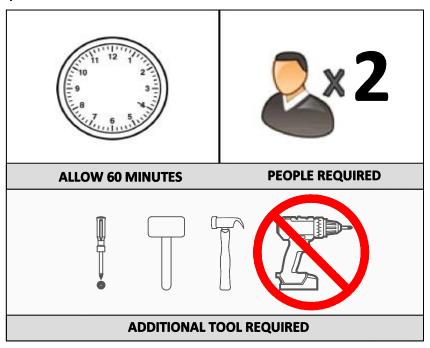




# **PARTS LIST**

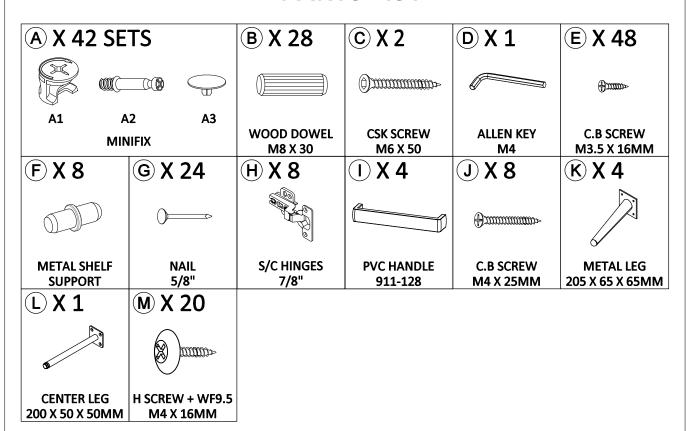


# **PARTS LIST**

1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	SIDE SUPPORT BONE	4 PCS
7	BACK PANEL	1 PC


8	SHELF PANEL (L)	1 PC
9	SHELF PANEL (R)	1 PC
10	DOOR PANEL (L/R)	2 PCS
11	DOOR PANEL (CENTER)	2 PCS
12	LEG CORNER (L)	2 PCS
13	LEG CORNER (R)	2 PCS

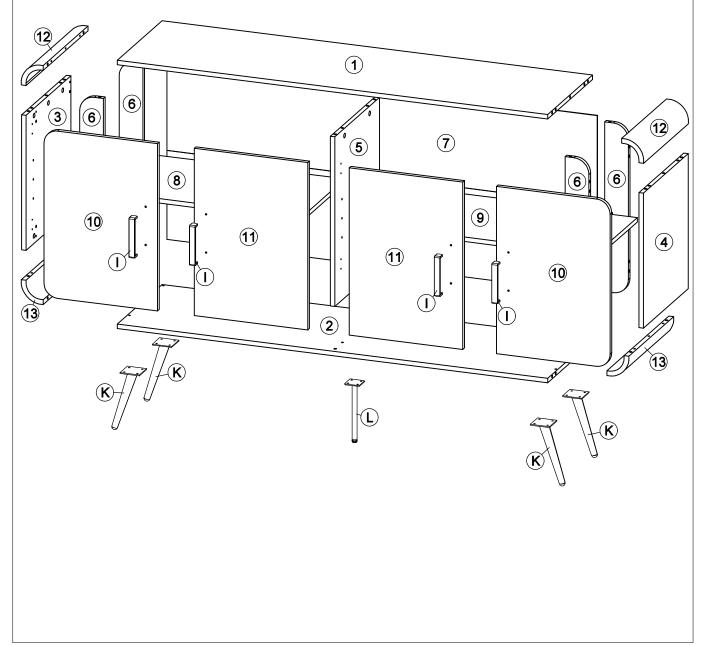

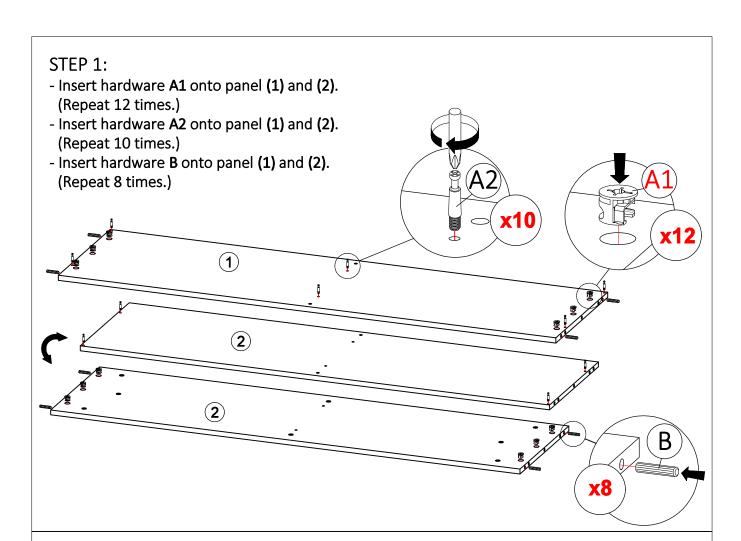


#### STEP 2:

- Insert hardware A1 onto panel (3) and (4). (Repeat 12 times.)

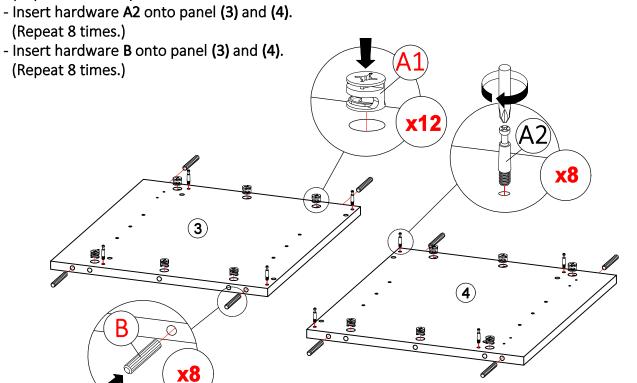


#### STEP 3:

- Insert hardware A1 onto panel (5) and (6). (Repeat 18 times.)
- Insert hardware B onto panel (5) and (6). (Repeat 12 times.)

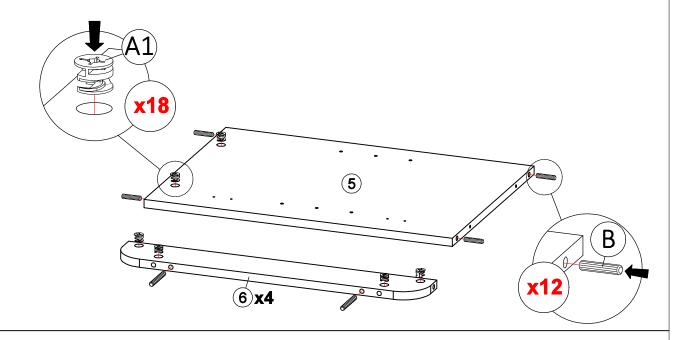


#### STEP 4:

- Insert hardware A2 onto panel (11) and (12). (Repeat 24 times.)

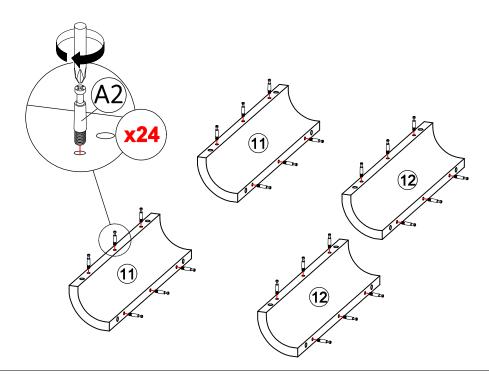





- Attach panel (5) and (6) to panel (1).
- Insert all hardware A2 into A1.

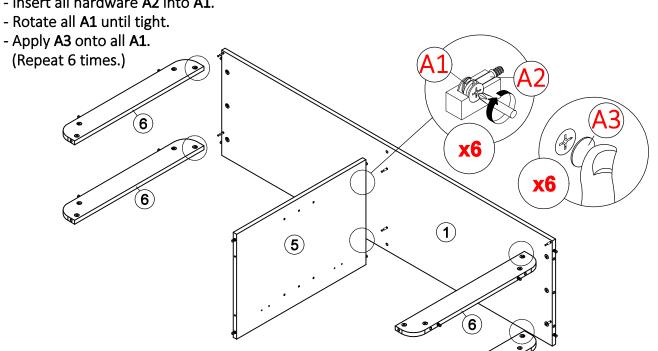

#### STEP 6:


- Attach panel (5) and (6) to panel (2).
- Insert all hardware A2 into A1.
- Apply A3 onto all A1. (Repeat 4 times.)

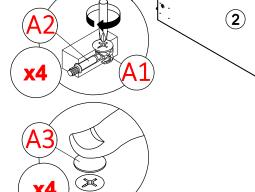

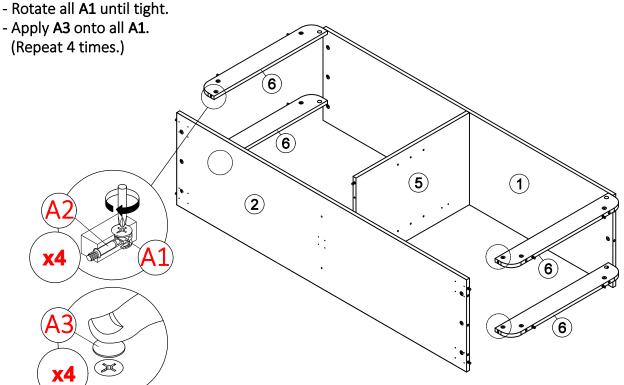


#### **STEP 7:**


-Assemble panel (5) to panel (2) with hardware C. (Repeat 2 times.)

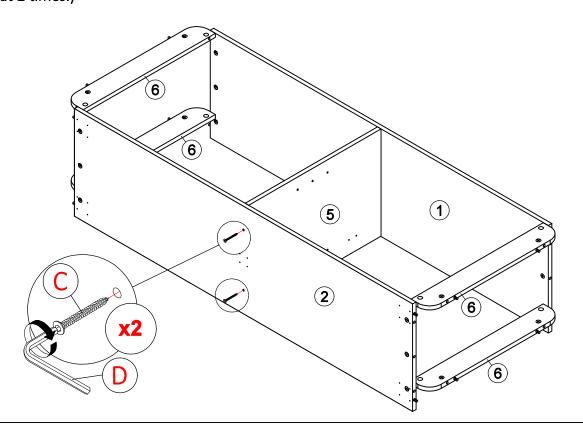

#### STEP 8:


- Attach panel (12) and (13) to panel (3) and (4).
- Insert all hardware A2 into A1.

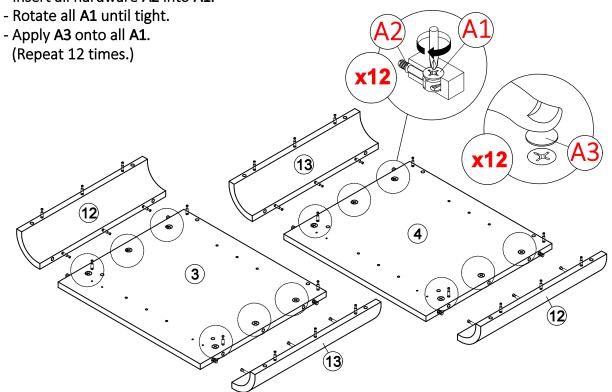

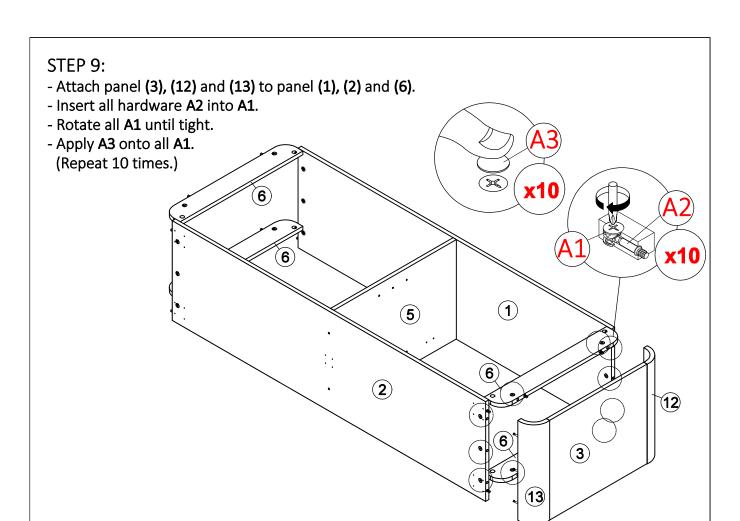




- Attach panel (4), (12) and (13) to panel (1), (2) and (6).
- Insert all hardware A2 into A1.

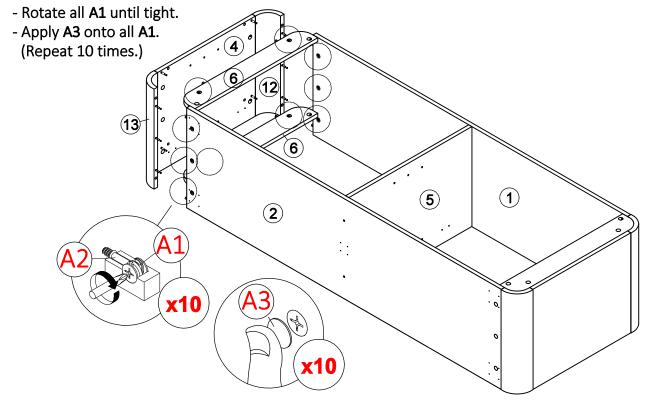


#### **STEP 11:**

- Assemble panel **(7)** to entire body with hardware **G**. (Repeat 24 times.)

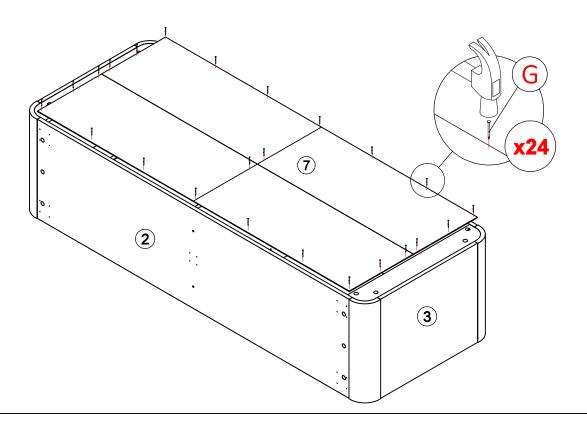


#### **STEP 12:**

-Fix hardware K onto panel (2) by using hardware M. (Repeat 16 times.)

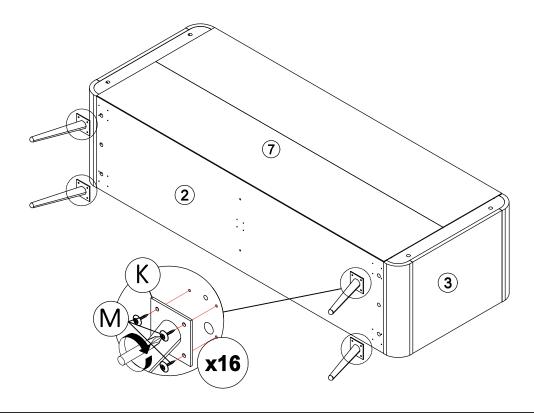


#### **STEP 13:**

-Fix hardware L onto panel (2) by using hardware M.

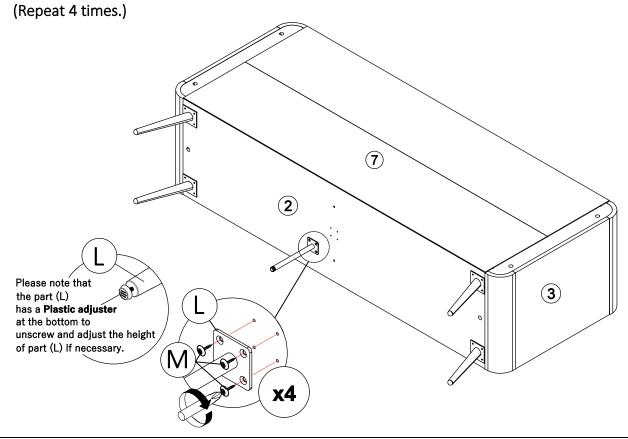


#### **STEP 14:**

- Insert hardware F into mounting positions on panel (3), (4) and (5) by hand. (Repeat 8 times.)

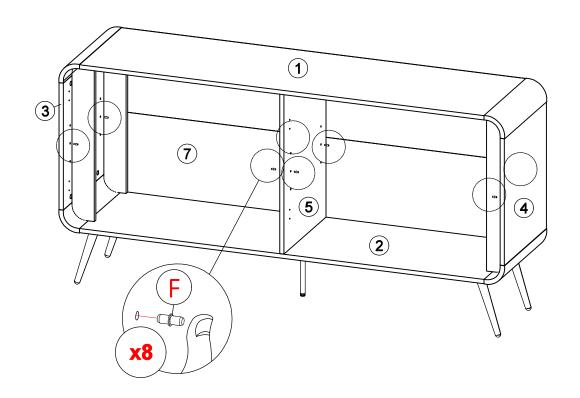


#### **STEP 15:**

- Assemble the panel (8) into between panel (3) and (5) then panel (9) into between panel (4) and (5). (Repeat 2 times.)

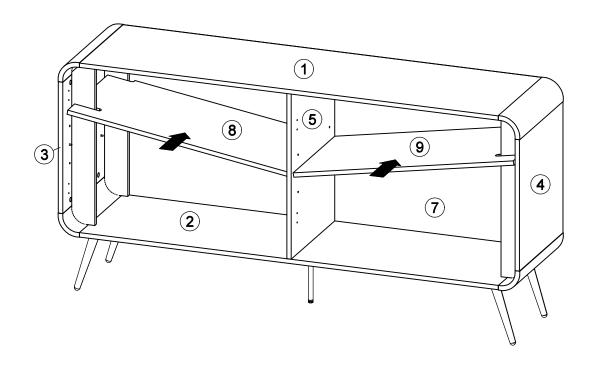


#### **STEP 16:**

- Fix hardware H onto panel (10) and (11) by using hardware E. (Repeat 2 times for each hardware.)
- Fix hardware I onto panel (10) and (11) by using hardware J. (Repeat 8 times.)

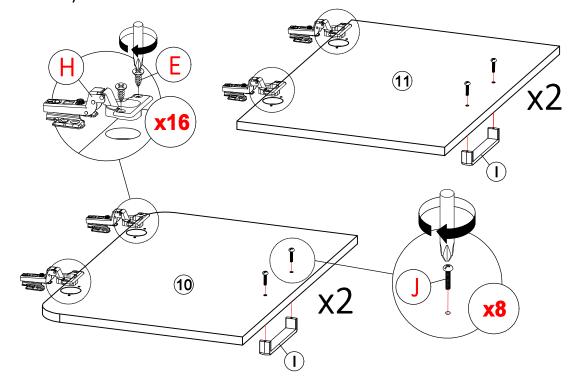


#### **STEP 17:**

- Fix hardware H into panel (3), (4) and (5) by using hardware E. (Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (10) and (11).

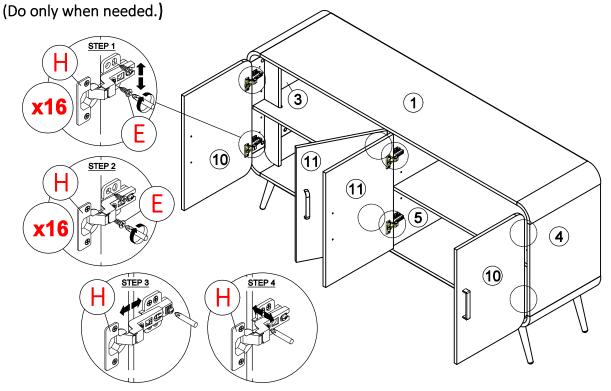


#### -ASSEMBLY IS COMPLETE

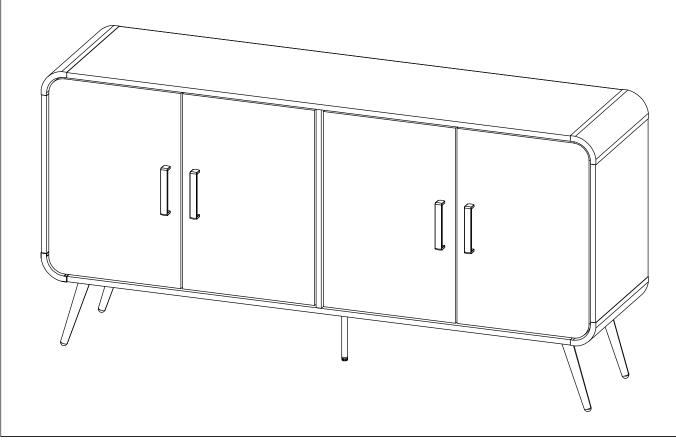

# SAFETY BRACKETS INSTRUCTIONS IF YOUR PRODUCT REQUIRES THE ADDITION OF SAFETY BRACKETS OR "TIPPING KITS" PLEASE INCLUDE THESE INSTRUCTIONS BELOW.

- 1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- 2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
- 3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
- 4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.

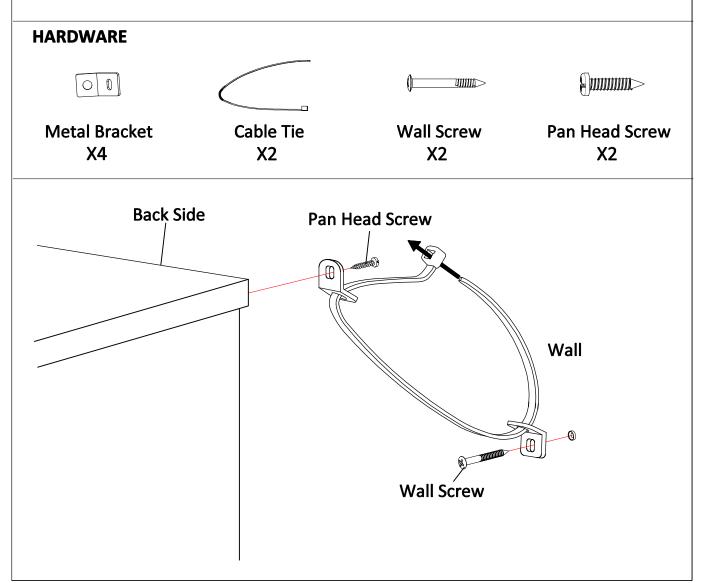

#### **CARE AND MAINTENANCE**

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under window.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause server finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.