


**ASSEMBLY INSTRUCTION**  
**SCHAEFER WALNUT/WHITE KING SINGLE BED**  
**ITEM CODE : 86444/86445**


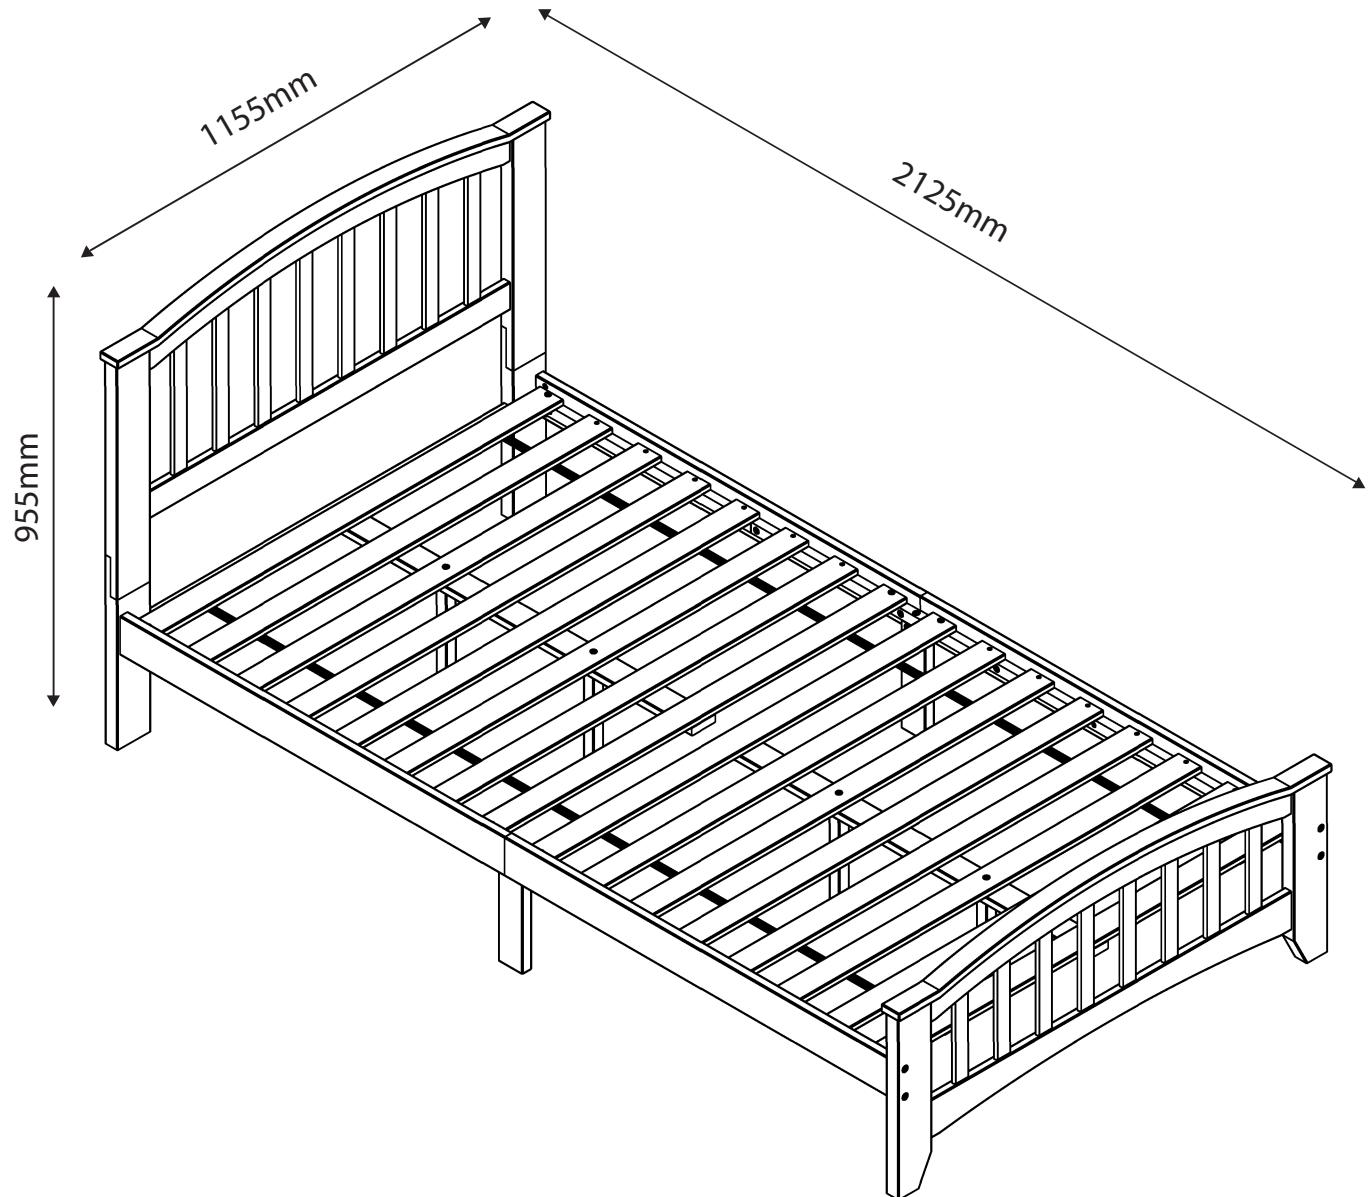


Imported by JWA Furniture Pty Ltd, Brisbane, Qld, Australia.  
For any assistance with assembly or for missing parts please refer to your receipt.


## PRE-ASSEMBLY PREPARATION

### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Do not use power drills and drivers for tighten the screws and bolts as this may damage the item.

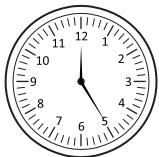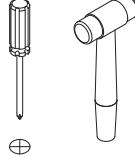	
ALLOW 25 MINUTES	2 PERSON REQUIRED
	
ADDITIONAL TOOLS REQUIRED	NO POWER DRILL


## PART LIST

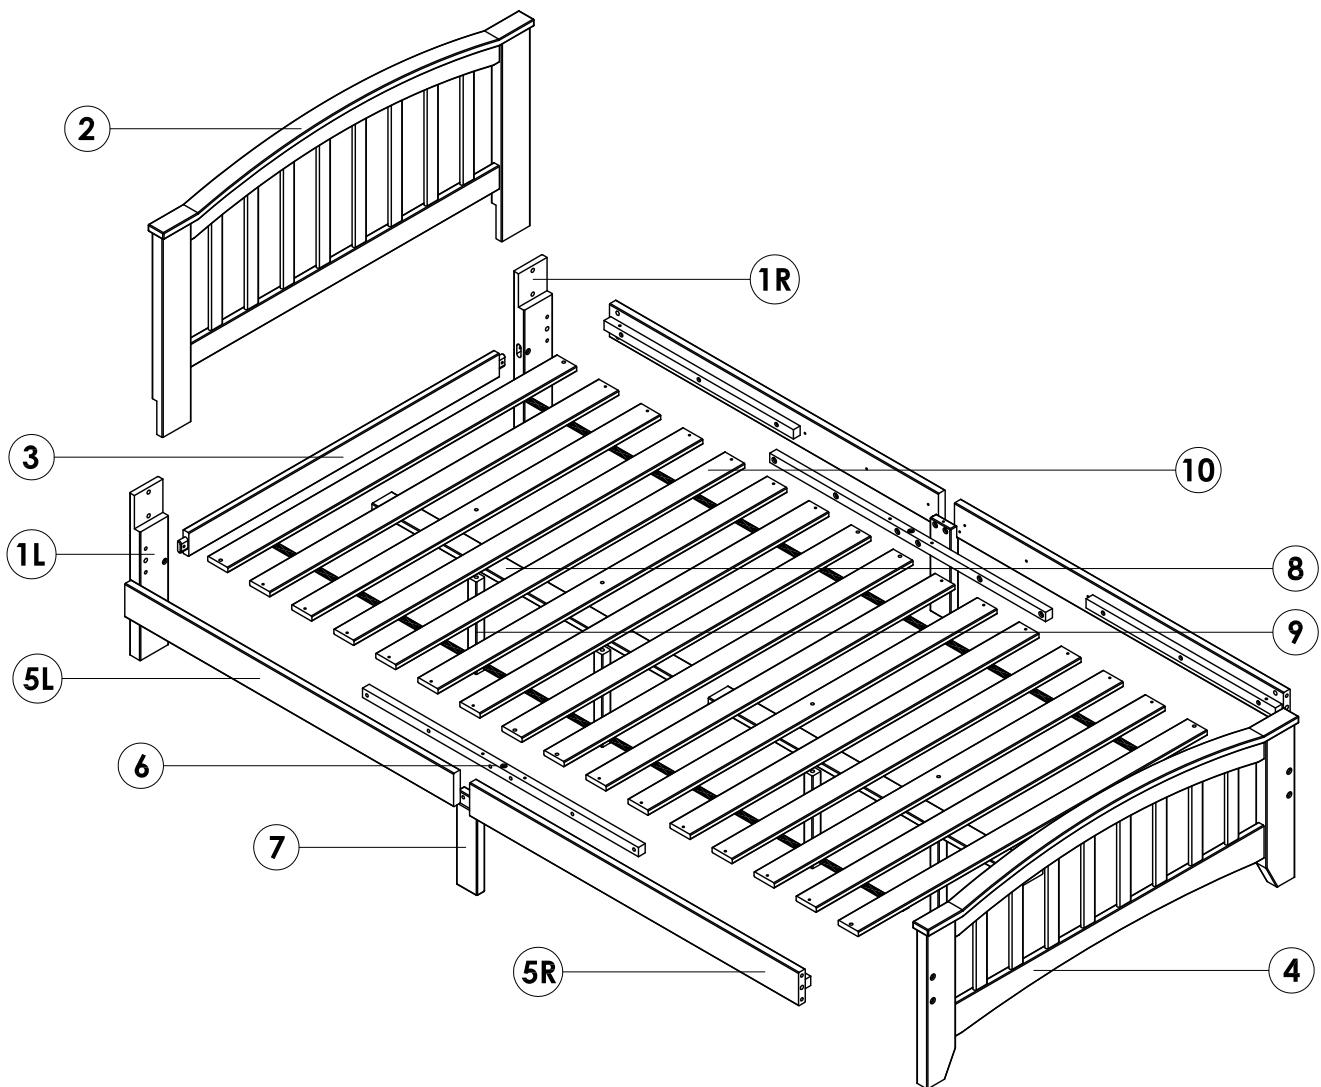

1L	HEADBOARD POST - L	(X1)	5R	SIDE RAIL - R	(X2)
1R	HEADBOARD POST - R	(X1)	6	SLAT SUPPORT	(X2)
2	HEADBOARD	(X1)	7	SUPPORTER LEG (RAIL)	(X2)
3	HEADBOARD RAIL	(X1)	8	CENTER SUPPORT	(X2)
4	FOOTBOARD	(X1)	9	SUPPORT LEG	(X4)
5L	SIDE RAIL - L	(X2)	10	WOODEN SLAT (63 x 1087 = 16)	(X1)

## HARDWARE LIST

A. PLASTIC DOWEL (M10 x 35MM)




4 PCS

B. JCBB BOLT (M8 x 25MM)




4 PCS

C. JCBC BOLT (M6 x 60MM)

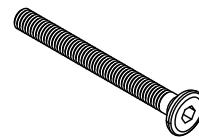

4 PCS

D. JCBC BOLT (M6 x 70MM)

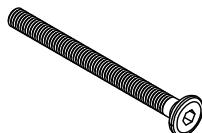

8 PCS

E. JRN NUT (M6 x 13MM)



8 PCS

F. JCBC W SCREW (M7 x 25MM)



2 PCS

G. JCBC W SCREW (M7 x 32MM)



24 PCS

H. JCBC W SCREW (M7 x 40MM)




2 PCS

J. CSK C/B SCREW (M4 x 32MM)




24 PCS

K. BASE GLIDE L190 (M6 x 23MM)




4 PCS

L. ALLEN KEY (M4 x 60MM)



1 PC


M. ALLEN KEY (M5 x 60MM)

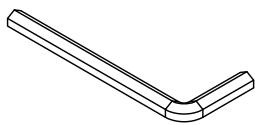

1 PC


## STEP 1

Insert **Dowels (A)** into Ø10MM holes on **Side Rail (L/R)** by using a Rubber Hammer.

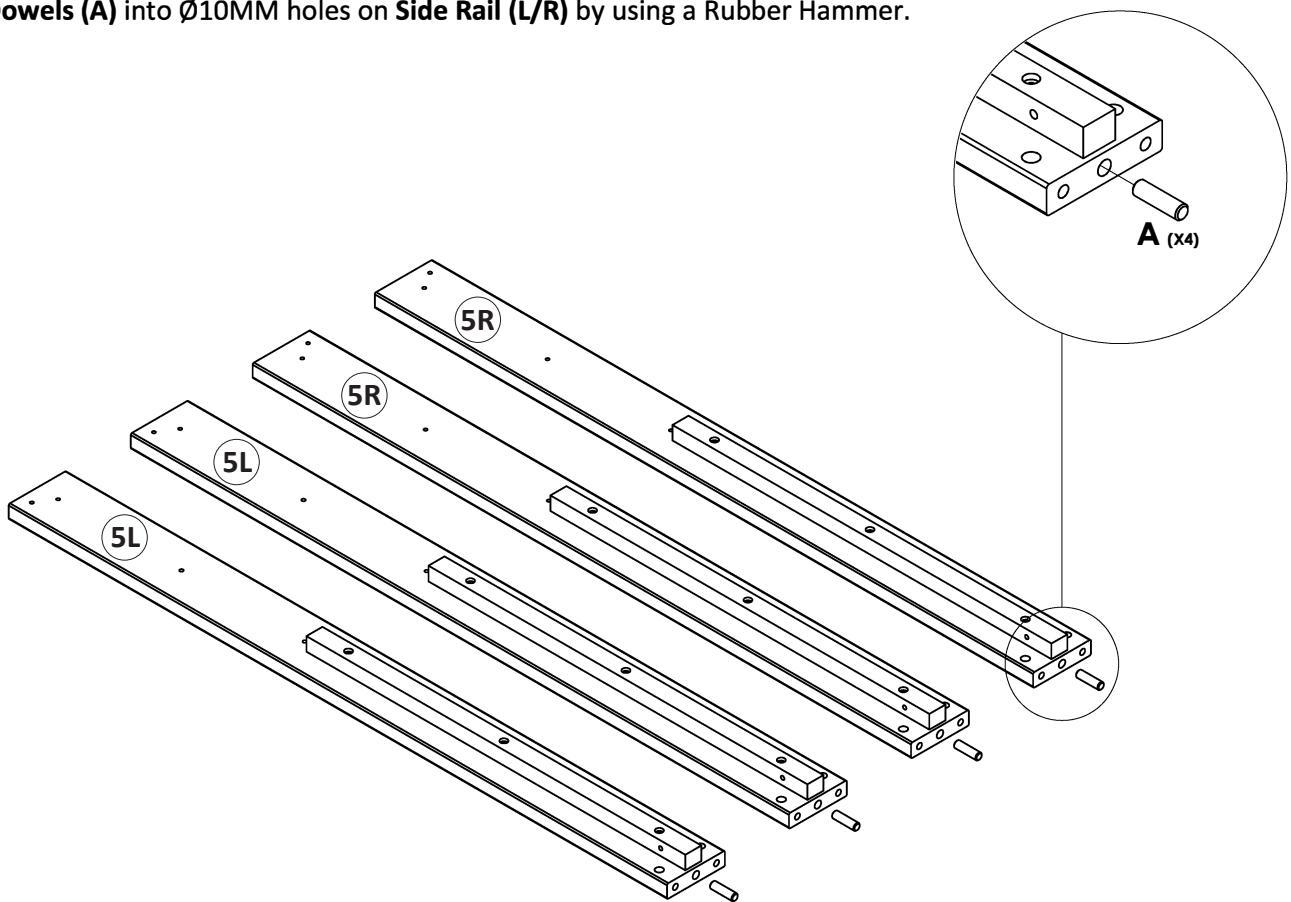


## STEP 2

Attach **Headboard Rail** onto **Headboard Post (L/R)** by using **Screws (F)**, tighten it up by using **Allen Key (L)**.

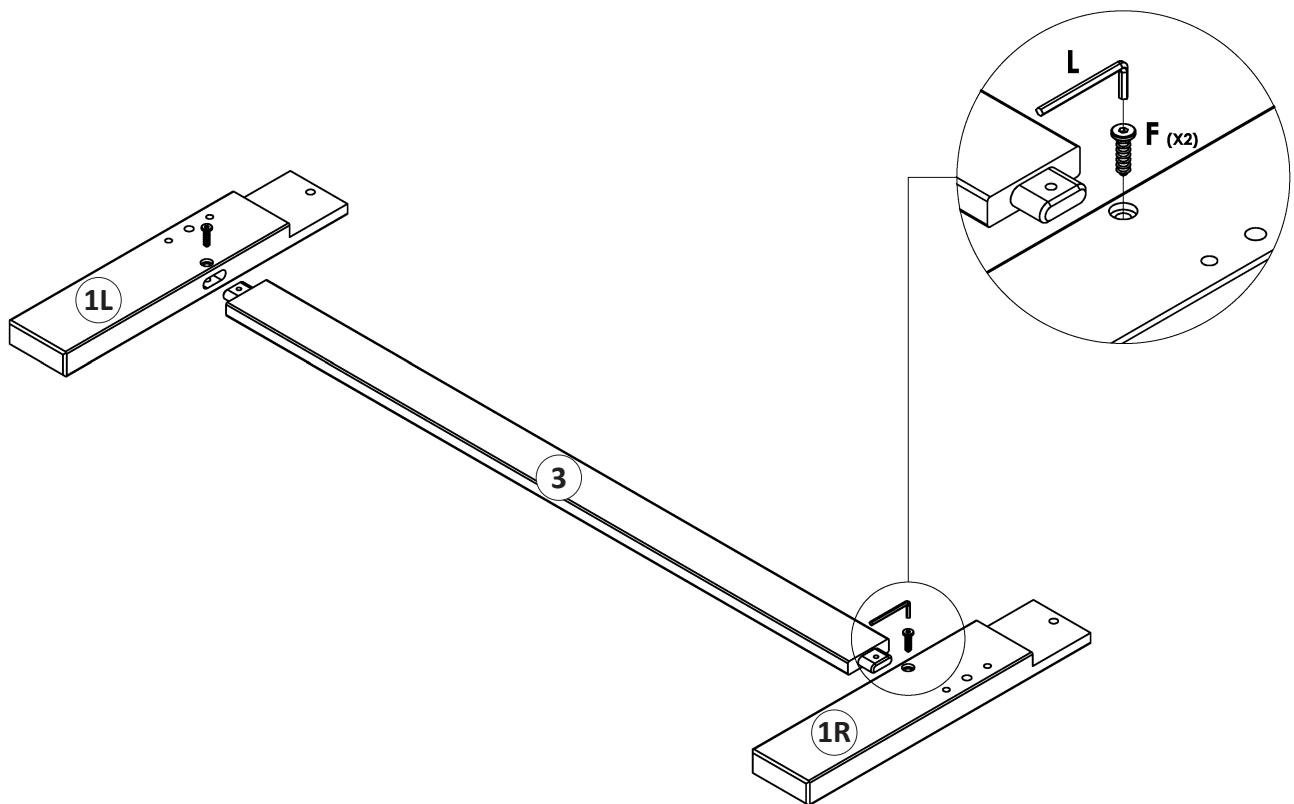


## STEP 3

Attach **Headboard Post (L/R)** onto **Headboard** by using **Screws (B)**, tighten it up by using **Allen Key (M)**.

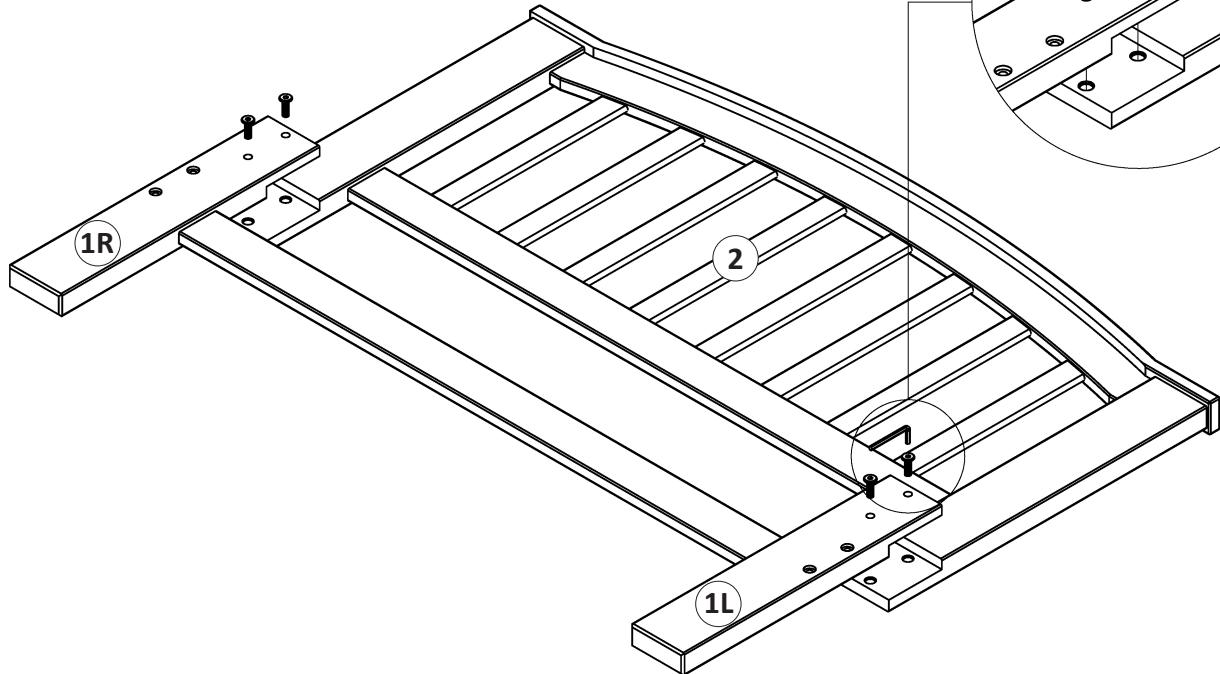


## STEP 4

Attach **Slat Support** onto **Side Rail (L/R)** by using **Screws (G)**, tighten it up by using **Allen Key (L)**.

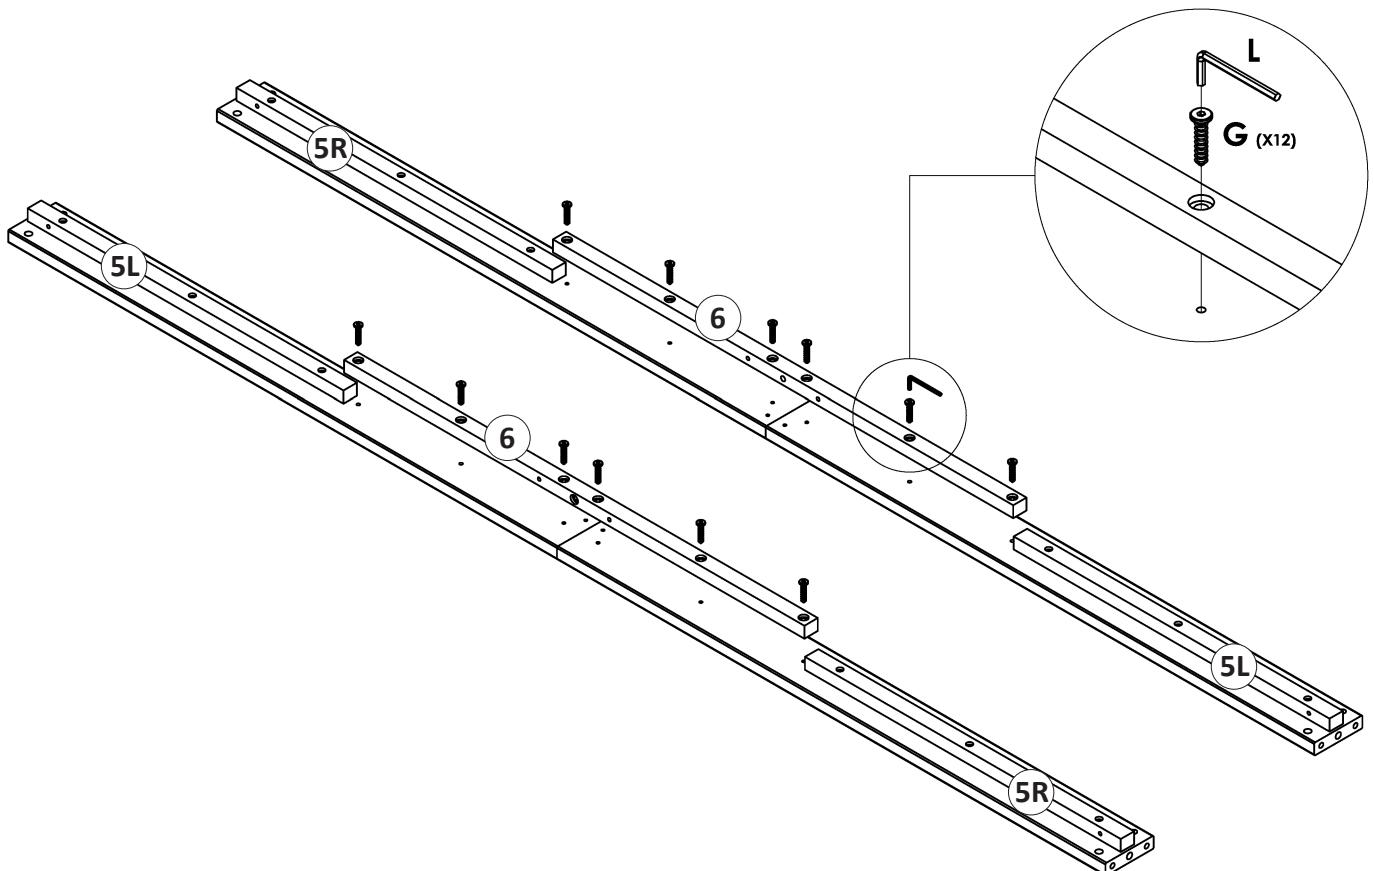


## STEP 5

Attach **Supporter Leg (Rail)** onto **Side Rail** by using **Screws (G)**, tighten it up by using **Allen Key (L)**.

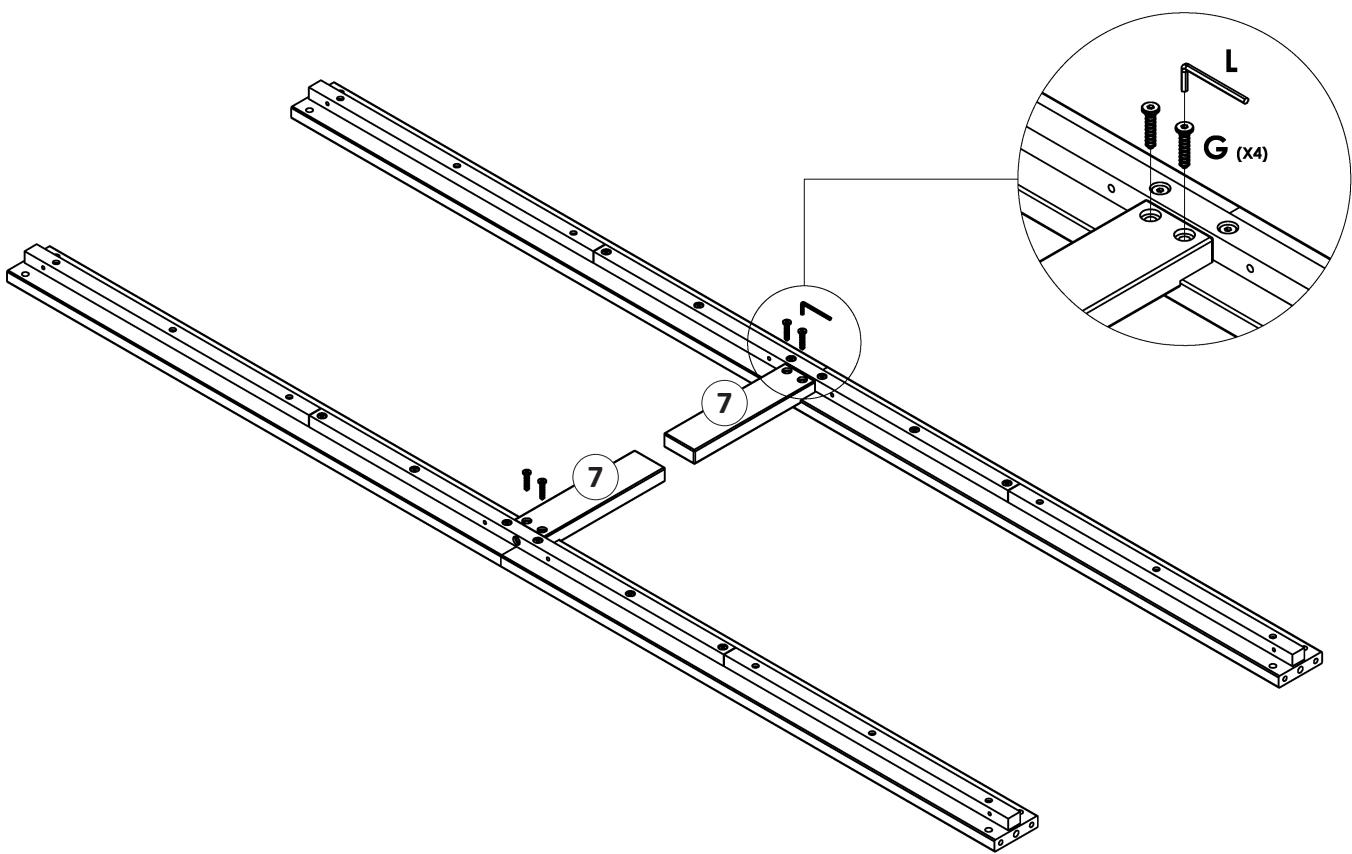


## STEP 6

Secure **Supporter Leg (Rail)** onto **Side Rail** by using **Screws (H)**, tighten it up by using **Allen Key (L)**.

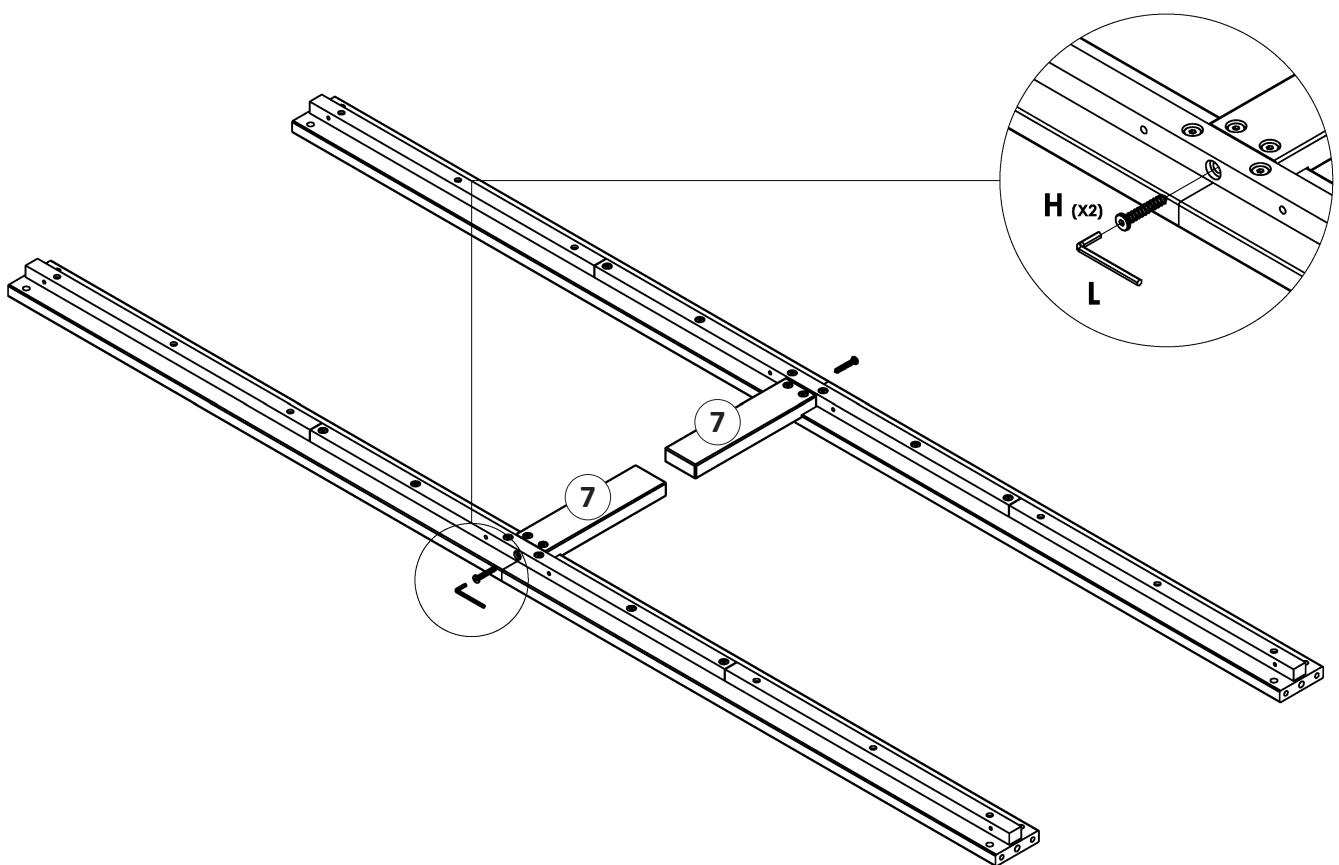

## STEP 7

Attach **Side Rails** to **Headboard & Footboard** by using **Bolts (D)** and **Nuts (E)**, tighten it up by using an **Allen Key (L)**.

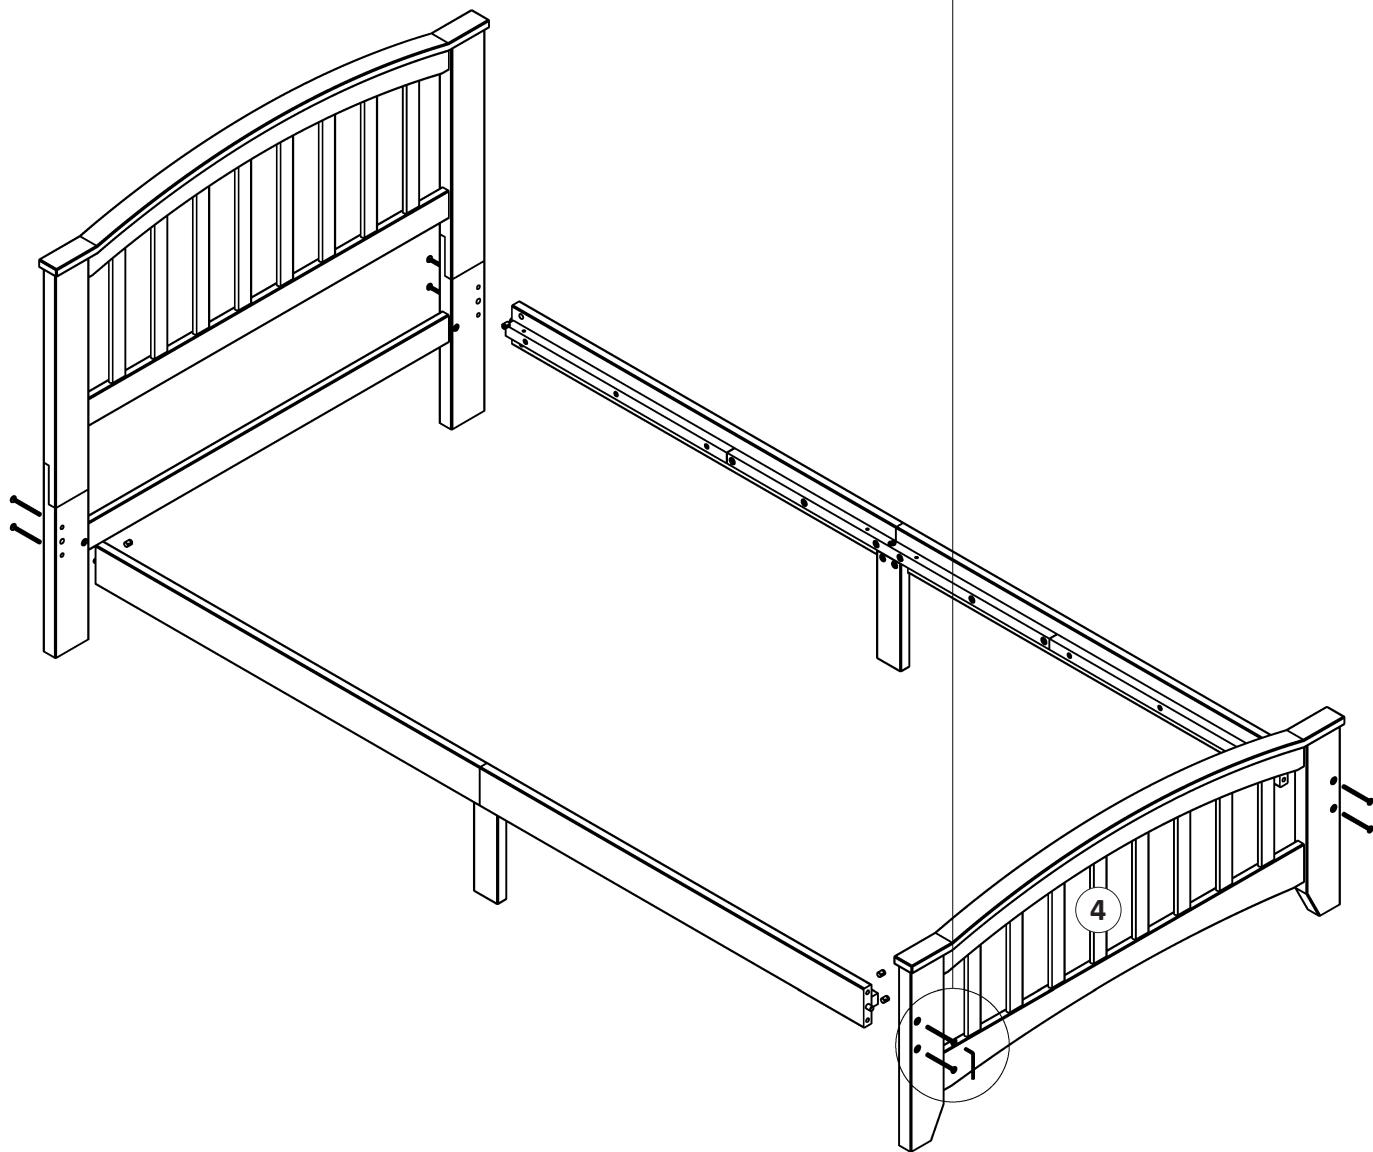

### STEP 3


Screw Base Glides (K) under Support Legs.

Position Center Support and Support Leg under the middle of Bed.

Secure Wooden Slat onto Center Support and Support Leg by using Bolts (C), tighten it up by using Allen Key (L).

Secure Wooden Slat using Screws (G) into pre-drilled holes on both ends by using Allen Key (L). Go on to complete the Assembly.


\* Align both **Side Rail** before tightening the screws.

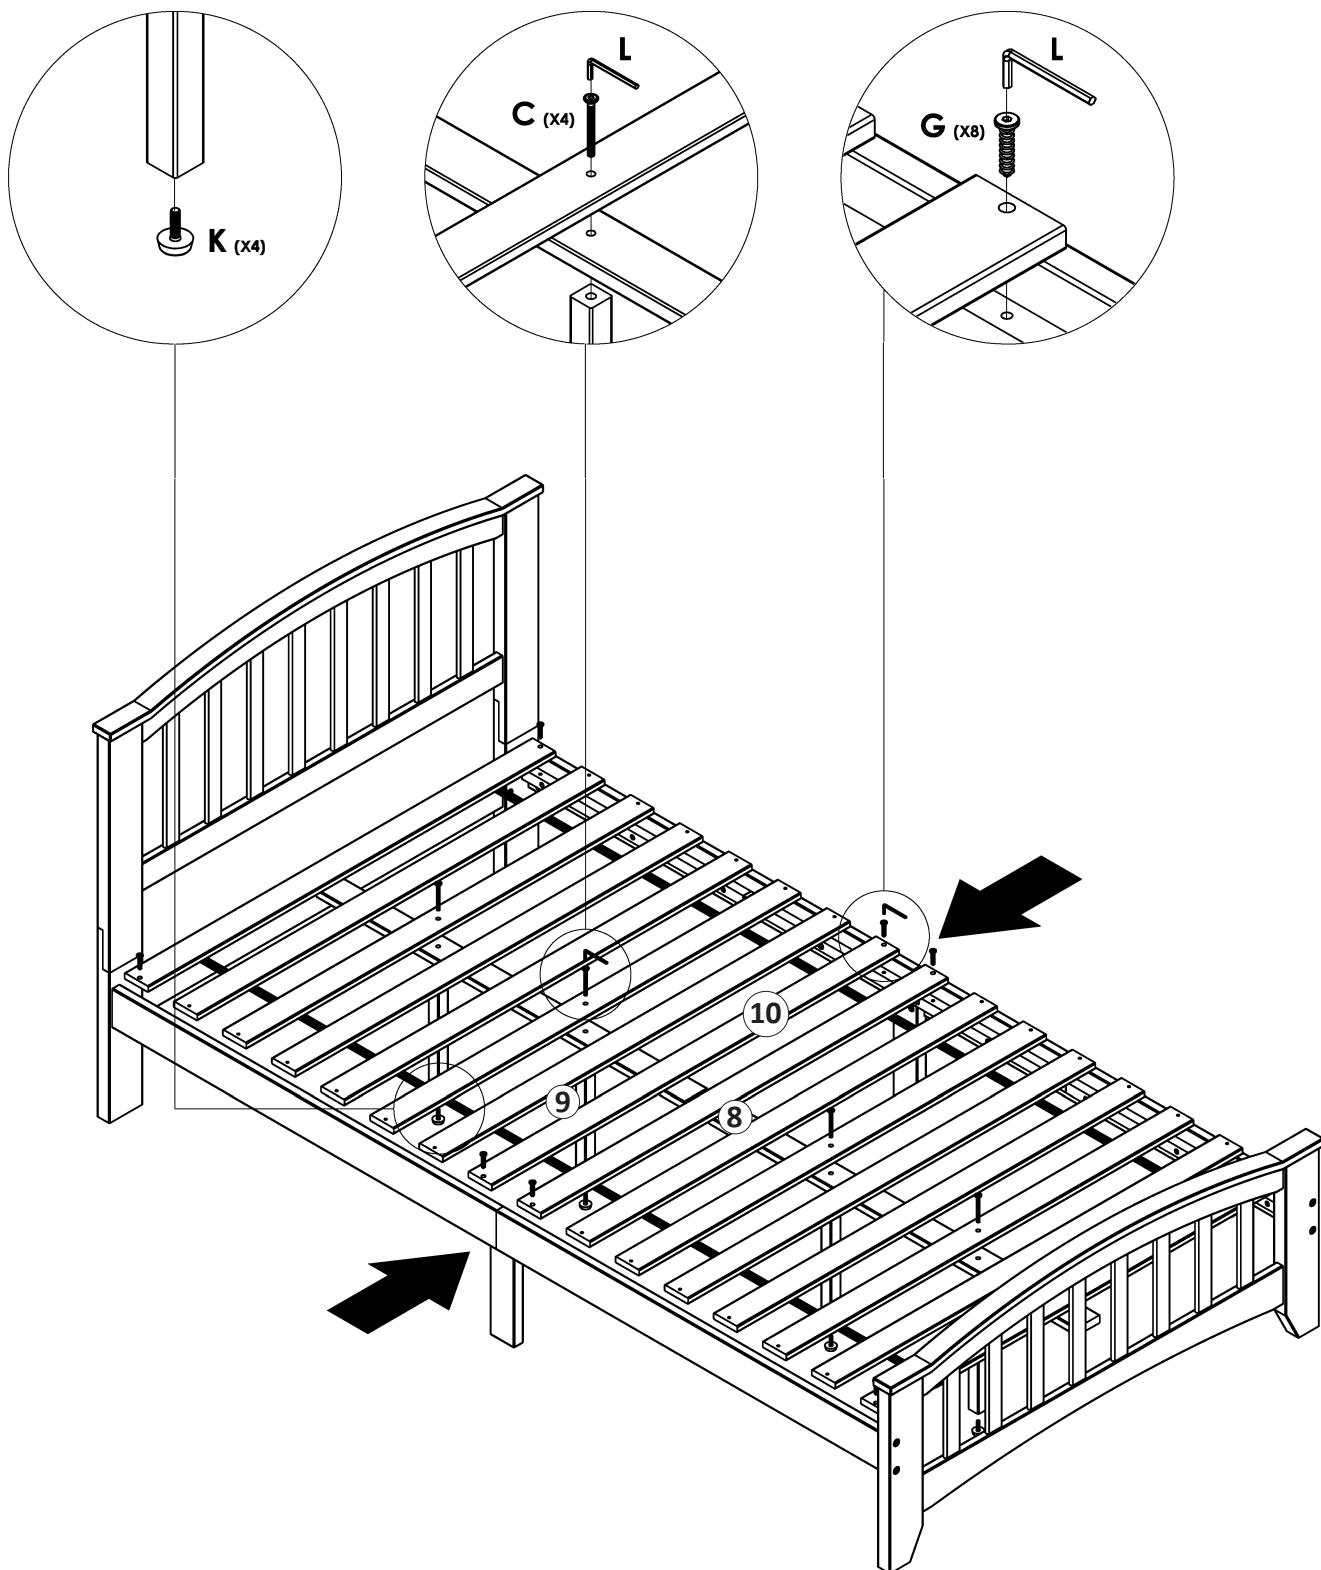

## STEP 9

Using **Screws (J)** to secure all the **Wooden Slat** onto **Side Rail**, tighten it up by using a Crosshead Screw Driver. Go on to complete the **Assembly**.

\* Align both **Side Rail** before tightening the screws.

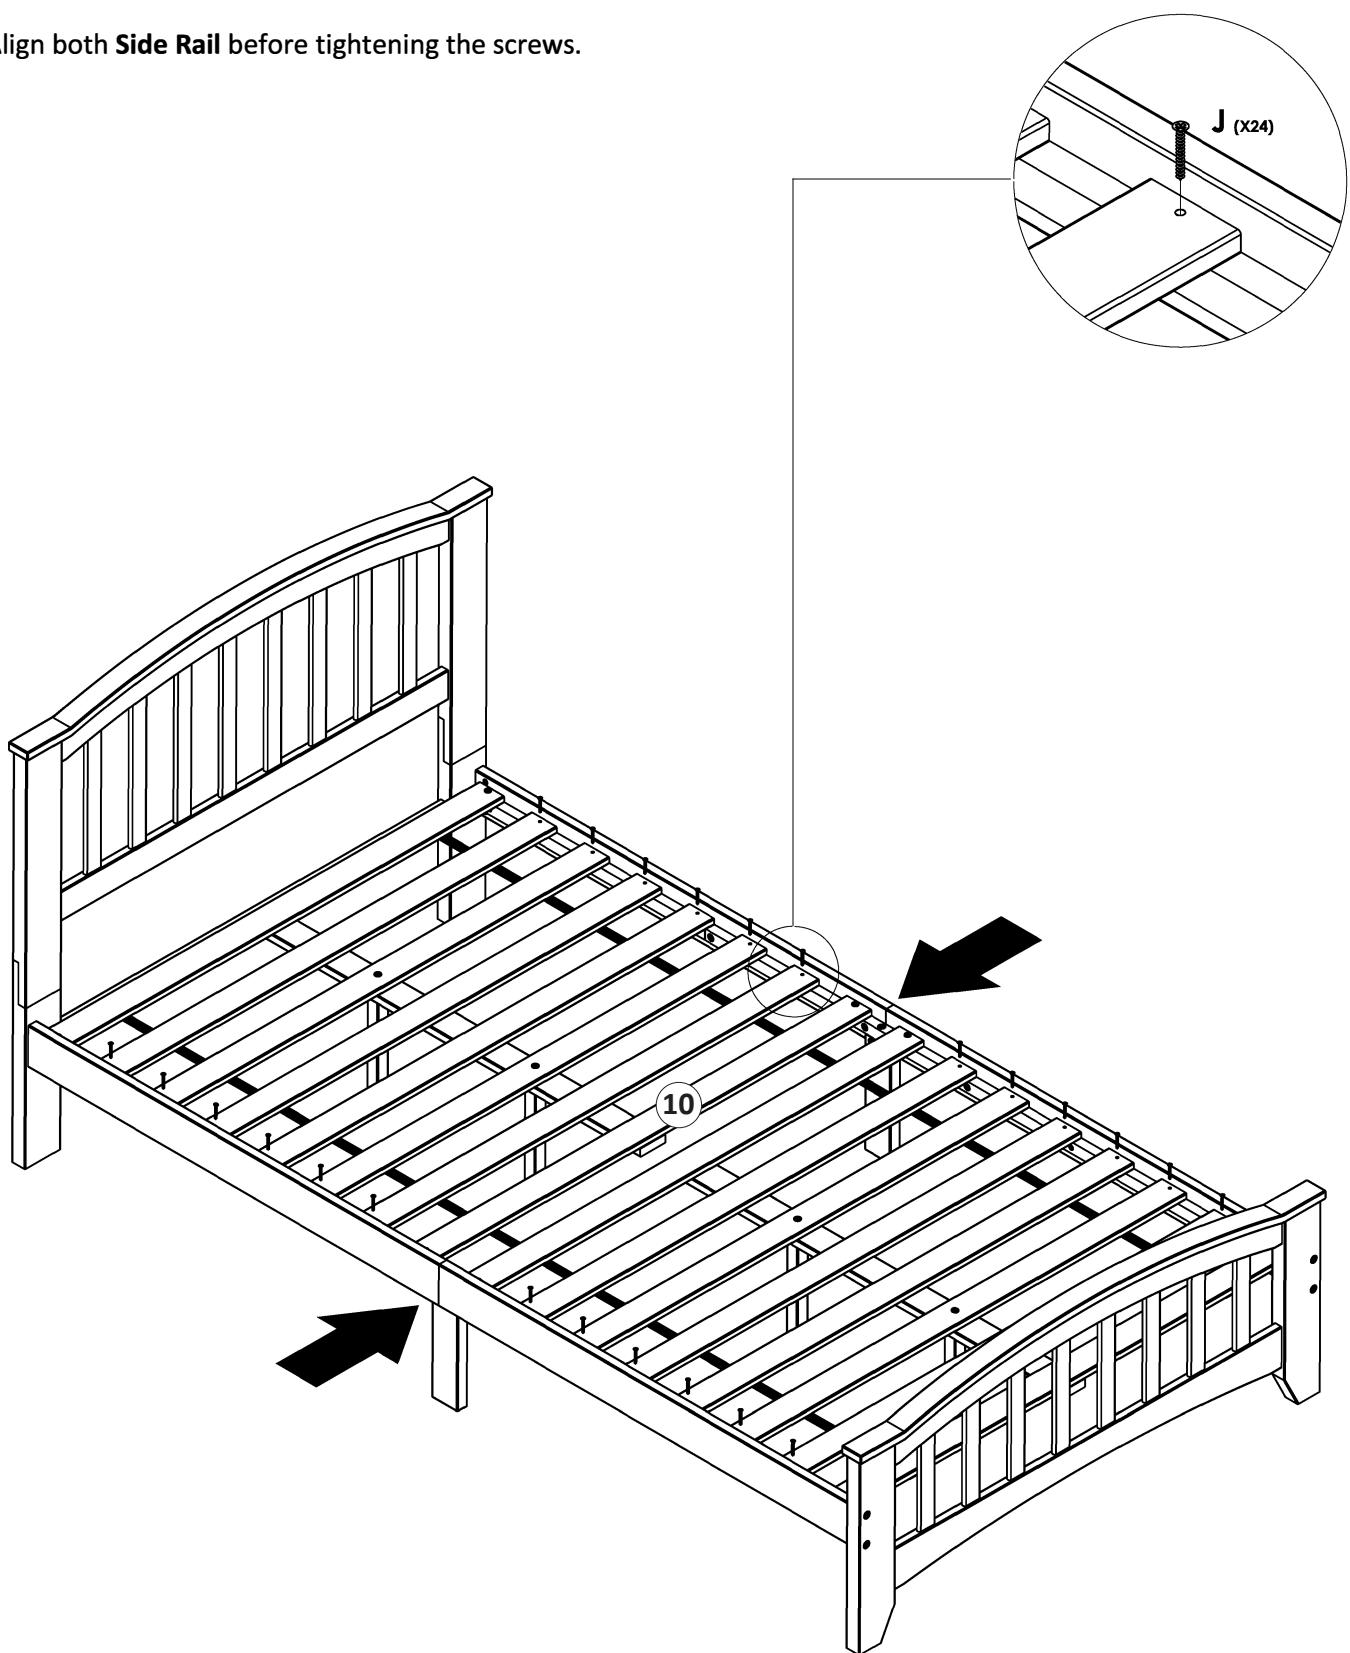

## ASSEMBLY IS COMPLETE

**CAUTION**

ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING-DO NOT DRAG.  
DRAGGING CAN CAUSE DAMAGE TO THE BED



## **IMPORTANT : PRODUCT CARE FOR TIMBER ITEMS**

As our timber is supplied from sustainable forests there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique.

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come.

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting.
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time.