


ASSEMBLY INSTRUCTION

TARLOW 6 DRAWER DRESSER

Item Code 85421

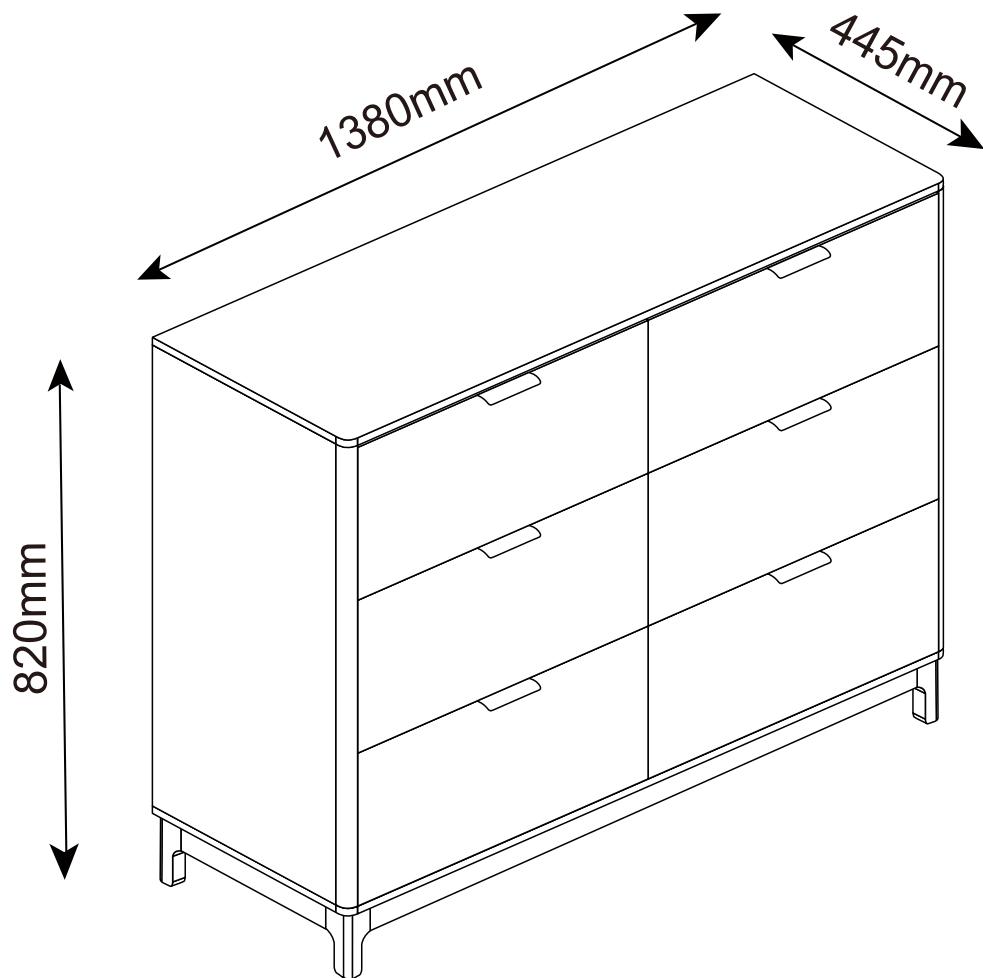

Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION















Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly
5. Keep all hardware parts and packaging out of reach of small children
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury
9. Do not use this item if any components are missing or damaged
10. Please keep the instructions for future reference.

		
Allow 30 min	For 2 person	Additional tools required




PARTS LIST

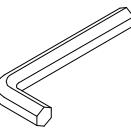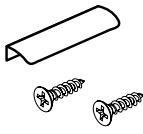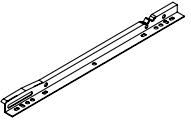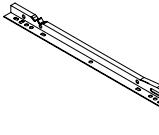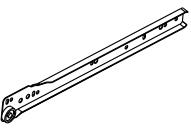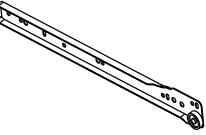A Cam Bolt x 62pcs 	B Cam Lock x 62pcs 	C Wooden Dowel Φ6x30mm x 52pcs 	D Screw M4x35mm x 32pcs 
E Screw M7x40mm x 11pcs 	F Allen Key M4 x 1pc 	G Screw M3.5x12mm x 96pcs 	H Handle Set x 6pcs 
I Screw M4x35mm x 12pcs 	J Plastic Wedge x 8pcs 	K Metal Brackets x 12pcs 	L Screw M4x50mm x 12pcs 
M Wall Anchor M6x30mm x 2pcs 	N Support Leg Pad x 1pc 	O Screw M4x14mm x 6pcs 	P Wooden Dowel Φ6x50mm x 2pcs 
Q Adjustable Leveller x 1pcs 	R Tip Kit x 2pcs 	DL x6pcs 	DR x6pcs 
CL x6pcs 	CR x6pcs 		


PARTS LIST


1	Top Panel x 1 pc	2	Bottom Panel x 1 pc
3	Side Panel (Left) x 1 pc	4	Side Panel (Right) x 1 pc
5	Middle Devider x 1 pc	6	Back Rail x 1 pc
7	Drawer Bar x 4 pcs	8	Back Panel(Bottom) x 1 pc
9	Spacer x 6 pcs	10	Poster x 2 pcs
11	Base Side Rail x 2 pcs	12	Base Front&Back Rail x 2 pcs
13	Leg x 4 pcs	14	Support Leg x 1 pc
15	Drawer Front Panel(Left) x 3 pcs	16	Drawer Front Panel(Right) x 3 pcs
17	Drawer Side Panel(Left) x 6 pcs	18	Drawer Side Panel(Right) x 6 pcs
19	Drawer Back Panel x 6 pcs	20	Drawer Bottom Panel x 6 pcs
21	Drawer Support Rail x 6 pcs	22	Back Panel x 1 pc

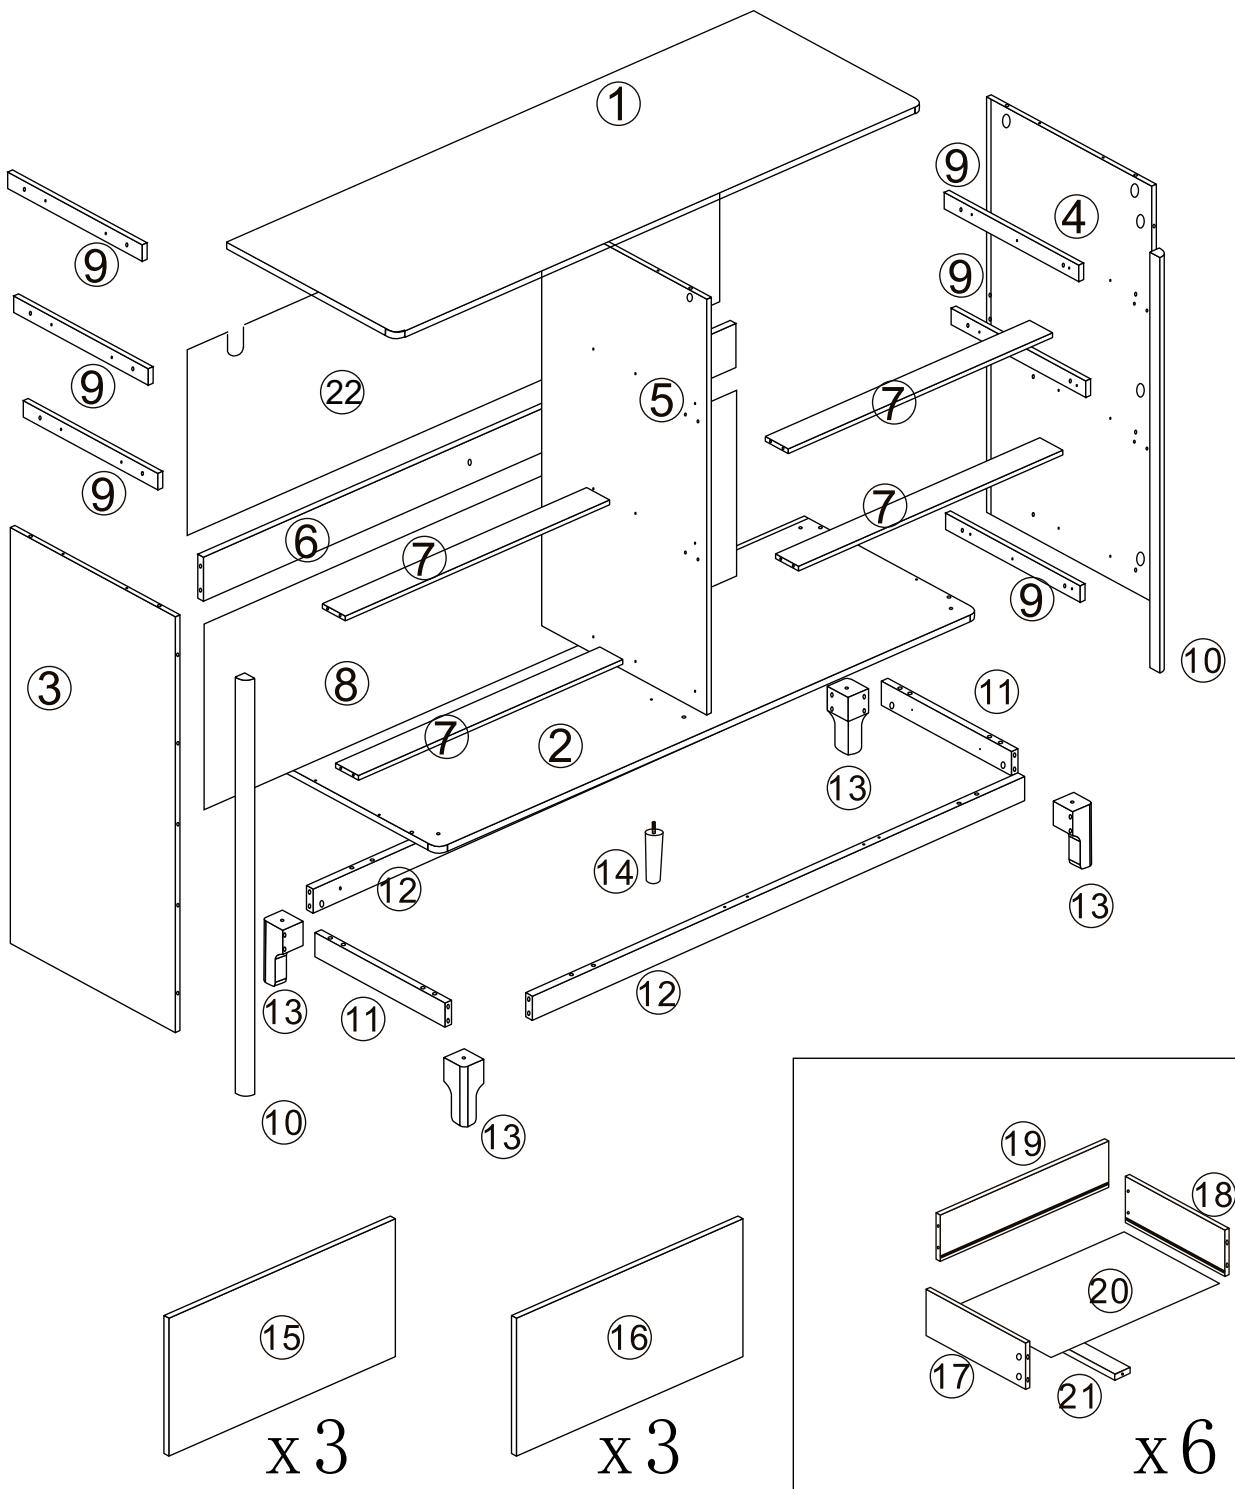

STEP 1:

- Prepare a protected surface with a blanket or cardboard.
- Assemble the Poster 10 with Side Panels 3,4 by hardware A,B,C.

Hardware Needed		
A		x6
B		x6
C		x4


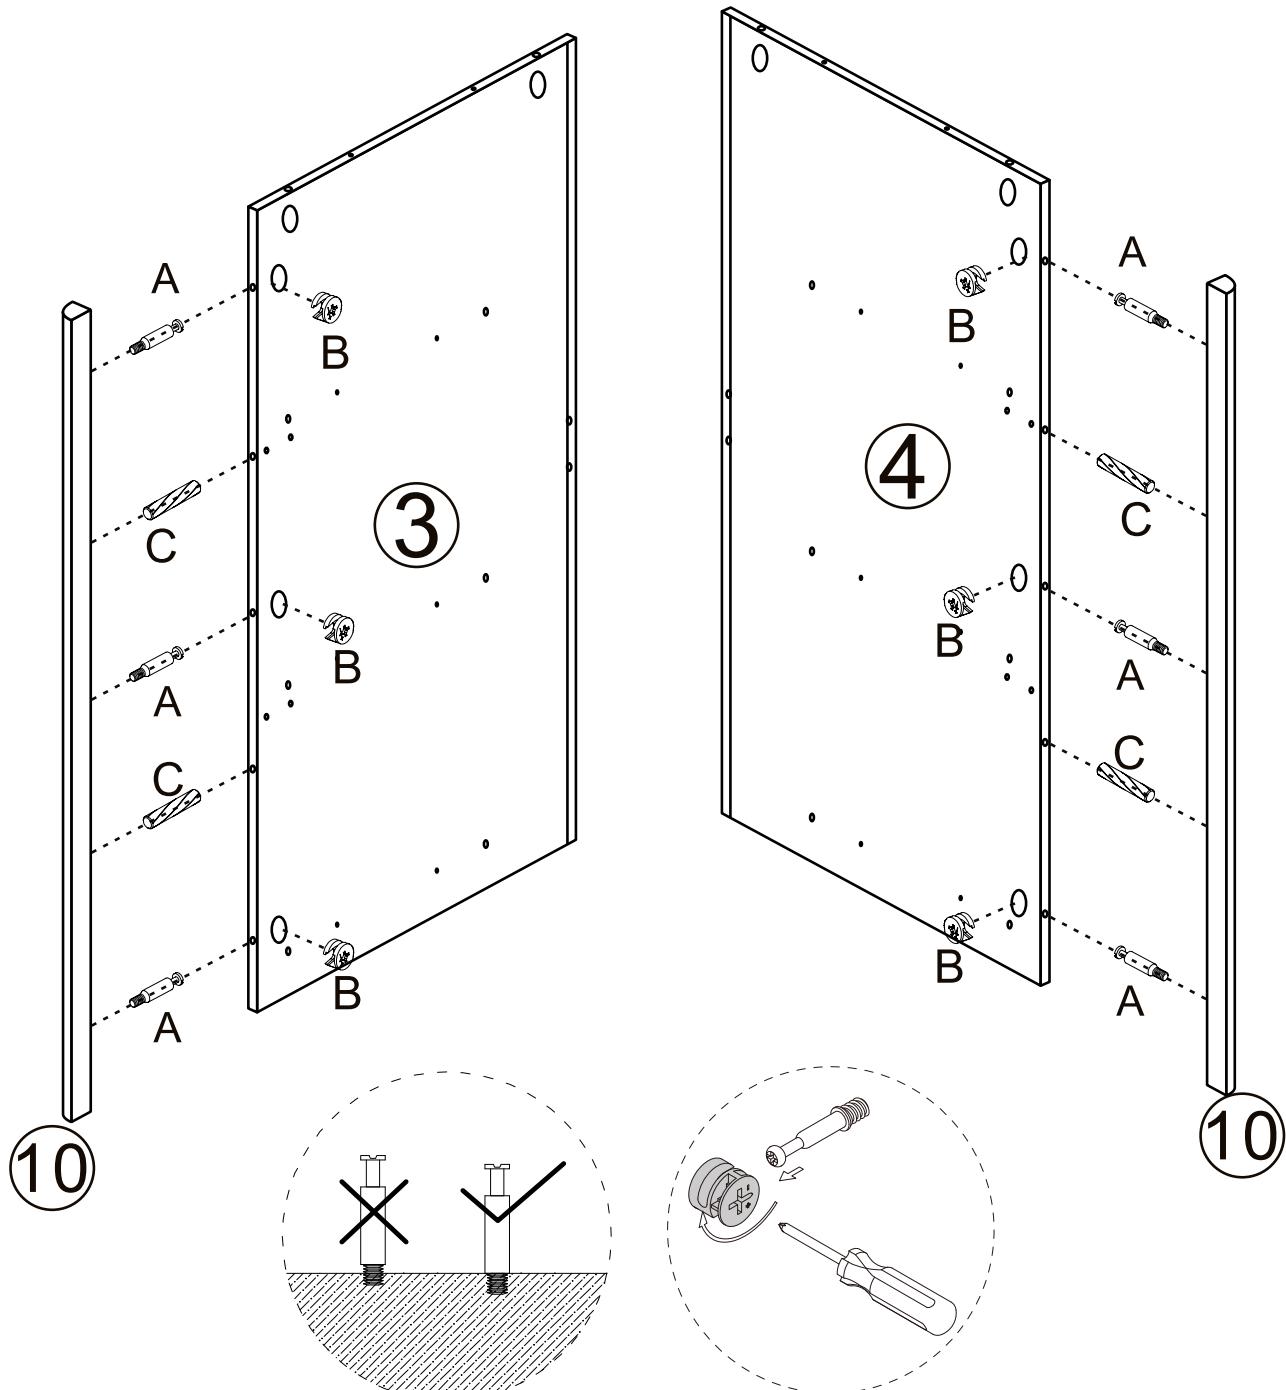


STEP 2:

- Attach the Spacer 9 onto side panels by hardware C,I.

Hardware Needed

I		x12
C		x12



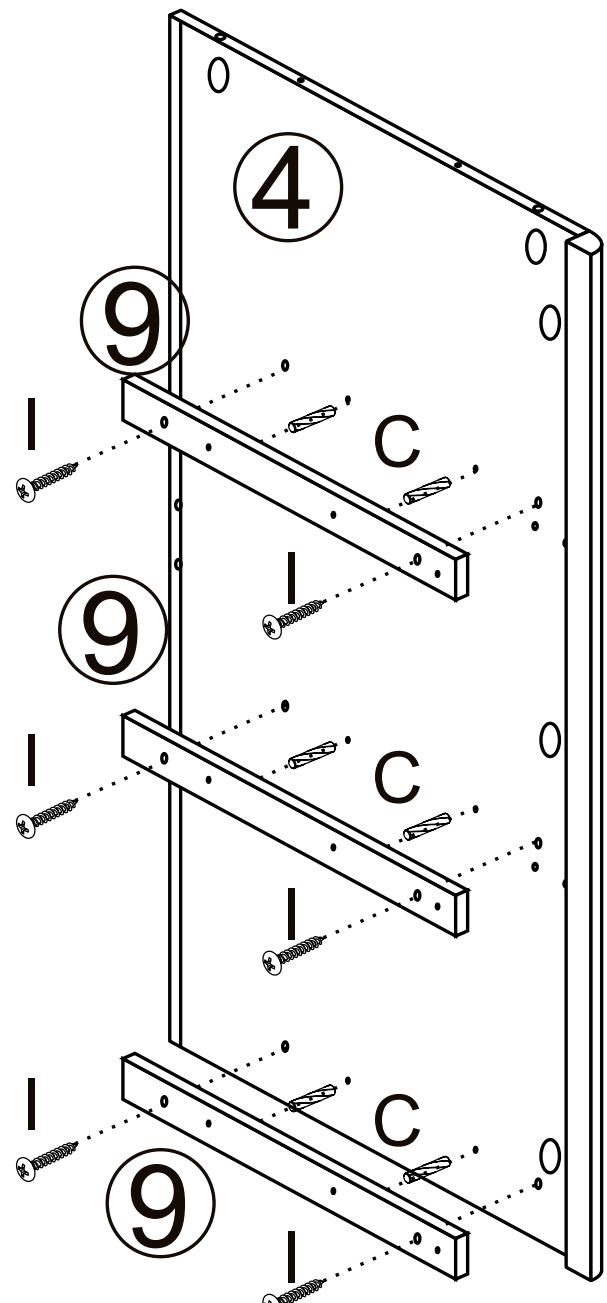
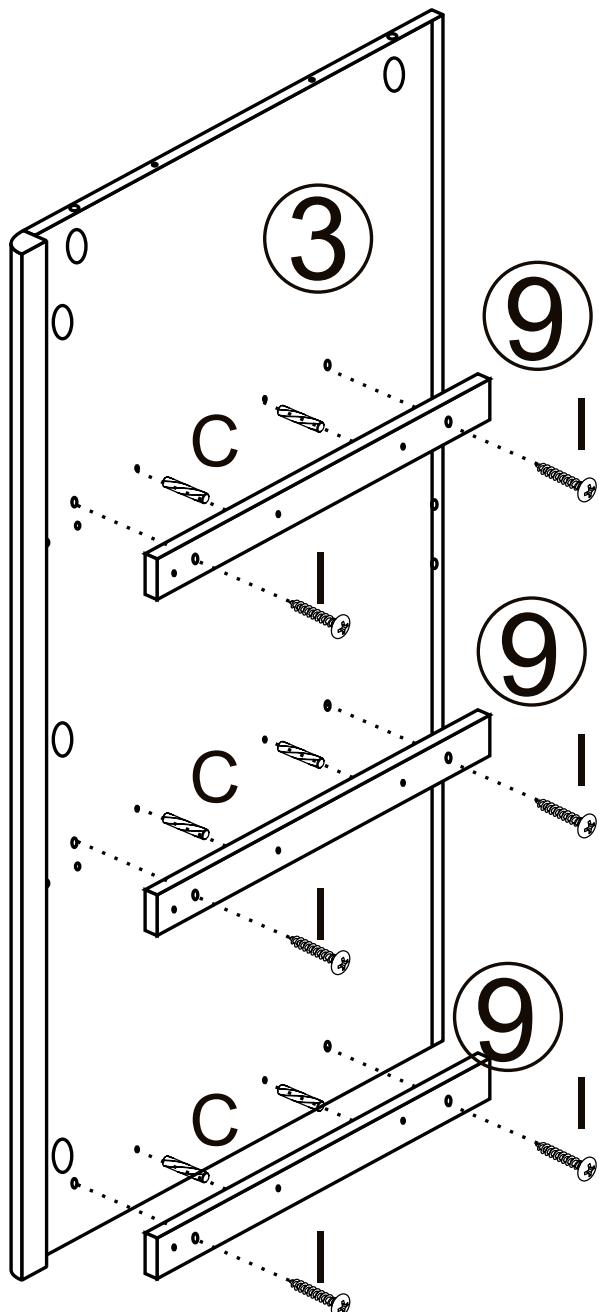


STEP 3:

- Attach CL,CR onto side panels by hardware G.


Hardware Needed

CL		x3
CR		x3
G		x18

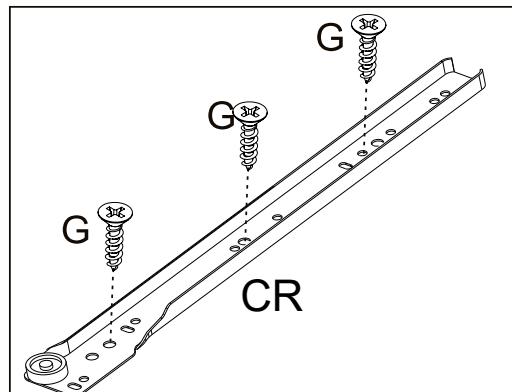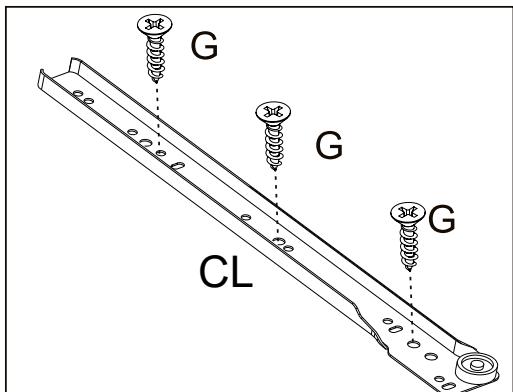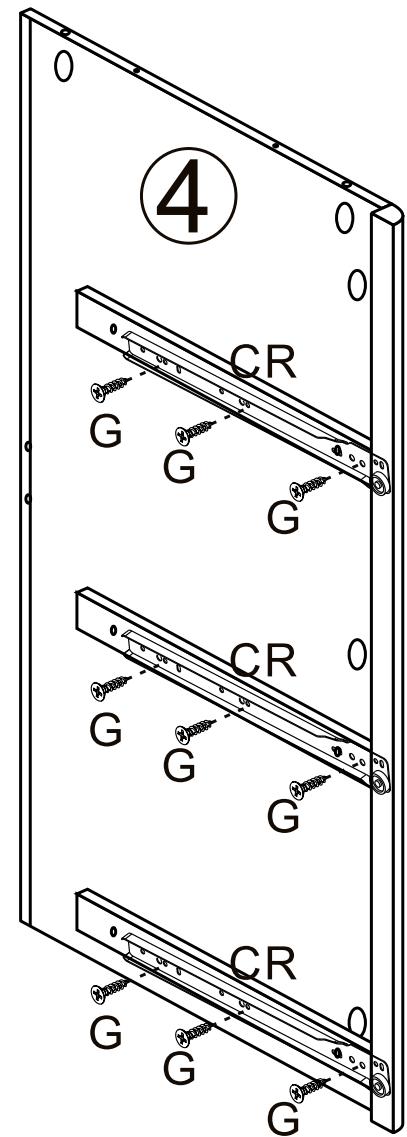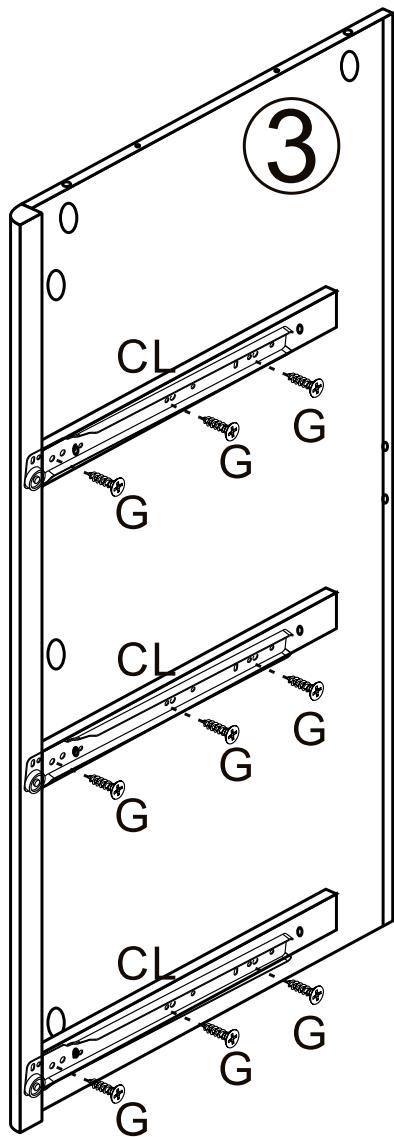


STEP 4:

- Attach CL onto Middle Devider 5 right side by hardware G.

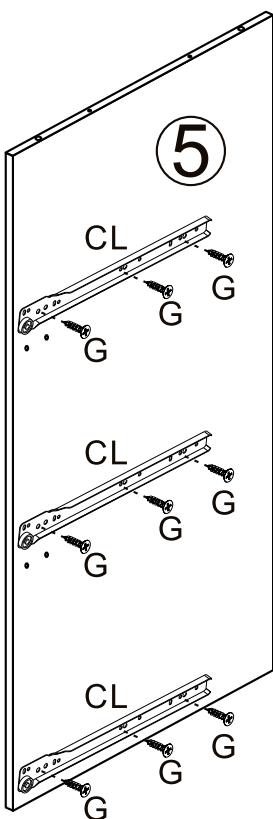


Hardware Needed

CL		x3
G		x9

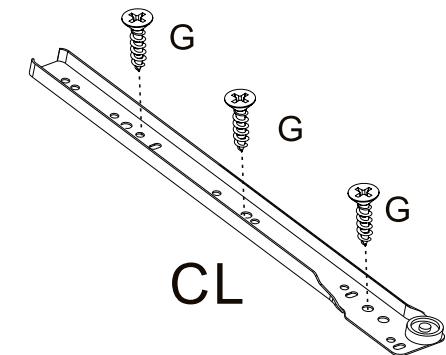


STEP 5:

- Attach CR onto Middle Devider 5 left side by hardware G.

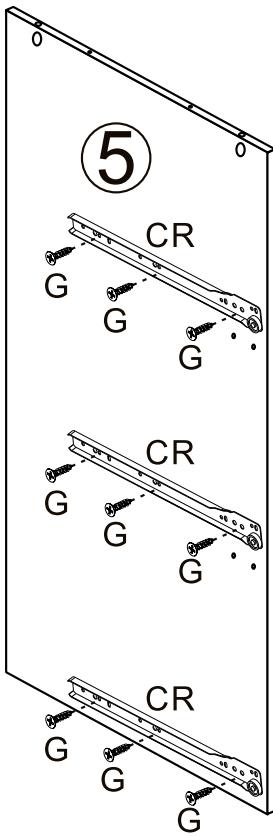

Hardware Needed


CR		x3
G		x9

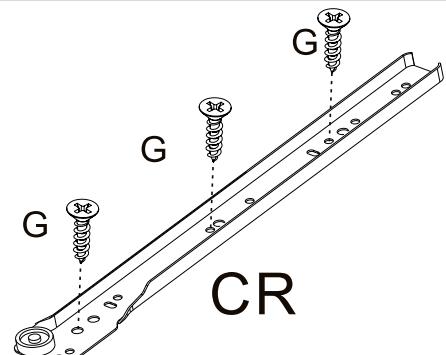

STEP 6:


- Fix Back Rail 6 with Middle Devider 5 by Hardware E.

Hardware Needed		
E		x1
F		x1

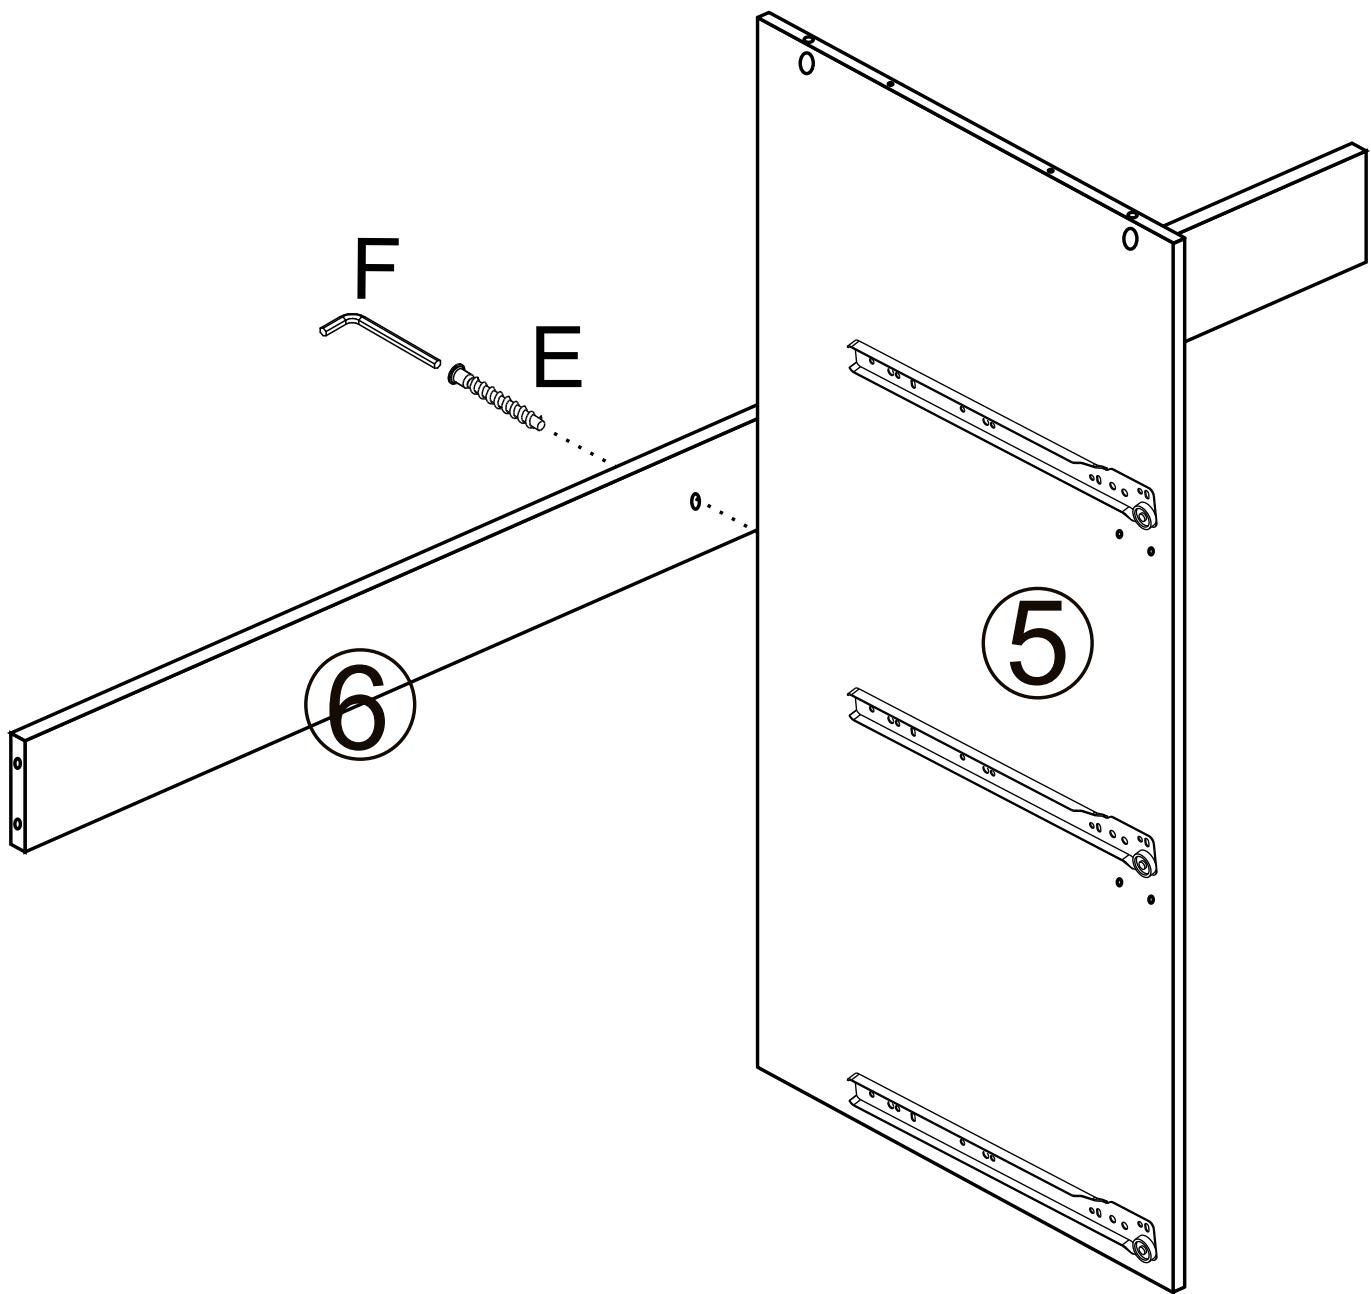


STEP 7:

- Assemble the left side panel 3,Drawer bar 7 with middle devider by hardware A,B,C,P.

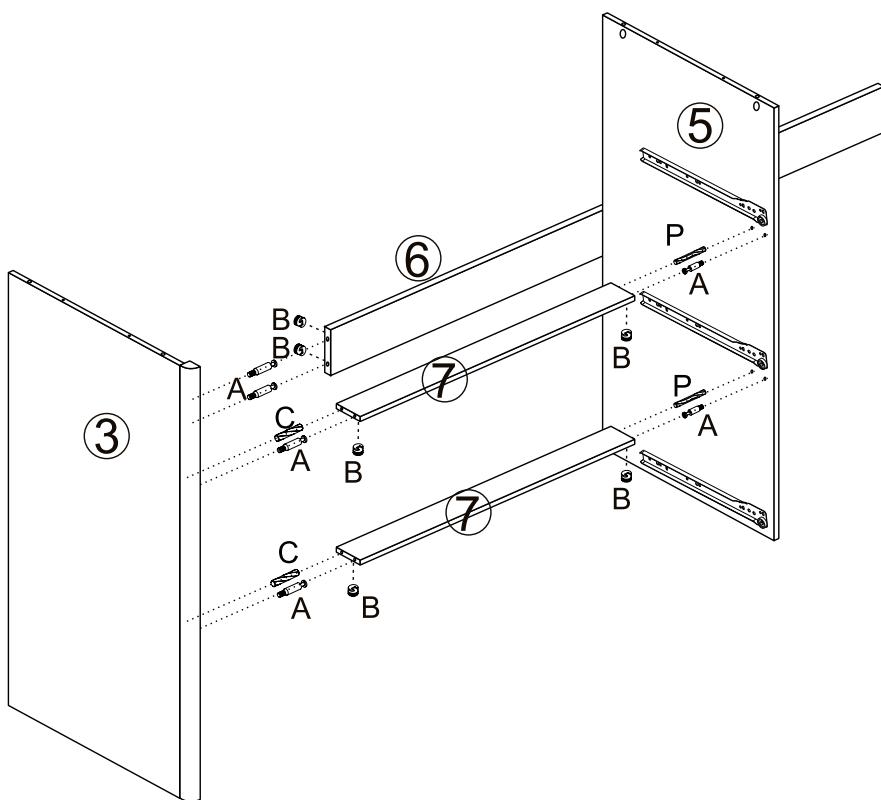


Hardware Needed

A		x6
B		x6
C		x2
P		x2

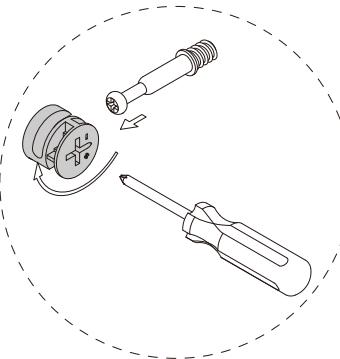


STEP 8:

- Assemble the right side panel 4,Drawer bar 7 with middle devider by hardware A,B,C.

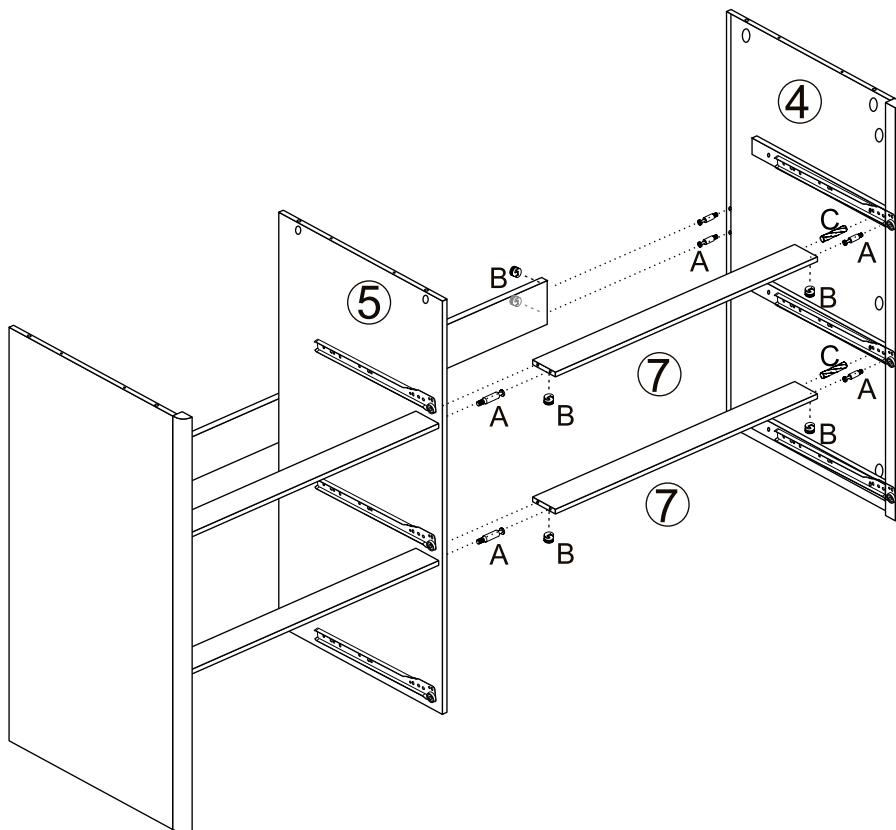


Hardware Needed

A		x6
B		x6
C		x2

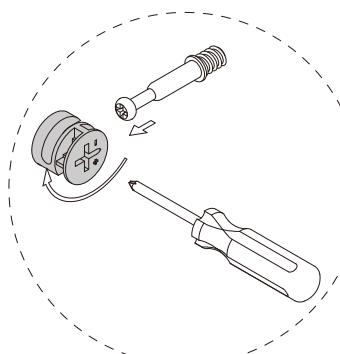


STEP 9:

- Attach the Back Panel(Top) 22.

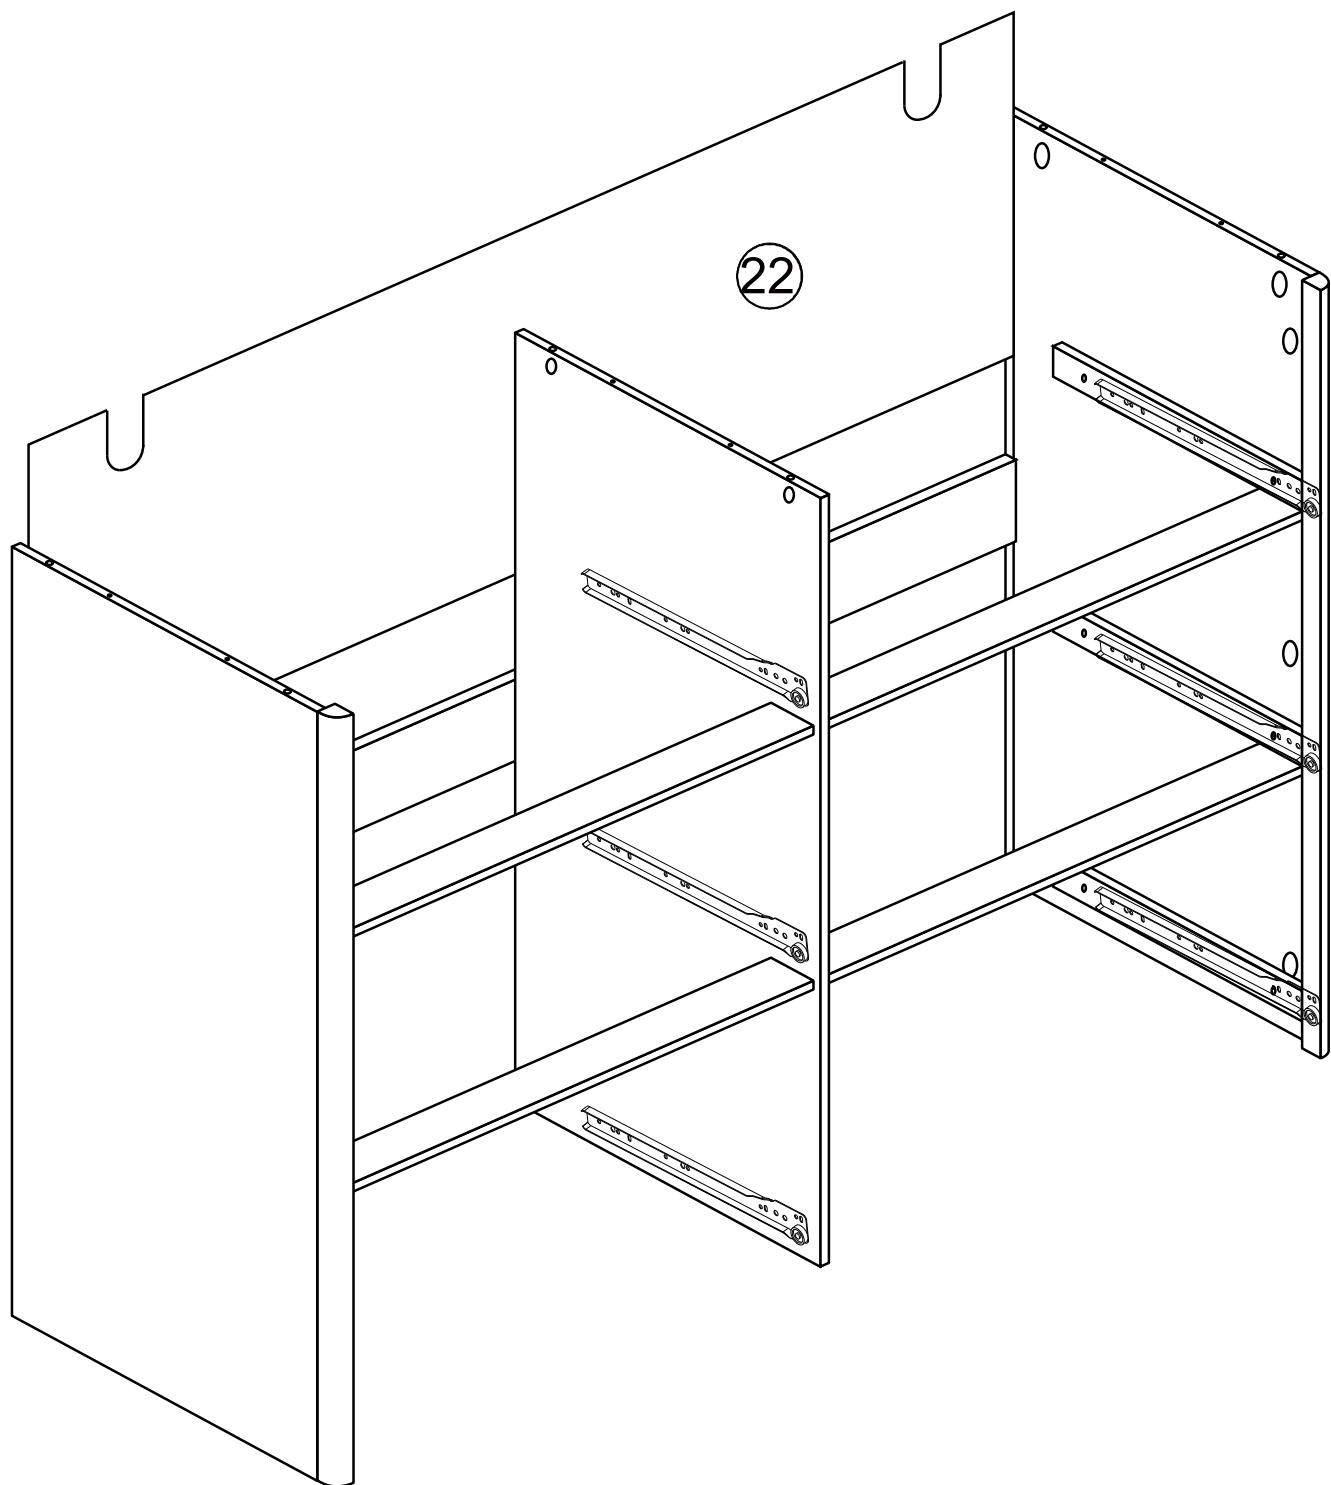

STEP 10:

- Fix the Tip Kit R onto Top Panel 1 by hardware O.
- Assemble Top Panel 1 with chest frame by hardware A,B,C.

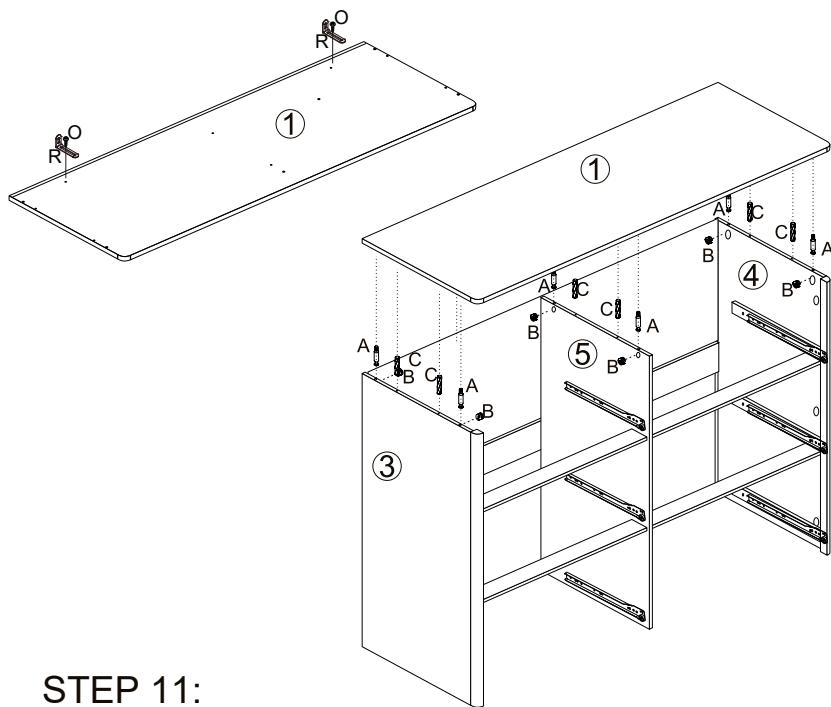

Hardware Needed


A		x6
B		x6
C		x6
R		x2
O		x2

STEP 11:

- Assemble the Leg 13 with Base Rails 11,12 by hardware A,B,C.


Hardware Needed

A		x8
B		x8
C		x8

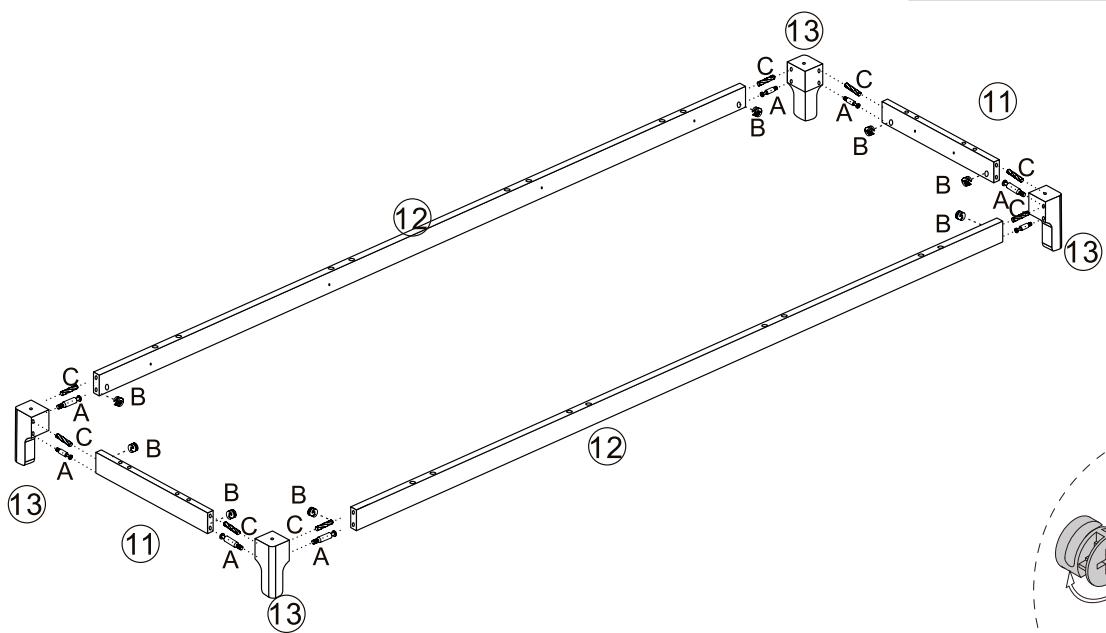

STEP 12:

- Assemble Bottom Panel 2 with base frame by hardware C,E.

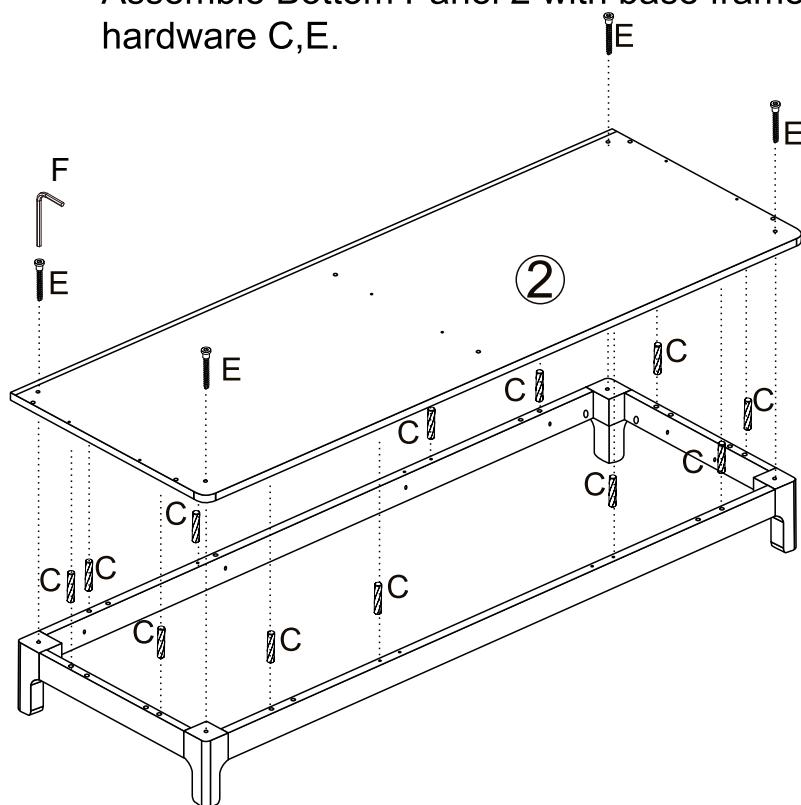


Hardware Needed

C		x12
E		x4
F		x1

STEP 13:

- Attach the bottom with chest frame by hardware C,E.

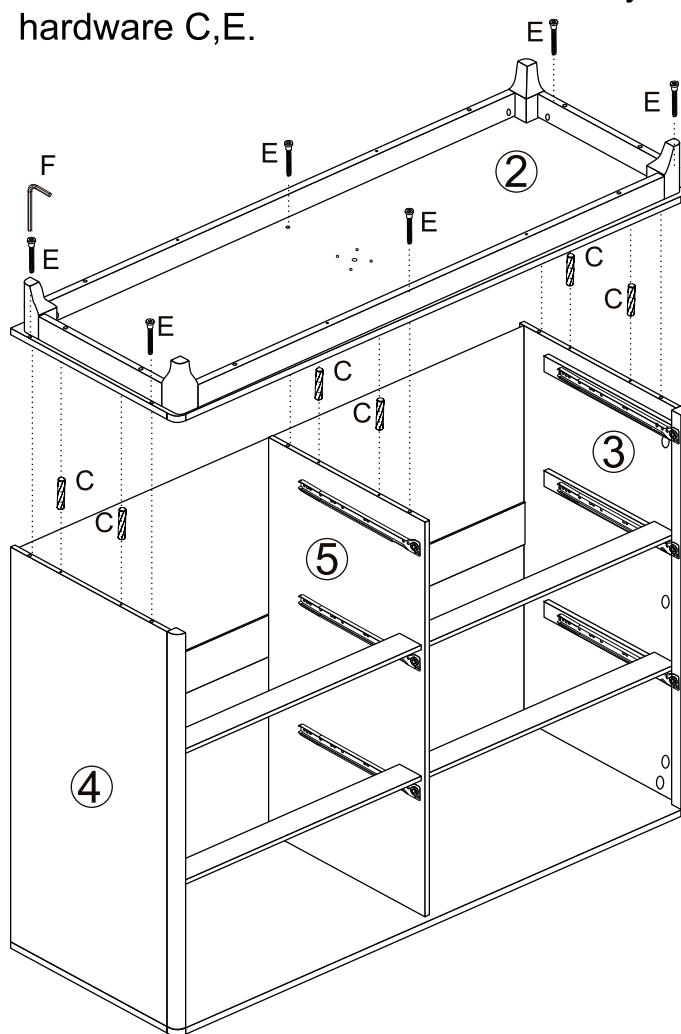

Hardware Needed


C		x6
E		x6
F		x1

STEP 14:

- Attach the Support Leg Pad N onto bottom by hardware O.


Hardware Needed

O		x4
N		x1

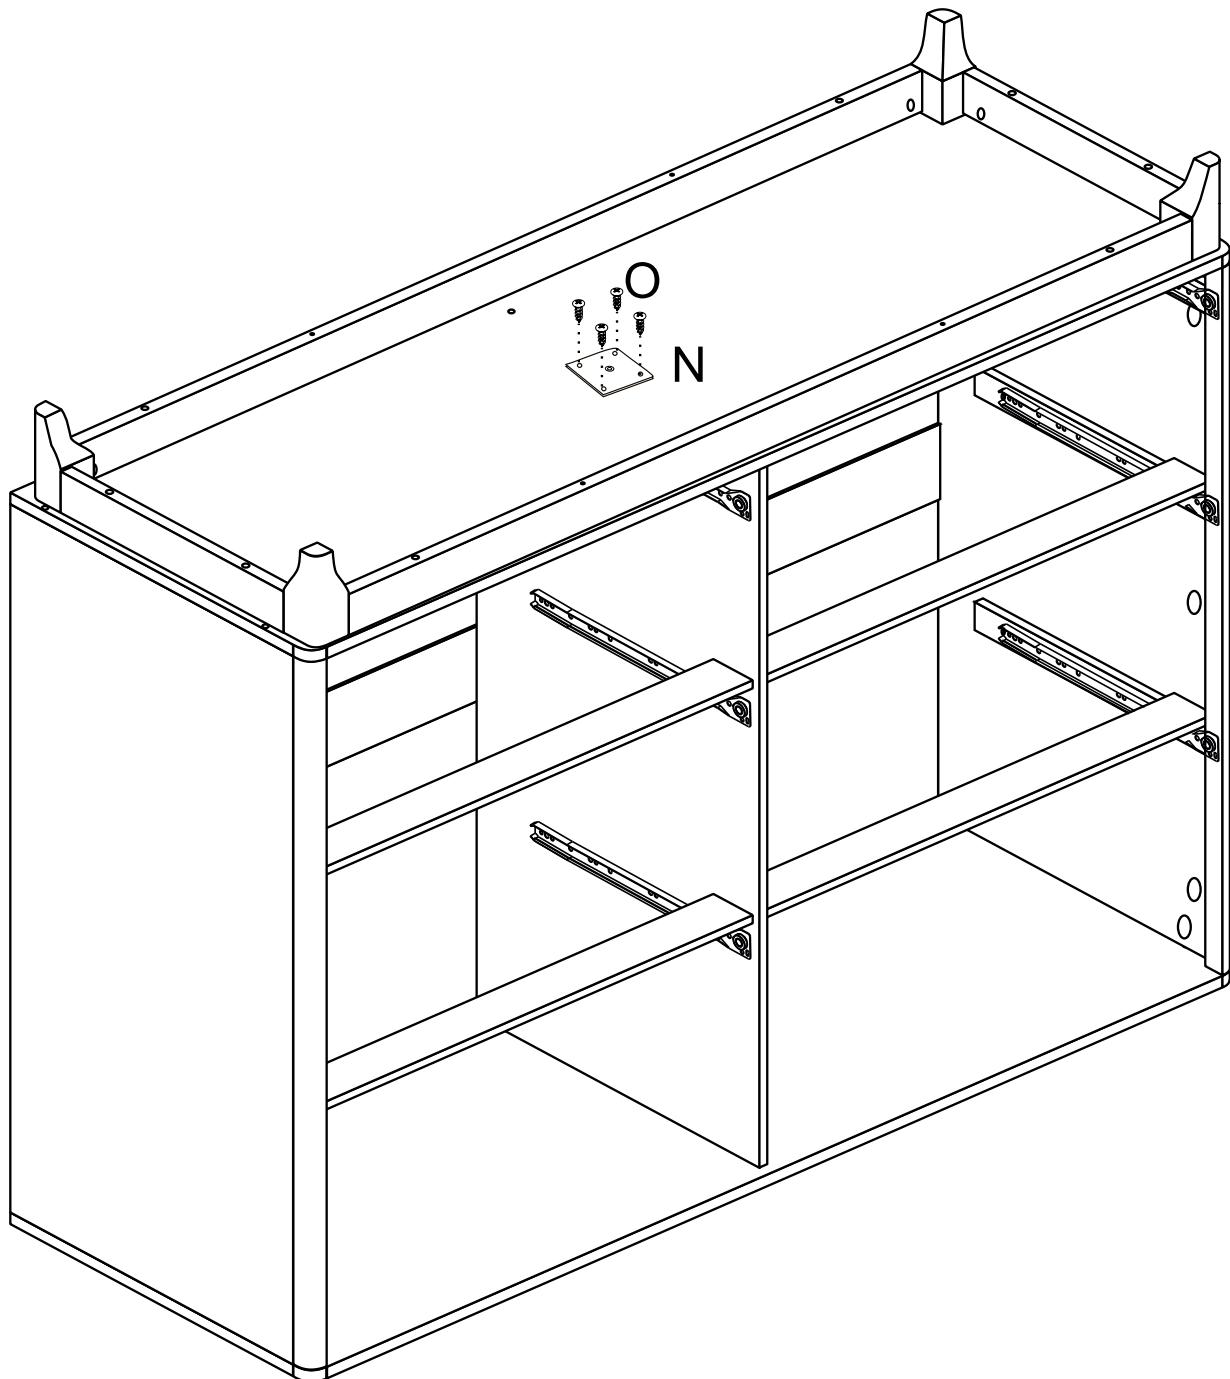


STEP 15:

- Fix Support Leg 14 and Adjustable Leveller Q .
- Fix the Metal Brackets K by hardware G,secure the base frame by hardware L.

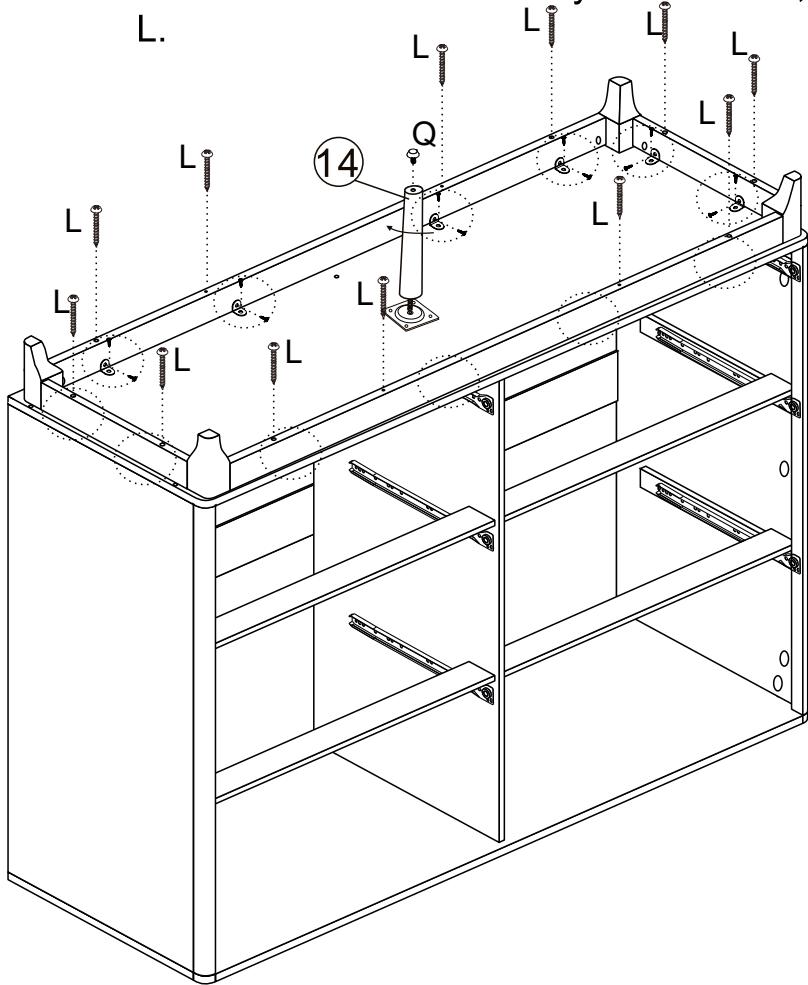

Hardware Needed


Q		x1
K		x12
G		x24
L		x12

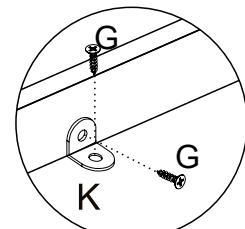

x12

STEP 16:

- Attach the hardware J onto back.

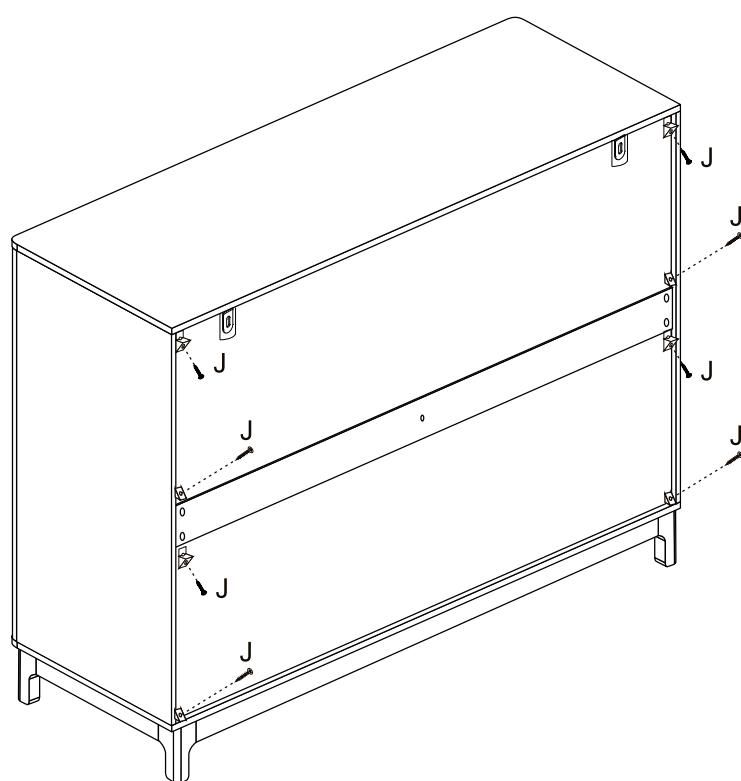


Hardware Needed

J			x8
---	--	--	----

STEP 17:


- Assemble the Drawer Side Panels 17,18 with Drawer Back Panel 19 and Drawer Bottom Rail 21 by hardware D.
- Secure handles onto Drawer Front Panel 15,16.
- Attach the Drawer Bottom Panel 20.
- Assemble the Drawer Front Panel with drawer frame by hardware A,B.
- Attach DL,DR onto drawer by hardware G.

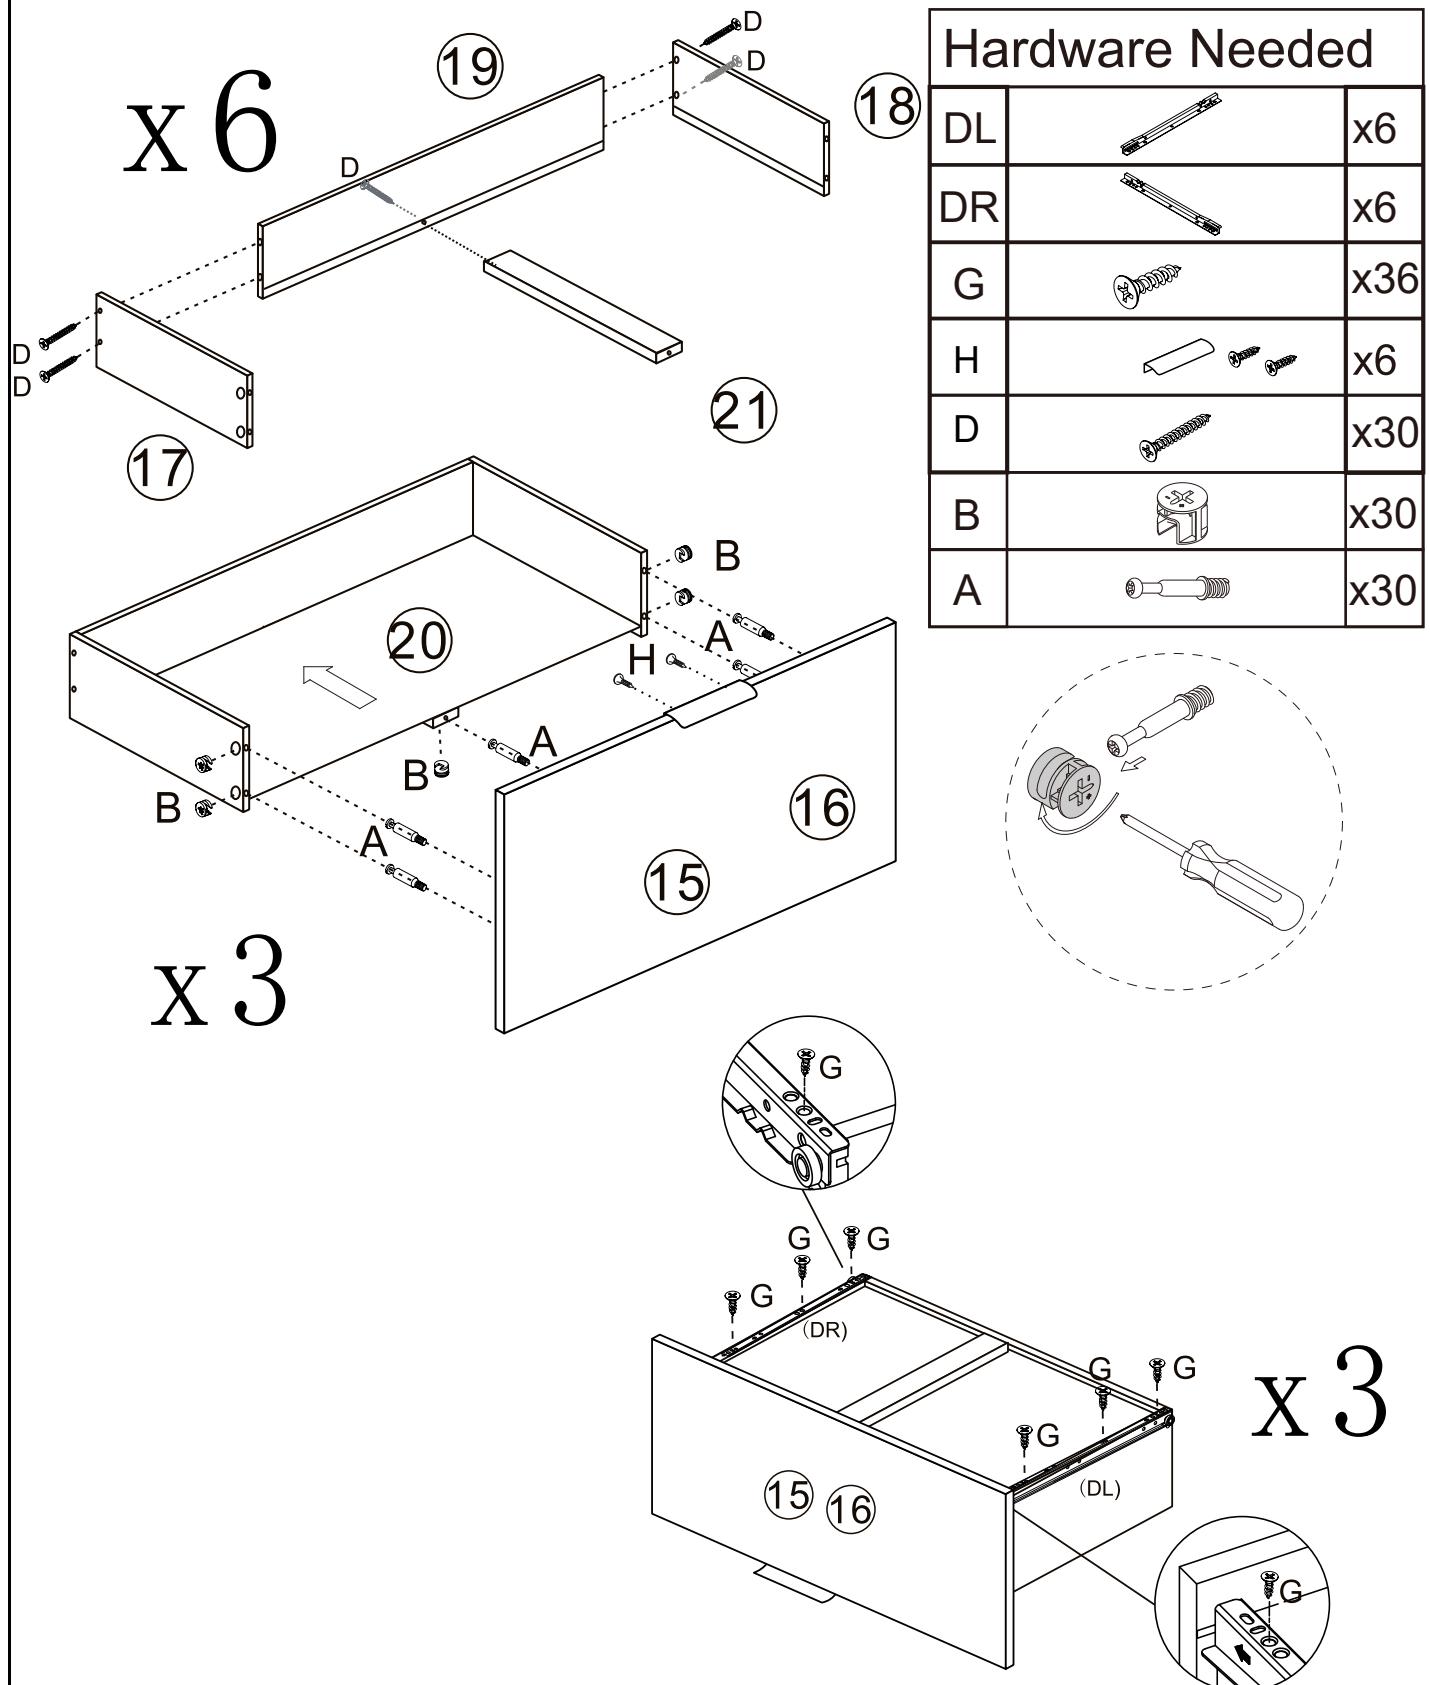


SAFETY BRACKETS INSTRUCTIONS

STEP 18:


- Secure the safety bracket onto wall by hardware D,M.

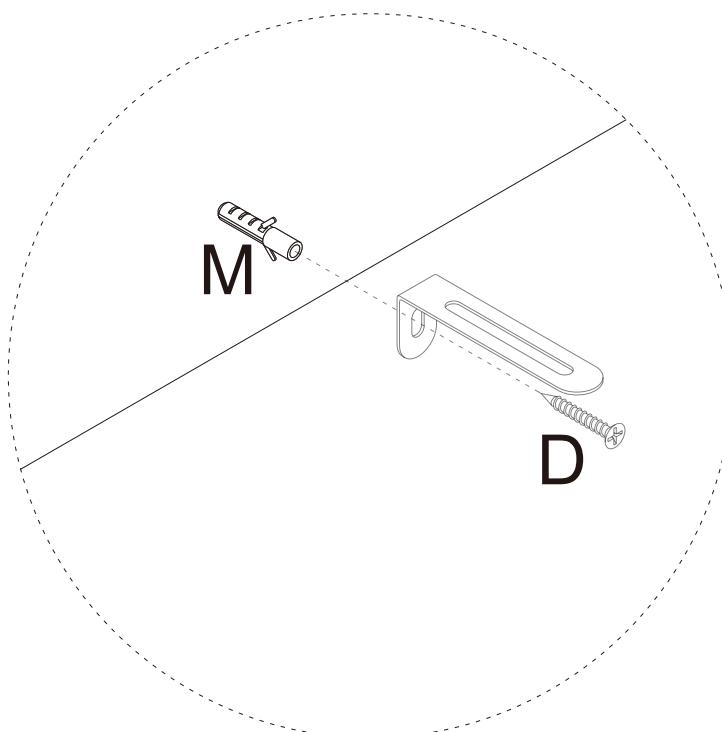

Hardware Needed		
D		x2
M		x2

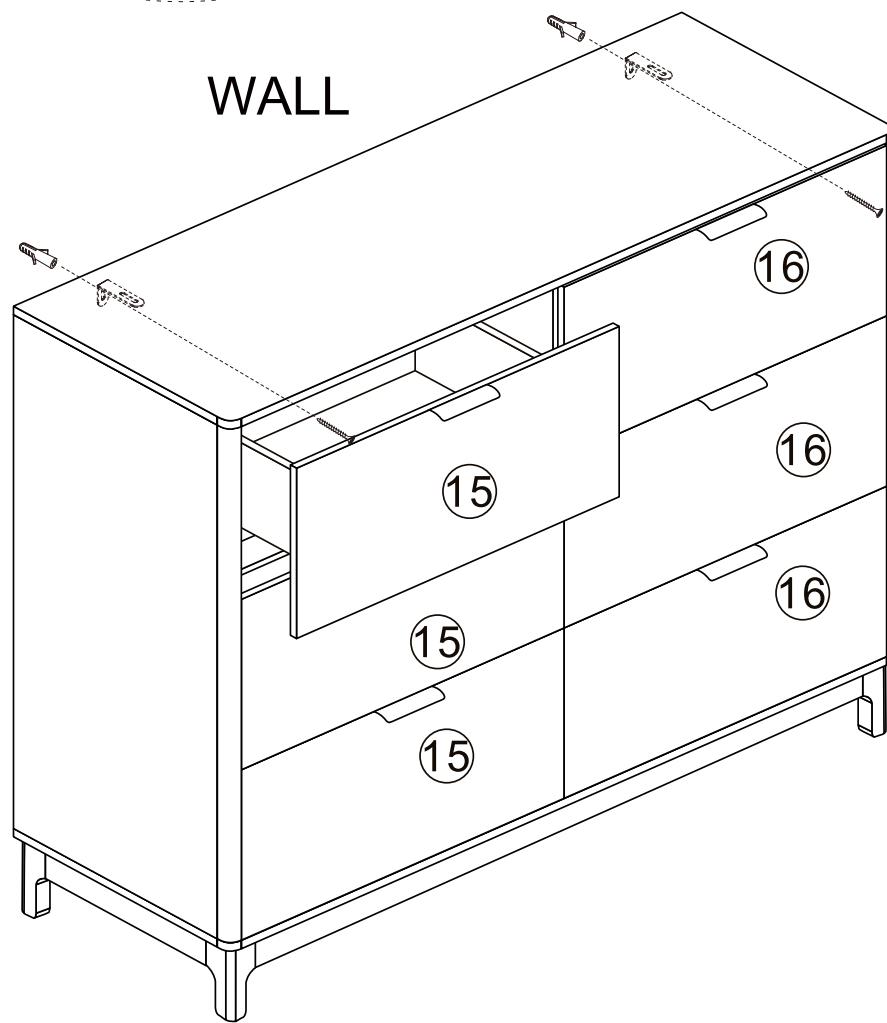

Finished

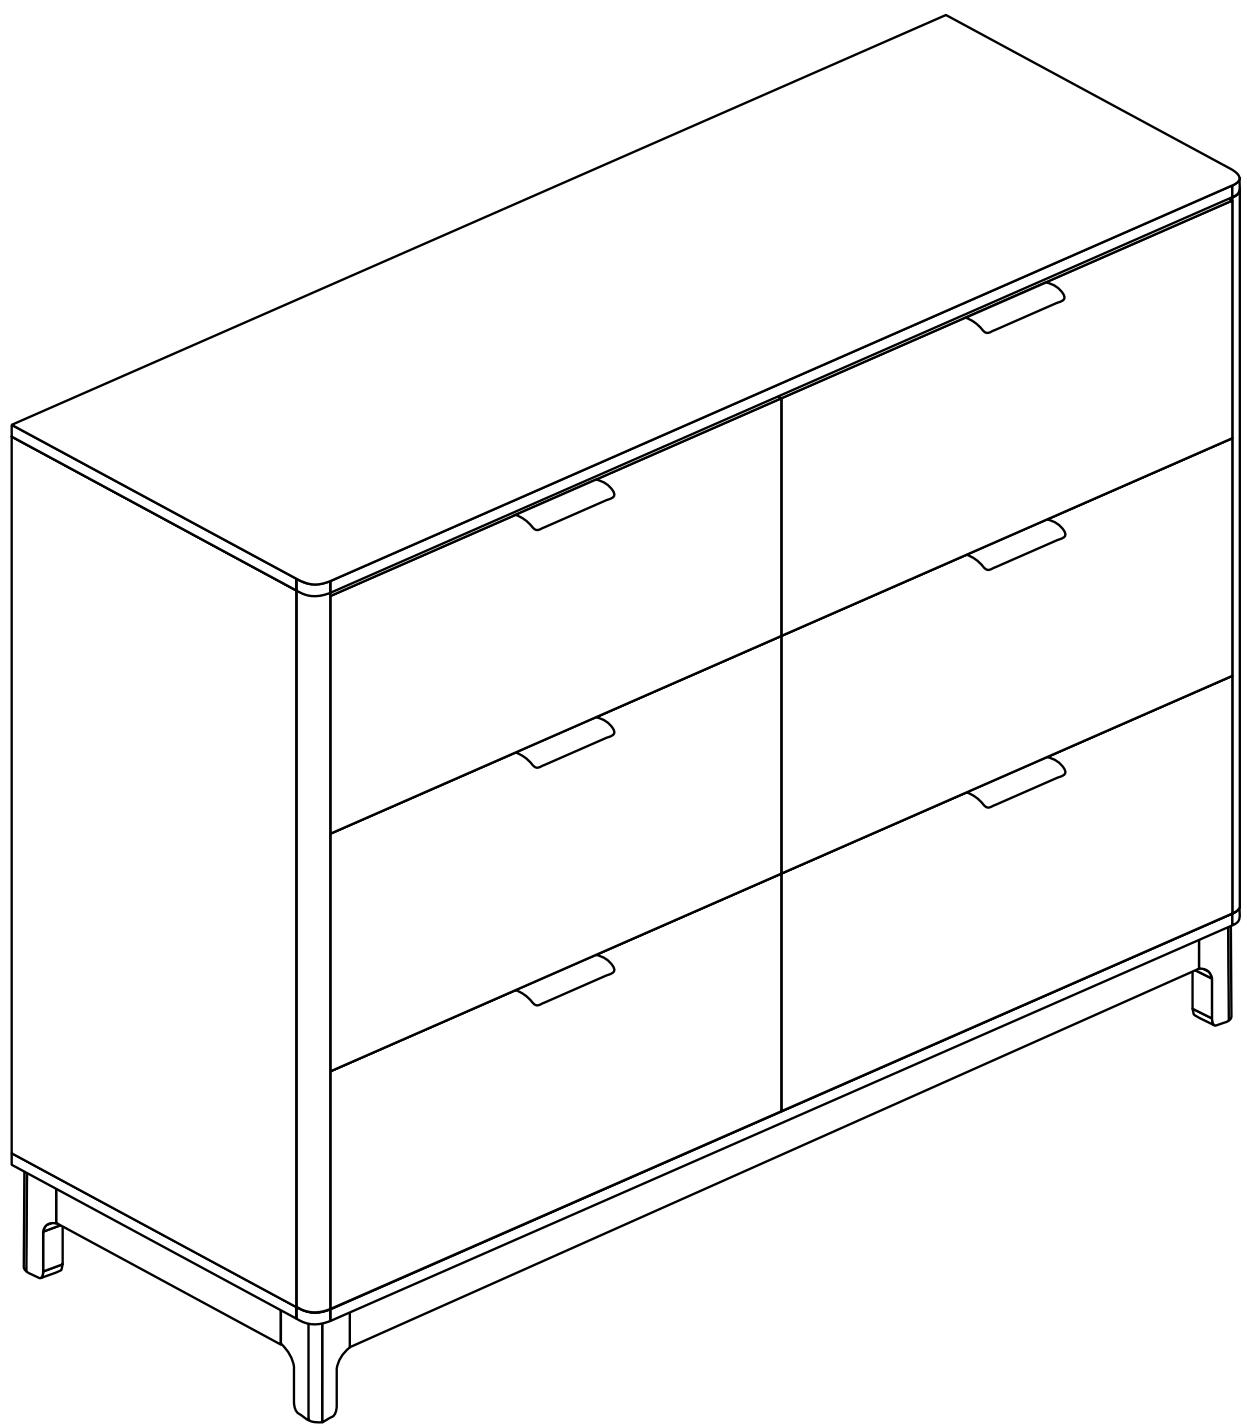

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.