


Imported by Amart Furniture Pty Ltd, Brisbane ,Qld Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads


	
ALLOW 60 MINUTES	2 PEOPLE REQUIRED
   	
TOOLS REQUIRED	

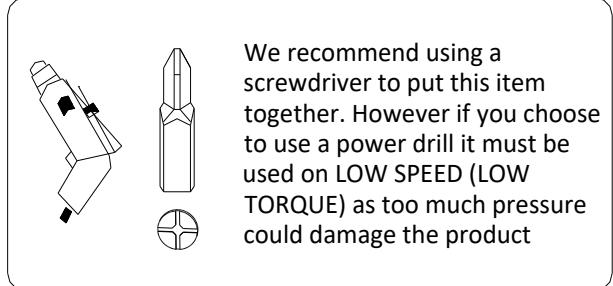

WARNING

Do not allow children to play on this mechanised furniture or operate the mechanism. This lift bed base raises at the rear - do not place objects under it and make sure area is clear of obstructions including pets and small children. Ensure that the mattress and lift mechanism has been returned to the lowered position before lying or sitting on the mattress. Always ensure that your body is clear of the lift mechanism when lifting and lowering the mechanism

PARTS LIST

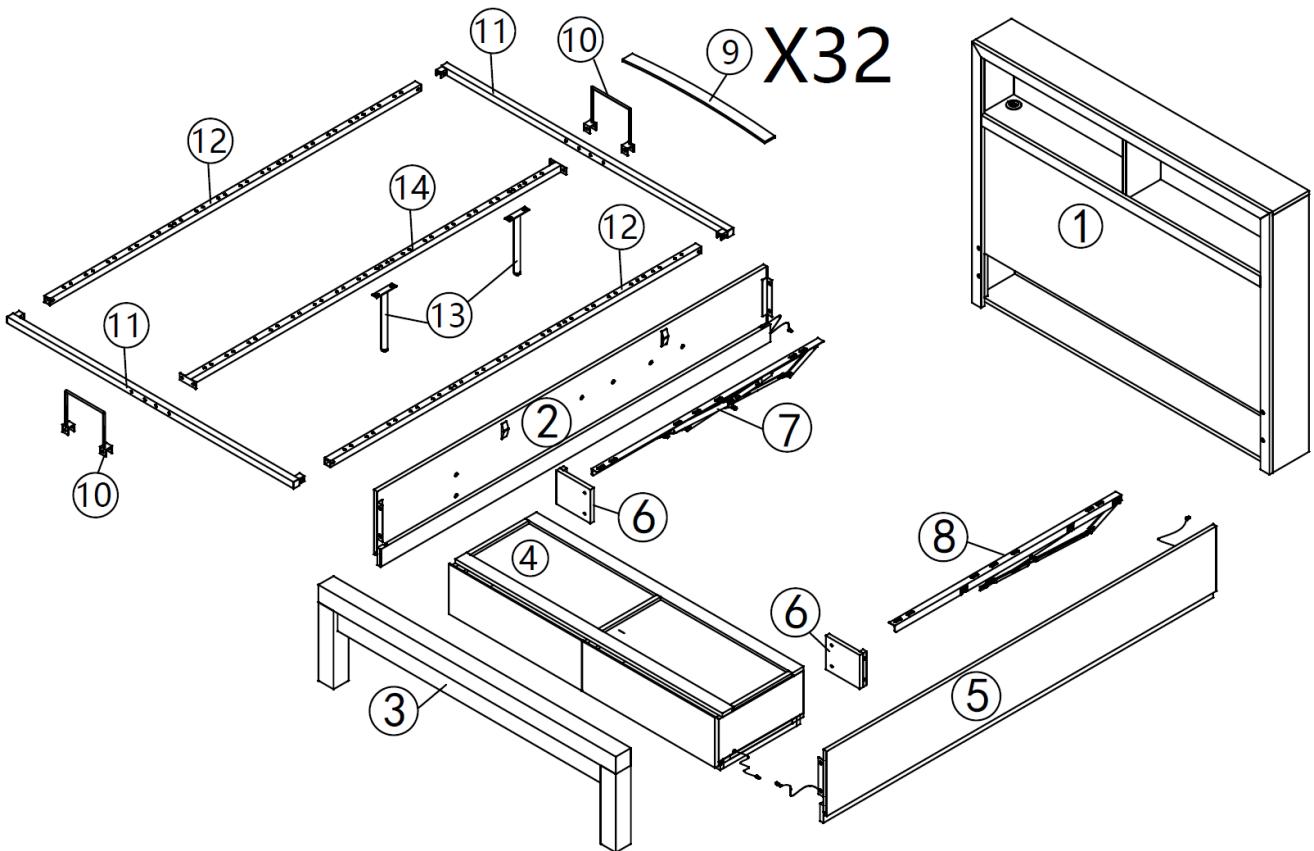

1	HEADBOARD
2	SIDERAIL
3	FOOTBOARD
4	DRAWER
5	SIDERAIL
6	CONNECTING BOARD
7	LIFT BRACKET


8	LIFT BRACKET
9	SLATS
10	HANDLE
11	METAL PARTS OF FRAME
12	METAL PARTS OF FRAME
13	SUPPORT LEG
14	METAL PART OF FRAME

A. M8X20mm  AX16	B. M8X32mm  BX8	C. M8X45  CX22	D.  DX16	E. M8XØ18  EX36
F. M8  FX4	G. M8XØ17  GX22	H. M5  HX1	I.  IX16	J.  JX32
K.  KX1	L.  LX2	M.  LX2		


1.

A. M8X20mm  AX4	D.  DX4	E. M8XØ18  EX4	H. M5  HX1
--	--	---	---


- Attach the siderail (2) to headboard (1) and footboard (3) with flat washer (E), lock washer (D) and bolt (A).
- Note: Do not tighten the bolts.
- Move the drawer(4) into the bed frame, with the drawer facing the footboard(3).

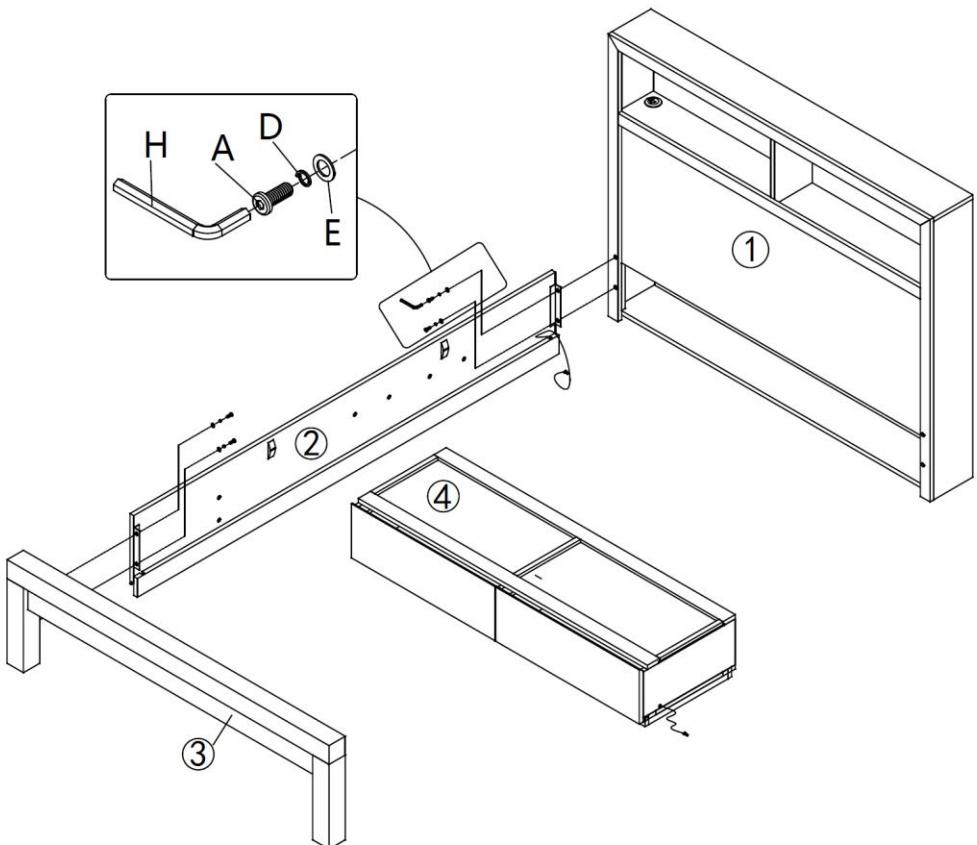

2.

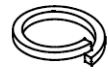
A. M8X20mm  AX4	D.  DX4	E. M8XØ18  EX4	H. M5  HX1
--	---	---	--

- Attach the siderail (5) to headboard (1) and footboard (3) with flat washer (E), lock washer (D) and bolt (A).
- Tighten all bolts with allen key (H)

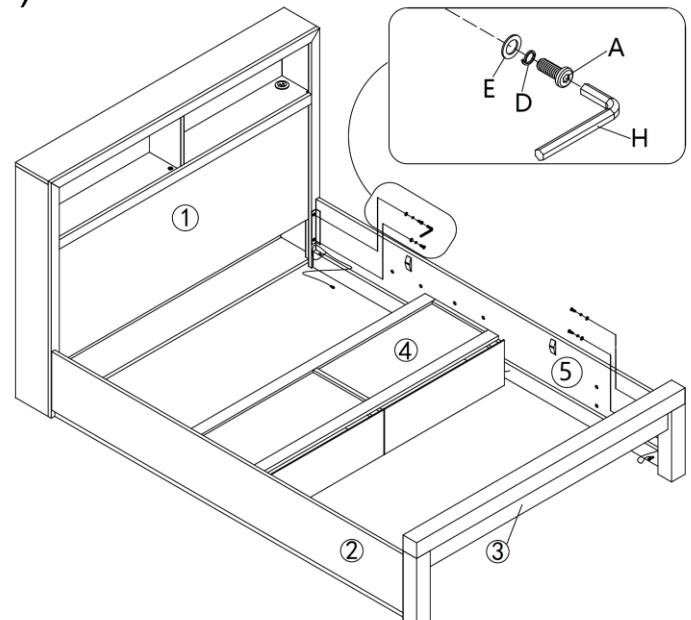

3.

- Move the drawer (4) close to the footboard (3).
- One person lifted the footboard(3) more than 2CM, and the other person pushed the drawer(4) outward to align the drawer surface with the outside of footboard before lowering the footboard.

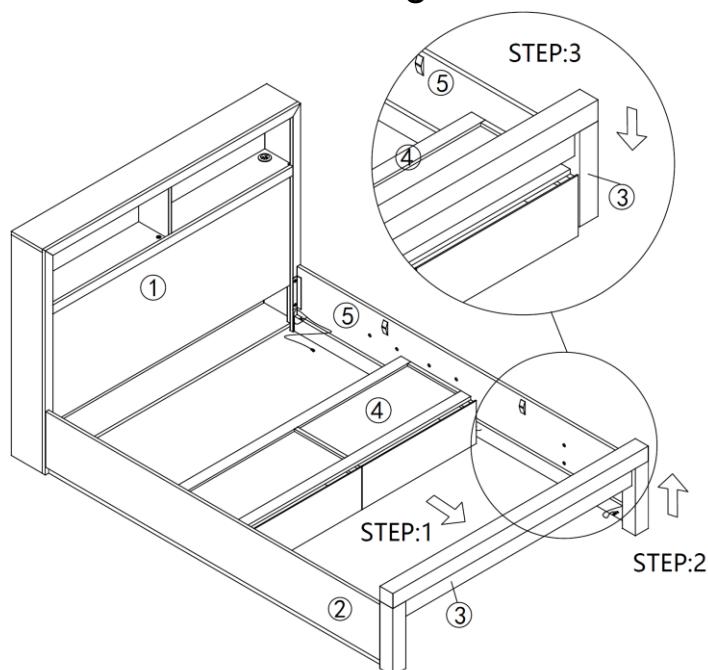

4.

B. M8X32mm




BX4

H. M5



HX1

- Attach the connecting board (6) to the drawer (4) with bolt (B).
- Note: Do not tighten the bolts.

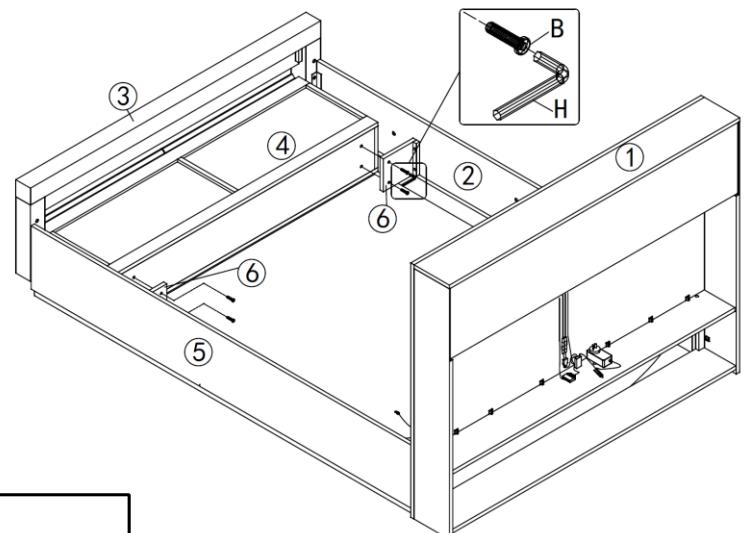

5.

B. M8X32mm




BX4

H. M5




HX1

- Fix the connecting board (6) to siderail (2) (5) with bolt (B).
- Tighten all bolts with allen key (H)

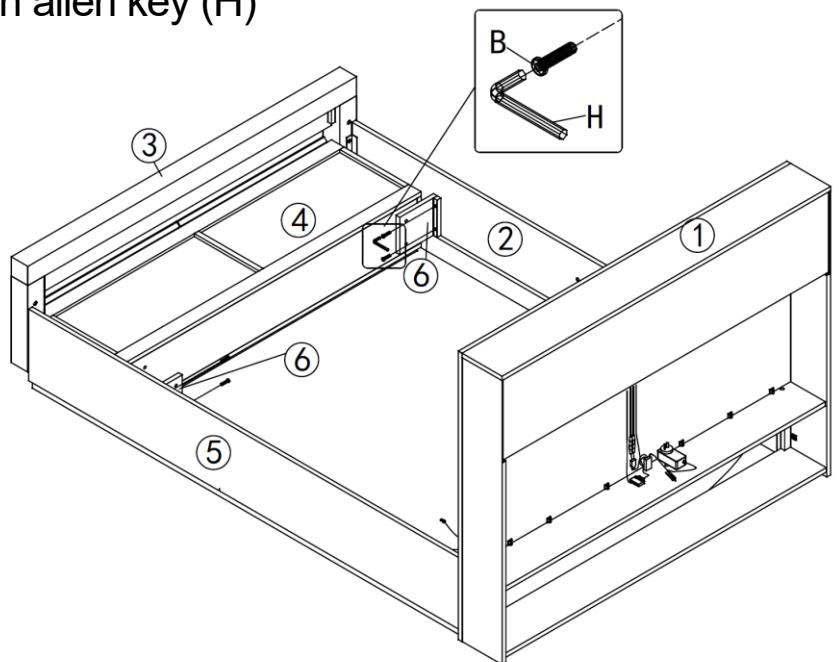


6.

- Connect the LED light wires on the drawer and the siderail.
- After passing the LED light wires on the siderail(2)(5) through the wire holes from the headboard support board, drag them near the cable box and fix them with wire managers.

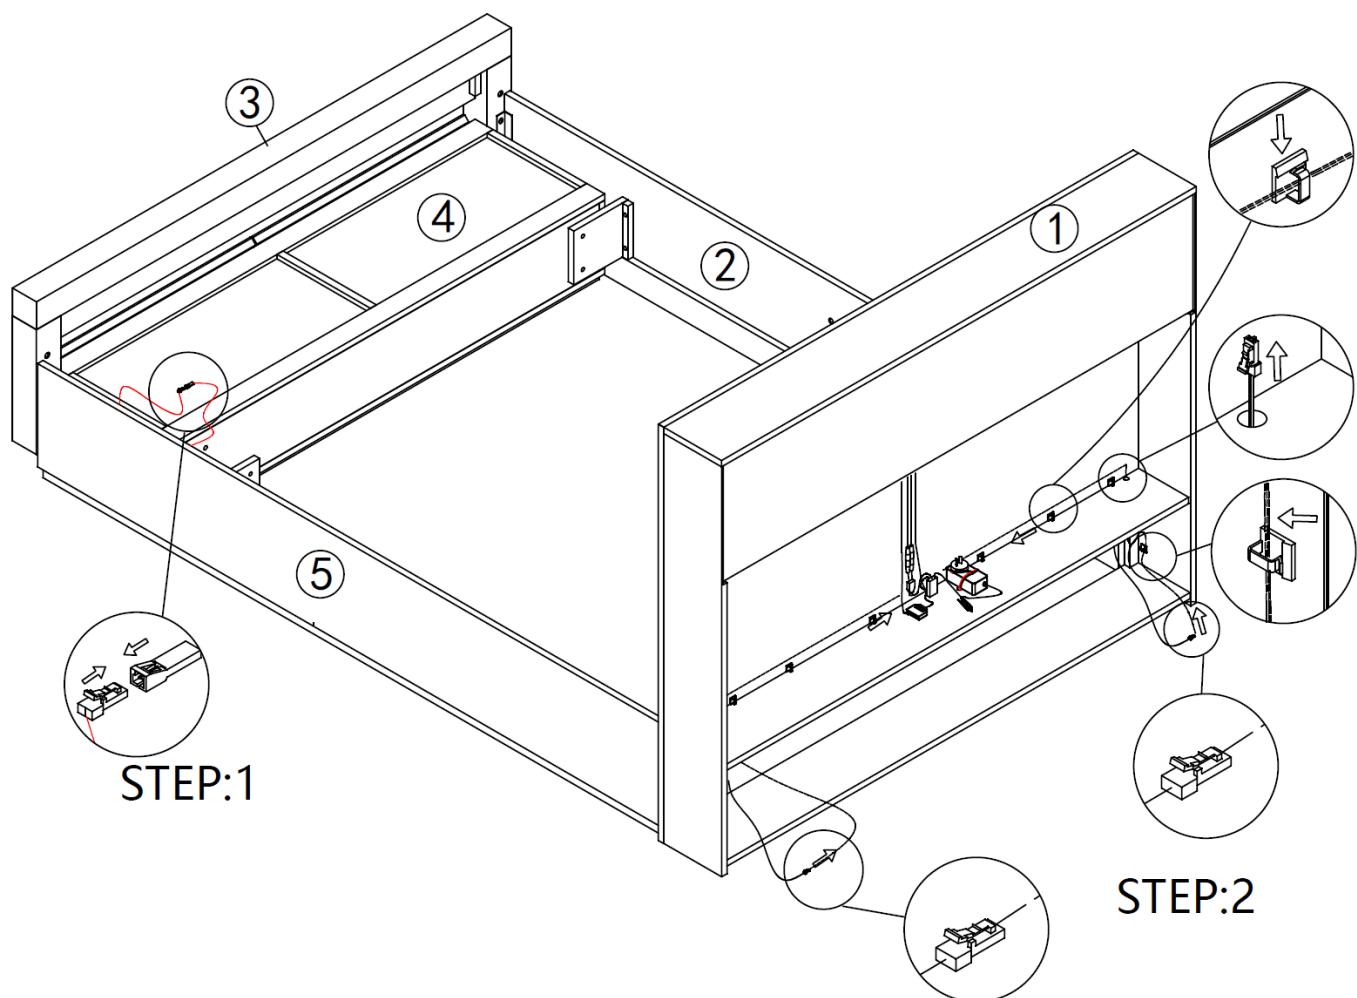

7.

- Insert the LED light wire of the siderail (2)(5) into the cable box.
- Unfasten and drag out the adapter to the length you need.

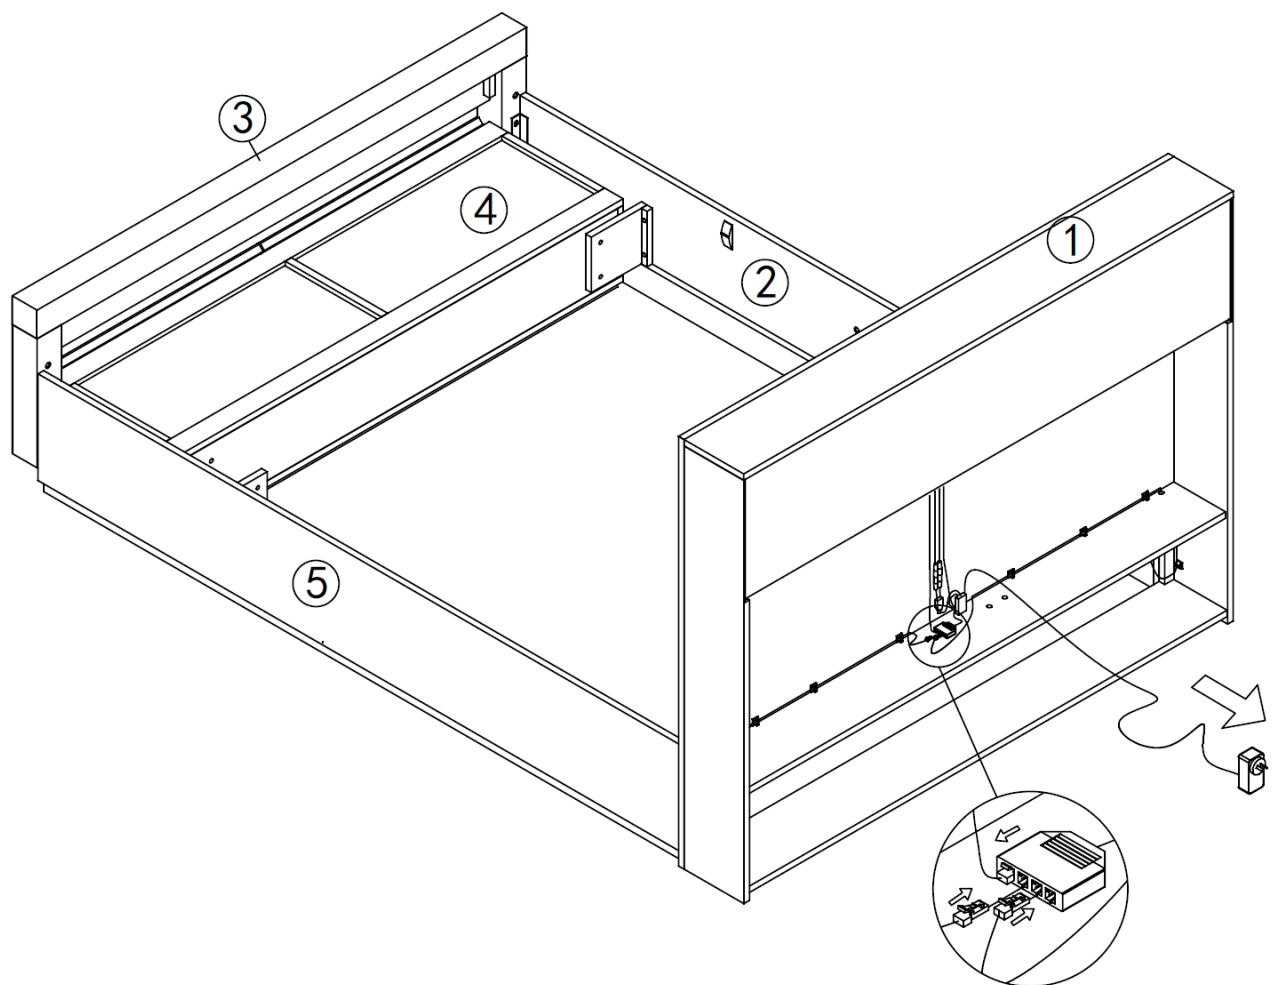

8.

F. M8



FX4

K.



KX1

L.






M.



LX2

- Fix the lift (L) and safety lock (M) to lift bracket (7)(8) with nut (F), and pay attention to the opening direction of the safety lock.
- Tighten with wrench (K).
- Note: The safety lock also needs to be placed in a fixed position after being unlocked. Please refer to the usage method of the safety lock in the image.

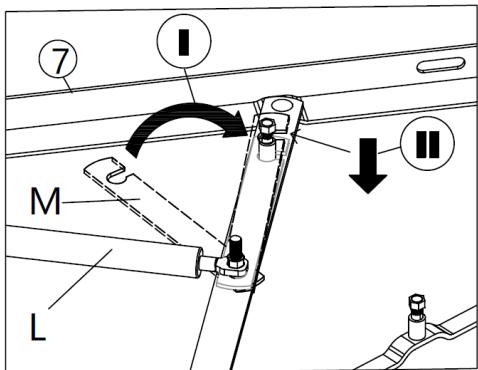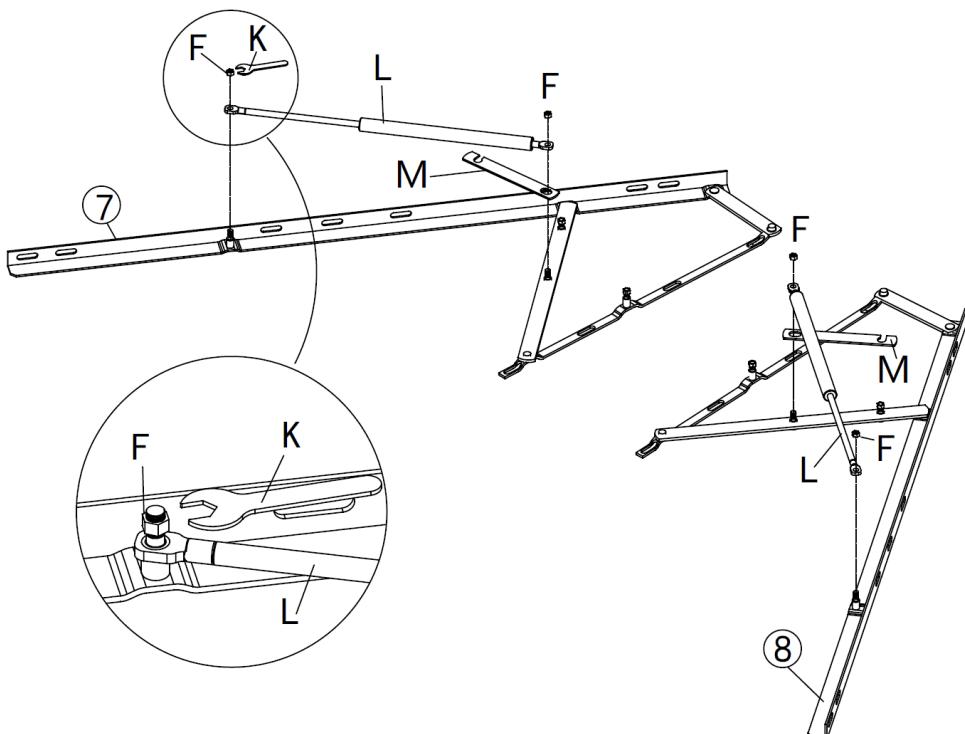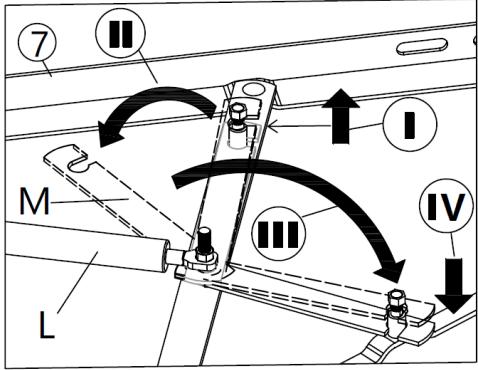UN LOCK POSITION**LOCK POSITION**

9.

A. M8X20mm



AX8

D.



DX8

E. M8XØ18




EX8

H. M5





HX1

- Fix the lift bracket (7)(8) to the siderail (2)(5) with flat washer (E), lock washer (D) and bolt (A).
- Adjust the distance between the two lift brackets and the headboard to keep them the same, and then tighten all the bolts with allen key (H).

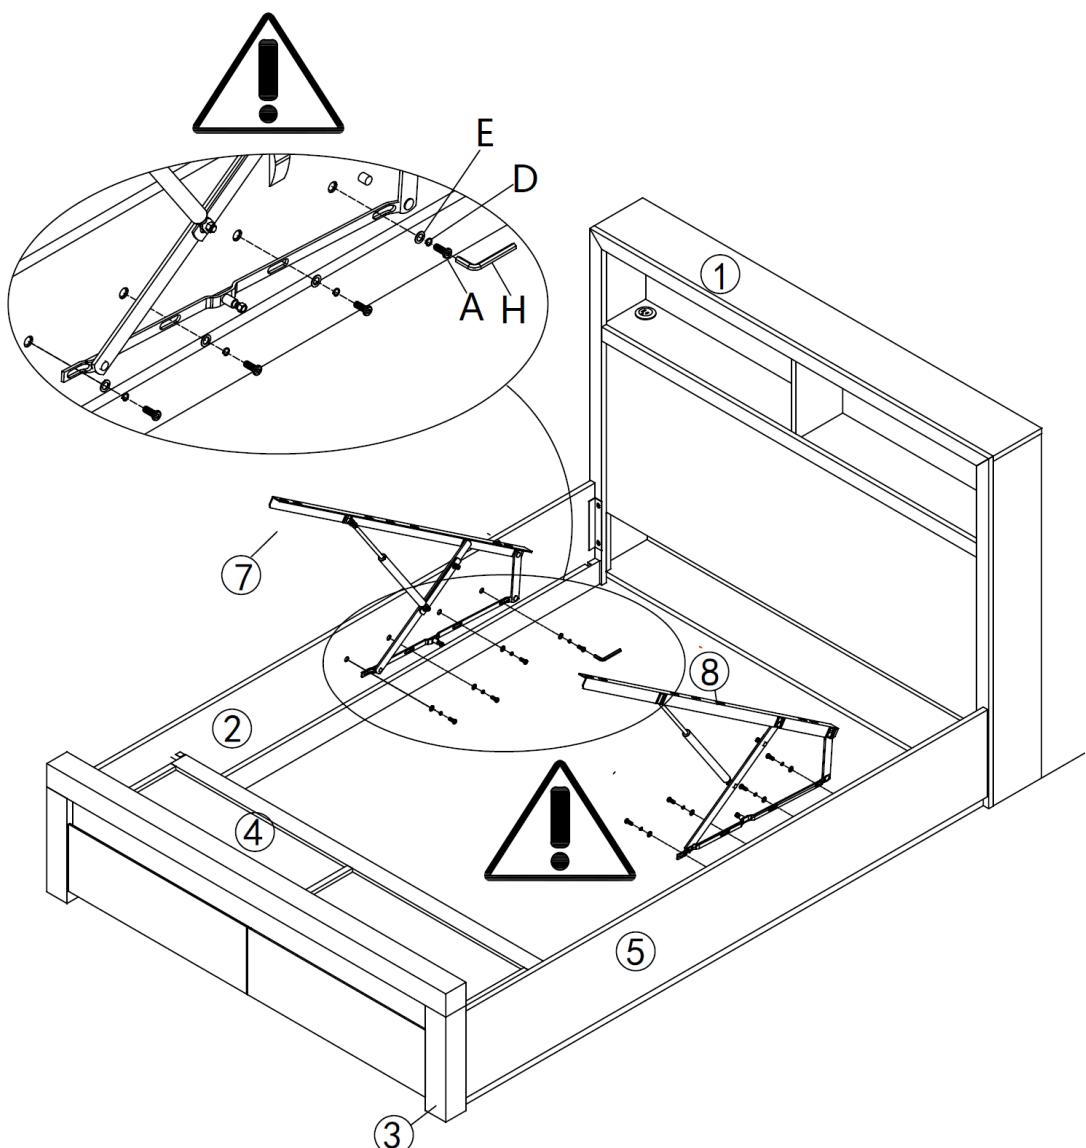


10.

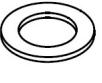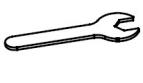C. M8X45  CX4	E. M8Xφ18  EX4	G. M8Xφ17  GX4	H. M5  HX1	K.  KX1
--	---	---	---	--

- Adjust the directions of the two metal parts (12) ensure that all the holes on them correspond to each other, and then insert the metal part (11) into the metal part (12).
- After adjusting the direction of the metal part (14), fix it to metal parts (11) with with flat washer (E) bolt (C) and nut(G).
- Tighten with allen key (H) and wrench (K).

Note: The holes of the fixed brackets are closer to headboard

Note: The connection holes for the support leg are also closer to the headboard

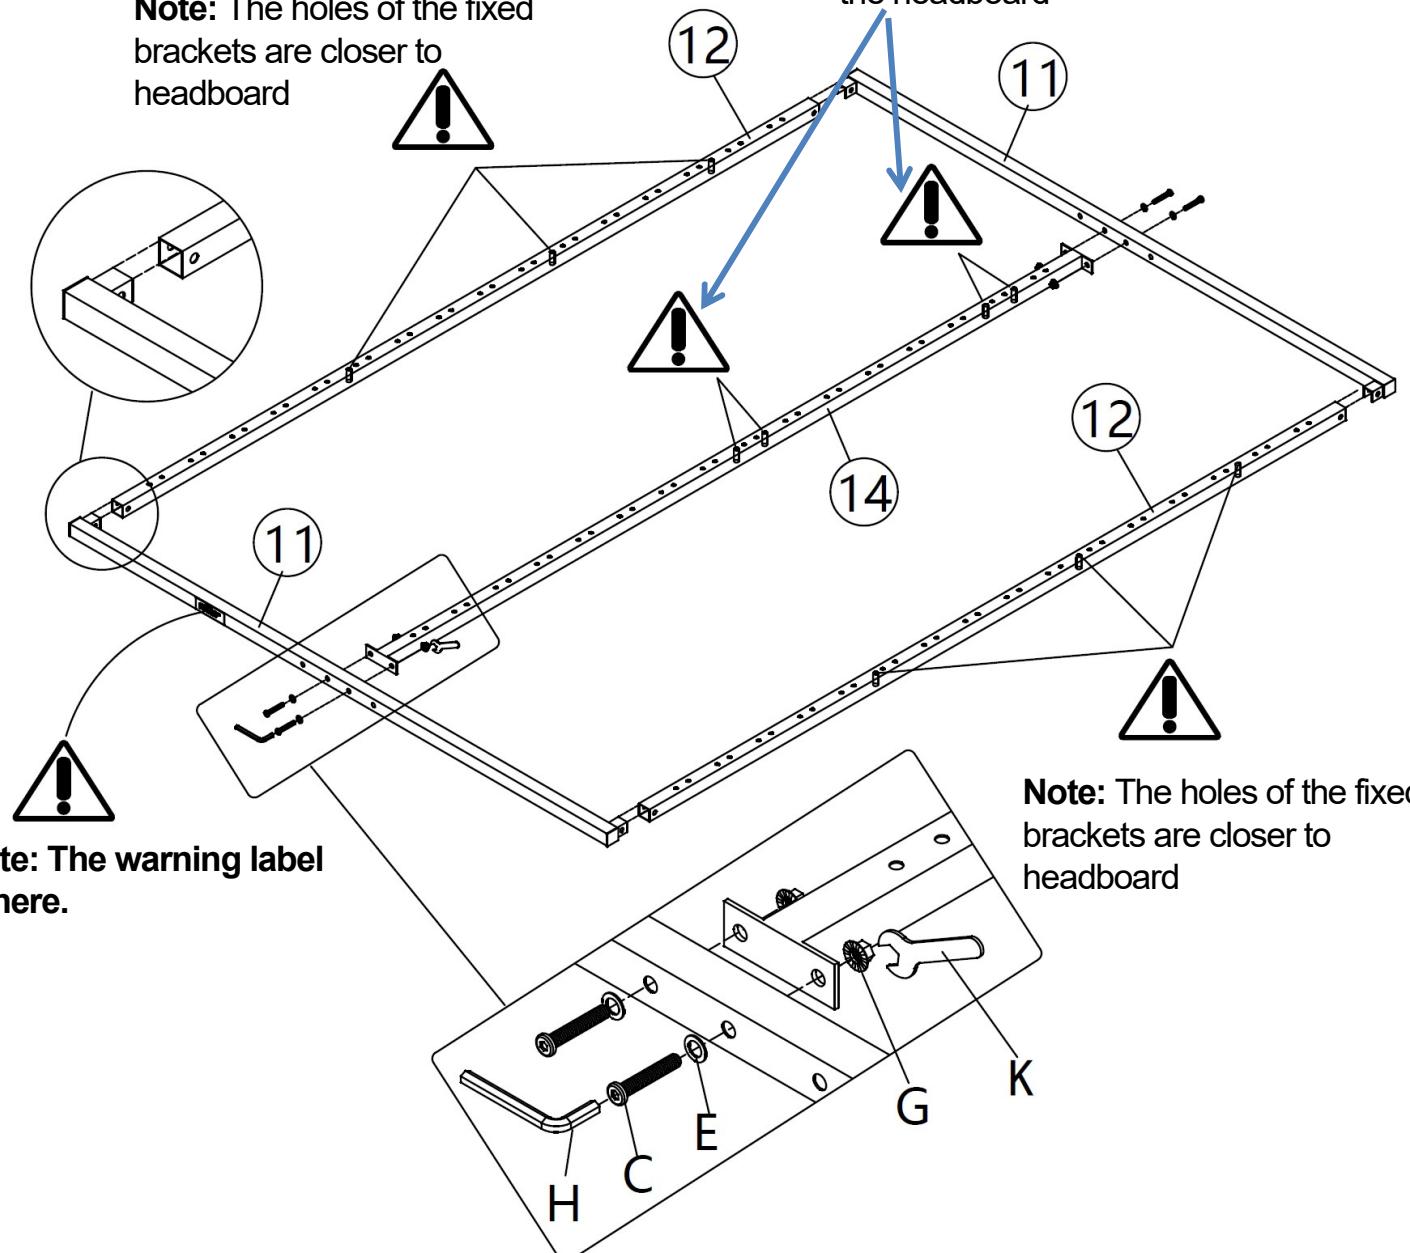

11.

C. M8X45



CX4

E. M8X ϕ 18



EX4

G. M8X ϕ 17



GX4

H. M5




HX1

K.



KX1

- Fix the metal part (11) (12) with flat washer (E) bolt (C) and nut (G).
- Tighten with allen key (H) and wrench (K).

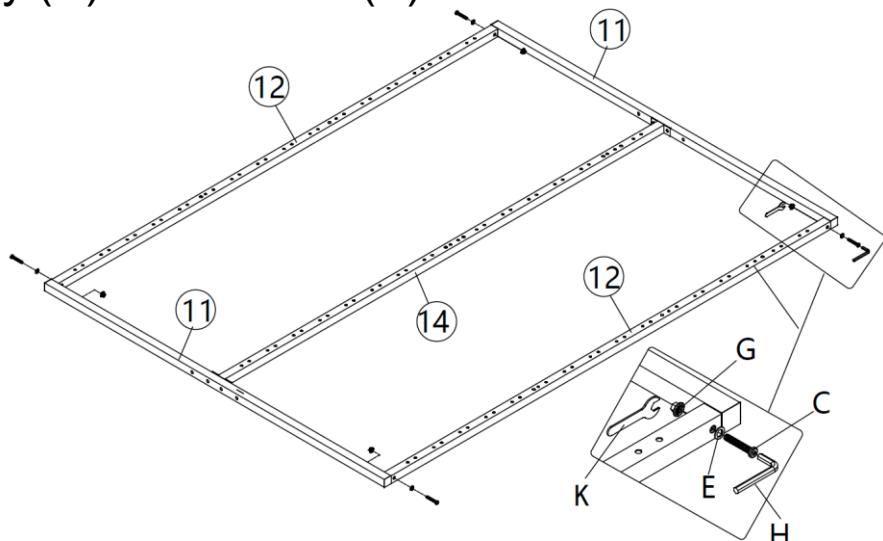

12.

C. M8X45



CX4

E. M8X ϕ 18



EX4

G. M8X ϕ 17



H. M5




HX1

K.



KX1

- Fix the support legs (13) to the metal frame with flat washer (E) bolt (C) and nut (G).
- Tighten with allen key (H) and wrench (K).
- Insert the handle (10) into the metal frame.

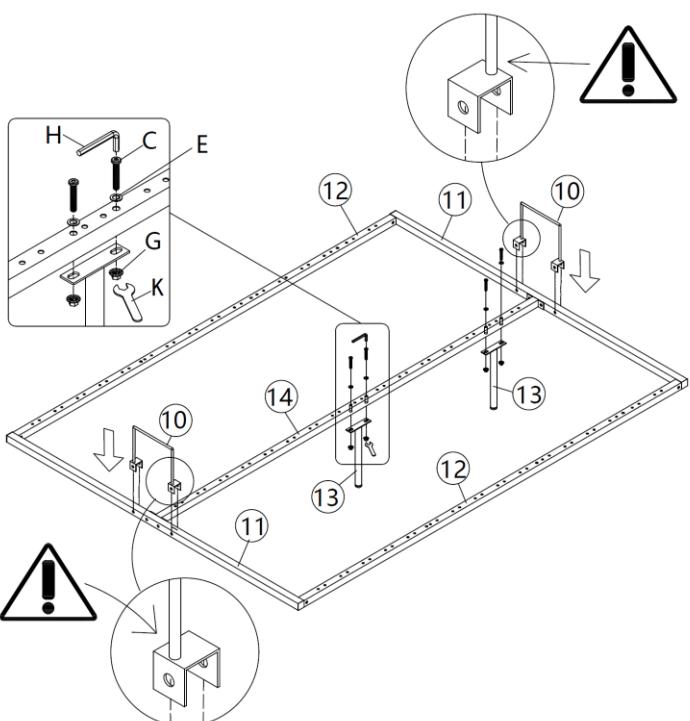

NOTE: the inside and outside of the handle

13.

C. M8X45



CX4

E. M8Xφ18



EX4

G. M8Xφ17



GX4

H. M5




HX1

K.



KX1

- Fix the handles (10) to the metal frame with flat washer(E) bolt (C) and nut(G).
- Tighten with allen key (H) and wrench (K).

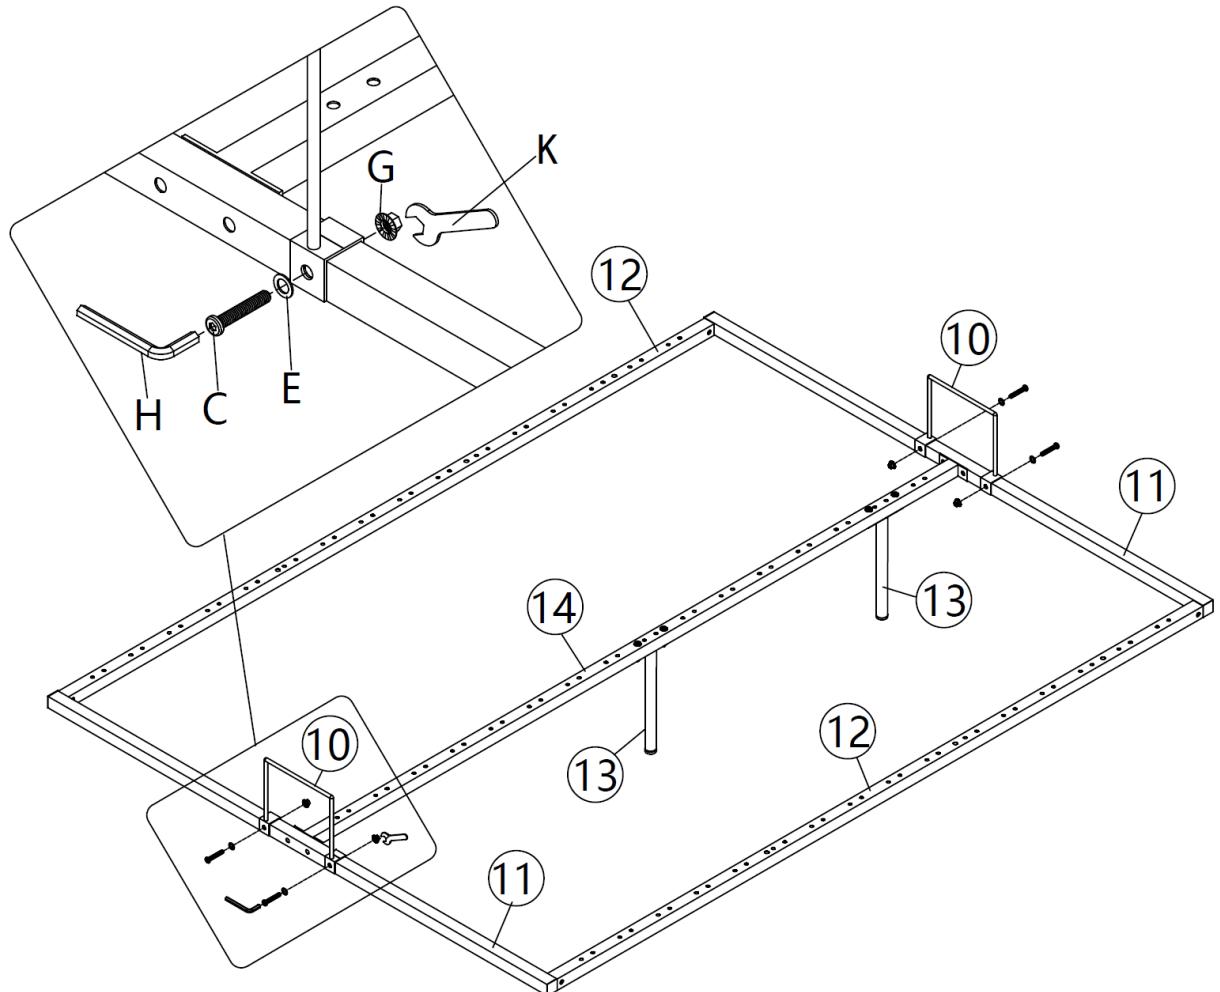

14.

C. M8X45



CX6

E. M8 \times 18



EX6

G. M8 \times 17



GX6

H. M5




HX1

K.




KX1

- Fix metal bed frame to lift bracket(7)(8) with flat washer(E) bolt (C) and nut(G).
- Tighten with allen key (H) and wrench (K).

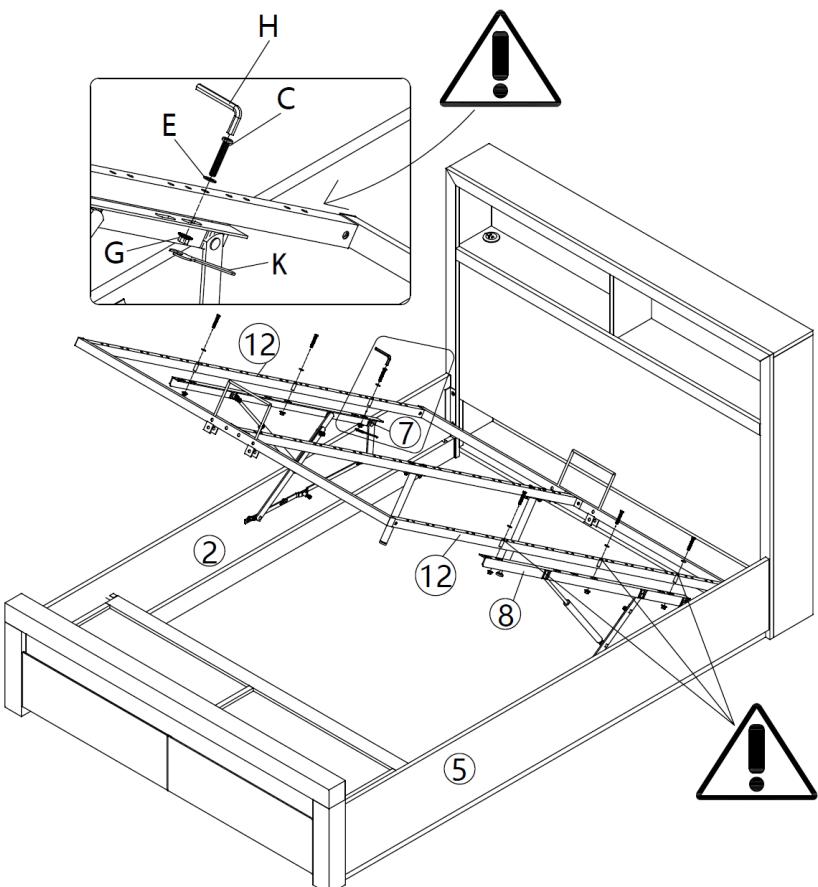


SAFETY CAUTION WARNING

Please always lock the safety lock mechanism while the bed base is in lifting position.
Unlock it before you want to put the bed base back into normal position.

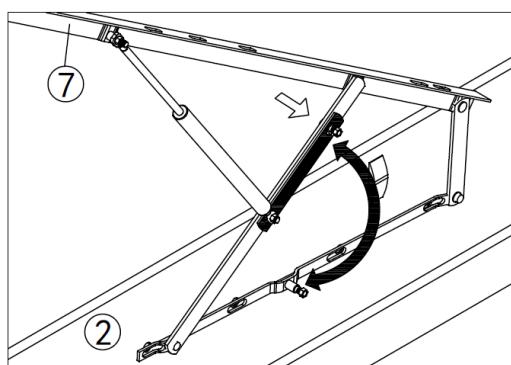


UN LOCK POSITION

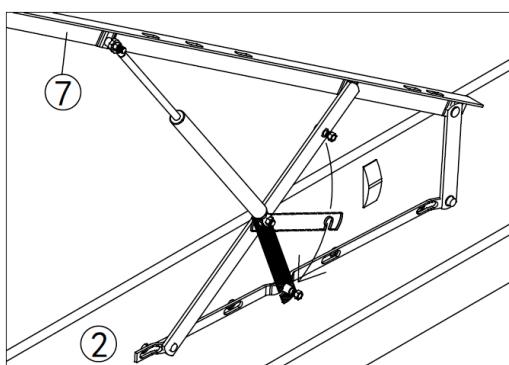


LOCK POSITION

15.

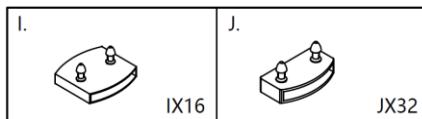


- Connect the slats (9) with plastic caps(I)(J) and then fix them to the metal bed frame.

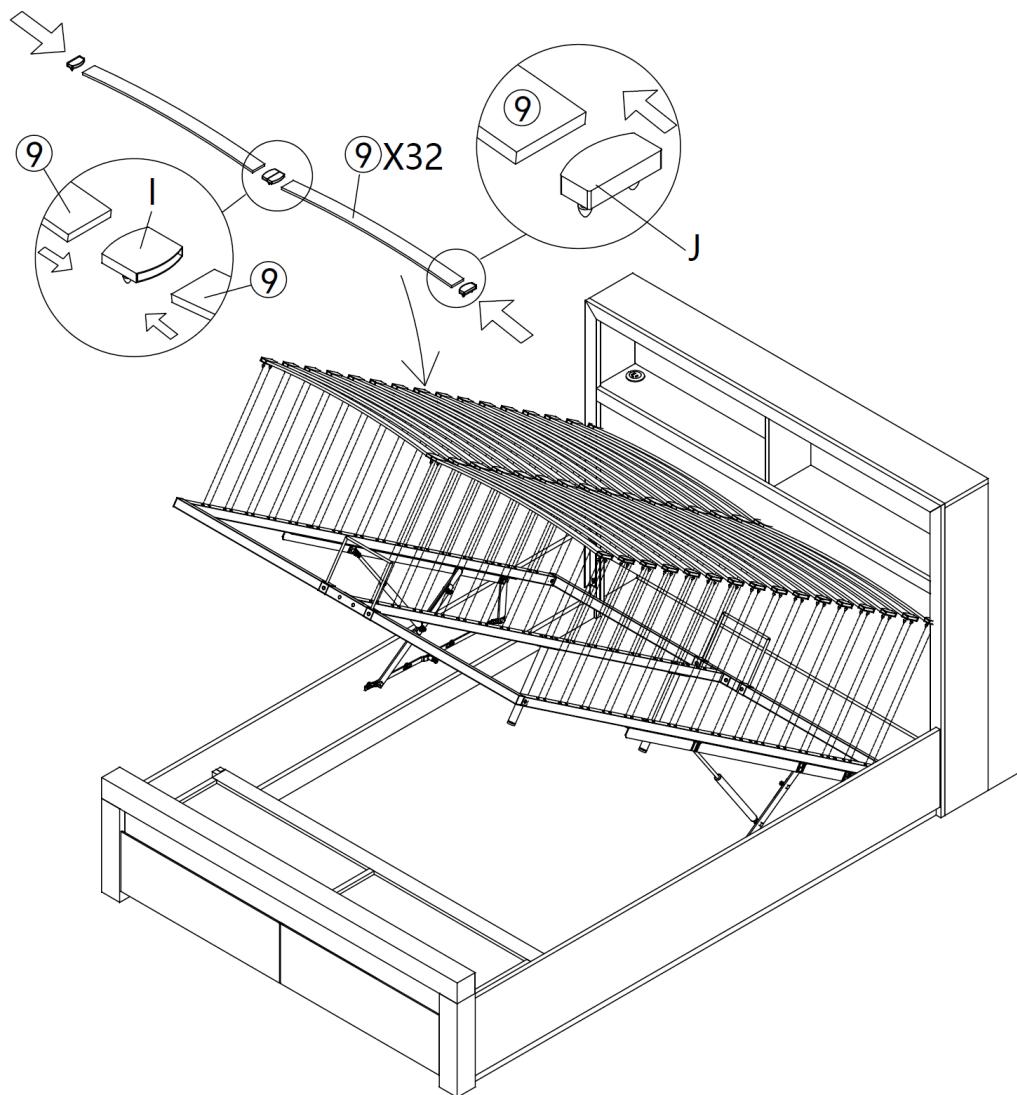

ASSEMBLY IS COMPLETE

WARNING

**PINCH HAZARD: BEWARE OF YOUR FINGERS WHEN
LIFTING AND LOWERING THE MECHANISM**

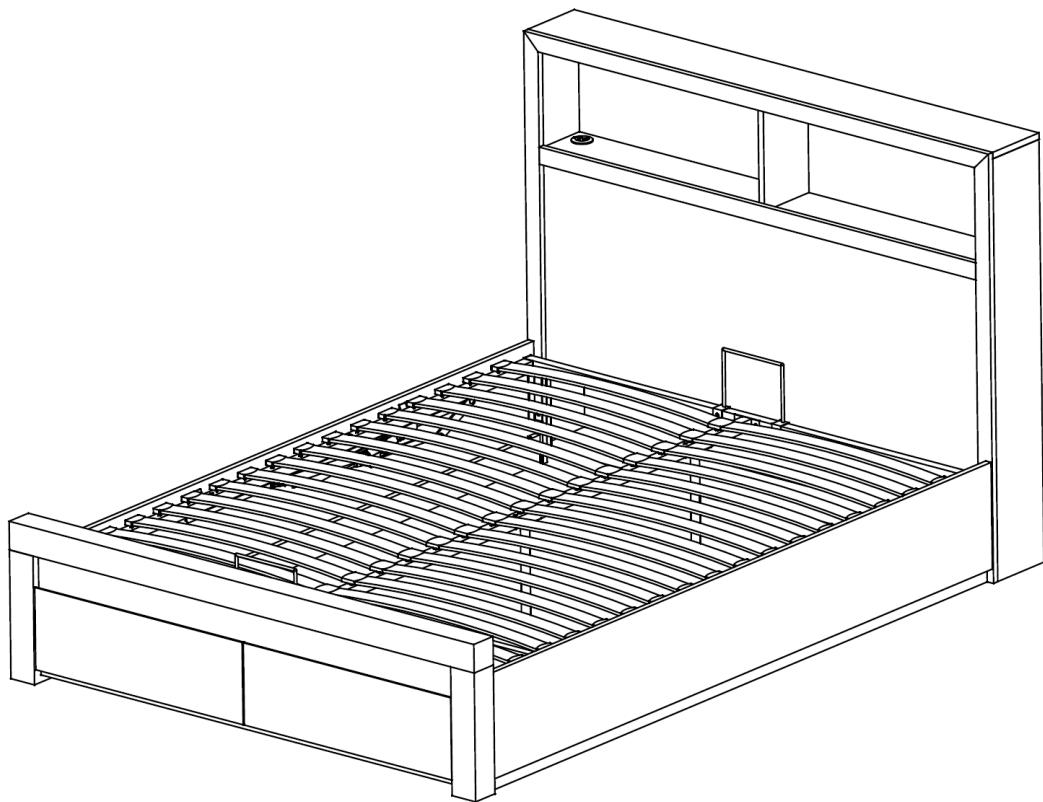

CAUTION:

**ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING - DO
NOT DRAG. DRAGGING CAN CAUSE THE CENTRE
SUPPORT LEGS TO BEND/BREAK**

Care and maintenance



As our timber is supplied from sustainable forests there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time