
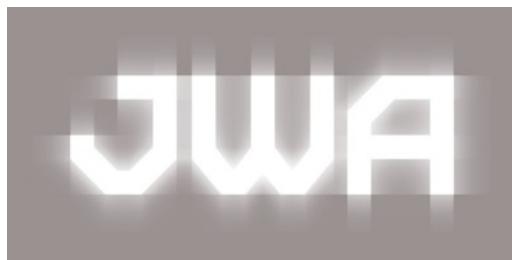


ASSEMBLY INSTRUCTION

TARLOW 4 DOOR BUFFET

Item Code 85418

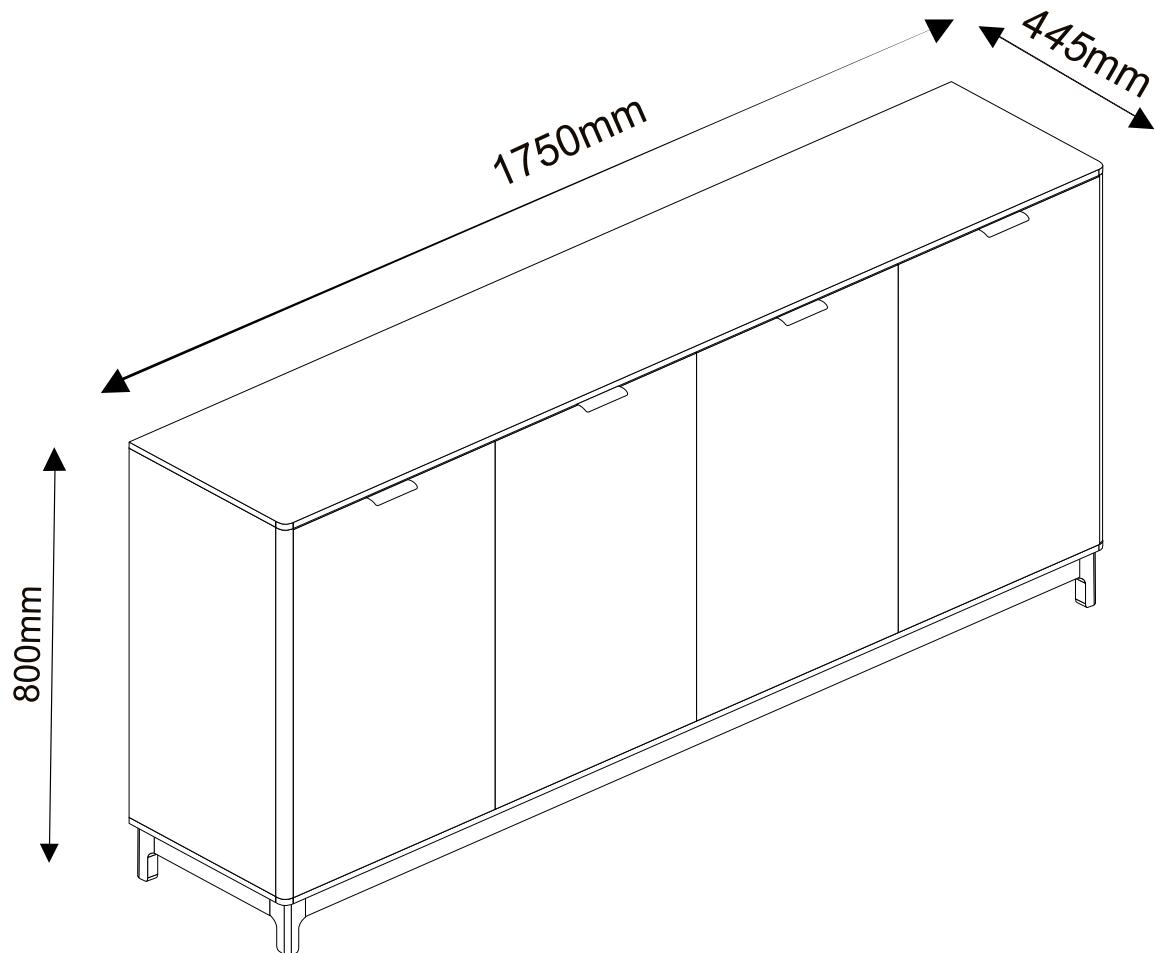

Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION











Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly
5. Keep all hardware parts and packaging out of reach of small children
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury
9. Do not use this item if any components are missing or damaged
10. Please keep the instructions for future reference.

		
Allow 30 min	For 2 person	Additional tools required




PARTS LIST

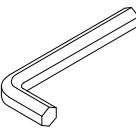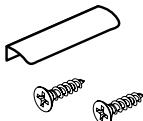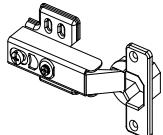A Cam Bolt x 32pcs 	B Cam Lock x 32pcs 	C Wooden Dowel Φ6x30mm x 44pcs 	D Screw M4x35mm x 6pcs 
E Screw M7x40mm x 14pcs 	F Allen key M4 x 1pc 	G Screw M4x14mm x 48pcs 	H Handle Set x 4pcs 
I Screw M4x35mm x 8pcs 	J Plastic Wedge x 16pcs 	K Metal Bracket x 12pcs 	L Screw M3.5x12mm x 24pcs 
M Hinge x 4pcs 	N Support Leg Pad x 1pc 	O Screw M4x14mm x 6pcs 	P Hinge x 4pcs 
Q Shelf Bracket x 16pcs 	R Tip Kit x 2pcs 	S Screw M4x50mm x 12pcs 	T Adjustable Leveller x 1pc 
U Sticker x 18pcs 	V Wall Anchor M6x35mm x 2pcs 		

PARTS LIST


1	Top Panel x 1 pc	2	Side Panel(Left) x 1 pc
3	Side Panel(Right) x 1 pc	4	Bottom Panel x 1 pc
5	Middle Devider(Left and Right) x 2pcs	6	Middle Devider x 1pc
7	Back Rail x 2 pcs	8	Back Panel(Bottom) x 2 pcs
9	Poster x 1 pc	10	Spacer x 4 pcs
11	Shelf Panel x 2 pcs	12	Leg x 4 pcs
13	Bottom Front&Back Rail x 2 pcs	14	Bottom Side Rail x 2 pcs
15	Support Leg x 1pc	16	Door x 1 pc
17	Door x 1 pc	18	Back Panel(Top) x 2 pcs
19	Shelf Panel(Left and Right) x 2 pcs	20	Door x 1 pc
21	Door x 1 pc	22	Poster x 1 pc

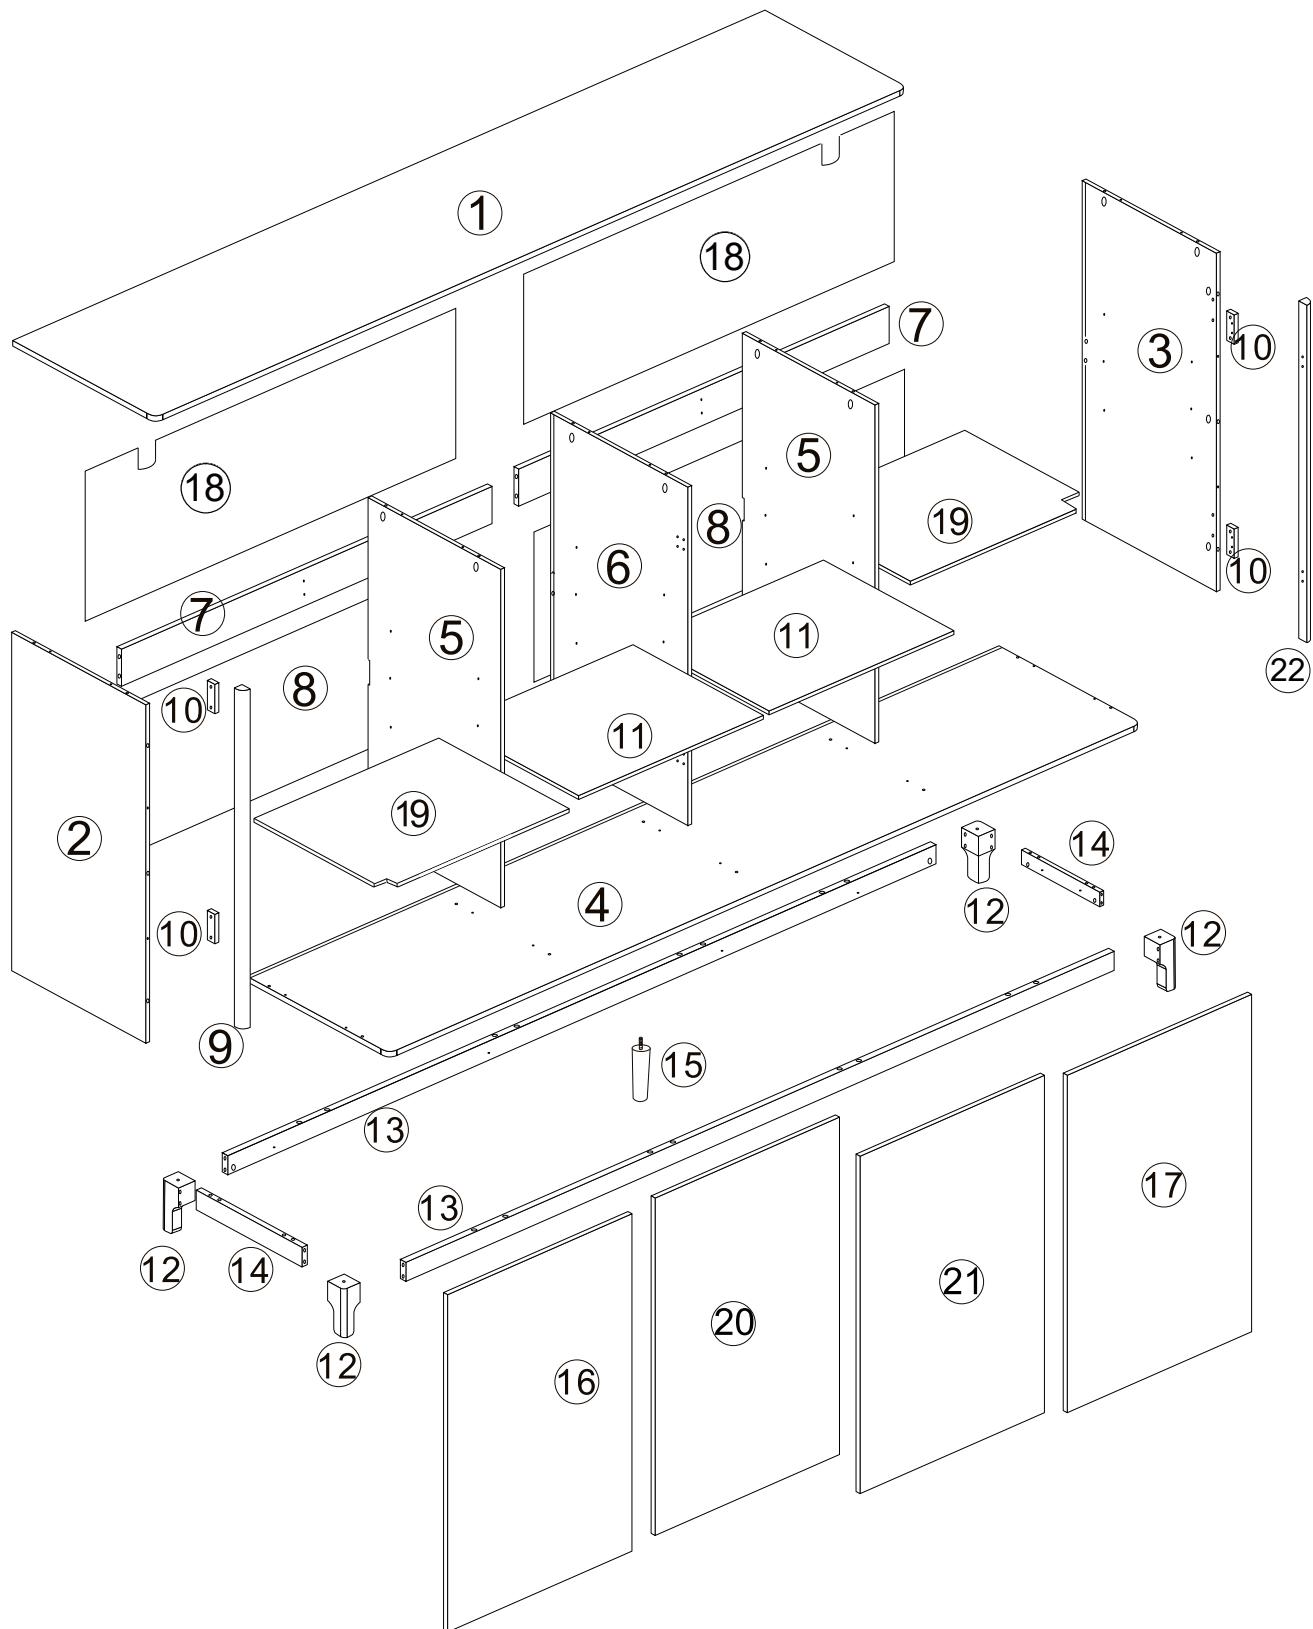

STEP 1:


- Prepare a protected surface with a blanket or cardboard.
- Assemble Side Panel 2,3 with Poster 9,22 by hardware A,B,C.
- Attach Sticker U.

Hardware Needed		
A		x6
B		x6
C		x4
U		x6

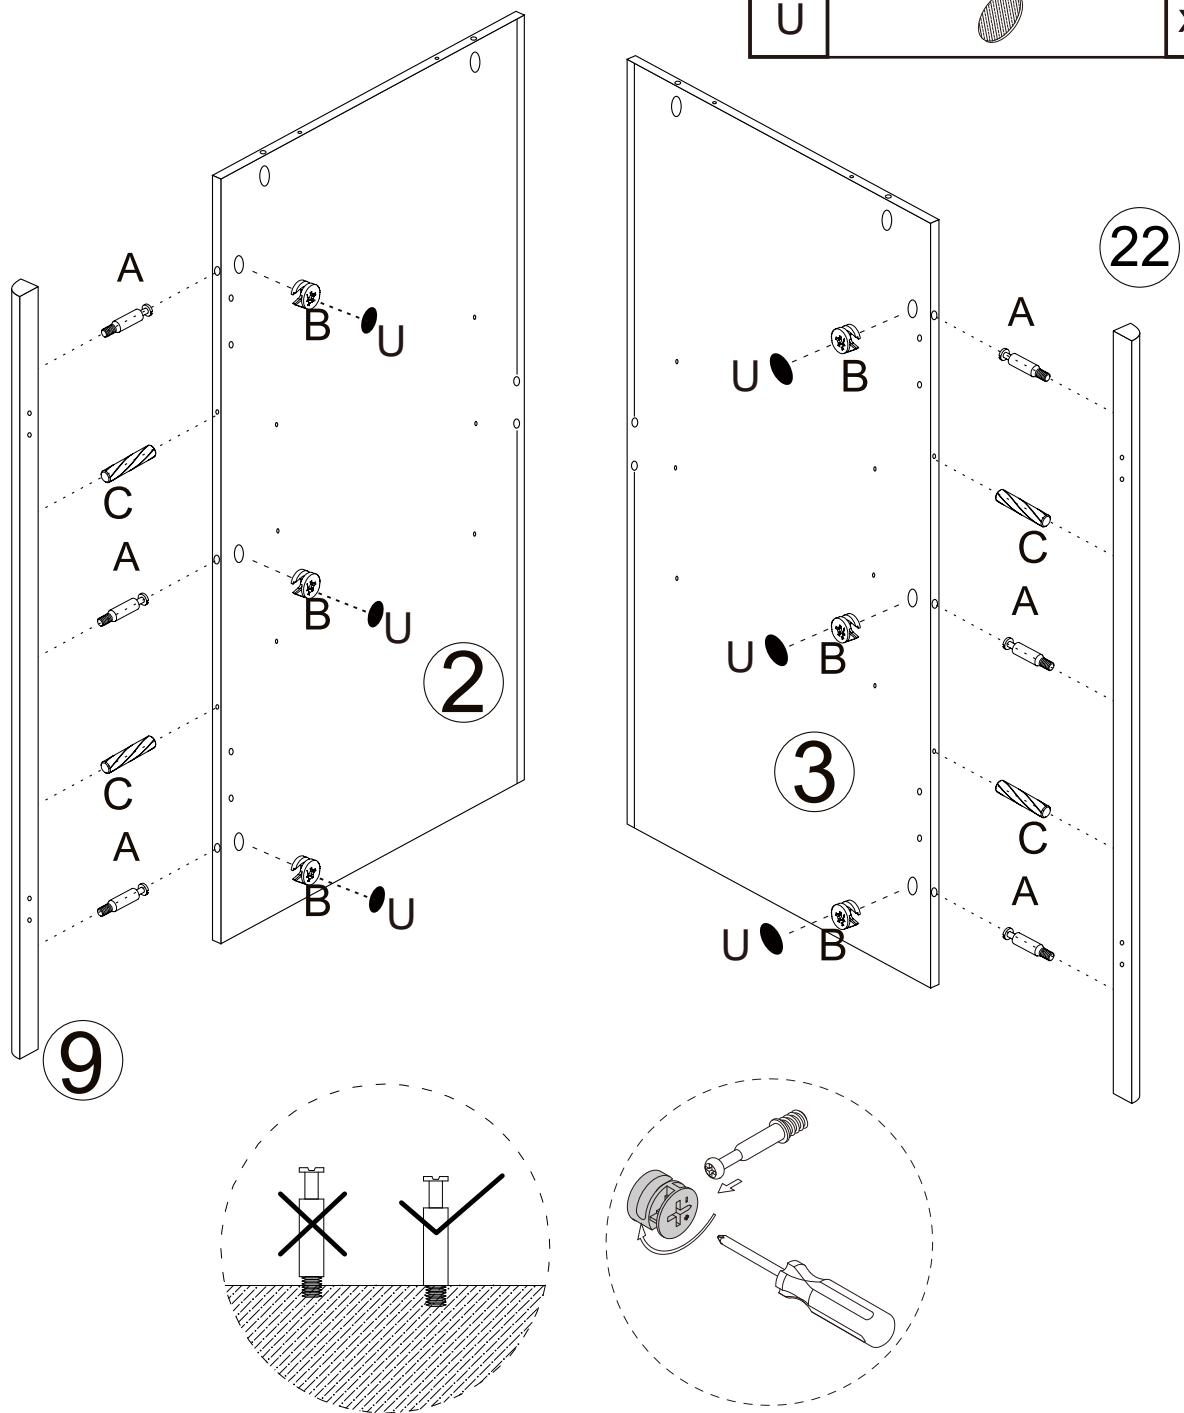

STEP 2:

- Attach Spacer 10 onto assembled side panels by hardware I.

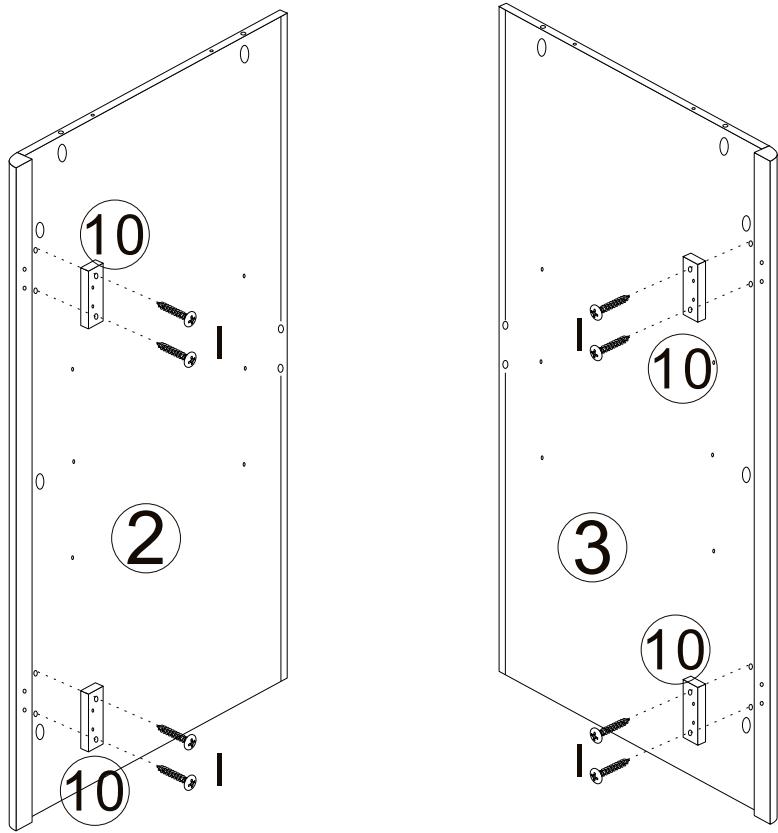

Hardware Needed


I		x8
---	--	----

STEP 3:

- Assemble the Middle Devider 6,Back Rail 7 with left side panel 2 by hardware A,B.

Hardware Needed

A		x4
B		x4

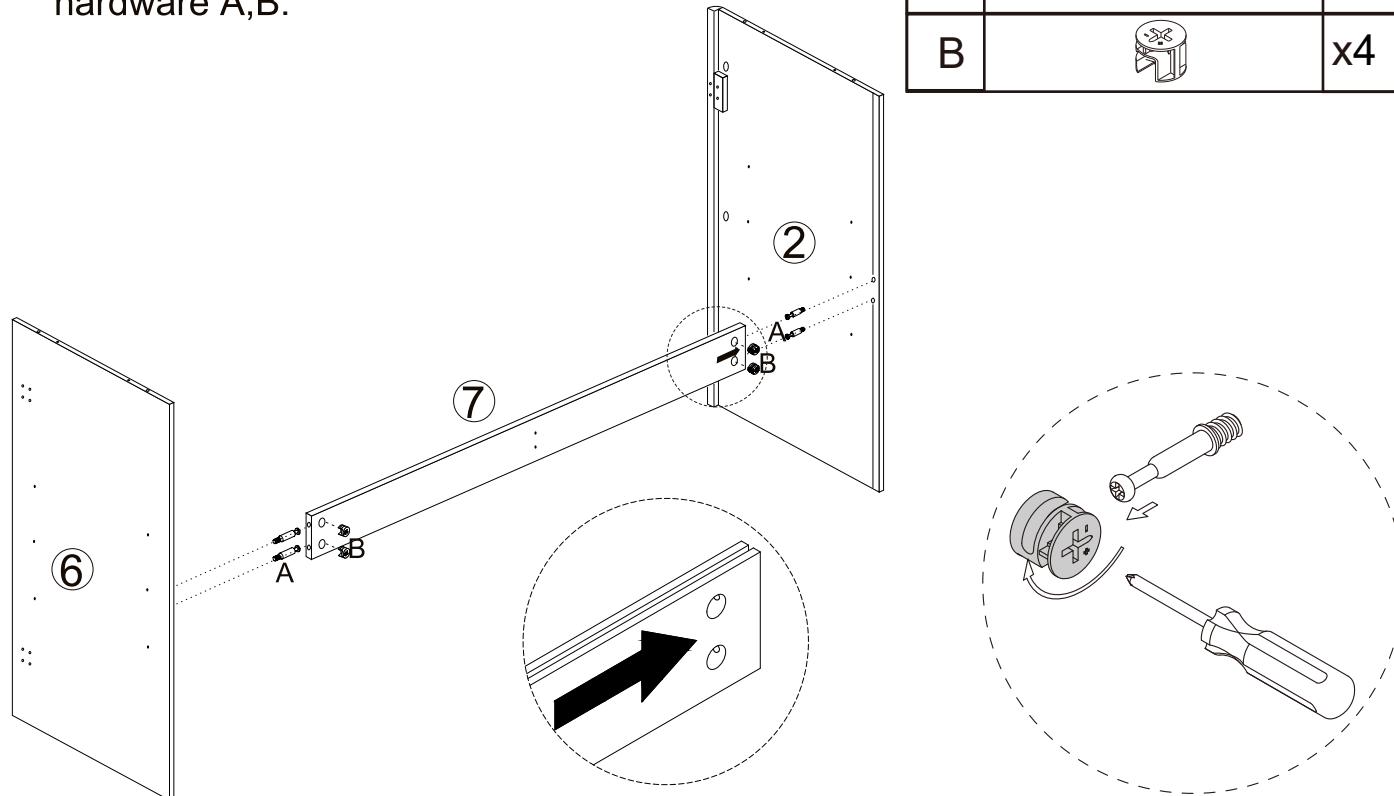


STEP 4:

- Assemble the Middle Devider 6,Back Panel 7 with right side panel 3 by hardware A,B
- Attach the Middle devider 5 by hardware D.


Hardware Needed

A		x4
B		x4
D		x4

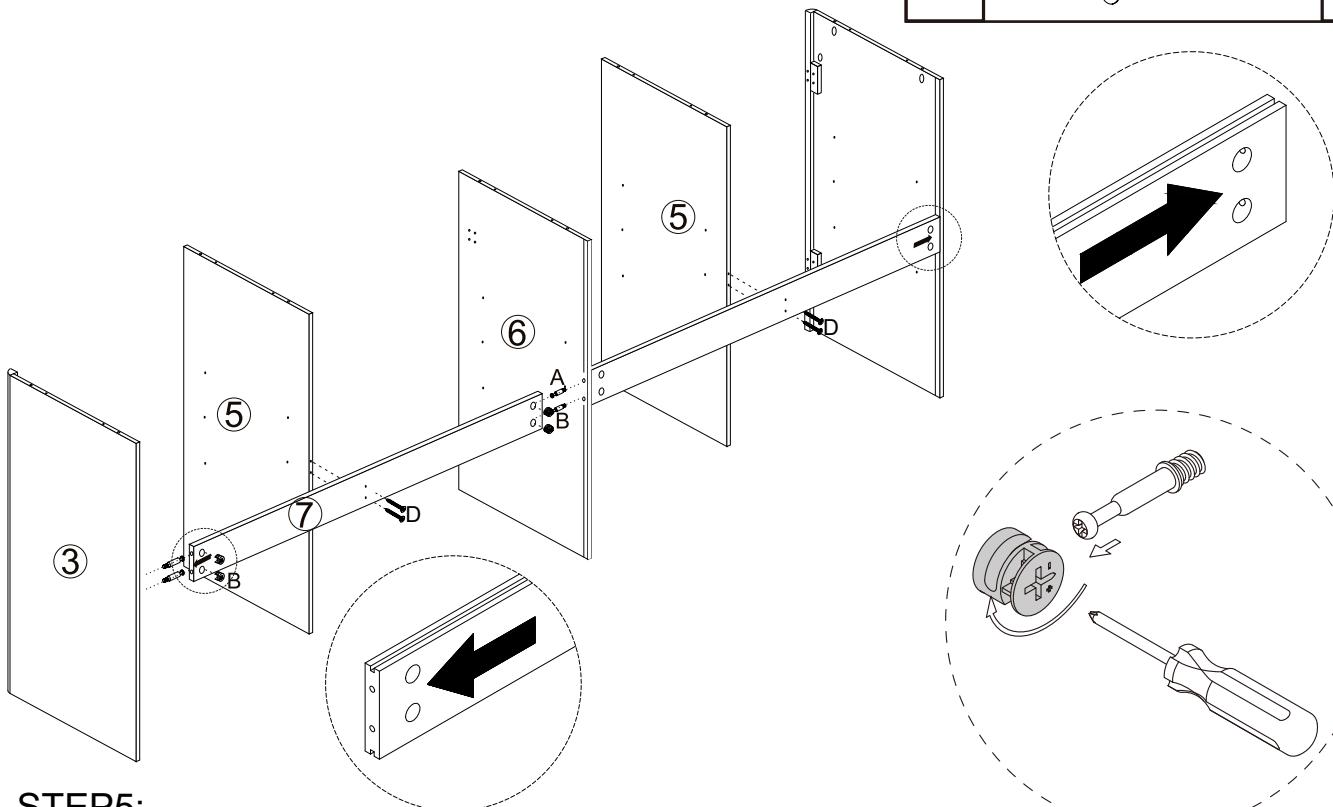

STEP5:


- Attach the Back Panel(Top) 18.

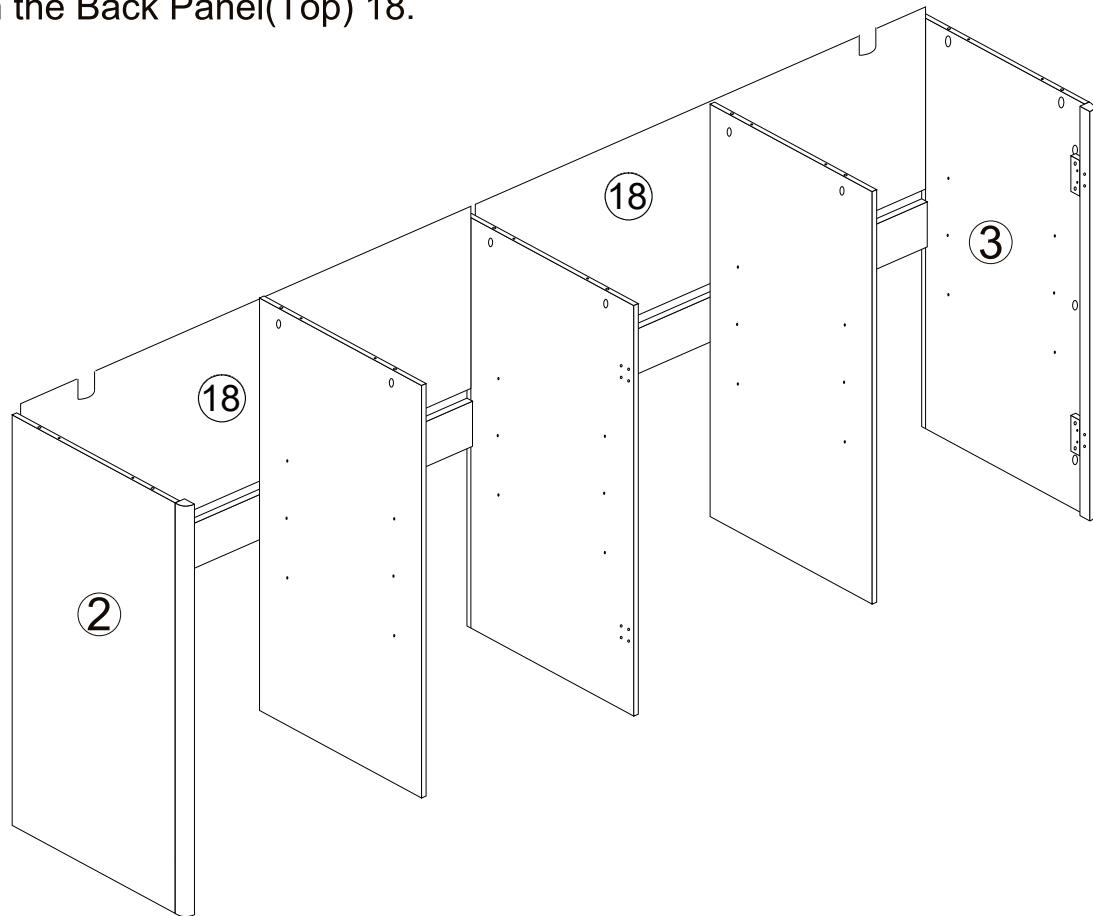


STEP 6:

- Secure hardware A on Top 1.
- Secure Kit Tip R on Top 1 by hardware O.

Hardware Needed

A		x10
R		x2
O		x2

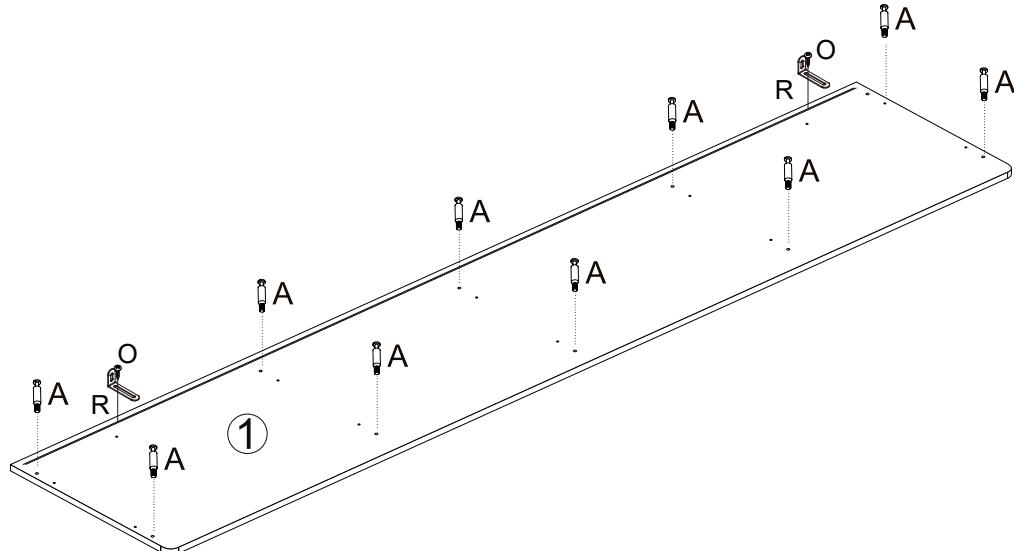


STEP 7:

- Assemble the Top 1 with cabinet frame by hardware B,C,U.

Hardware Needed



B		x10
C		x10
U		x10

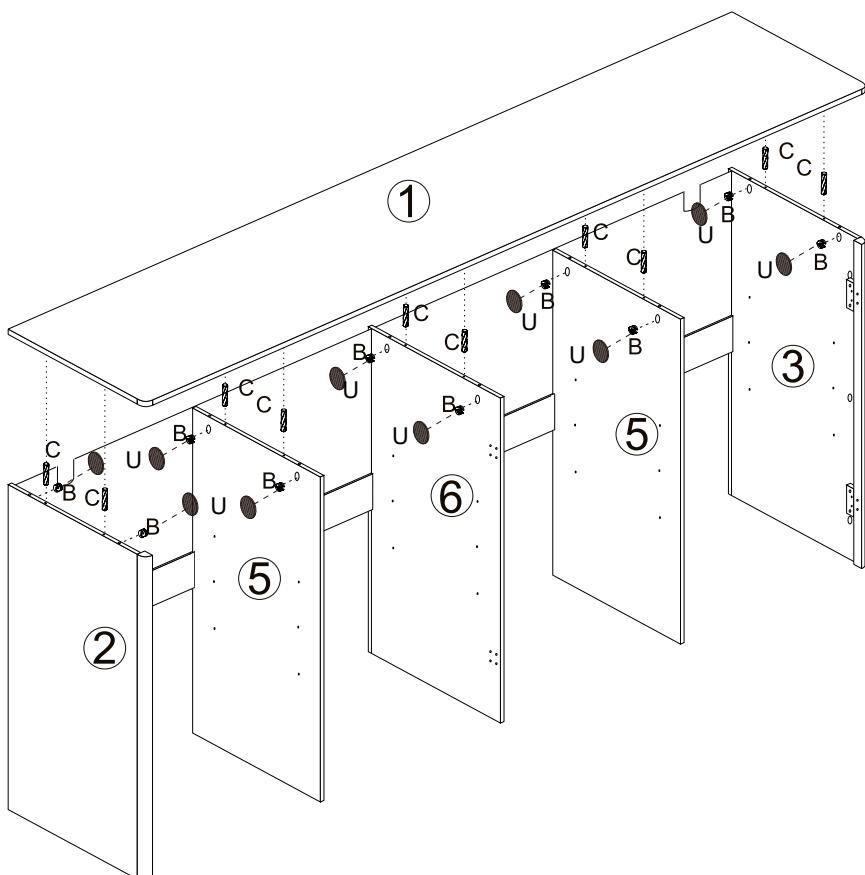

STEP 8:

Assemble the Leg 12 with base rail 13,14 by hardware A,B,C.


Hardware Needed		
A		x8
B		x8
C		x8

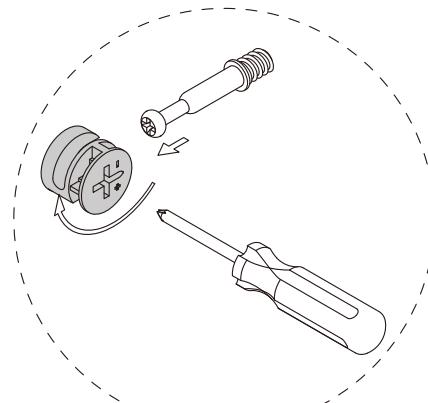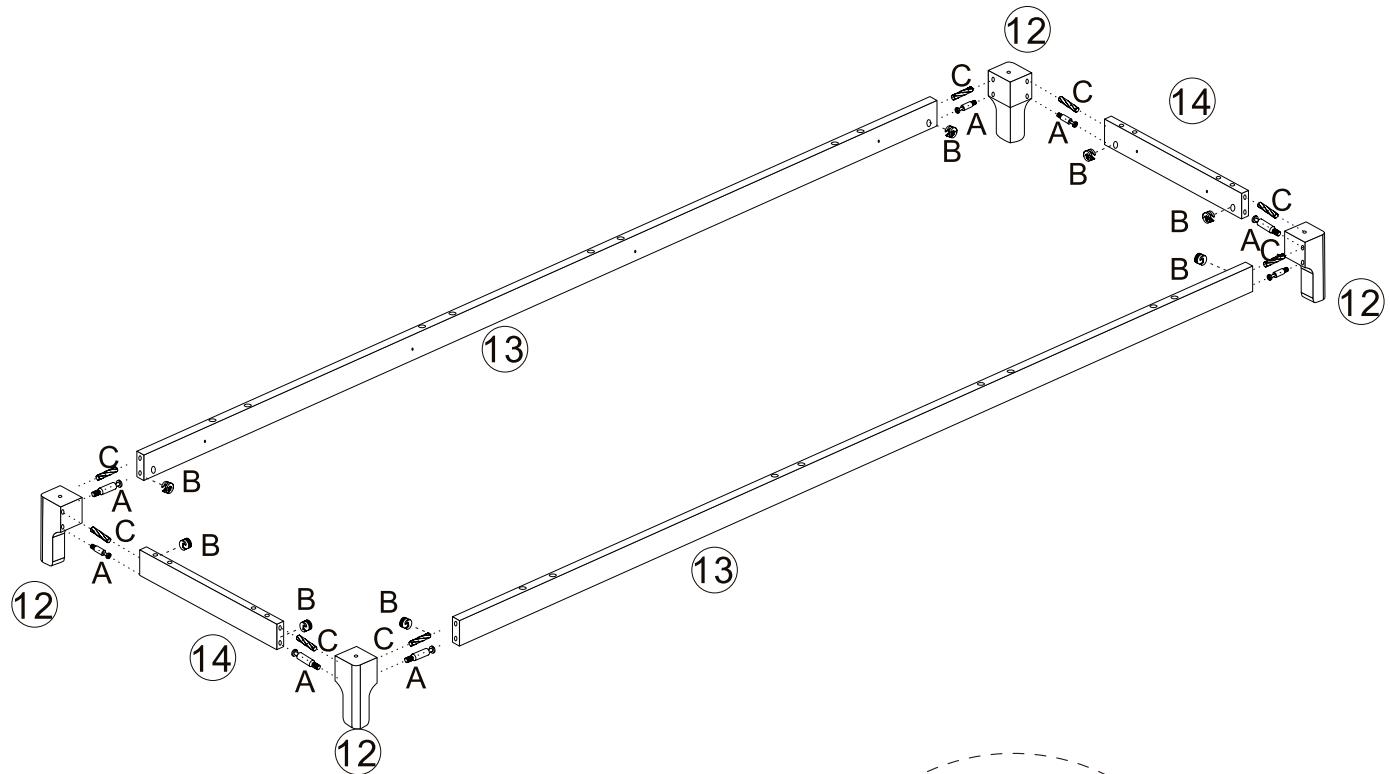

STEP 9:


- Attach the Bottom Panel on base frame by hardware C,E.

Hardware Needed		
C		x12
E		x4
F		x1
U		x2

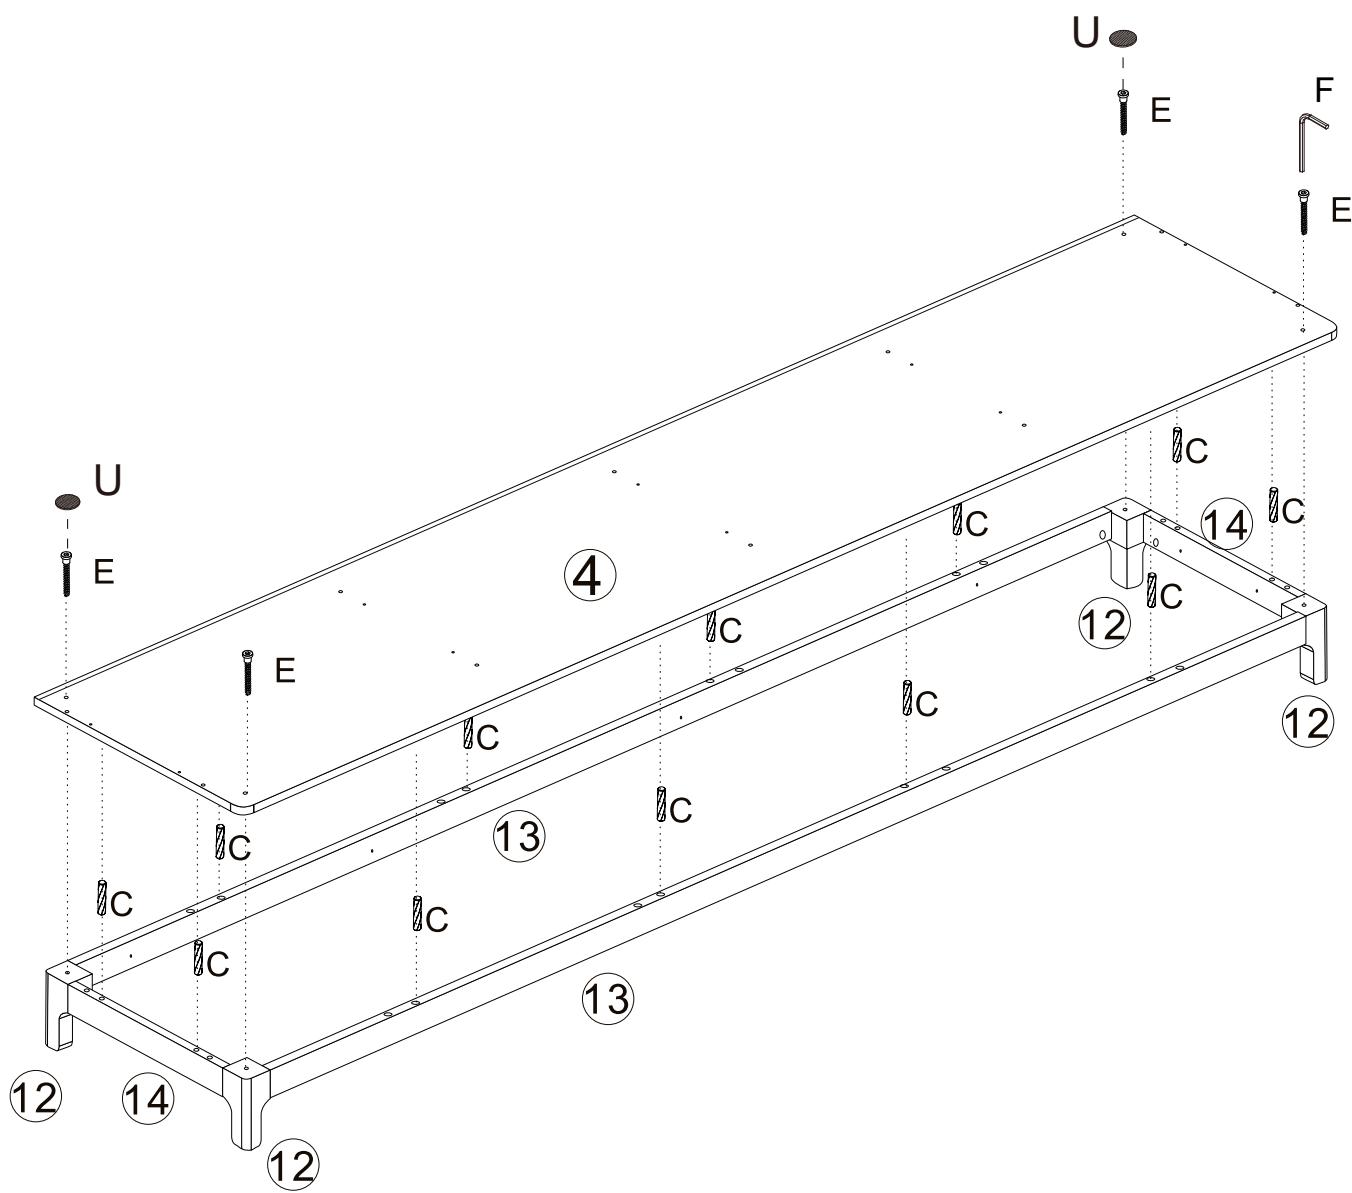


STEP 10:

- Attach the Back Panel 8.

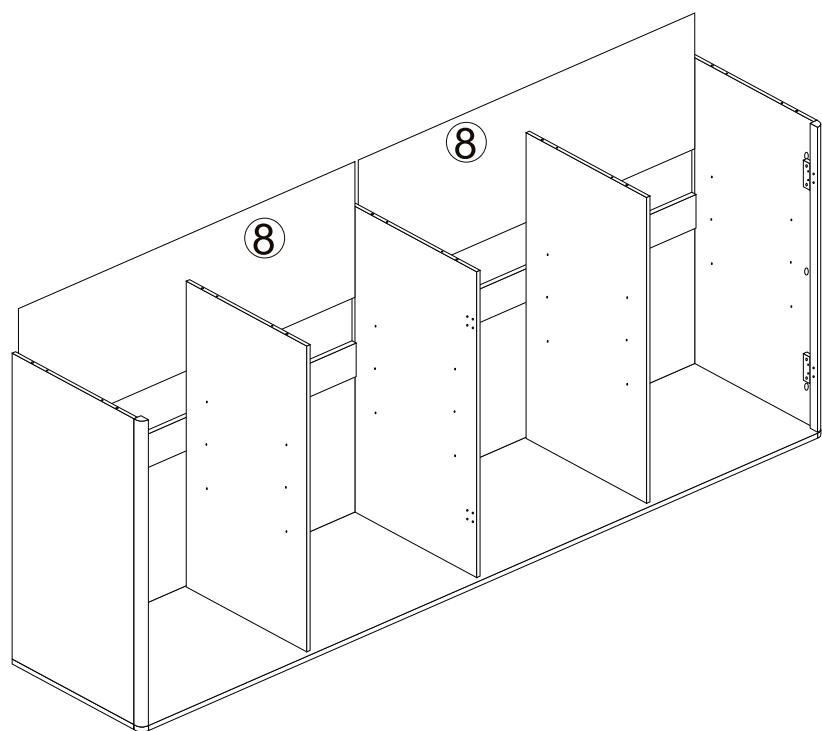

STEP 11:


- Assemble the base with cabinet frame by hardware C,E.

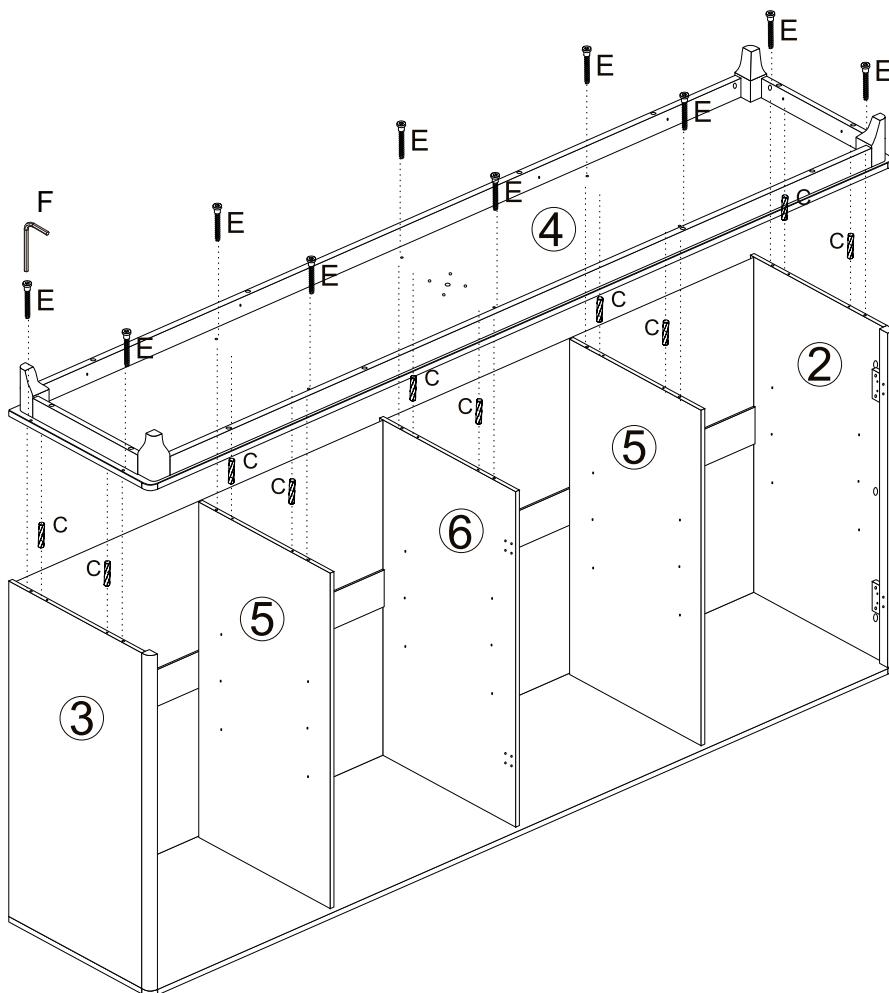

Hardware Needed		
C		x10
E		x10
F		x1

STEP 12:

- Secure the Support Leg Pad N onto Bottom by hardware O
- Secure base frame by hardware S.

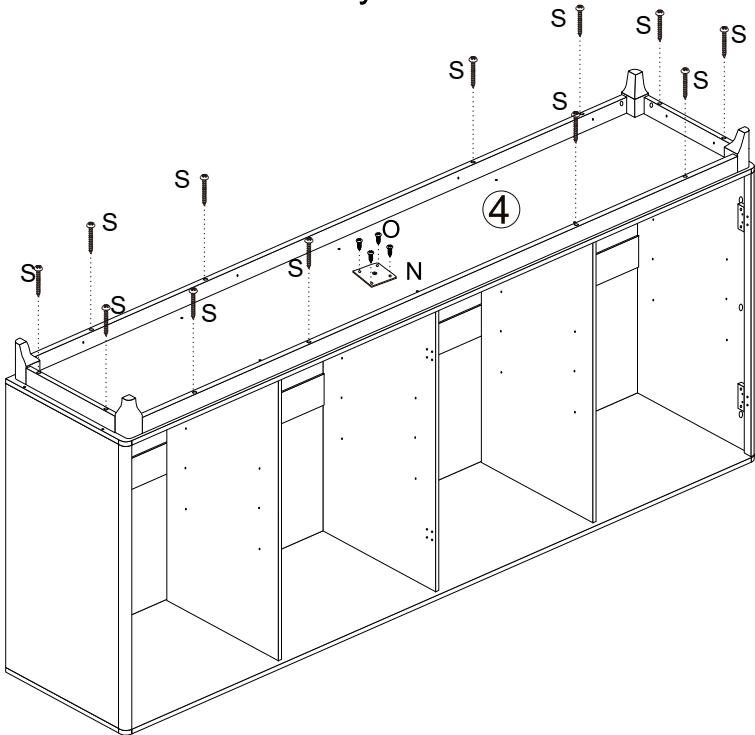


Hardware Needed

O		x4
N		x1
S		x12

STEP 13:

- Attach the Support Leg 15 and Adjustable Leveller T.
- Assemble the Metal Brackets K by hardware L

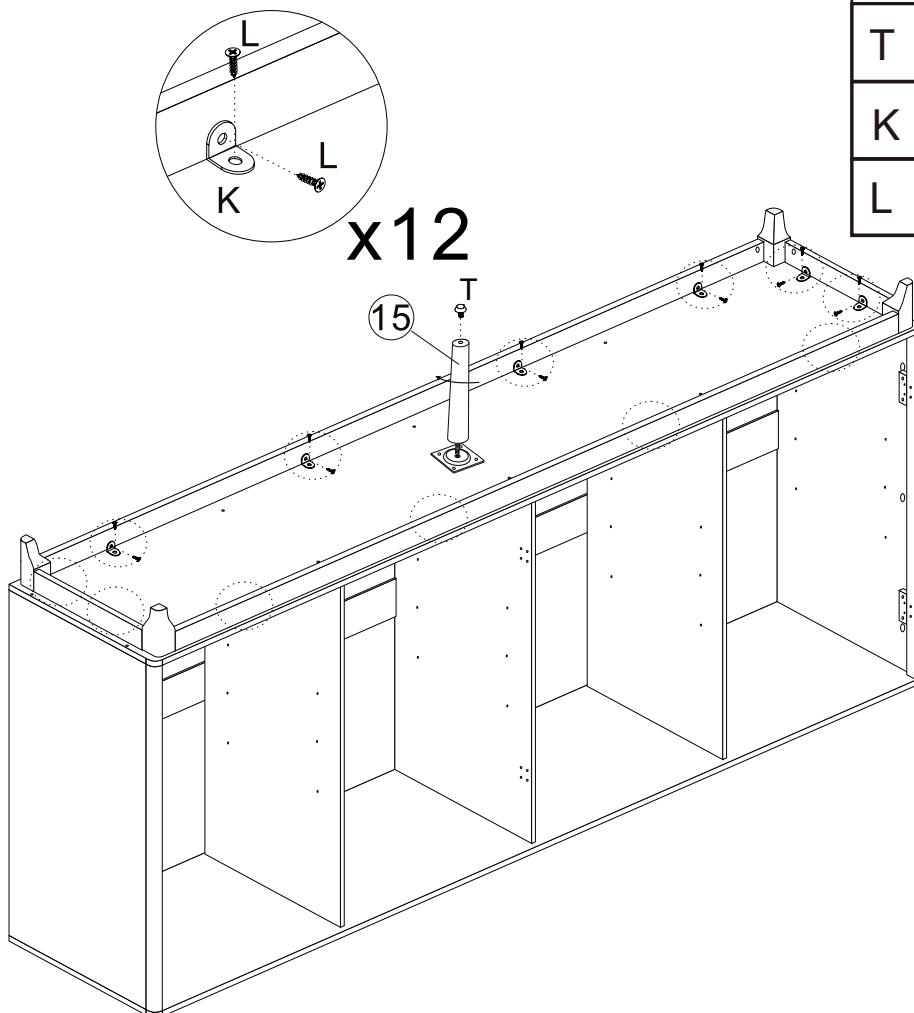

Hardware Needed


T		x1
K		x12
L		x24

STEP 14:

- Attach hardware J onto back.

Hardware Needed




J			x16
---	--	--	-----

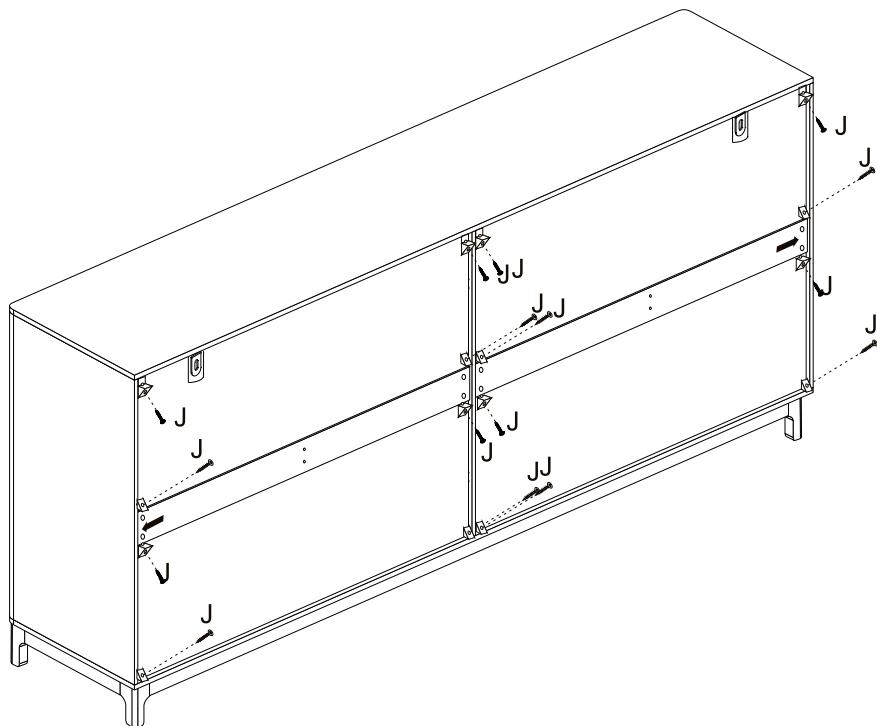

STEP 15:

- Attach Handle H on Door 16,17.
- Secure the Hinge M on Door 16,17 by hardware G

x4

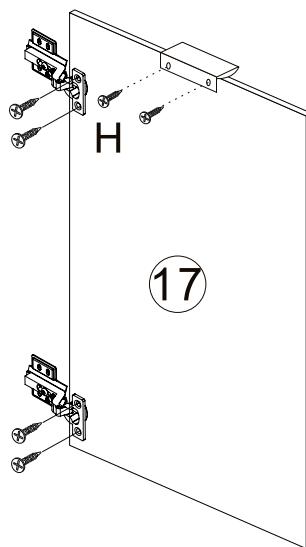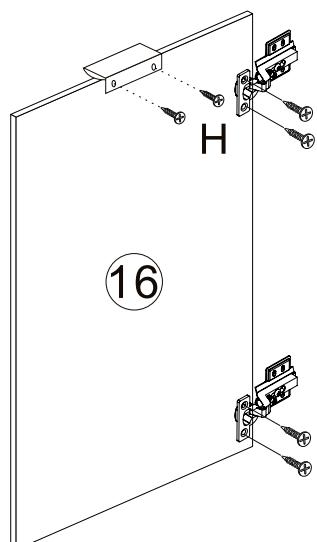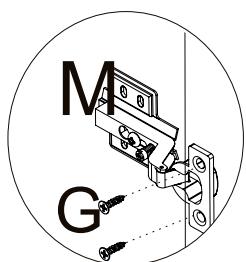


Hardware Needed

H			x2
M			x4
G			x8

STEP 16:

Attach Handle H on Door 20,21.

Secure the Hinge P on Door 20,21 by hardware G

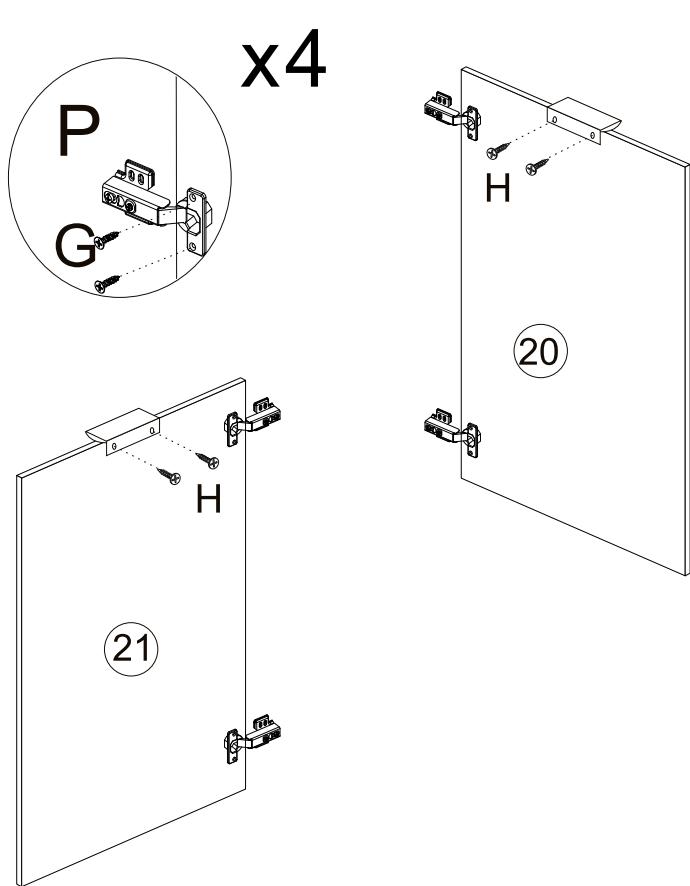

Hardware Needed


H		x2
P		x4
G		x8

STEP 17:

- Attach Shelf Brackets Q.

Hardware Needed


Q		x16
---	--	-----

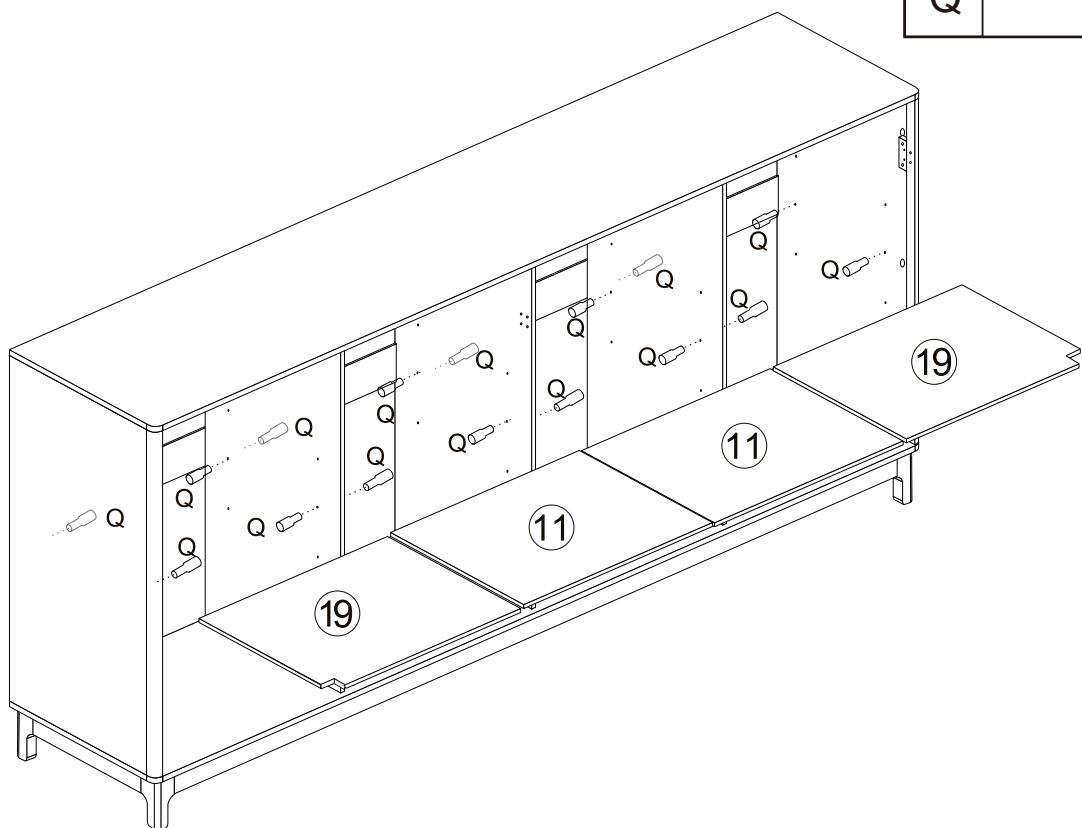

STEP 18:

- Assemble the Doors 16,17,20,21 by hardware G.


Hardware Needed

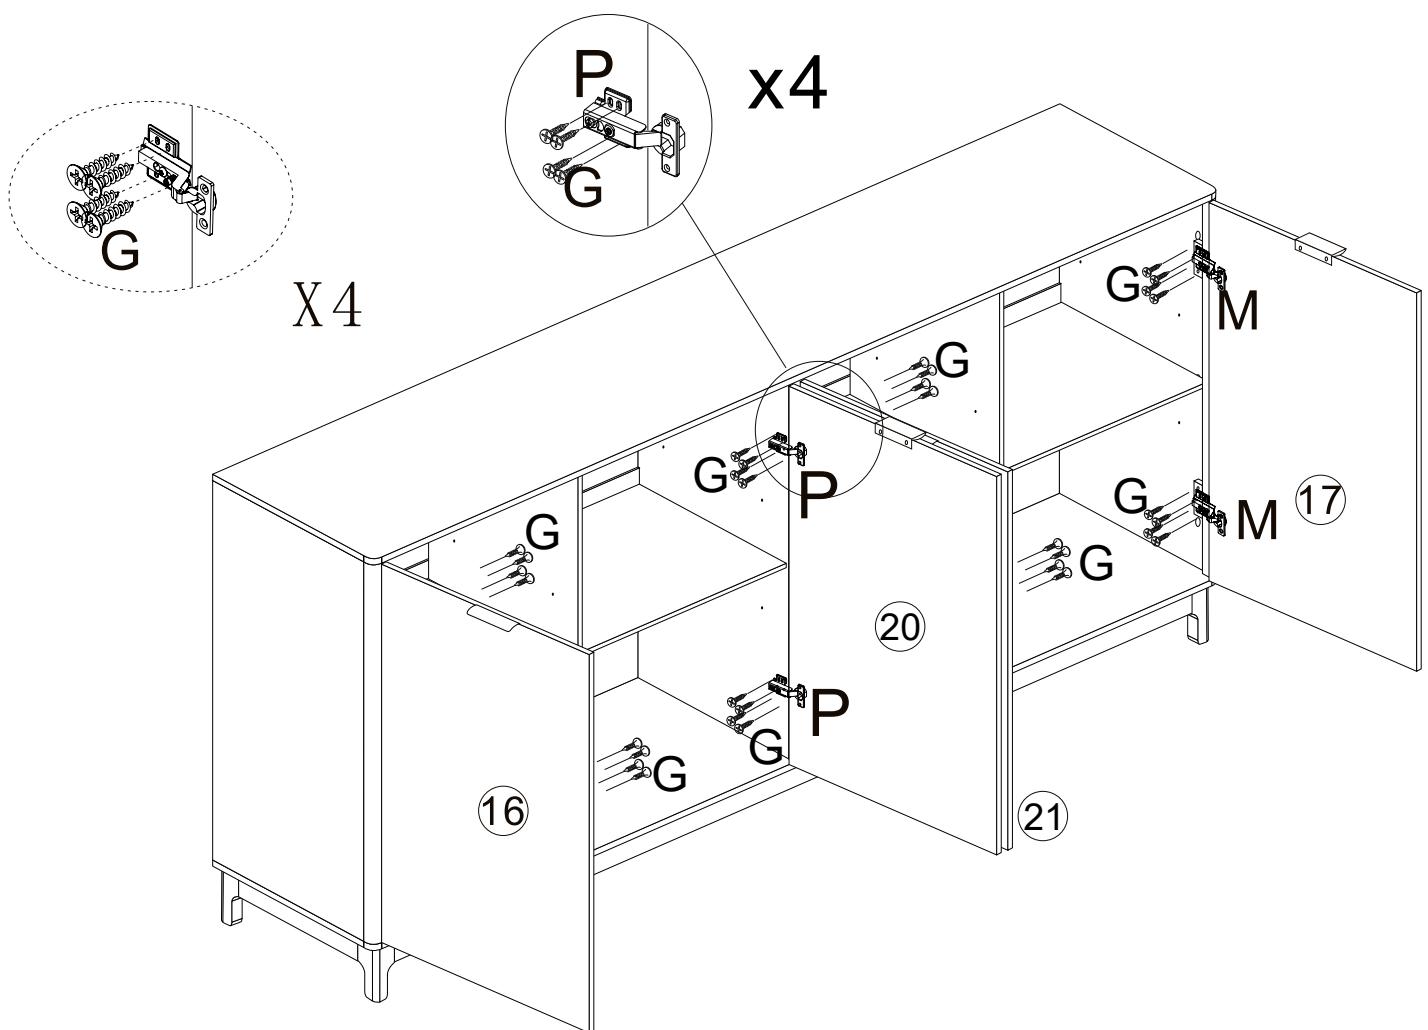


SAFETY BRACKETS INSTRUCTIONS

STEP 19:

- Secure the safety bracket onto wall by hardware D,V

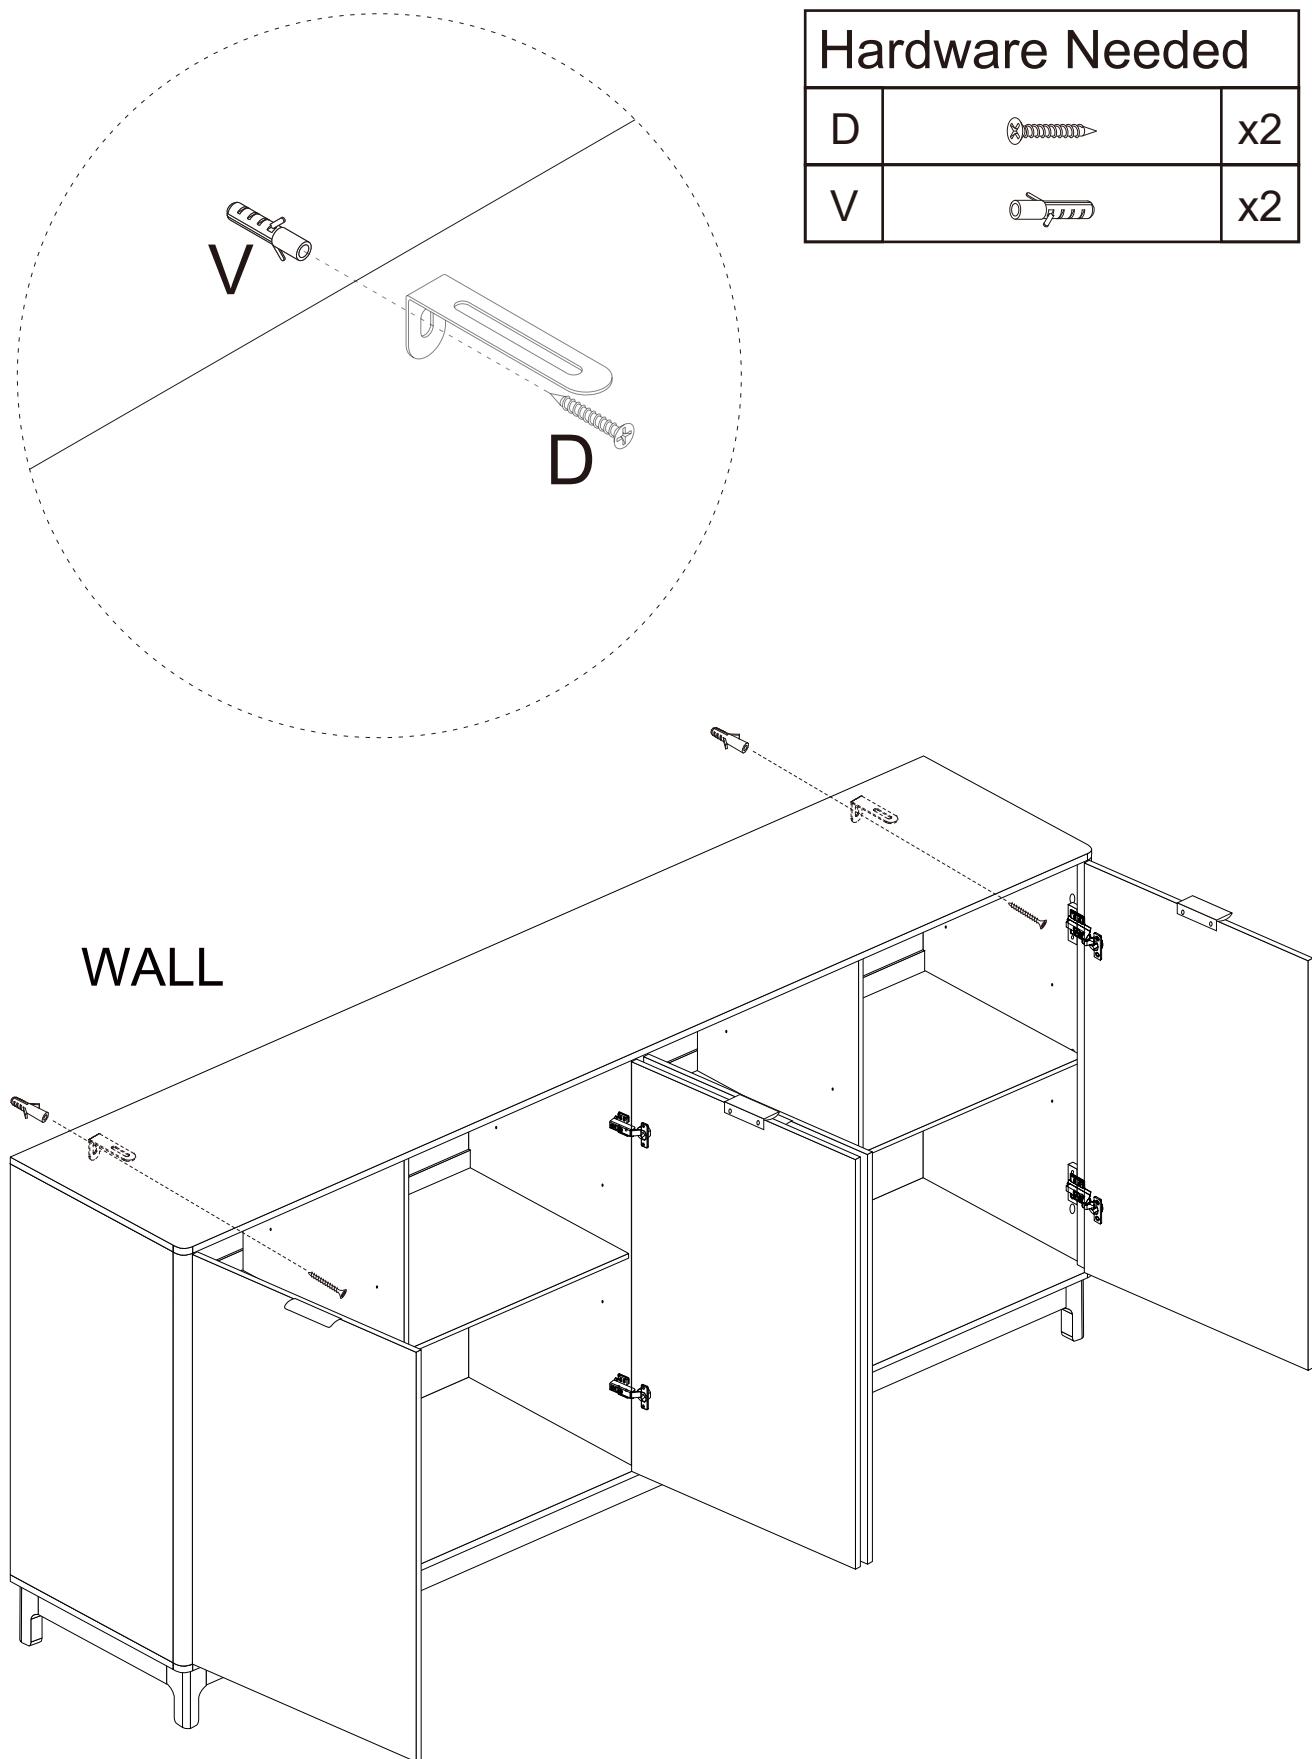

Finished

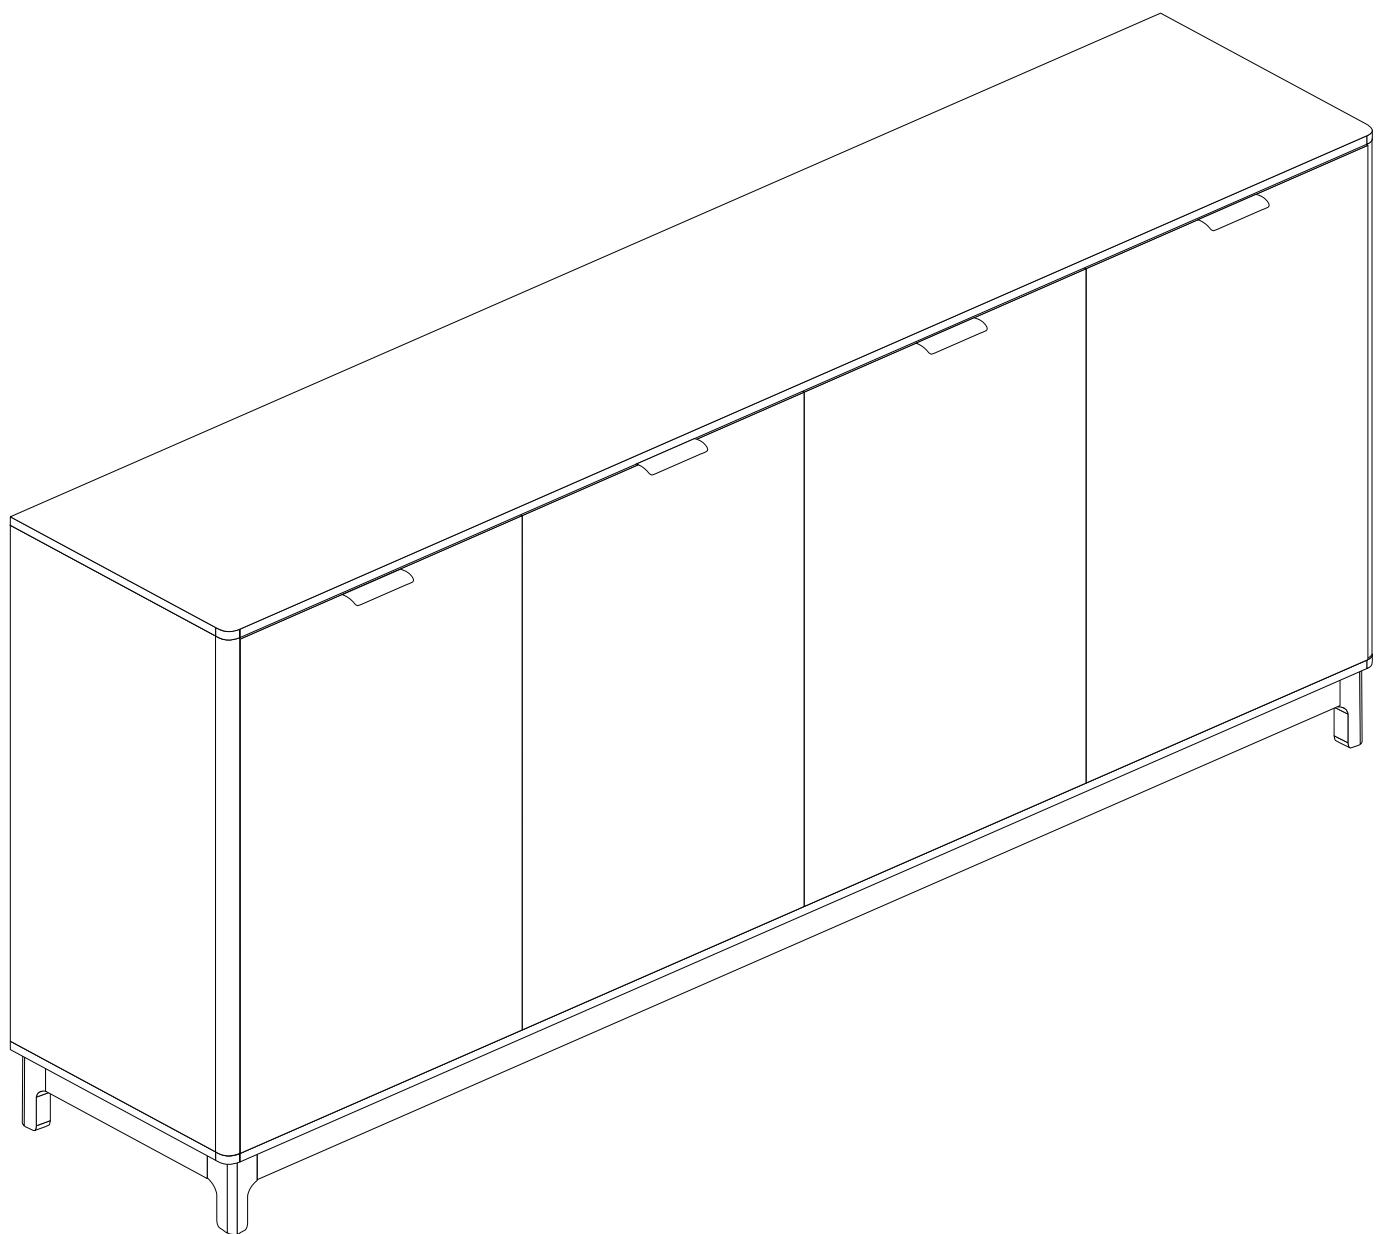

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.