



**ASSEMBLY INSTRUCTION**  
**SHAFFER**  
**4 DOOR ENTERTAINMENT UNIT**  
ITEM CODE 83488

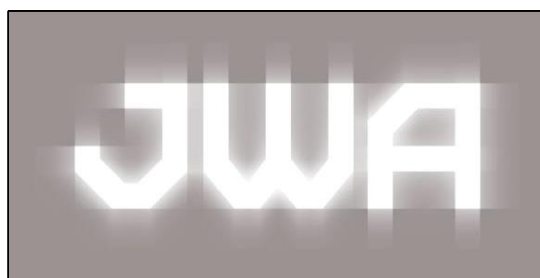

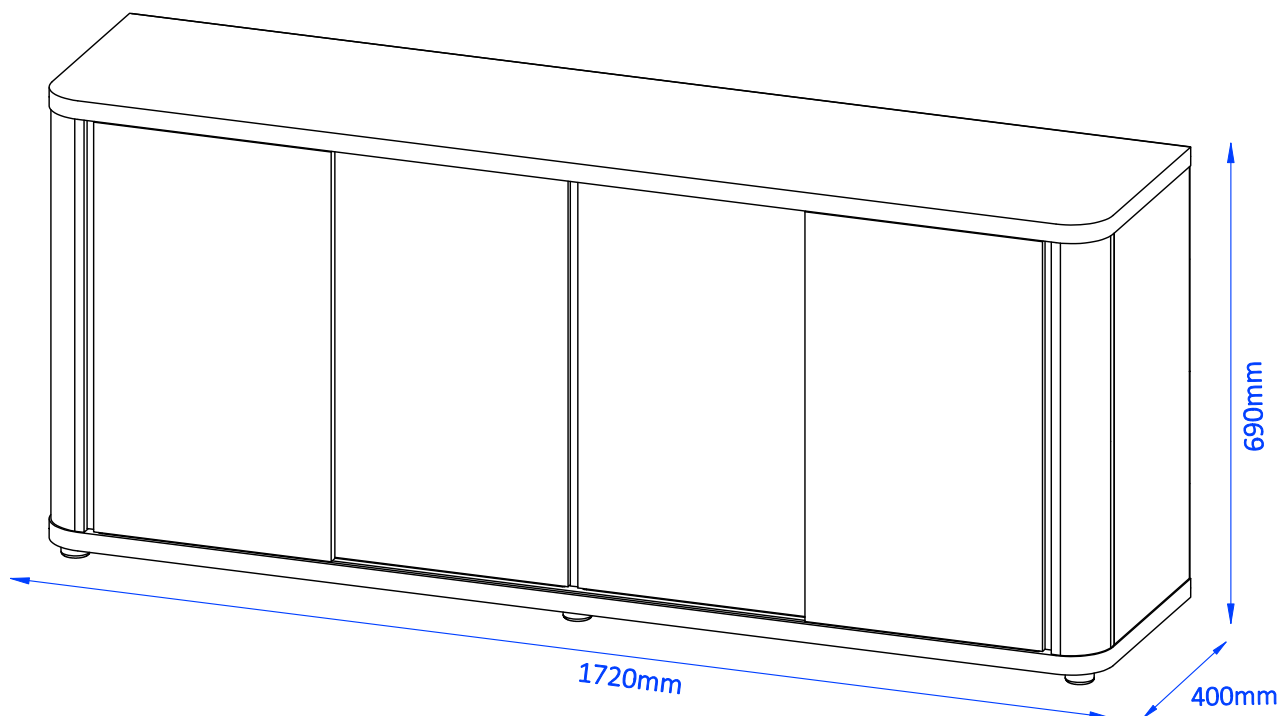








Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia  
For any assistance with assembly or for missing parts please refer to your receipt

## PRE-ASSEMBLY PREPARATION










### Before you start:

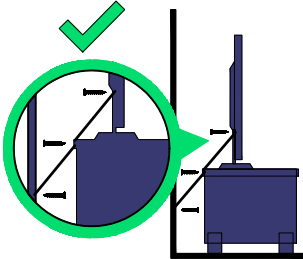1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

	
ALLOW 60 MINUTES	PEOPLE REQUIRED
	
	
ADDITIONAL TOOL REQUIRED	


 <b>WARNING</b>		
		<p><b>Children have died from furniture tipover.</b></p> <ul style="list-style-type: none"><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• ALWAYS secure your television with an anchor device or mount the television on a wall.</li></ul> <p><b>This is a permanent label. Do not remove!</b></p>

# PARTS LIST

<b>A X 24 SETS</b>  <b>A1 A2 A3</b> <b>MINIFIX</b>	<b>B X 28</b>  <b>WOOD DOWEL</b> <b>M8 X 30</b>	<b>C X 1</b>  <b>ALLEN KEY</b> <b>M4</b>	<b>D X 32</b>  <b>C.B SCREW</b> <b>M3 X 12MM</b>	<b>E X 6</b>  <b>C.B SCREW</b> <b>M4 X 30MM</b>
<b>F X 16</b>  <b>METAL SHELF</b> <b>SUPPORT</b>	<b>G X 8 SETS</b>  <b>G1 G2</b> <b>PLASTIC ROLLER GUIDE</b>	<b>H X 36</b>  <b>NAIL</b> <b>5/8"</b>	<b>I X 6</b>  <b>SOFA LEG</b> <b>25MM</b>	


1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L/R)	2 PCS
6	CENTER PANEL	1 PC
7	BACK PANEL	1 PC

8	SHELF PANEL (L/R)	4 PCS
9	DOOR PANEL (L)	1 PC
10	DOOR PANEL (R)	1 PC
11	DOOR PANEL (C)	2 PCS
12	LEG CORNER (L)	1 PC
13	LEG CORNER (R)	1 PC

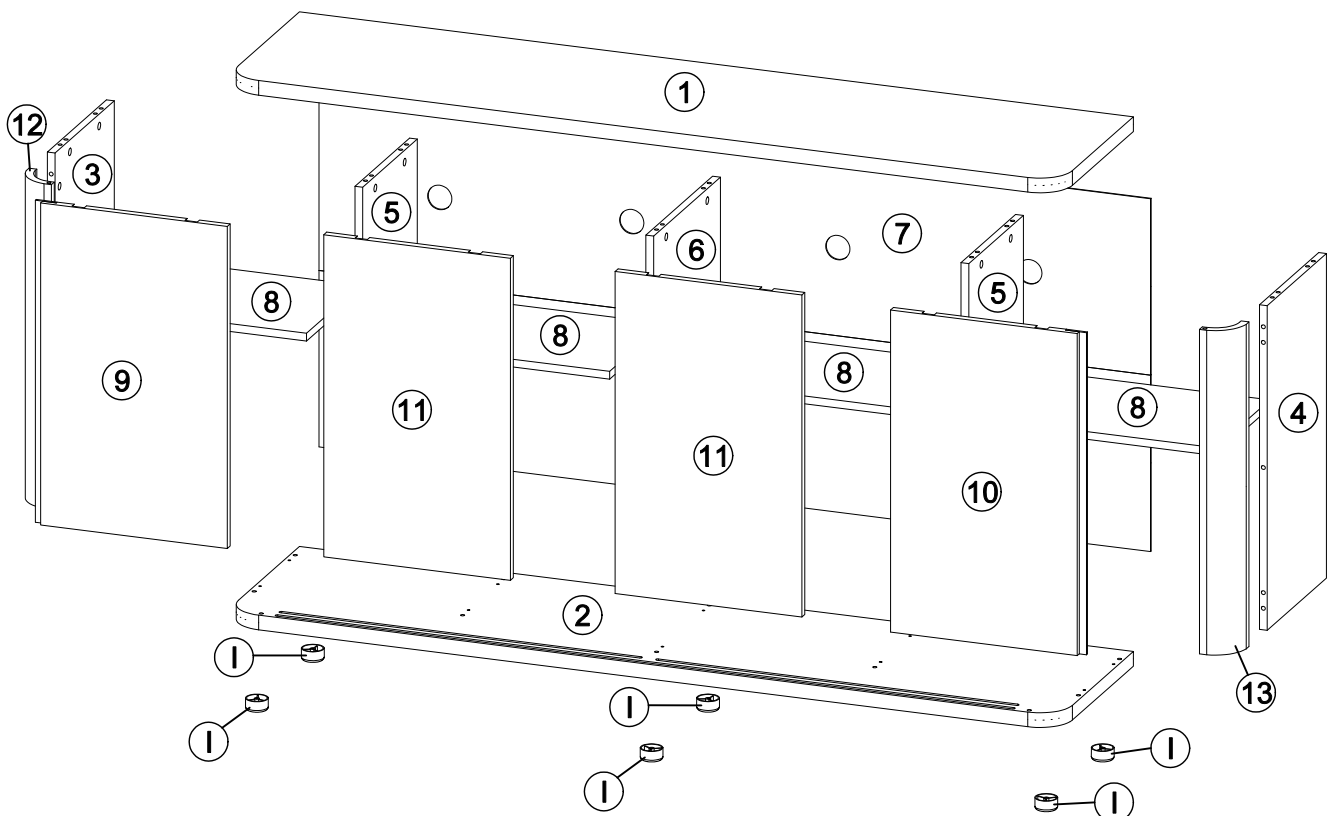


### STEP 1:

- Fix hardware I onto panel (2) by using hardware E.  
(Repeat 6 times.)

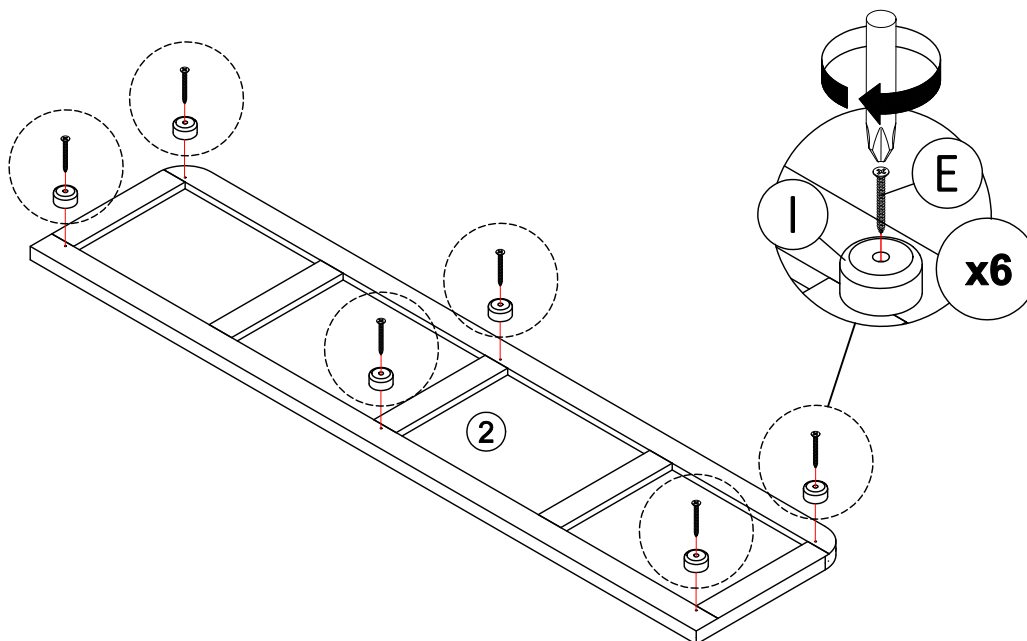


### STEP 2:

- Insert hardware A1 onto panel (3), (4), (5) and (6).  
(Repeat 24 times.)
- Insert hardware A2 onto panel (1), (2), (12) and (13).  
(Repeat 24 times.)
- Insert hardware B onto panel (3), (4), (5), (6), (12) and (13).  
(Repeat 28 times.)

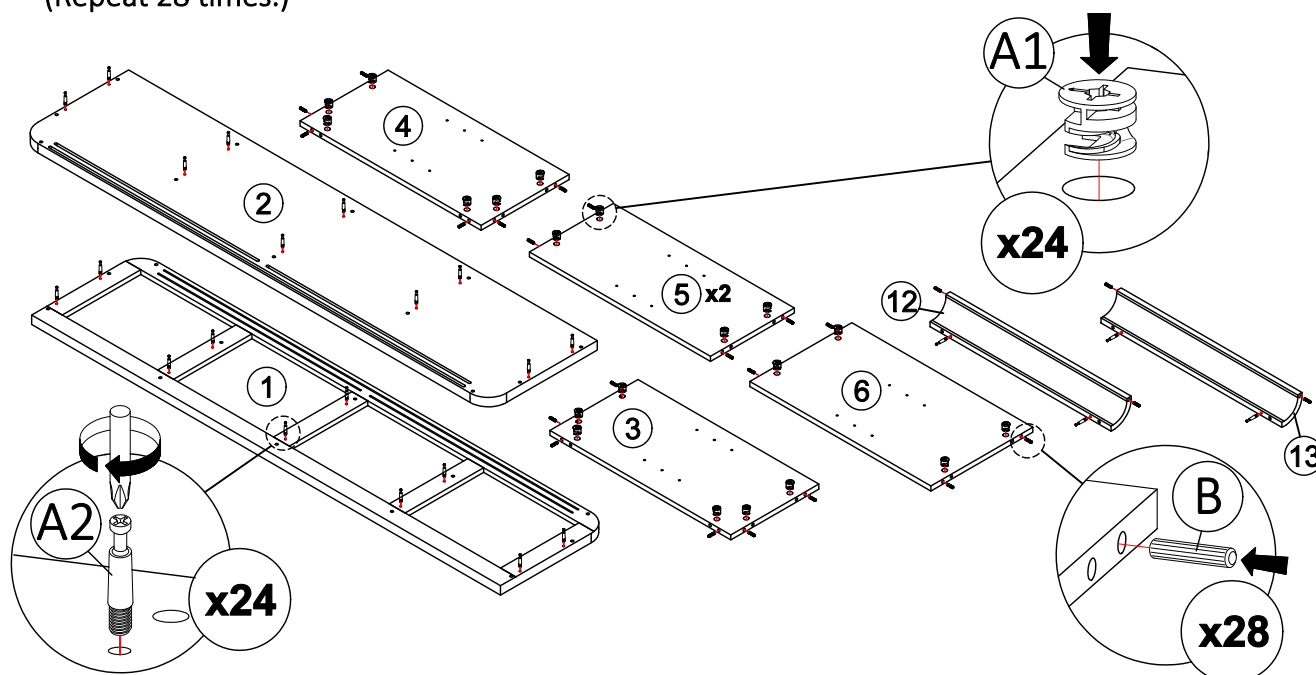


### STEP 3:

- Attach panel (3) to panel (12) and panel (4) to panel (14).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.  
(Repeat 4 times.)

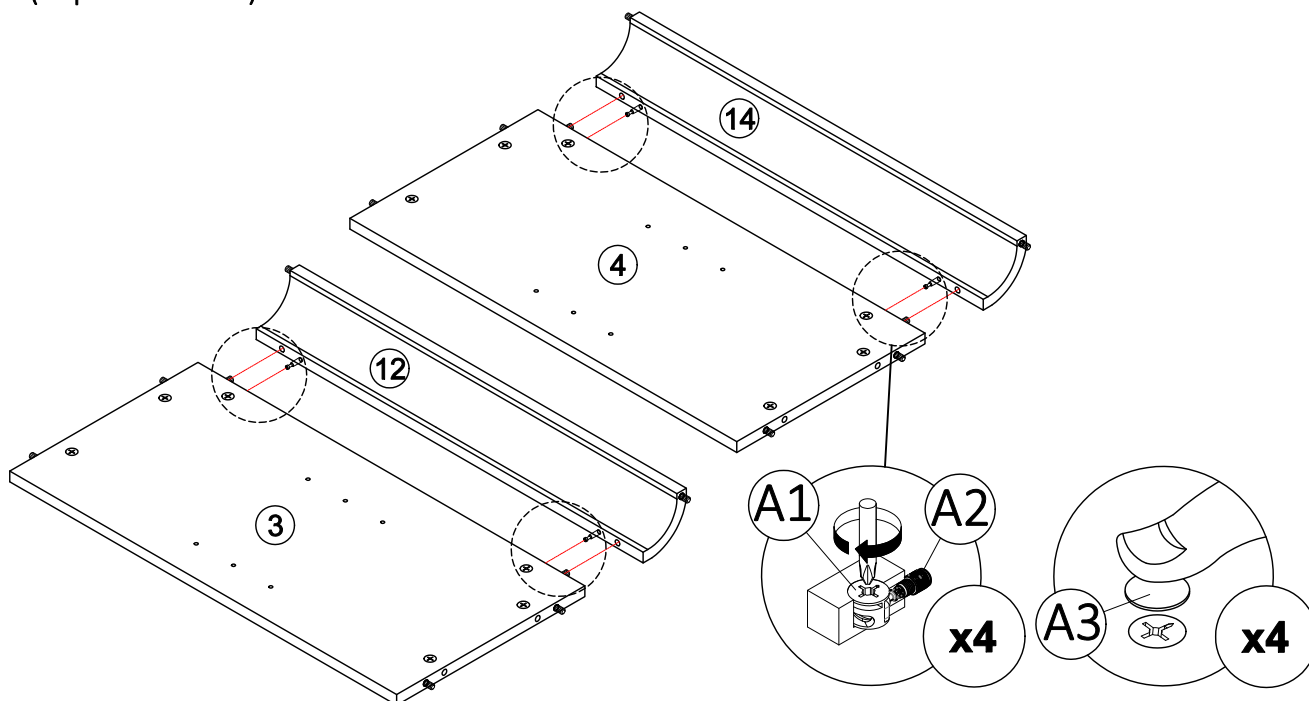


### STEP 4:

- Attach panel (3), (4), (5) and (6) to panel (2)
- Rotate all A1 until tight.
- Apply A3 onto all A1.  
(Repeat 10 times.)

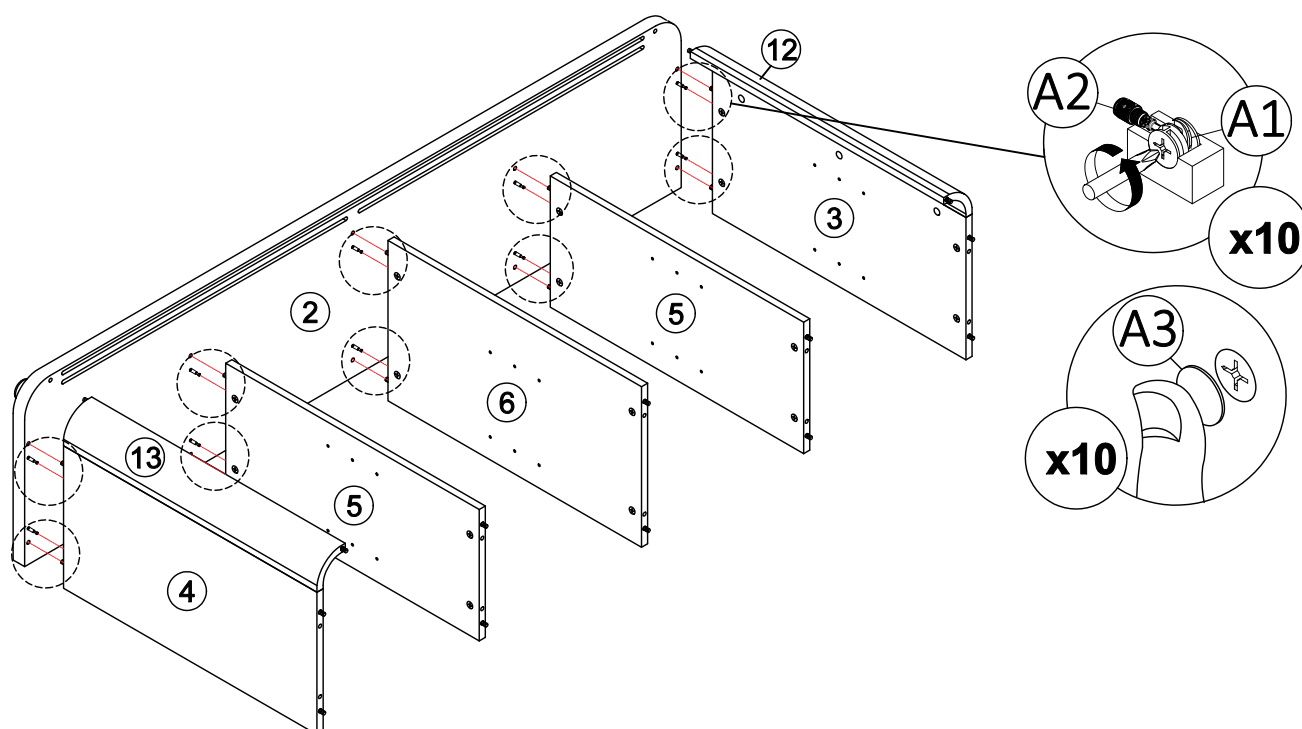


### STEP 5:

- Attach panel (3), (4), (5) and (6) to panel (1).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.  
(Repeat 10 times.)

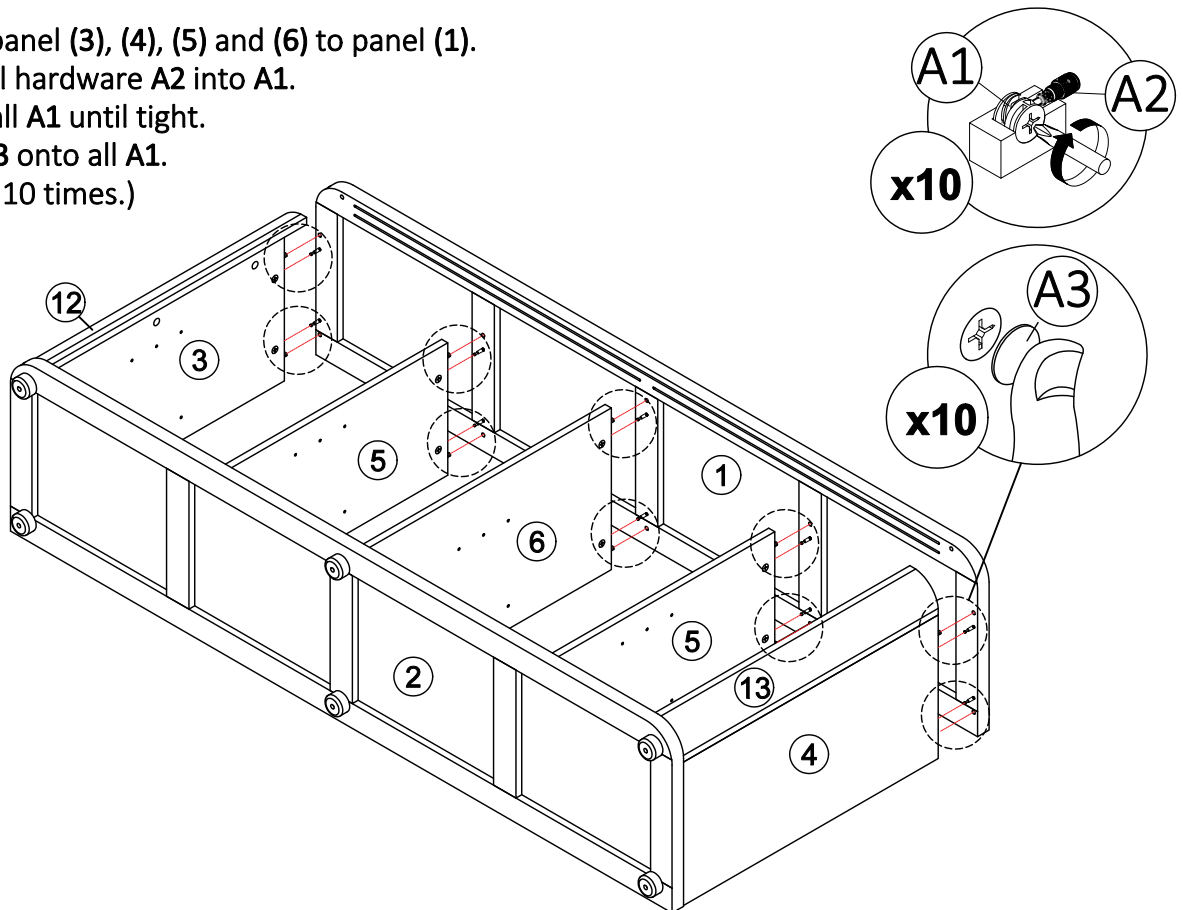


### STEP 6:

- Assemble panel (7) to entire body with hardware H.
- (Repeat 36 times.)

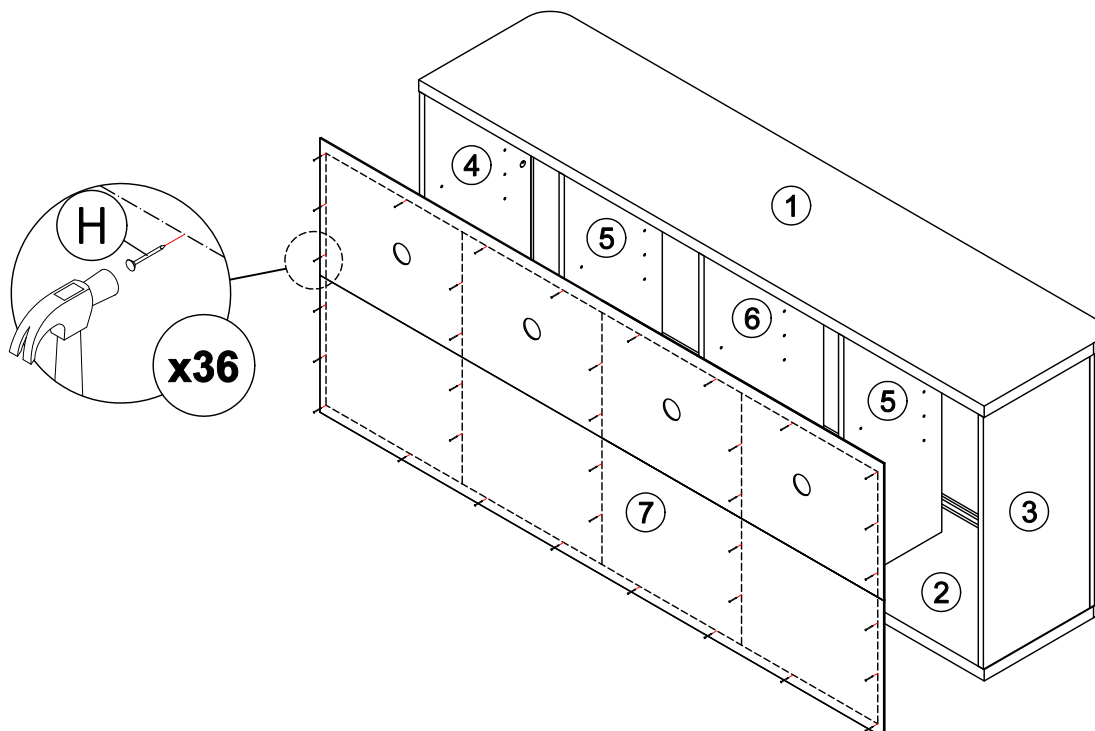


### STEP 7:

-Insert hardware F into mounting positions on panel (3), (4), (5) and (6) by hand.  
(Repeat 16 times.)

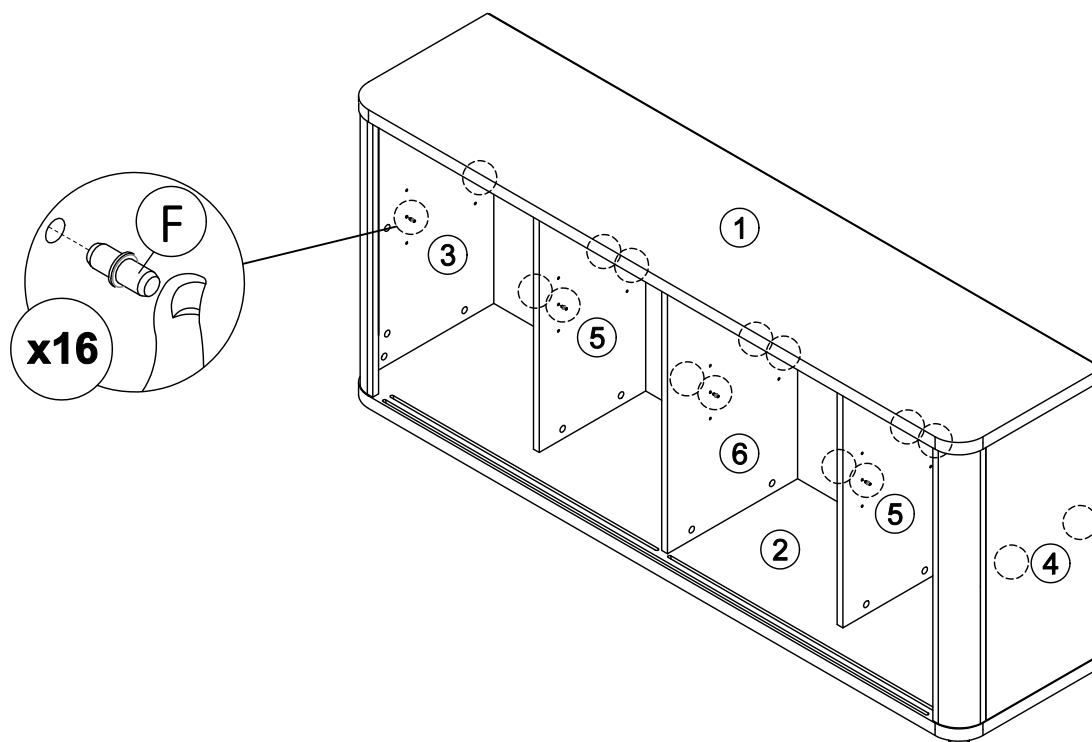


### STEP 8:

Assemble the panel (8) into between panel (3) and (5), (4) and (5), (5) and (6).  
(Repeat 4 times.)

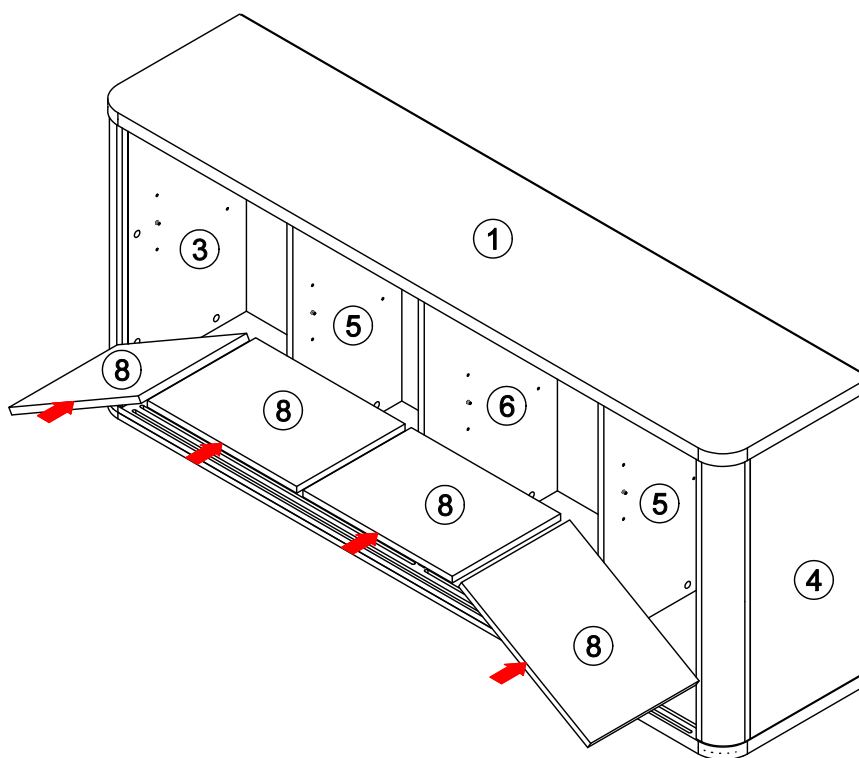


### STEP 9:

-Fix hardware G1 and G2 onto panel (9), (10) and (11) by using hardware D.  
(Repeat 32 times.)

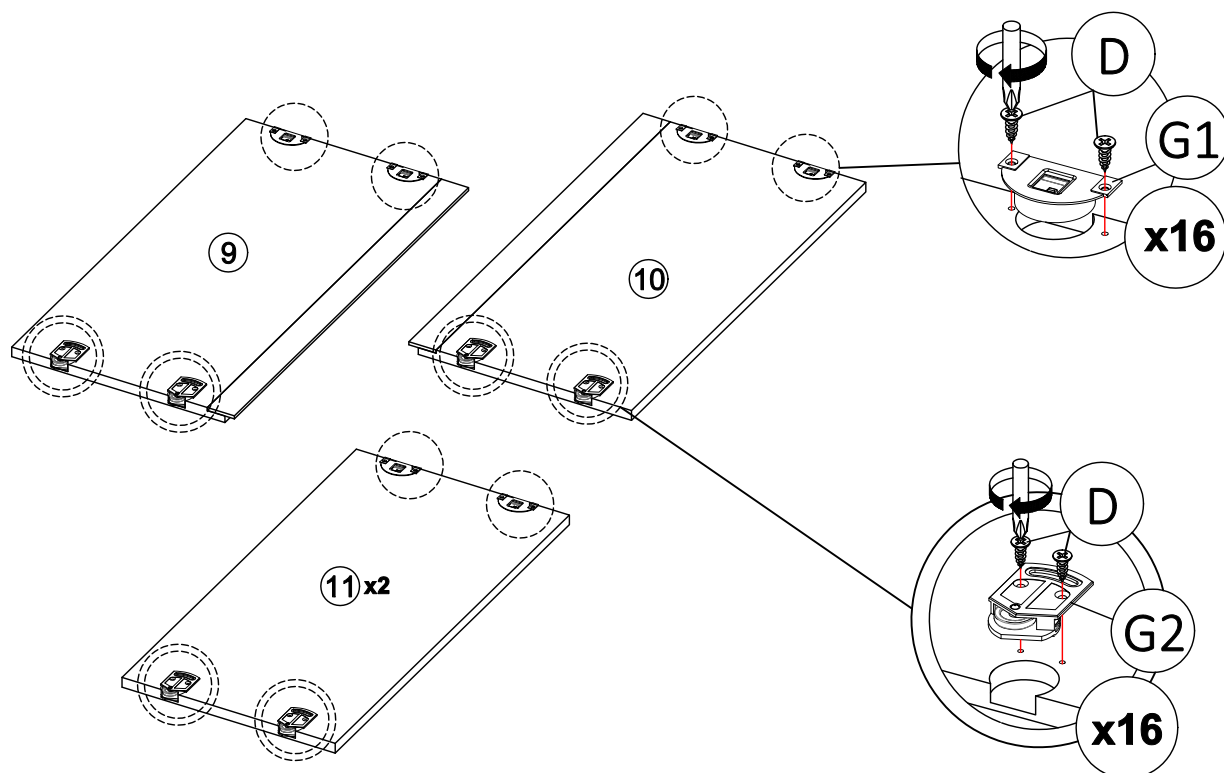

### STEP 10:


- Put the panel (11) in place along the slot at panel (1) and (2).

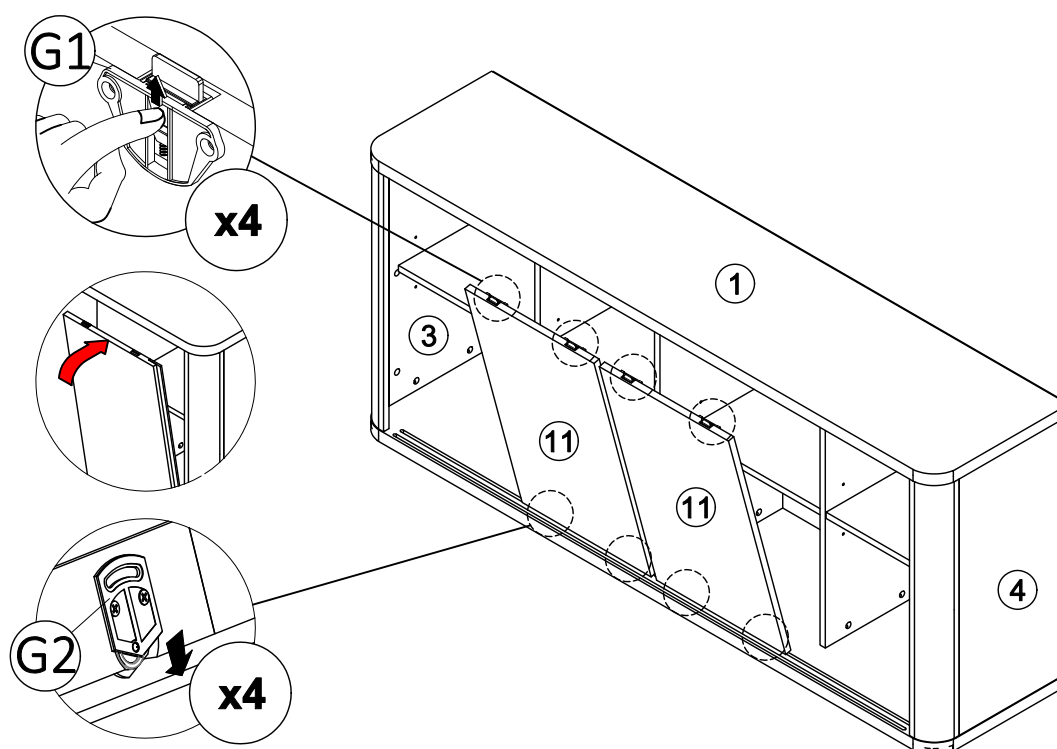




### STEP 11:

- Put the panel (9) and (10) in place along the slot at panel (1) and (2).

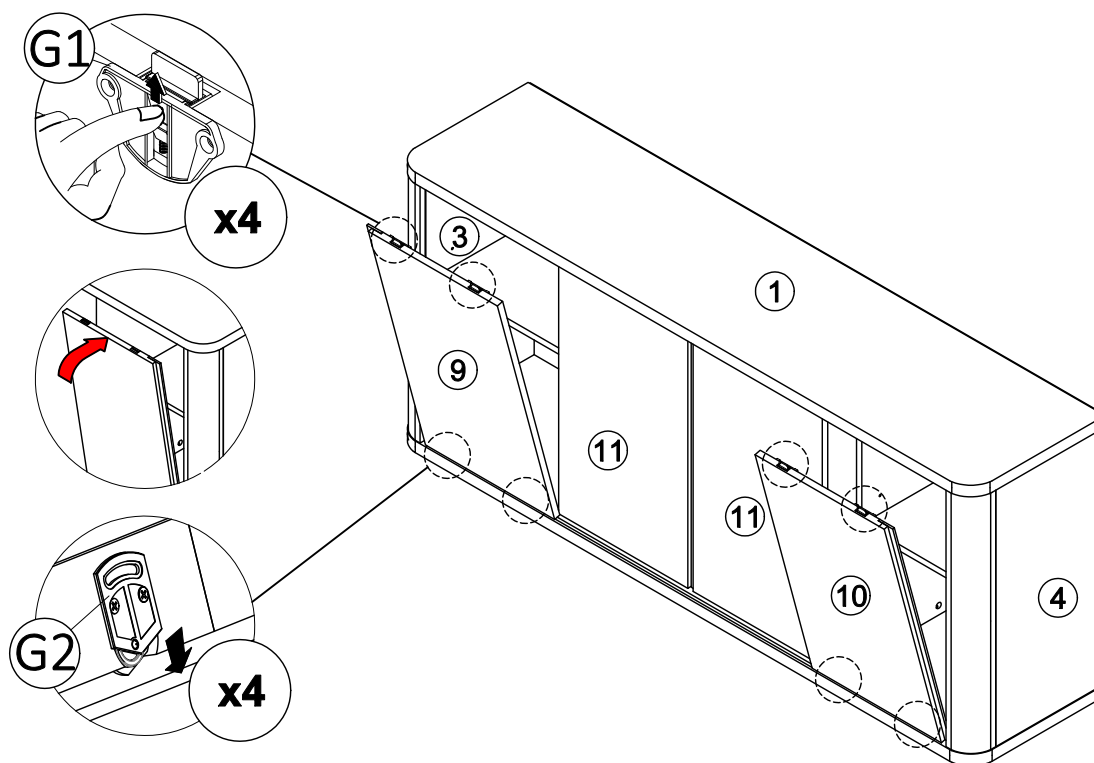

-ASSEMBLY IS COMPLETE

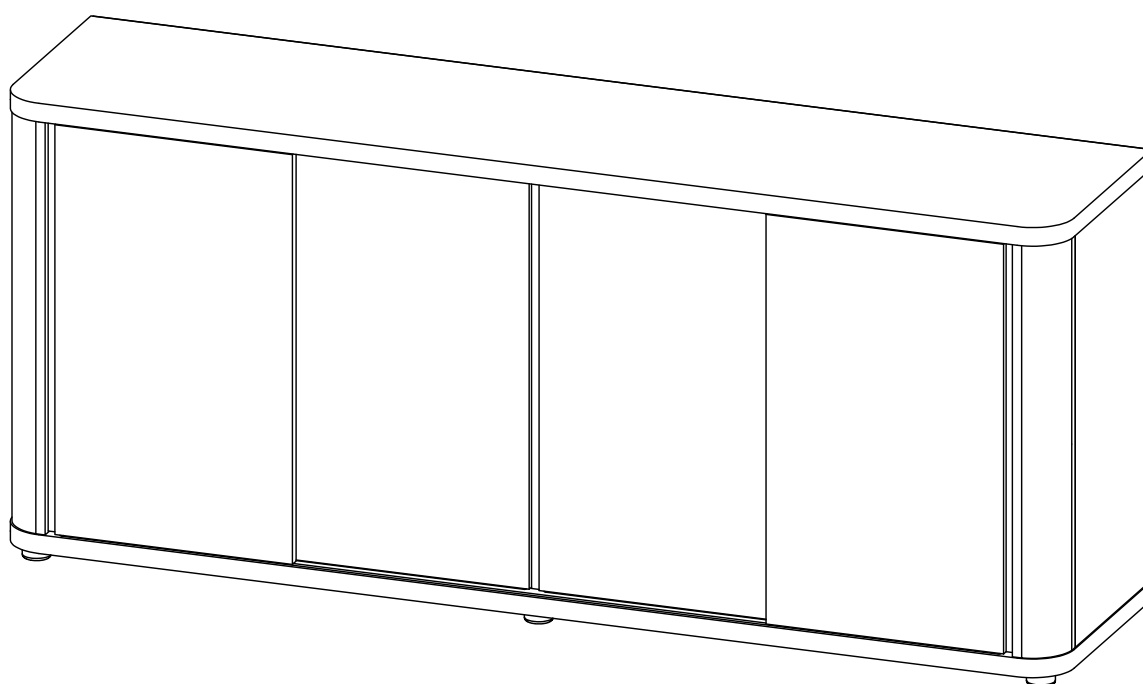

## **SAFETY BRACKETS INSTRUCTIONS**


### **IF YOUR PRODUCT REQUIRES THE ADDITION OF SAFETY BRACKETS OR “TIPPING KITS” PLEASE INCLUDE THESE INSTRUCTIONS BELOW.**

1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.


#### **HARDWARE**



**Metal Bracket  
X4**




**Cable Tie  
X2**



**Wall Screw  
X2**



**Pan Head Screw  
X2**

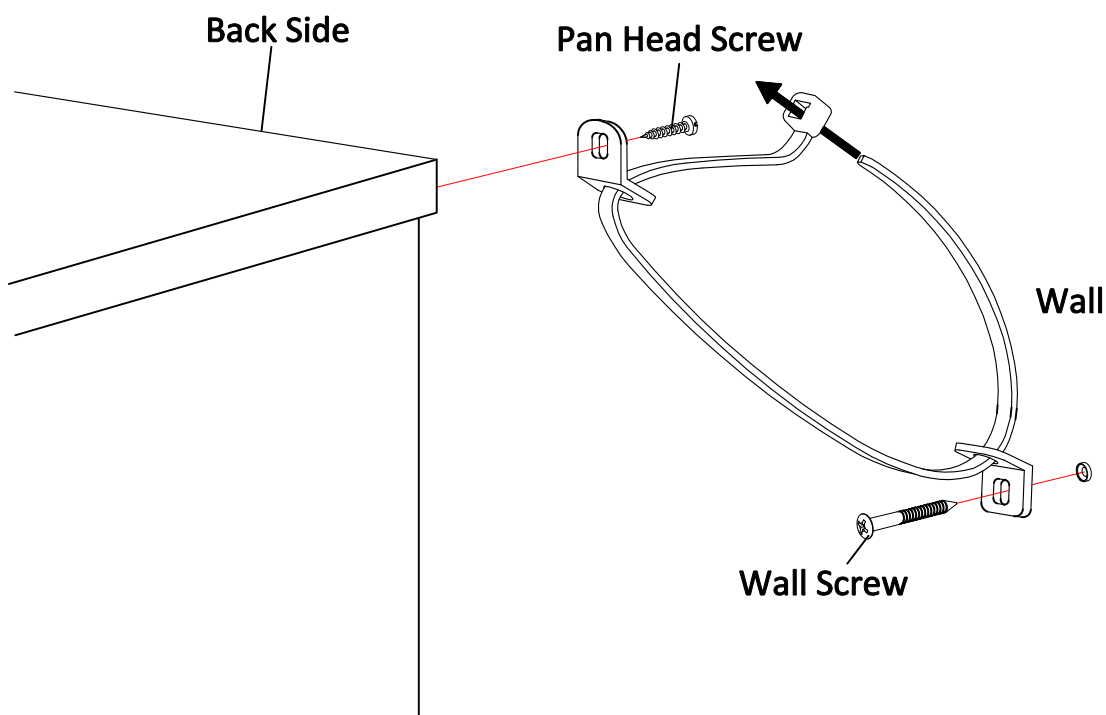

## **CARE AND MAINTENANCE**

To protect your furniture, we suggest the following :

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under window.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause server finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void.