
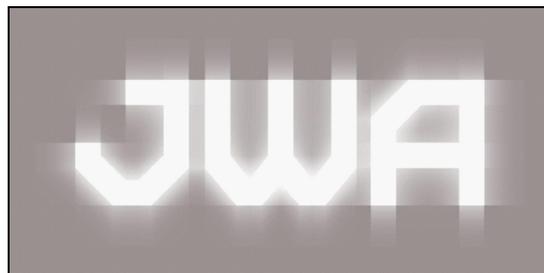


# ASSEMBLY INSTRUCTION

## RODGERS

### 3 DOOR BUFFET

ITEM CODE 84258/84260/86822

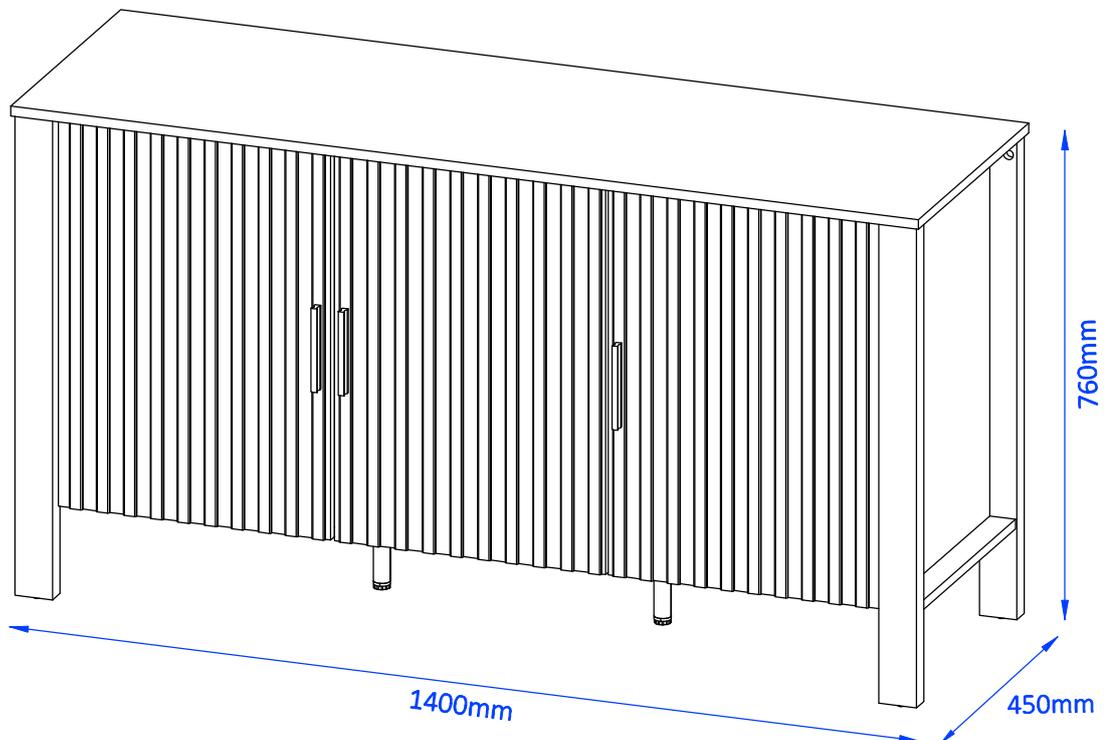



Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia  
For any assistance with assembly or for missing parts please refer to your receipt

# PRE-ASSEMBLY PREPARATION








## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

			
<b>ALLOW 60 MINUTES</b>	<b>PEOPLE REQUIRED</b>		
			
<b>ADDITIONAL TOOL REQUIRED</b>			

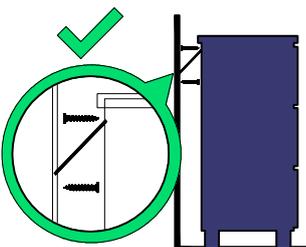 <b>WARNING</b>		
		<p><b>Children have died from furniture tipover.</b></p> <ul style="list-style-type: none"><li>• ALWAYS secure it with an anchor device.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heavy items down low</li></ul> <p><b>NEVER put a TV on this furniture</b> </p> <p><b>This is a permanent label. Do not remove!</b></p>


# PARTS LIST
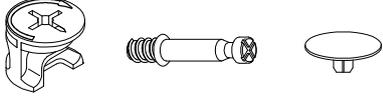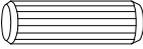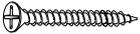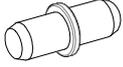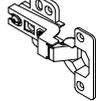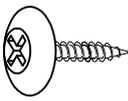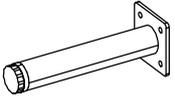
<p><b>A X 20 SETS</b></p>  <p>A1      A2      A3</p> <p><b>MINIFIX</b></p>	<p><b>B X 32</b></p>  <p><b>WOOD DOWEL</b> M8 X 30</p>	<p><b>C X 8</b></p>  <p><b>CSK SCREW</b> M6 X 50</p>	<p><b>D X 1</b></p>  <p><b>ALLEN KEY</b> M4</p>	<p><b>E X 36</b></p>  <p><b>C.B SCREW</b> M3.5 X 16MM</p>
<p><b>F X 6</b></p>  <p><b>C.B SCREW</b> M4 X 30MM</p>	<p><b>G X 12</b></p>  <p><b>METAL SHELF</b> <b>SUPPORT</b></p>	<p><b>H X 12 SETS</b></p>  <p>H1      H2</p> <p><b>STUB 192 + TAPPING SCREW</b> M4 X 3/4"</p>	<p><b>I X 4</b></p>  <p><b>NAIL LEG</b> 5/8"</p>	<p><b>J X 6</b></p>  <p><b>S/C HINGES</b> 7/8"</p>
<p><b>K X 3</b></p>  <p><b>PVC HANDLE</b> 7050.96</p>	<p><b>L X 8</b></p>  <p><b>H SCREW + WF9.5</b> M4 X 16MM</p>	<p><b>M X 2</b></p>  <p><b>CENTER LEG</b> 50 X 50 X 145MM</p>		

# PARTS LIST


1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	BACK PANEL (L)	2 PCS

8	BACK PANEL (R)	1 PC
9	SHELF PANEL (L)	2 PCS
10	SHELF PANEL (R)	1 PC
11	CABINET LEG (L)	2 PCS
12	CABINET LEG (R)	2 PCS
13	DOOR PANEL (L/R)	2 PCS
14	DOOR PANEL (CTR)	1 PC

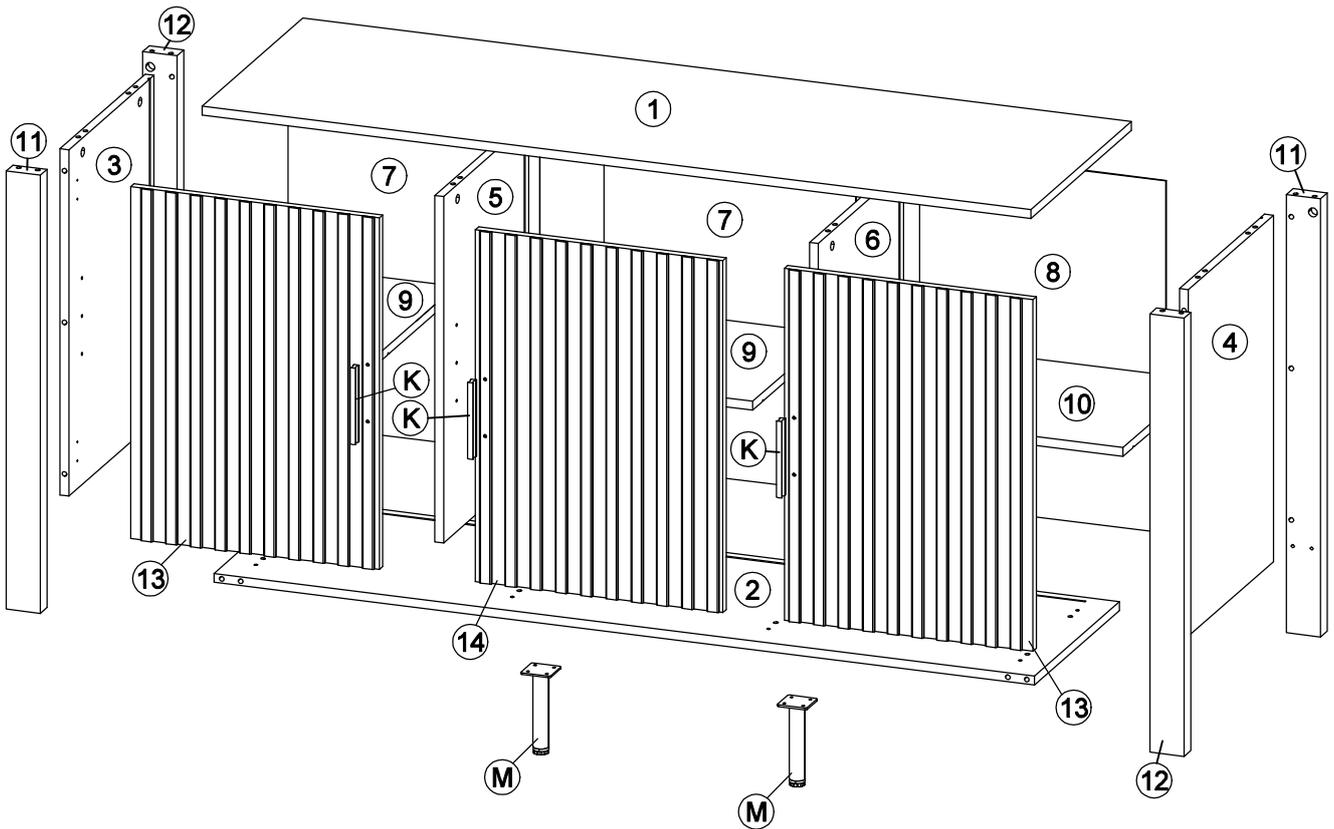


**STEP 1:**

- Insert hardware A1 onto panel (2).  
(Repeat 8 times.)
- Insert hardware A2 onto panel (1).  
(Repeat 12 times.)

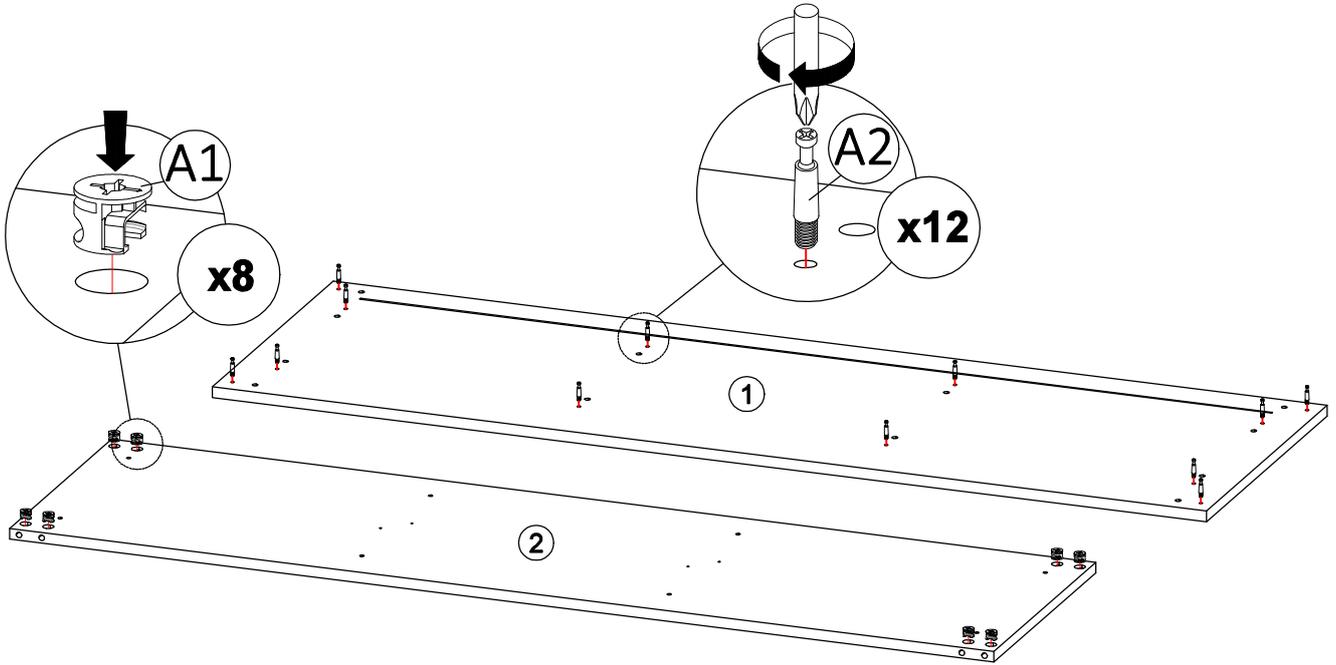


**STEP 2:**

- Insert hardware A1 onto panel (3), (4), (5), (6), (11) and (12).  
(Repeat 12 times.)
- Insert hardware A2 onto panel (11) and (12).  
(Repeat 8 times.)
- Insert hardware B onto panel (3), (4), (5), (6), (11) and (12).  
(Repeat 32 times.)

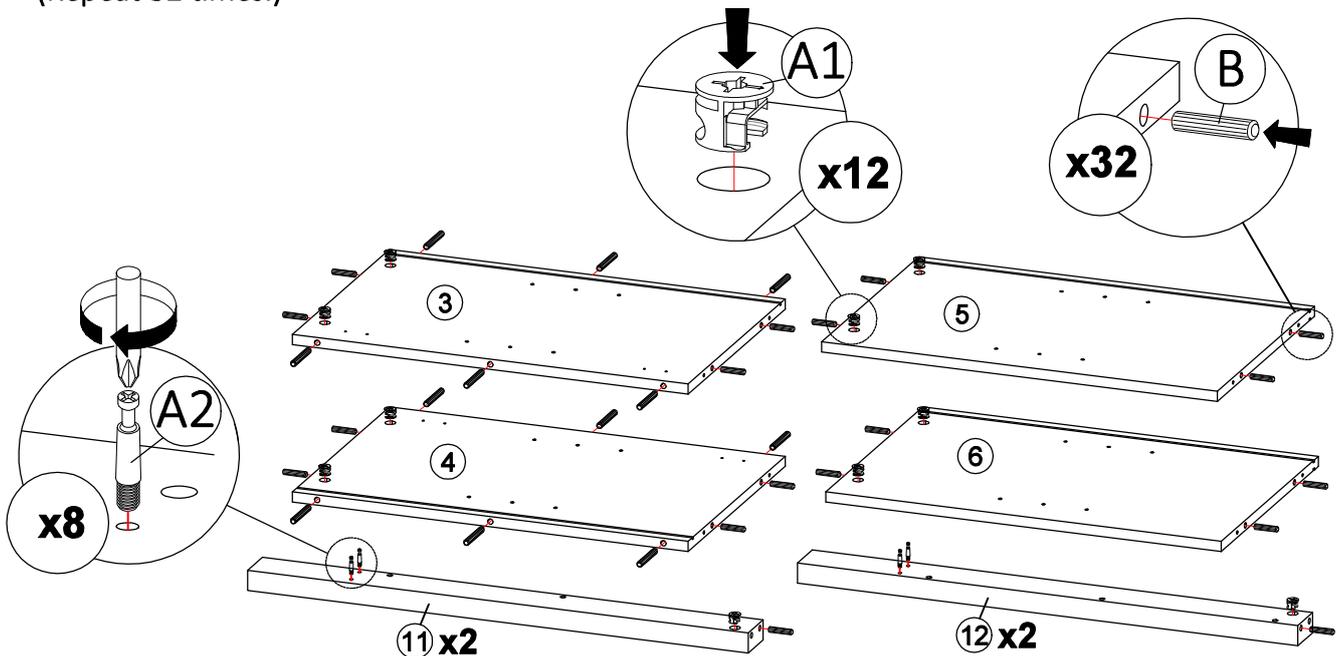


**STEP 3:**

- Assemble panel (3), (4), (5) and (6) to panel (2) with hardware C.
- (Repeat 8 times.)

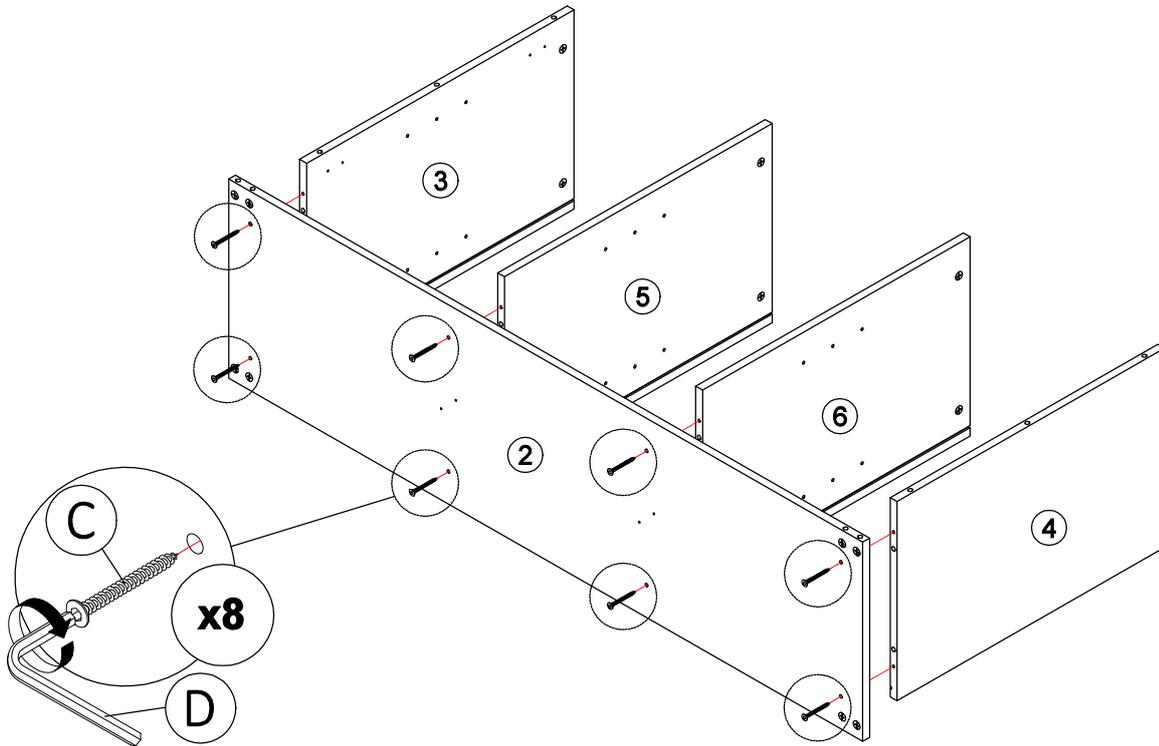


**STEP 4:**

- Attach panel (11) and (12) to panel (2), (3) and (4).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 8 times.)

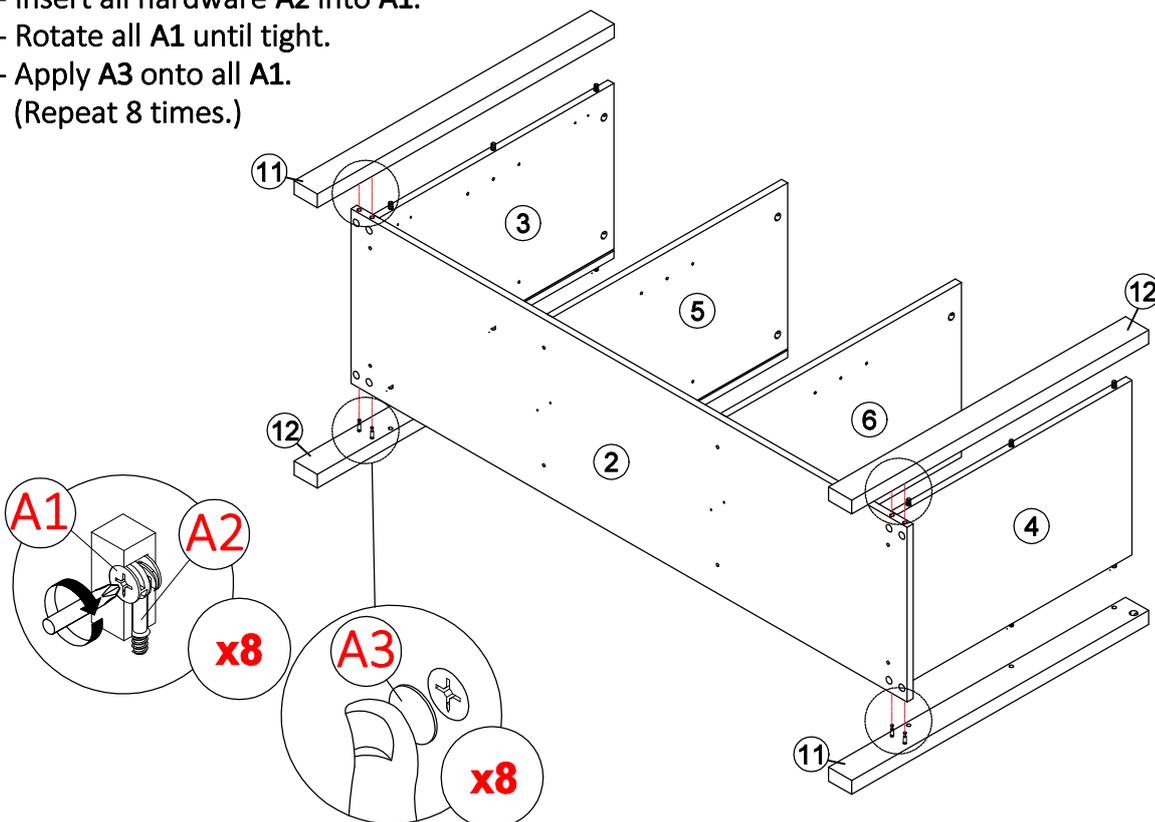


**STEP 5:**

- Insert panel (7) and (8) along the slot.  
(Repeat 3 times.)

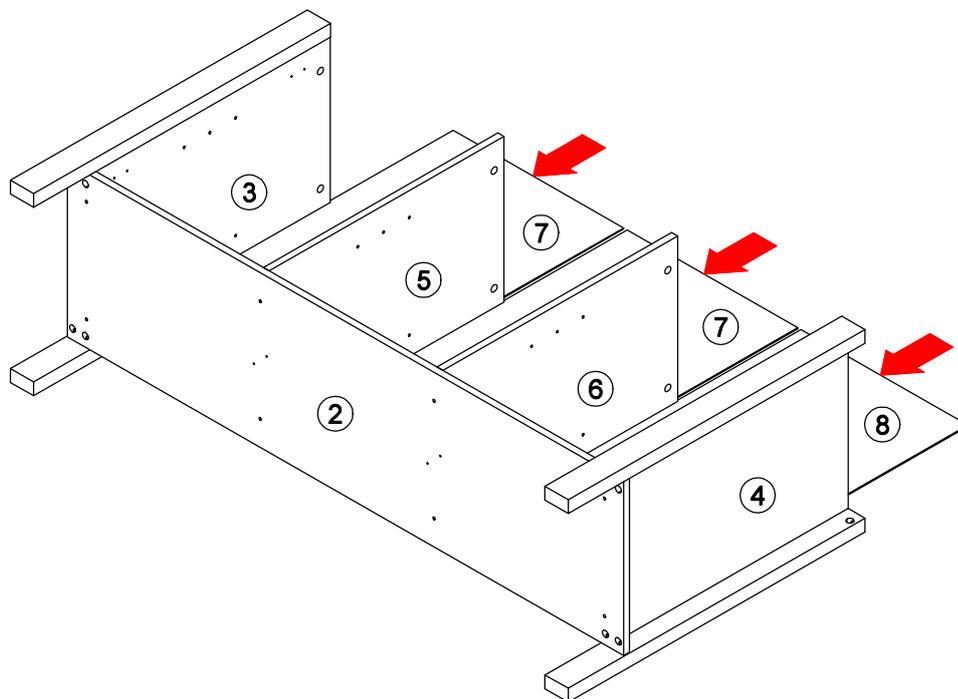


**STEP 6:**

- Attach panel (1) to panel (3), (4), (11) and (12).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.  
(Repeat 12 times.)

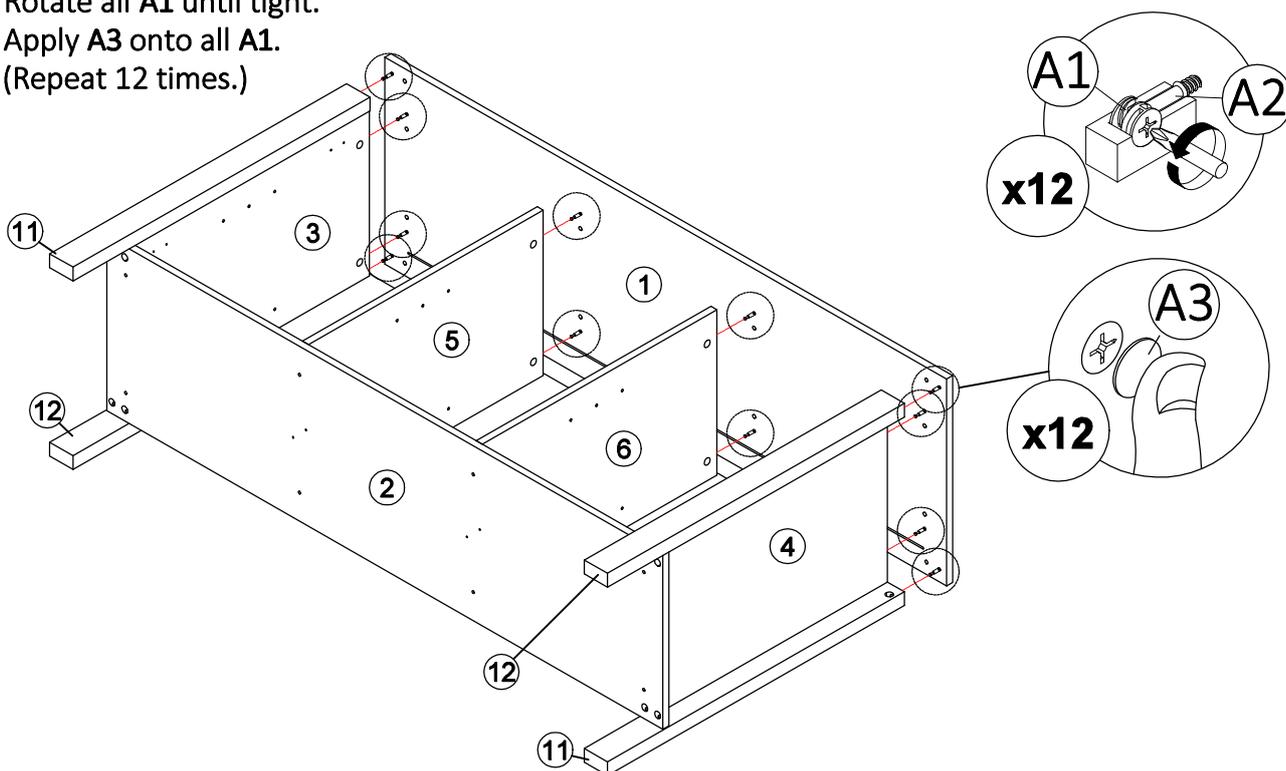


### STEP 7:

-Fix hardware M onto panel (2) by using hardware L.  
(Repeat 8 times.)

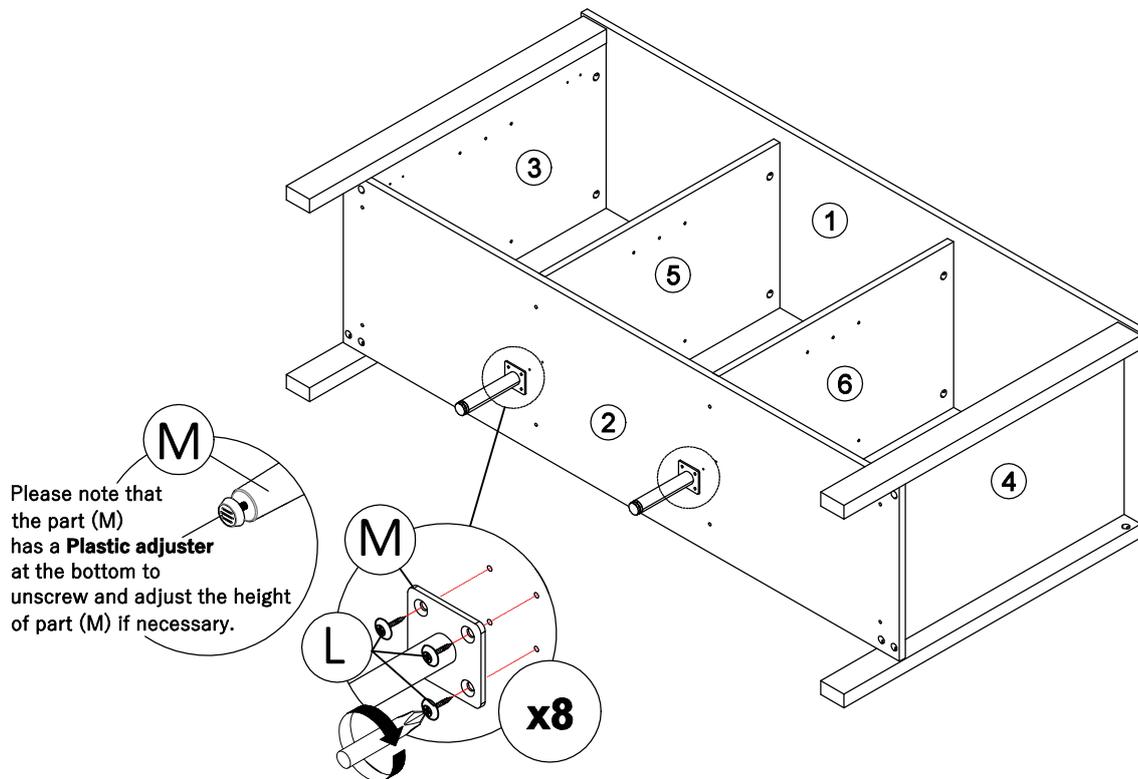


### STEP 8:

-Hit hardware I into bottom of panel (11) and (12).  
(Repeat 4 times.)

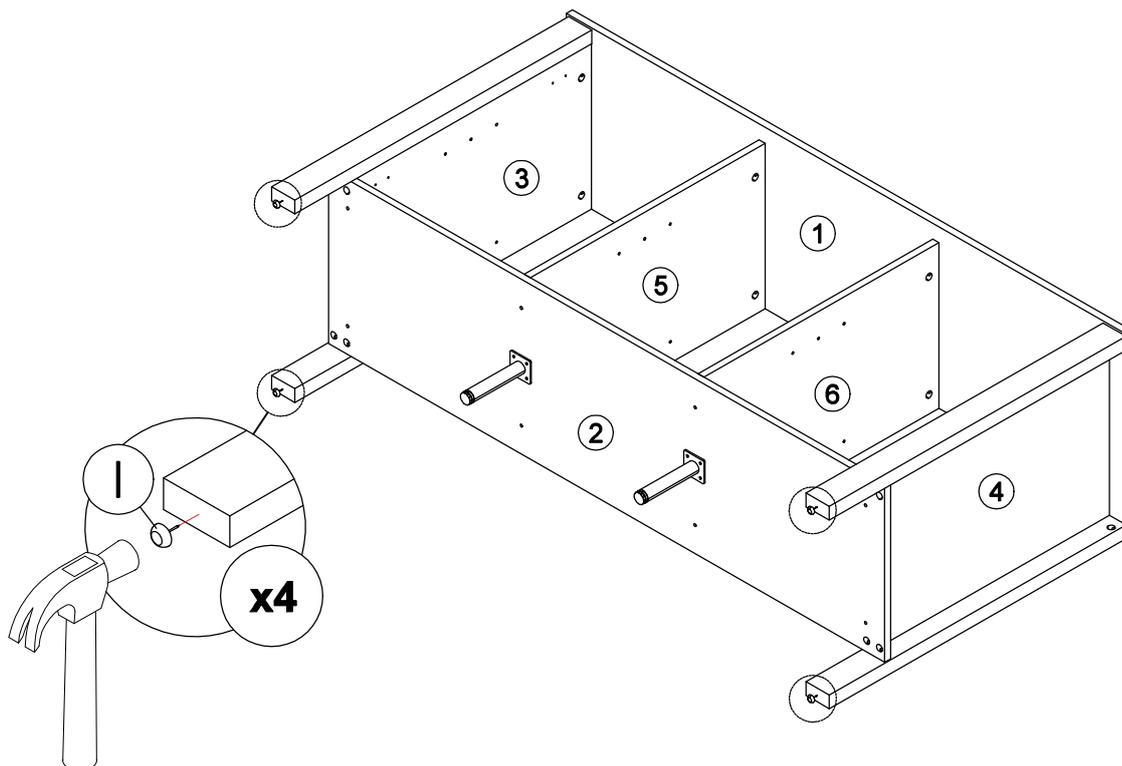


**STEP 9:**

- Insert hardware **G** into mounting positions on panel **(3)**, **(4)**, **(5)** and **(6)** by hand.  
(Repeat 12 times.)

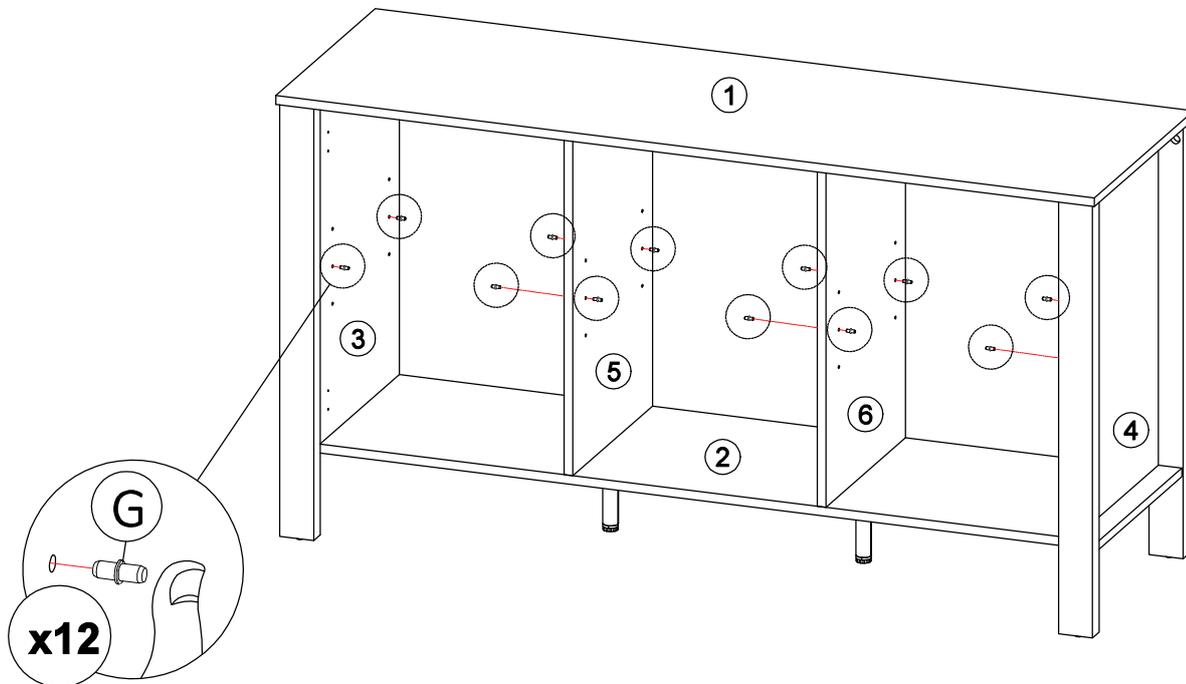


**STEP 10:**

- Assemble the panel **(9)** into between panel **(3)**, **(5)** and **(6)** then panel **(10)** into between panel **(4)** and **(6)**.  
(Repeat 3 times.)

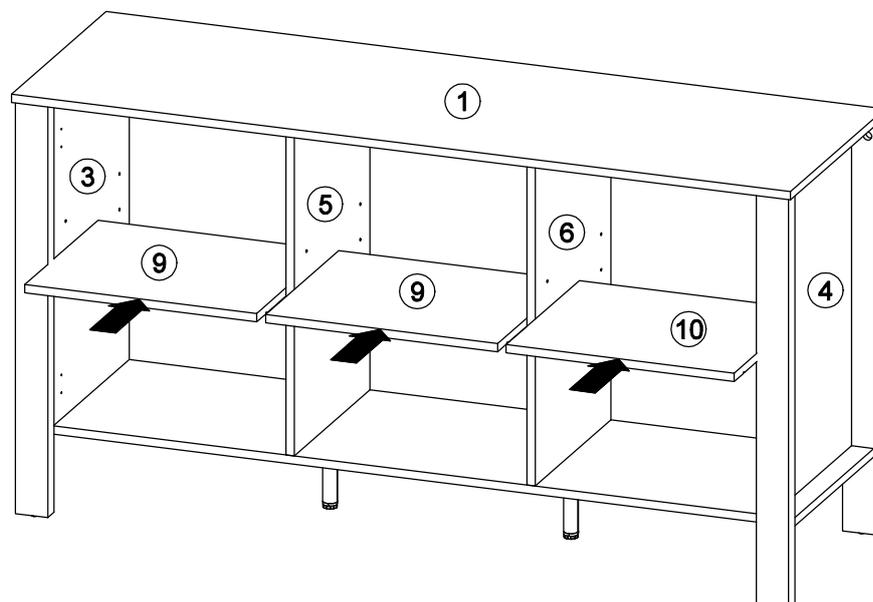


### STEP 11:

- Insert hardware H1 into slot at panel (1), (2), (3), (4), (5) and (6).
- Assemble hardware H1 by using hardware H2.
- (Repeat 12 times.)

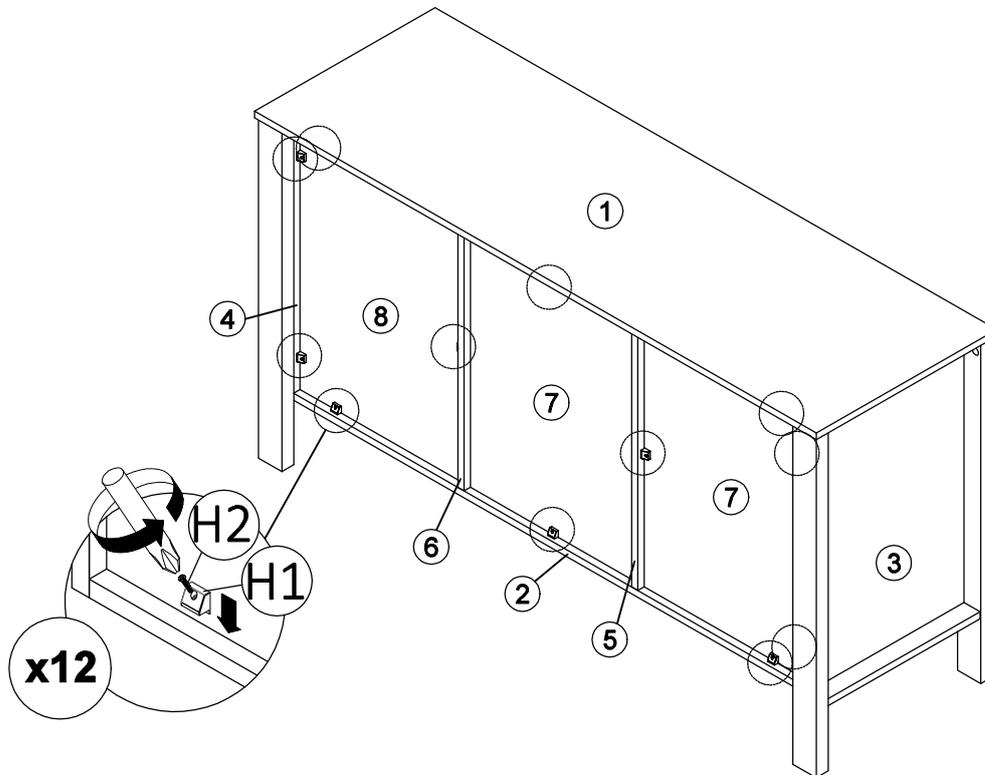


### STEP 12:

- Fix hardware K onto panel (13) and (14) by using hardware F.
- (Repeat 2 times for each hardware.)
- Fix hardware J onto panel (13) and (14) by using hardware E.
- (Repeat 12 times.)

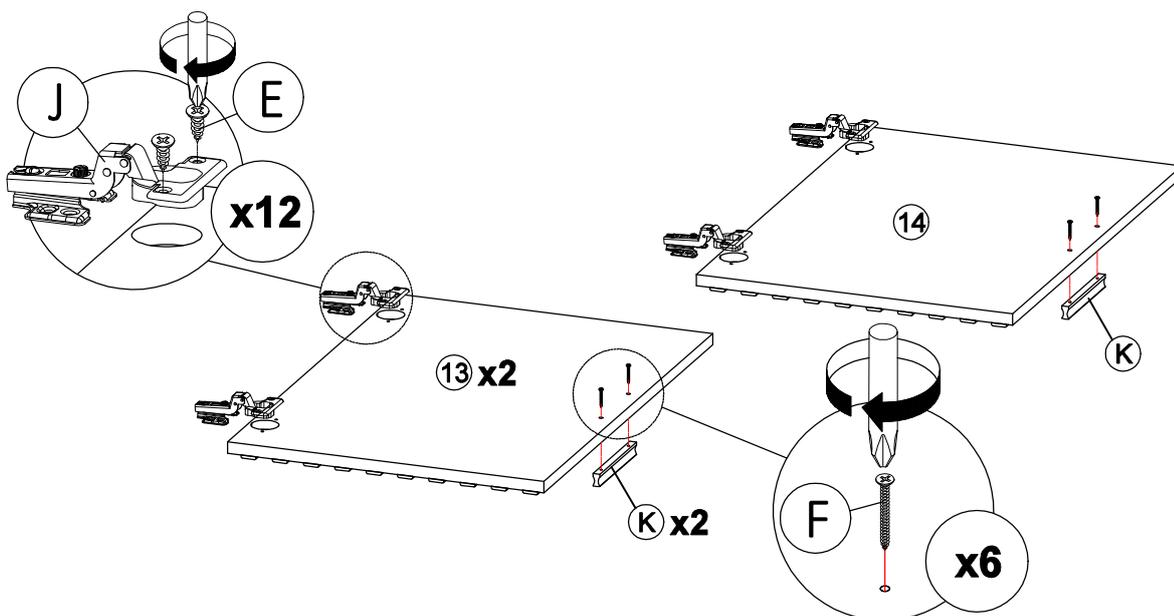


### STEP 13:

- Fix hardware J into panel (3), (4) and (6) by using hardware E.  
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (13) and (14).  
(Do only when needed.)

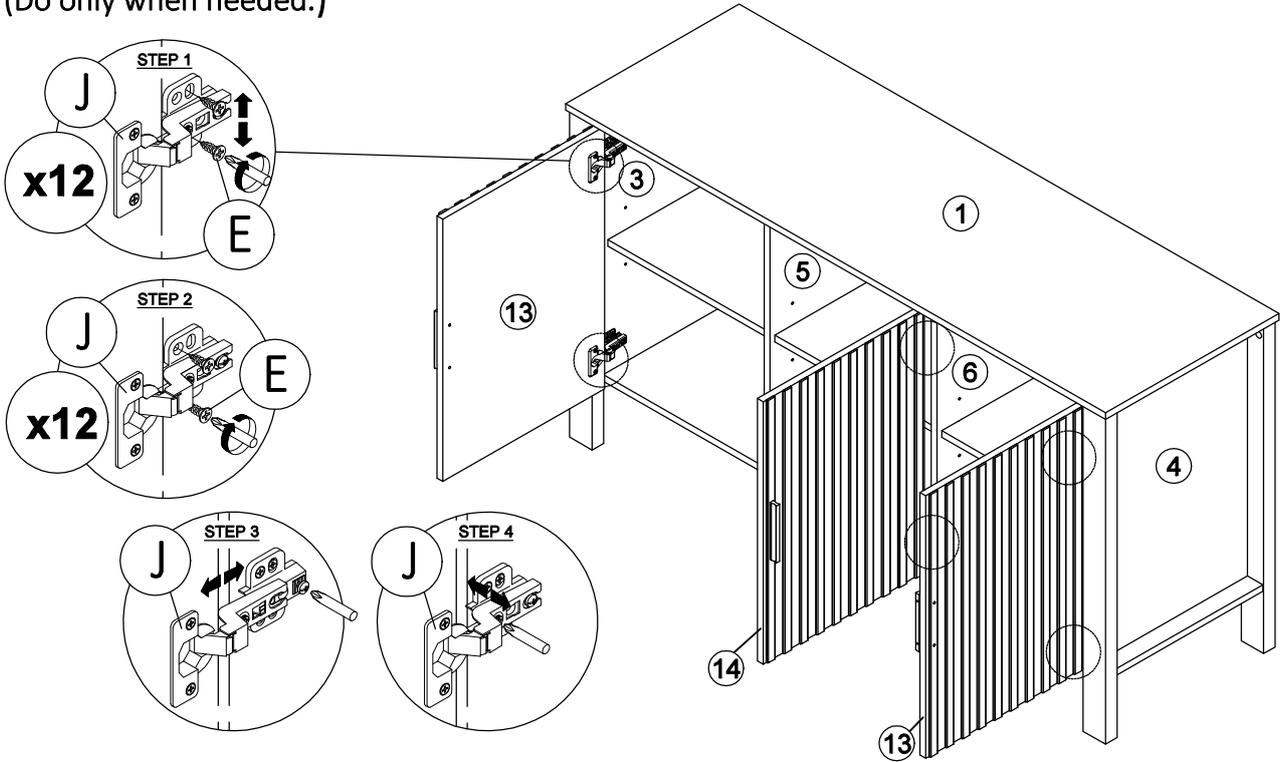

-ASSEMBLY IS COMPLETE

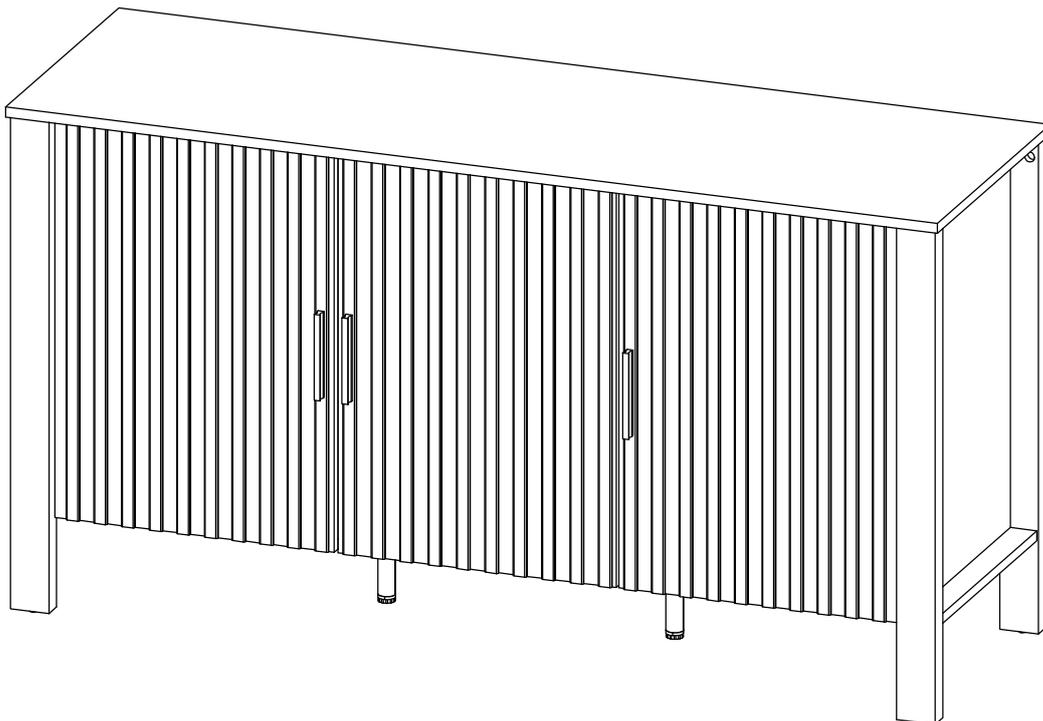

## **SAFETY BRACKETS INSTRUCTIONS**

### **IF YOUR PRODUCT REQUIRES THE ADDITION OF SAFETY BRACKETS OR “TIPPING KITS” PLEASE INCLUDE THESE INSTRUCTIONS BELOW.**

1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.


#### **HARDWARE**



**Metal Bracket**  
X4




**Cable Tie**  
X2

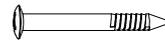

**Wall Screw**  
X2



**Pan Head Screw**  
X2

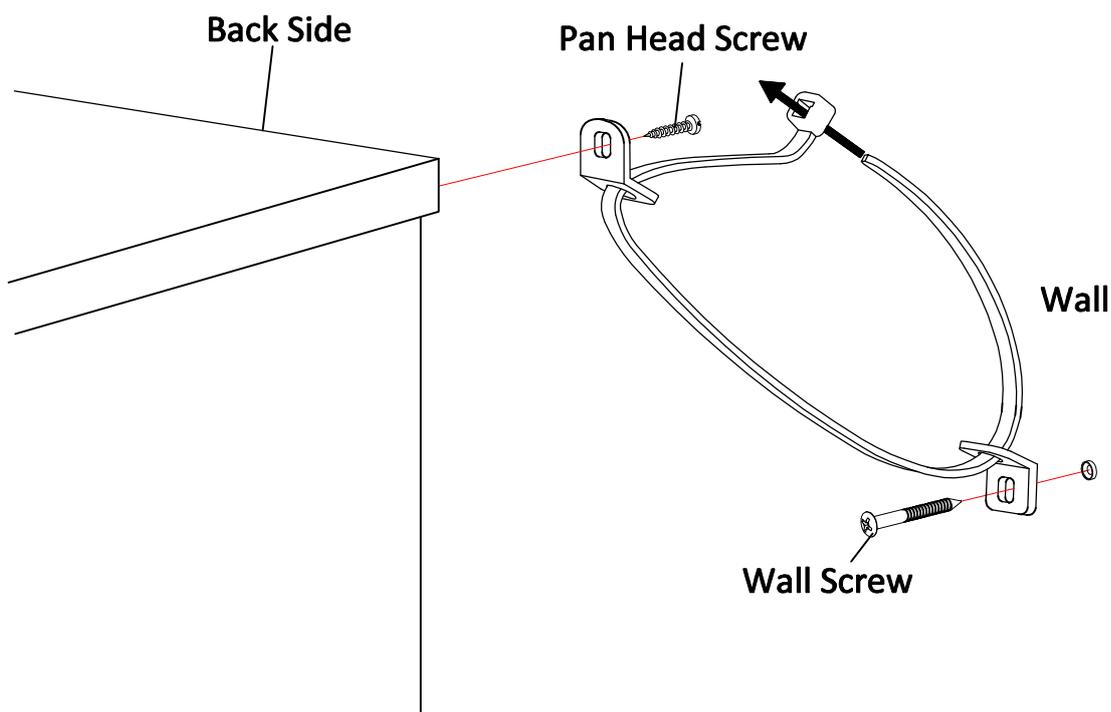

## **CARE AND MAINTENANCE**

To protect your furniture, we suggest the following :

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under window.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause server finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void.