


ASSEMBLY INSTRUCTION

WHITEHEAD 6 DRAWER DRESSER

ITEM CODE 88213

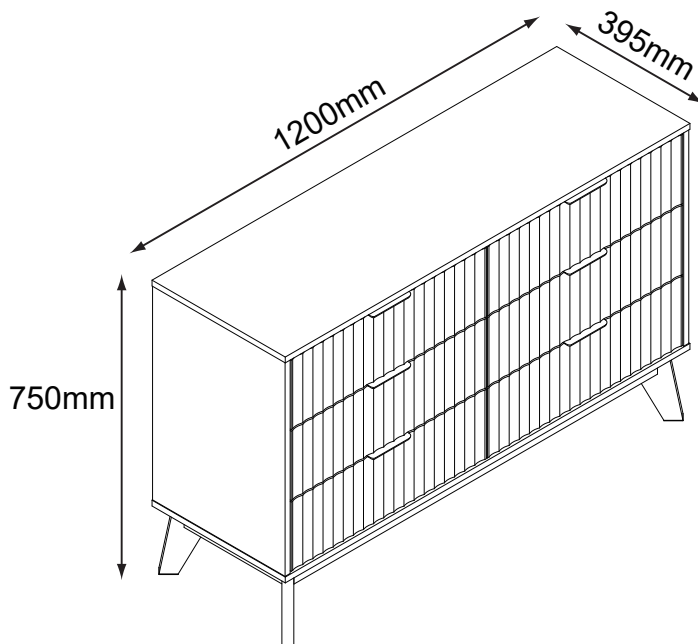


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt


PRE-ASSEMBLY PREPARATION

Before you start:



1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.



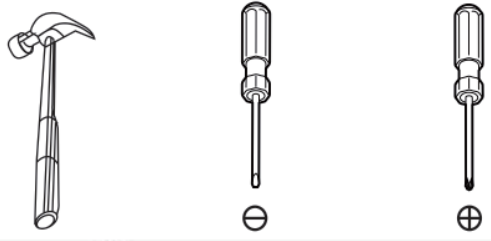
		
Allow 60 min	For 2 person	Additional tools required

! WARNING

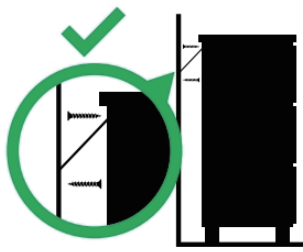
		Children have died from furniture tipover. • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low NEVER put a TV on this furniture  This is a permanent label. Do not remove!
---	---	---

PARTS LIST


A  M7X39mm 44pcs	B  M15X9.6mm 46pcs	C  M8X30mm 25pcs	D  M3.5X14mm 72pcs
E  M5X40mm 38pcs	F  M5X50mm 12pcs	G  1pcs	H  φ8X60mm 8pcs
I  φ12X60mm 4pcs	J  M8X50mm 1pcs	K  6pcs	L  10pcs
M  2pcs	N  1pcs	O  M4x30mm M3.5x14mm 1pcs	CL  6pcs
CR  6pcs	DL  6pcs	DR  6pcs	

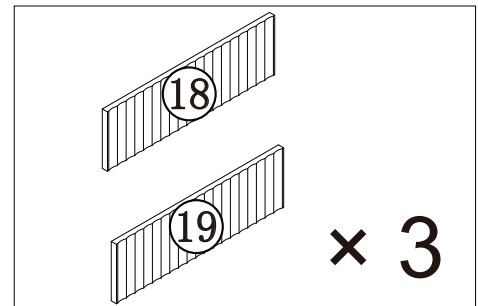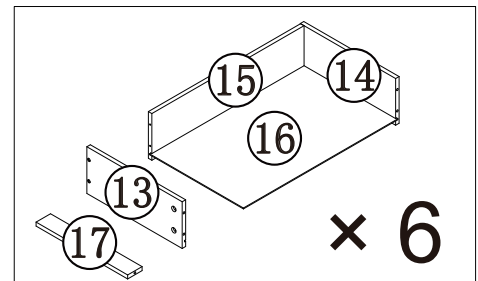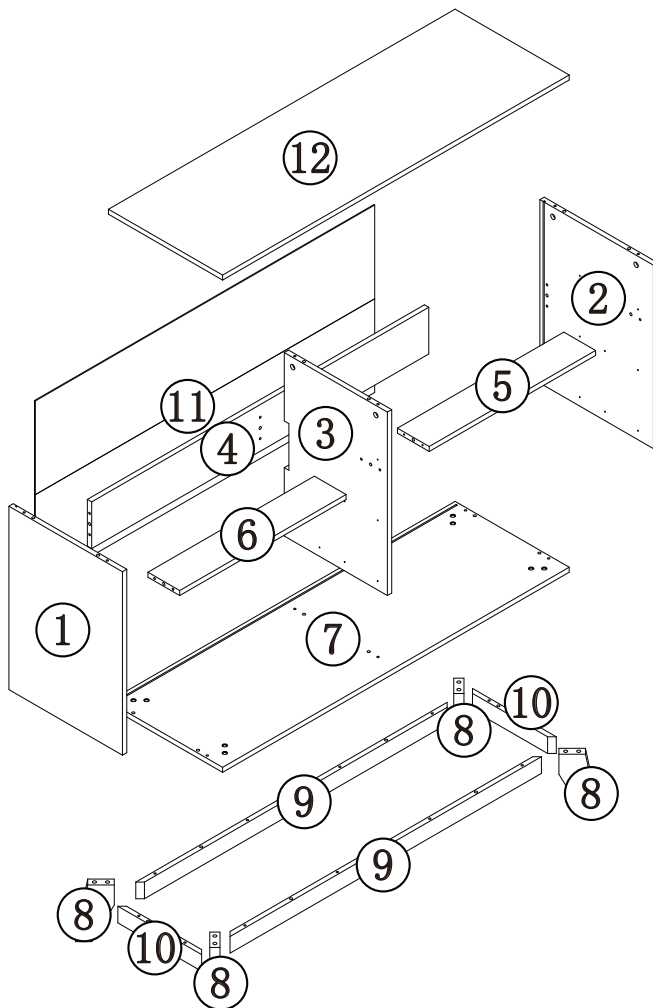


CAM LOCK INSTALL METHOD AS FOLLOWS

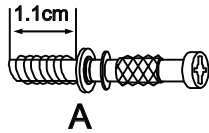


Step 1

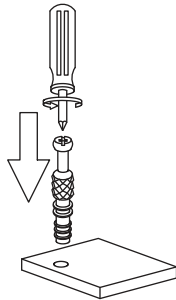


Step 2

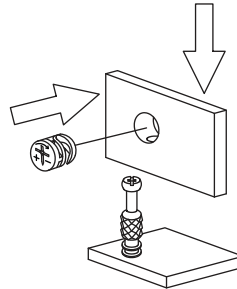

Step 3

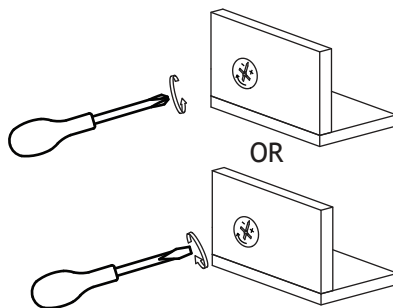


Lock




Fix cam nut into the bottom of hole then tighten it.


STEP 1:

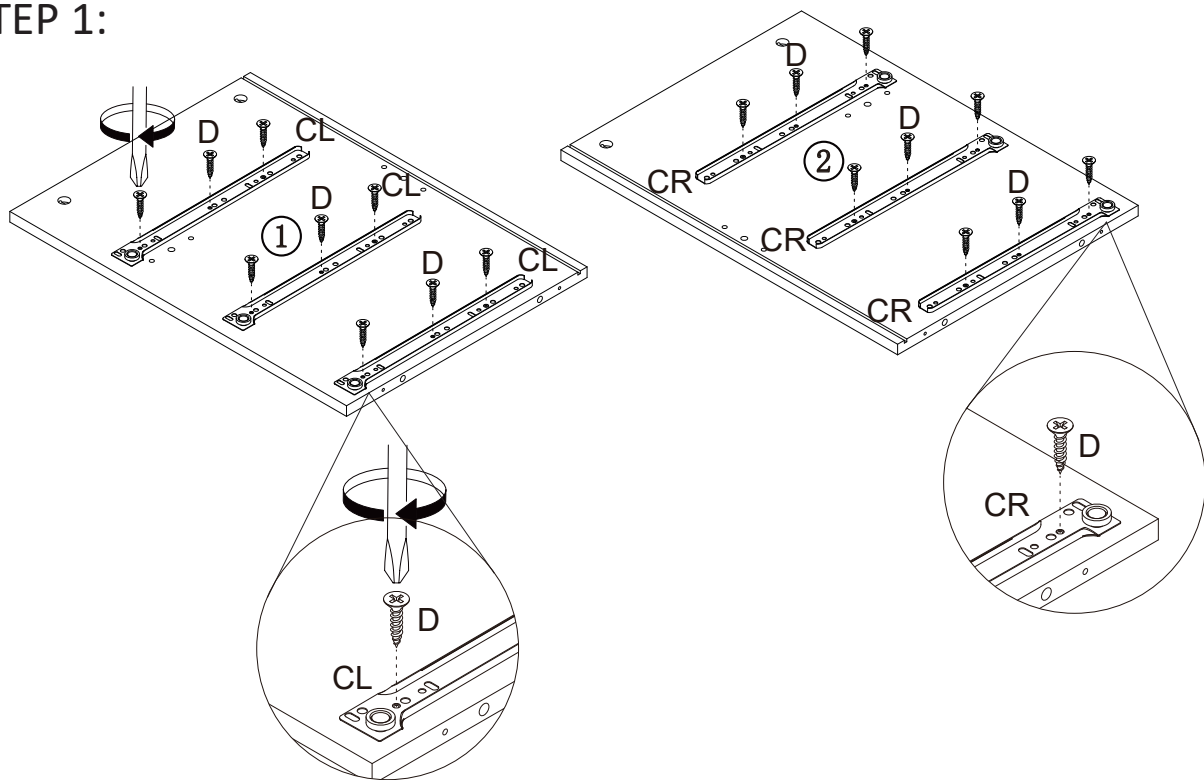


STEP 2:

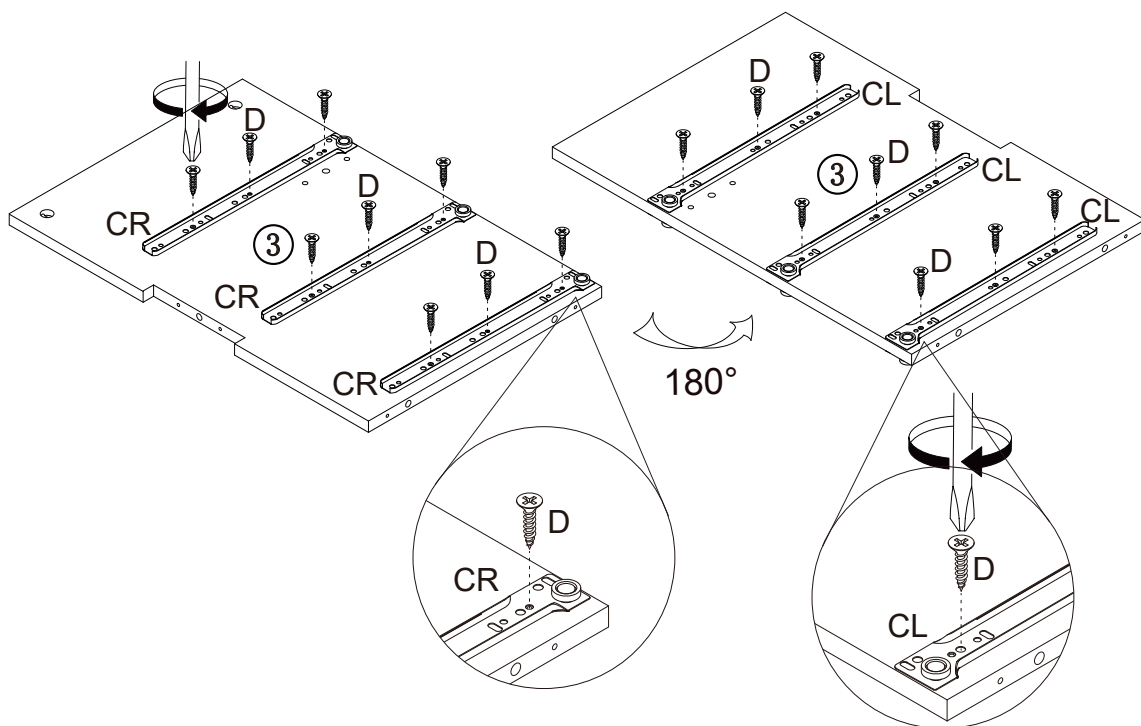


STEP 3:

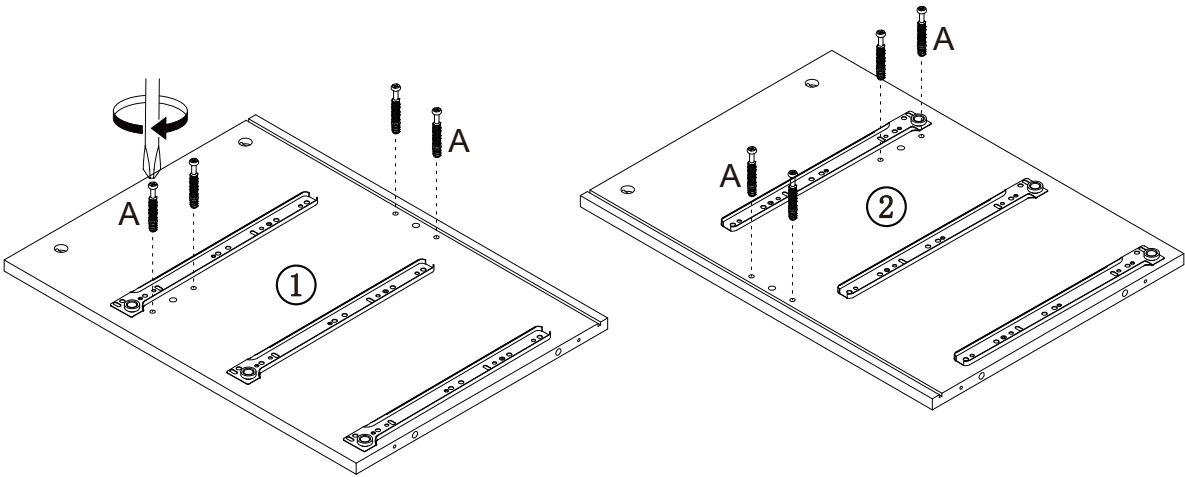


STEP 4:

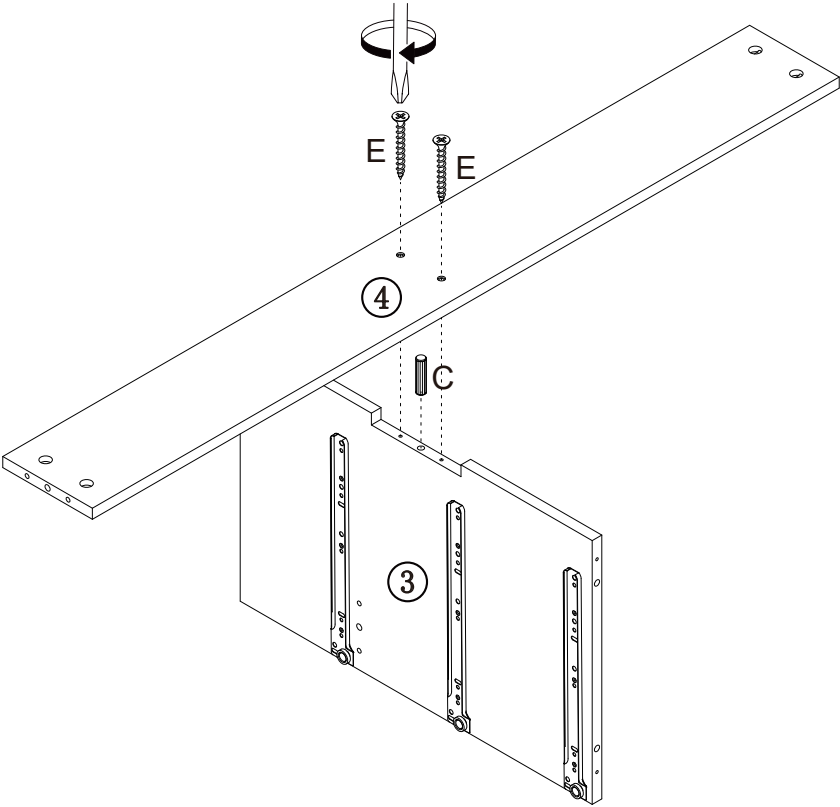


STEP 5:

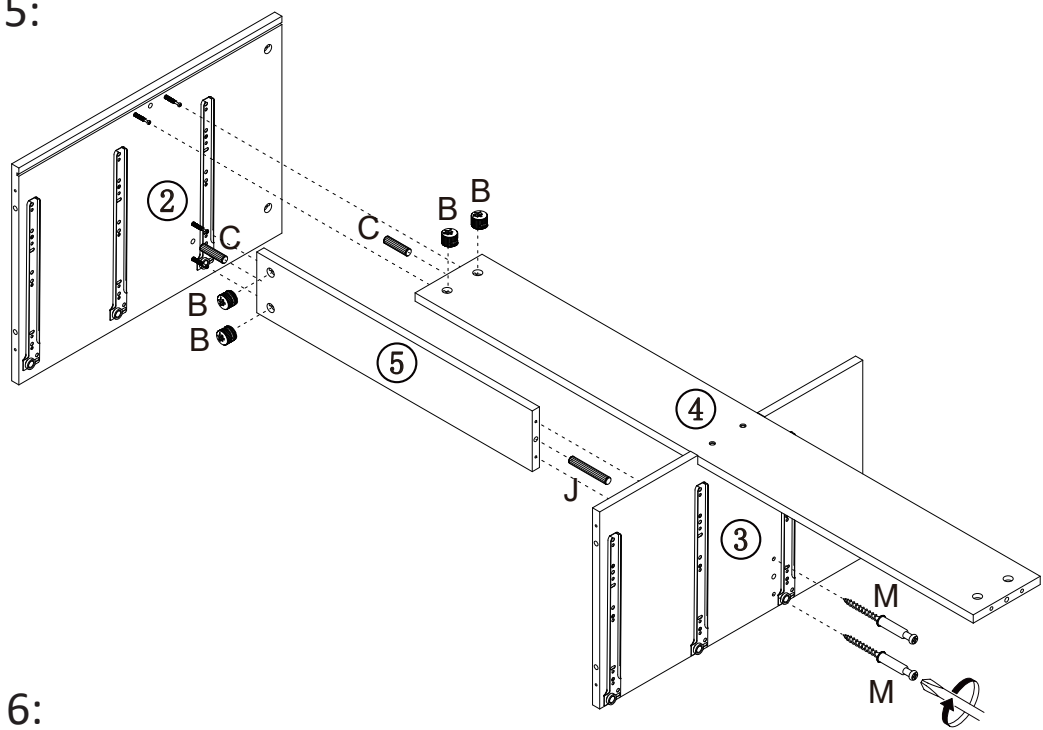


STEP 6:

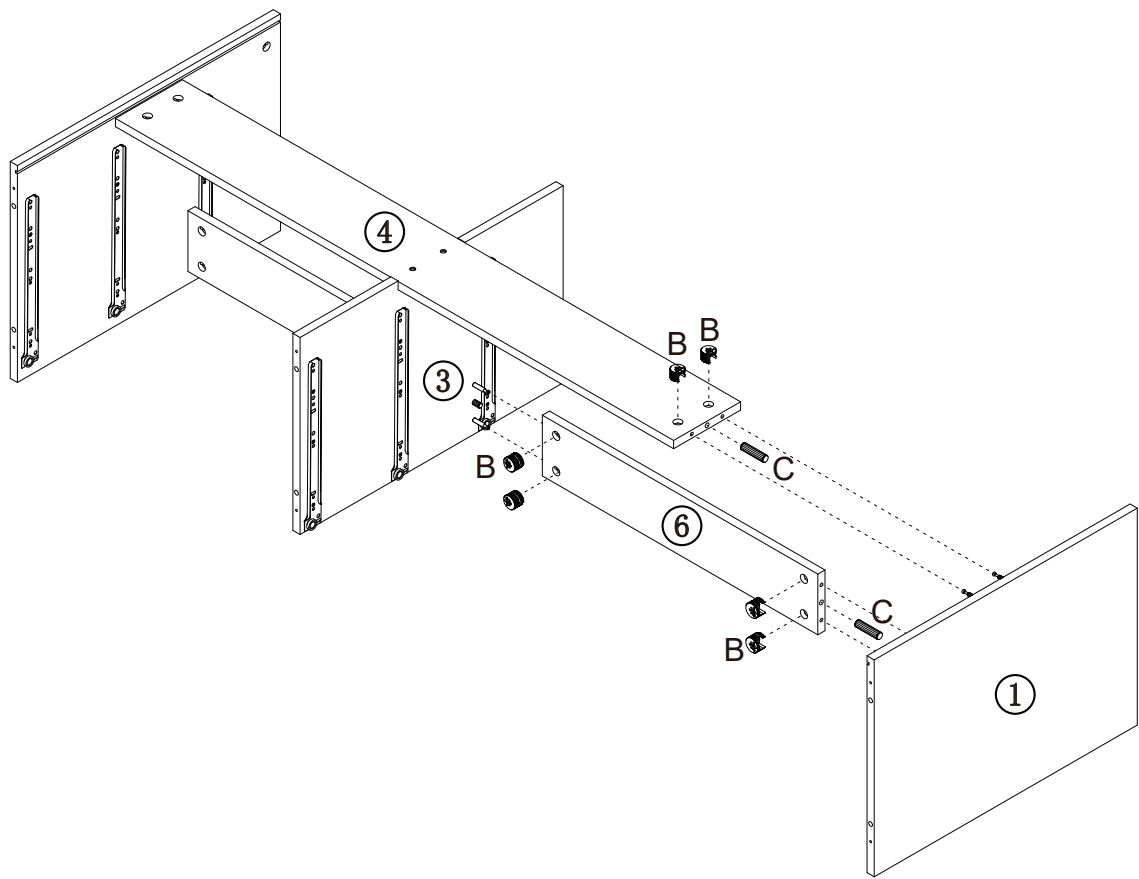


STEP 7:

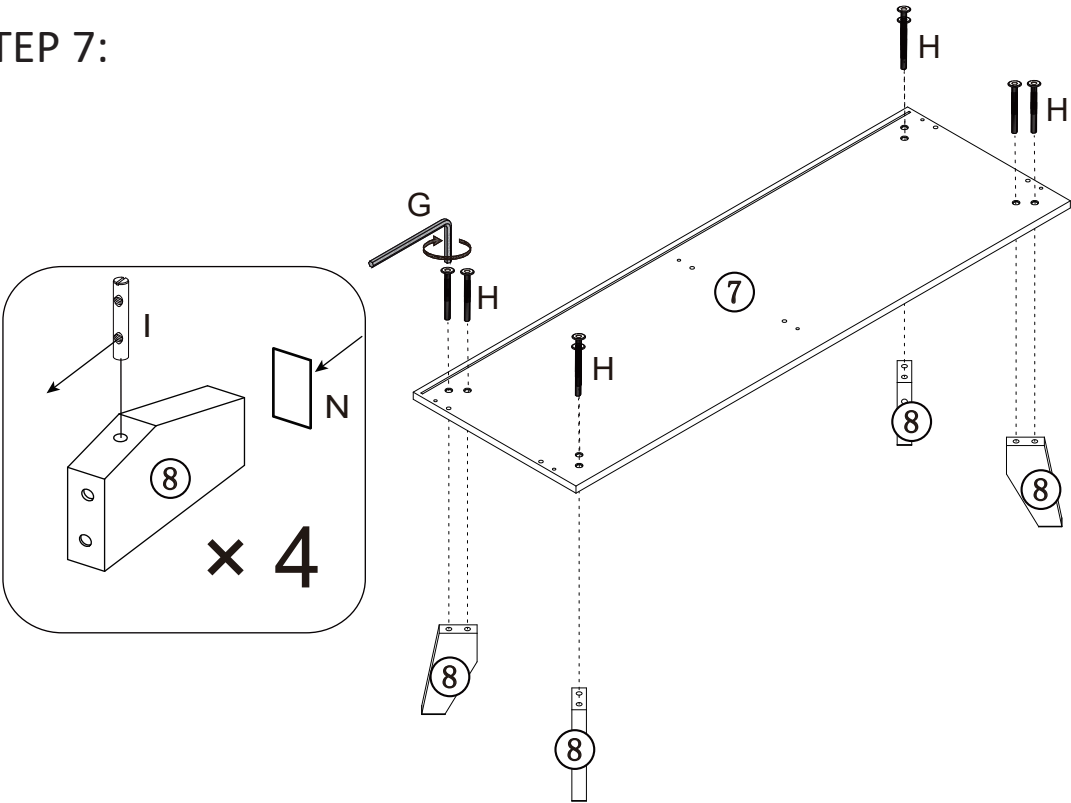


STEP 8:

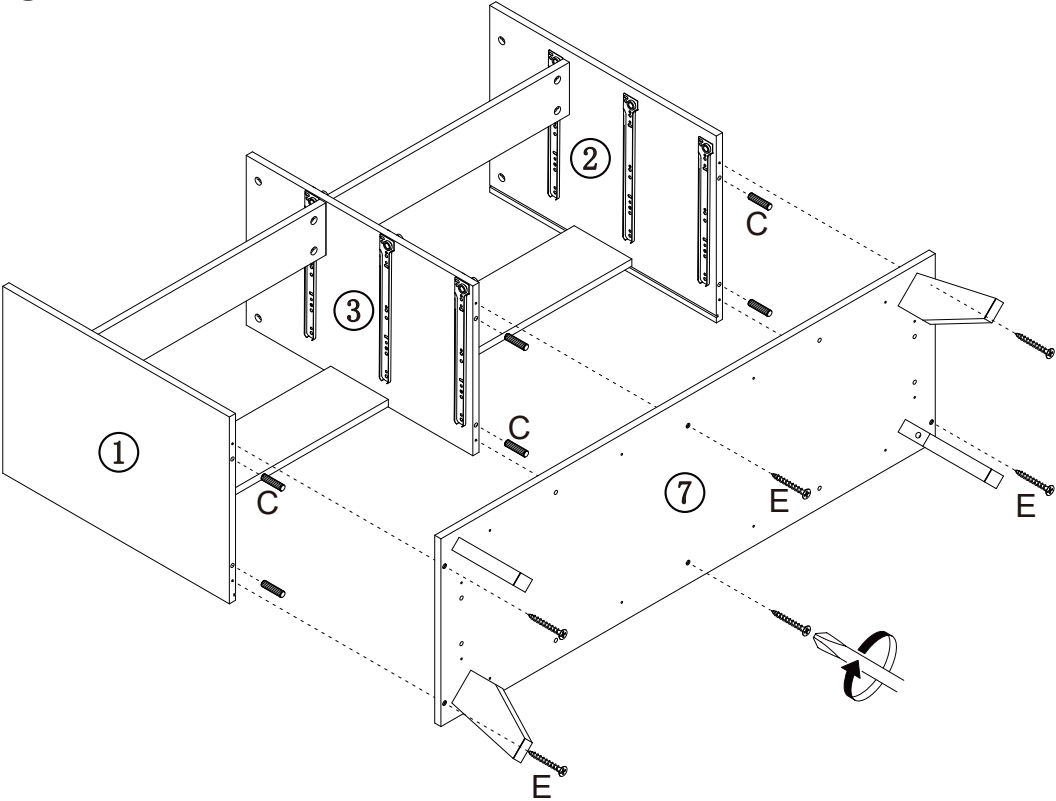


STEP 9:

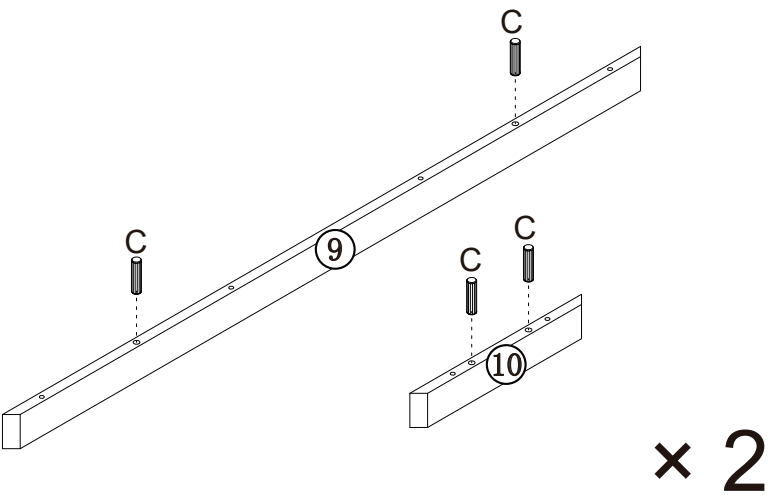


STEP 10:

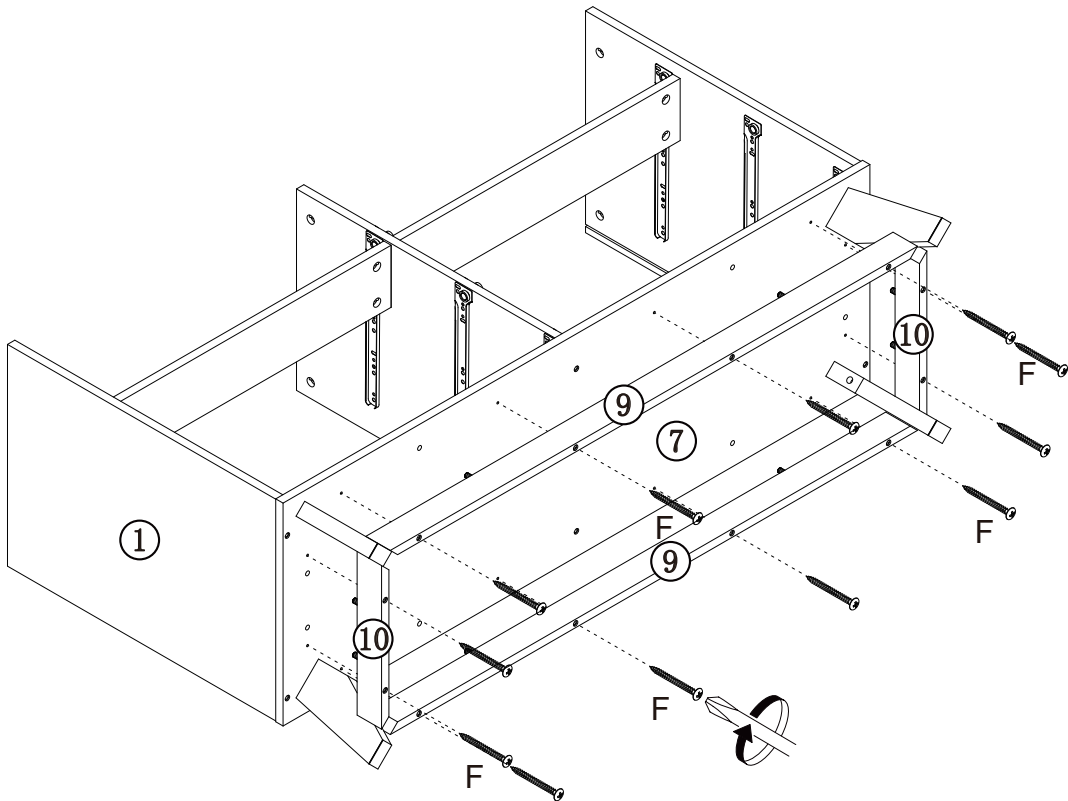


STEP 11:

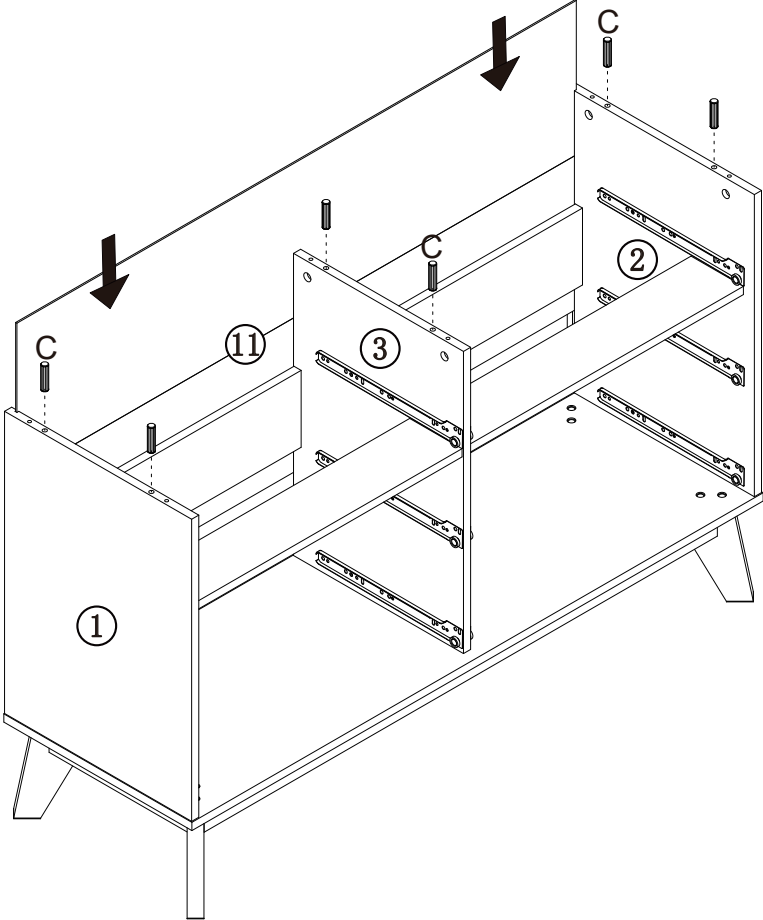



STEP 12:

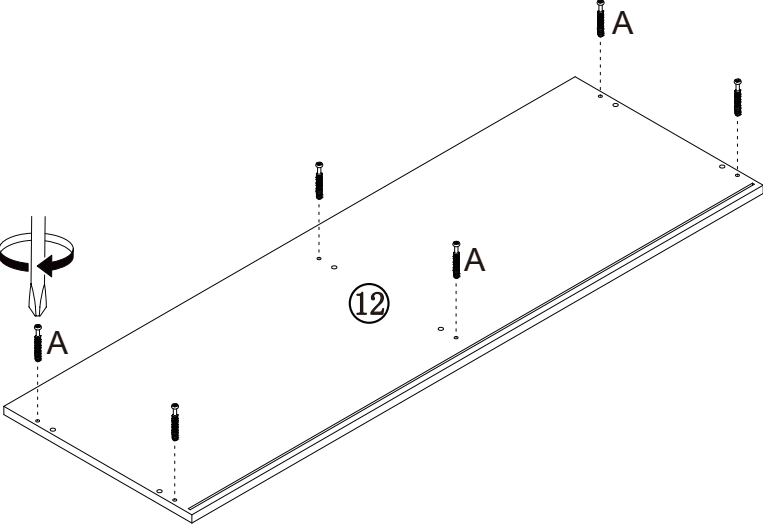


STEP 13:

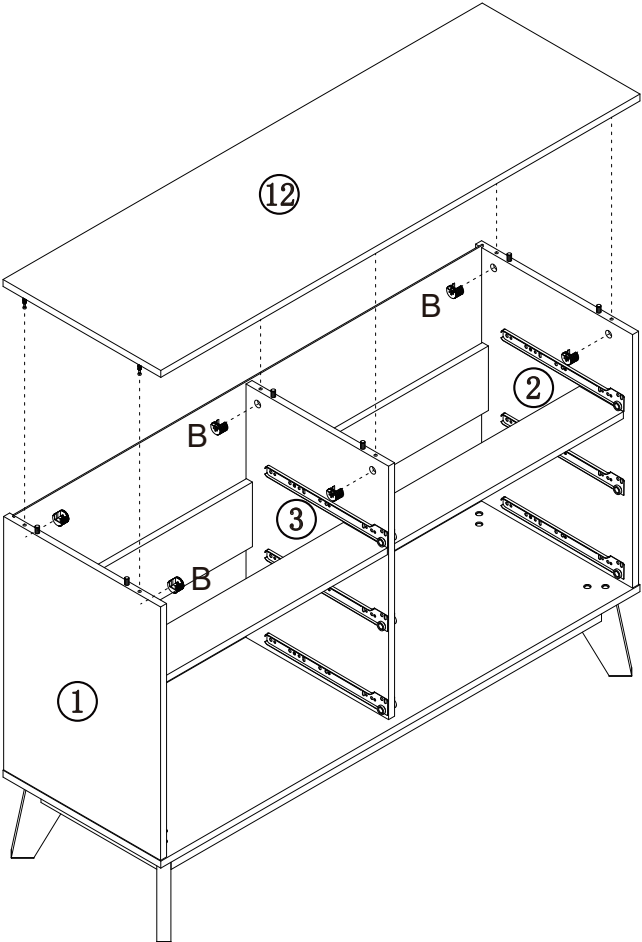


STEP 14:

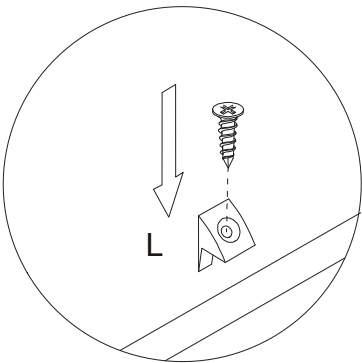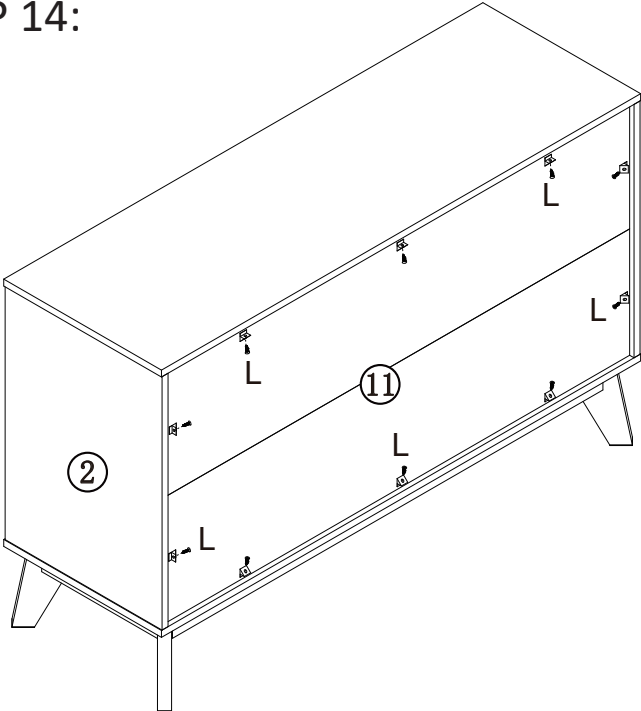


STEP 15:

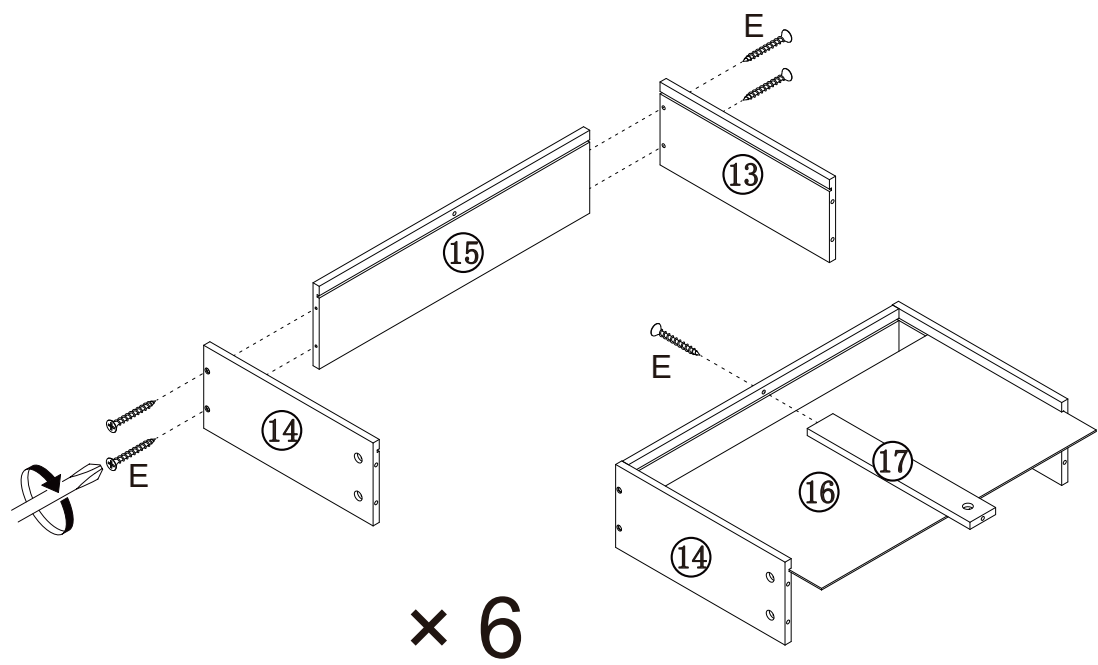


STEP 16:

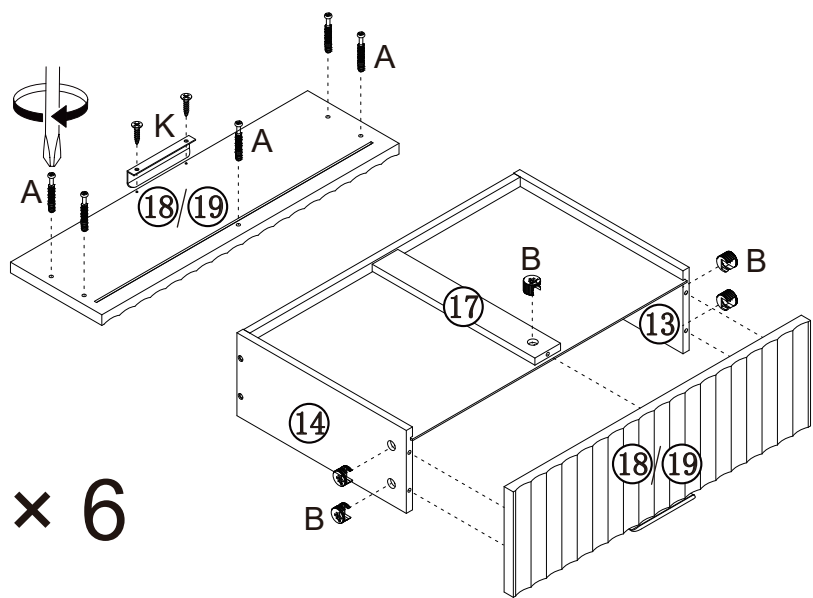


STEP 17:

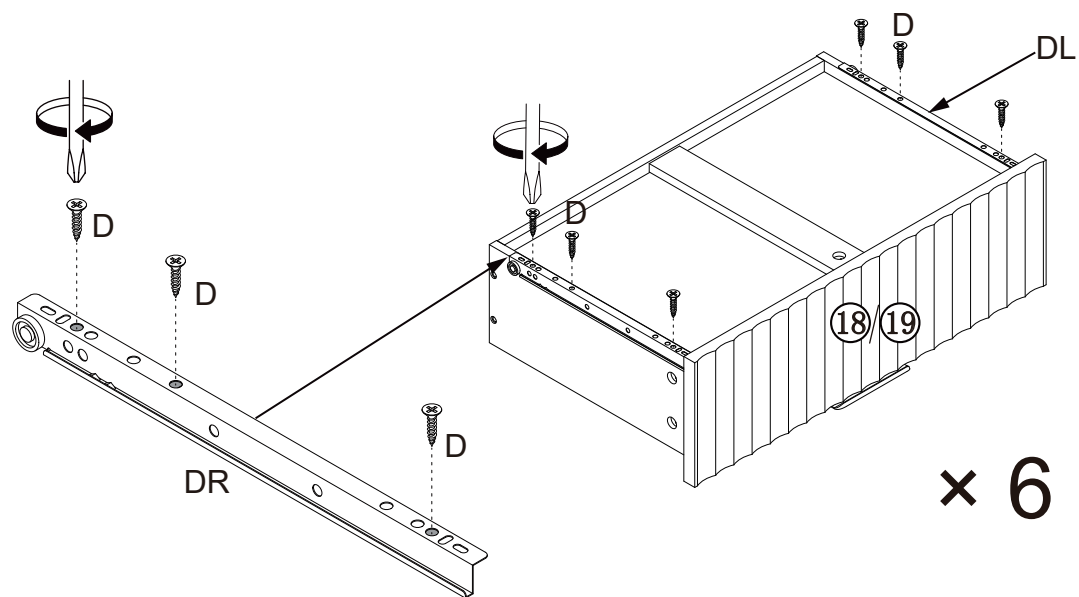

STEP 18:

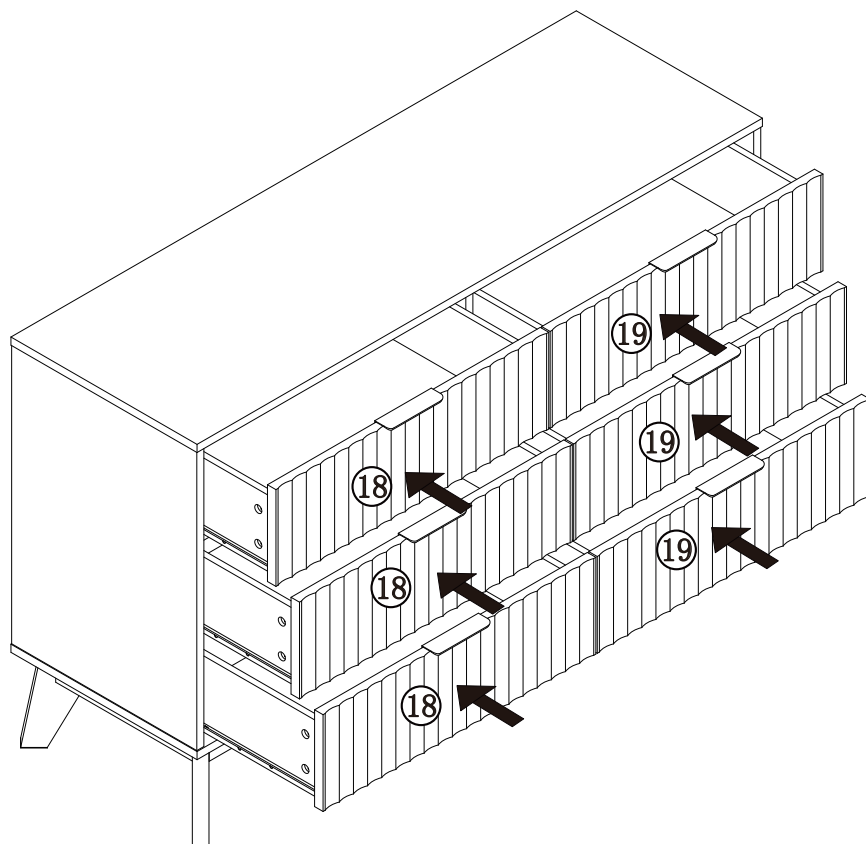


ASSEMBLY COMPLETE

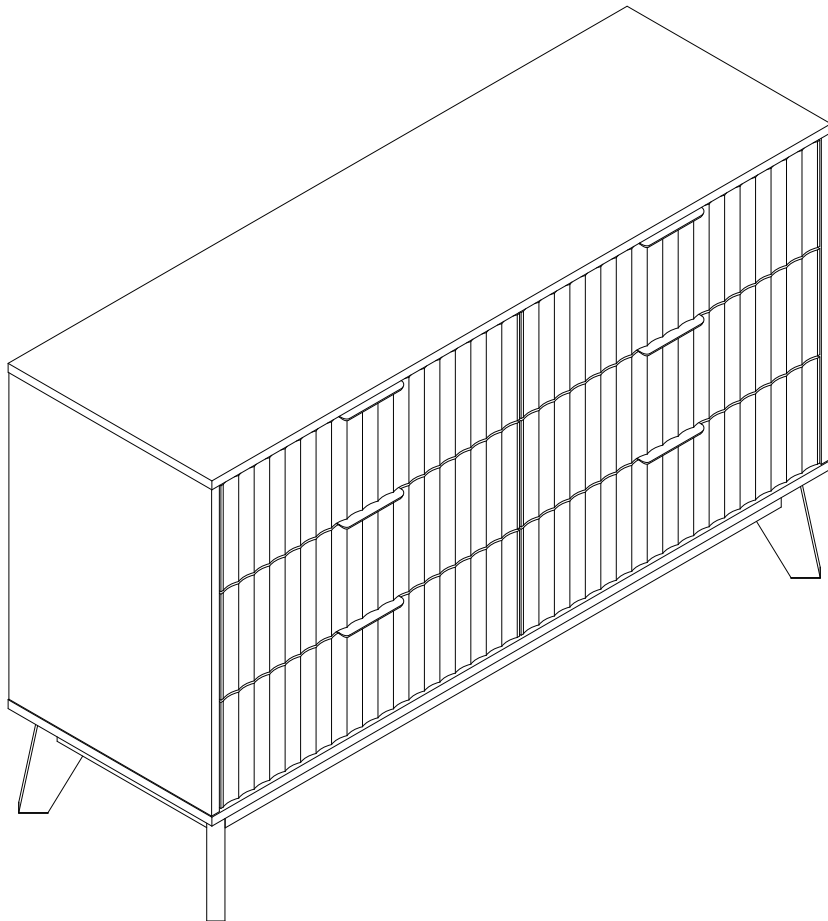

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

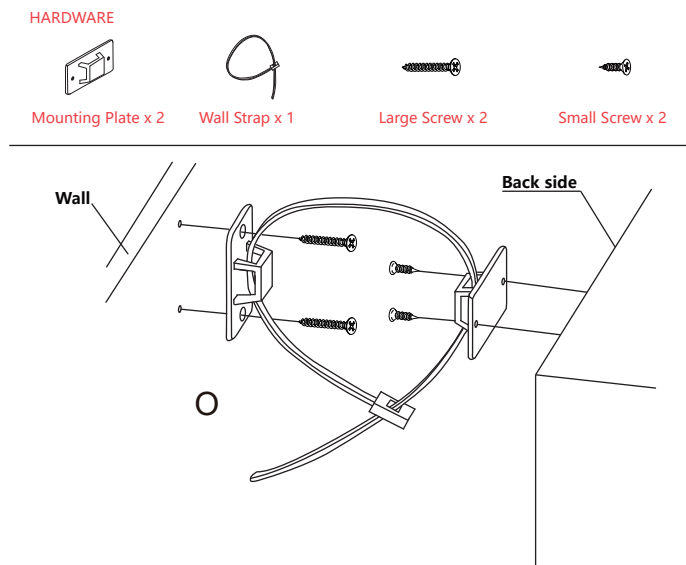

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void