
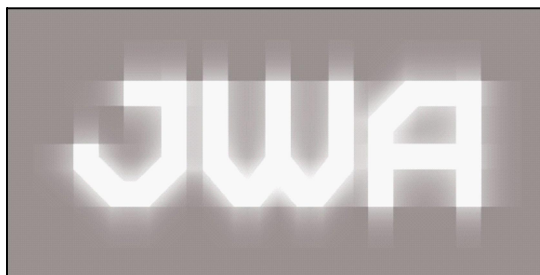


ASSEMBLY INSTRUCTION
BROWNING
ENTERTAINMENT UNIT
ITEM CODE 86508

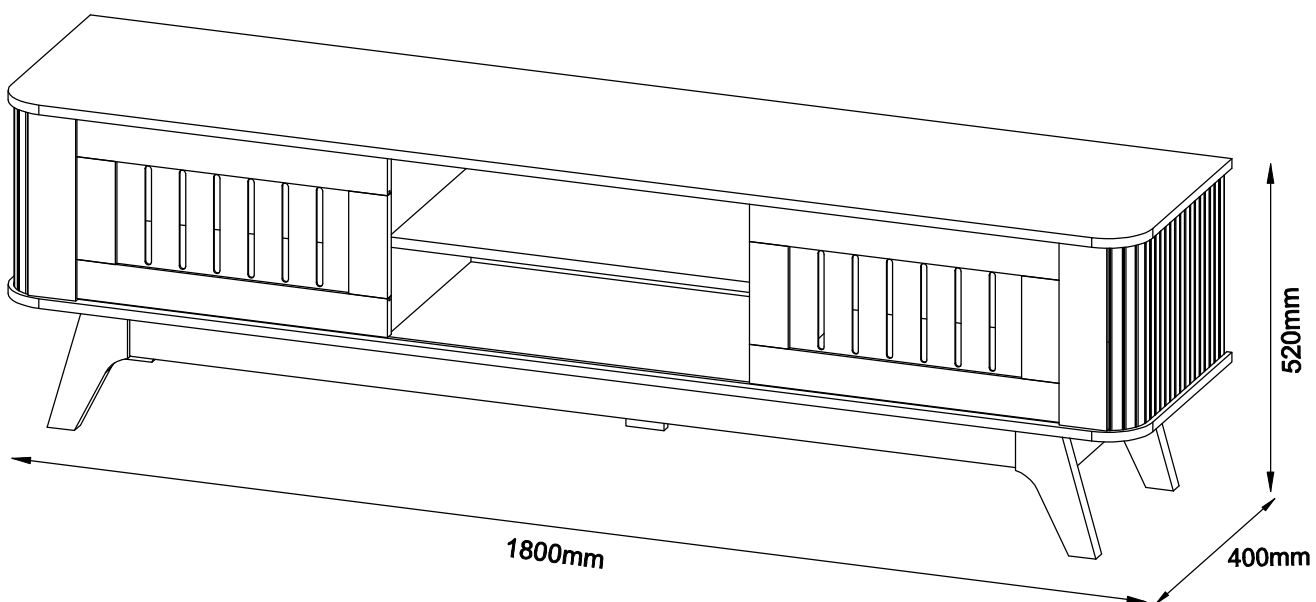


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

	
ALLOW 60 MINUTES	PEOPLE REQUIRED
	
ADDITIONAL TOOL REQUIRED	

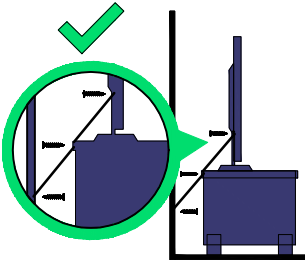
 WARNING		
		Children have died from furniture tipover. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • ALWAYS secure your television with an anchor device or mount the television on a wall. This is a permanent label. Do not remove!

PARTS LIST

A1 A2 A3 MINIFIX	WOOD DOWEL M8 X 30	M6 X 50MM CSK CAP WOOD SCREW	ALLEN KEY M4	M3 X 12MM C.B SCREW
M4 X 30MM C.B SCREW	M4 X 65MM C.B SCREW	PVC NAIL LEG 5/8" WITH PIN	I1 I2 STUB 192 WITH SCREW	
J1 J2 U 480 ROLLER TOP & BOTTOM				


1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE SUPPORT (L)	1 PC
4	SIDE SUPPORT (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	MIDDLE PANEL	1 PC
8	BACK PANEL	1 PC
9	FRONT SUPPORT (L)	1 PC

10	FRONT SUPPORT (R)	1 PC
11	BACK SUPPORT (L)	1 PC
12	BACK SUPPORT (R)	1 PC
13	APRON LONG (FRONT)	1 PC
14	APRON LONG (BACK)	1 PC
15	APRON SHORT	2 PCS
16	CENTER LEG	1 PC
17	SIDE FRAME (L/R)	2 PCS
18	DOOR	2 PCS

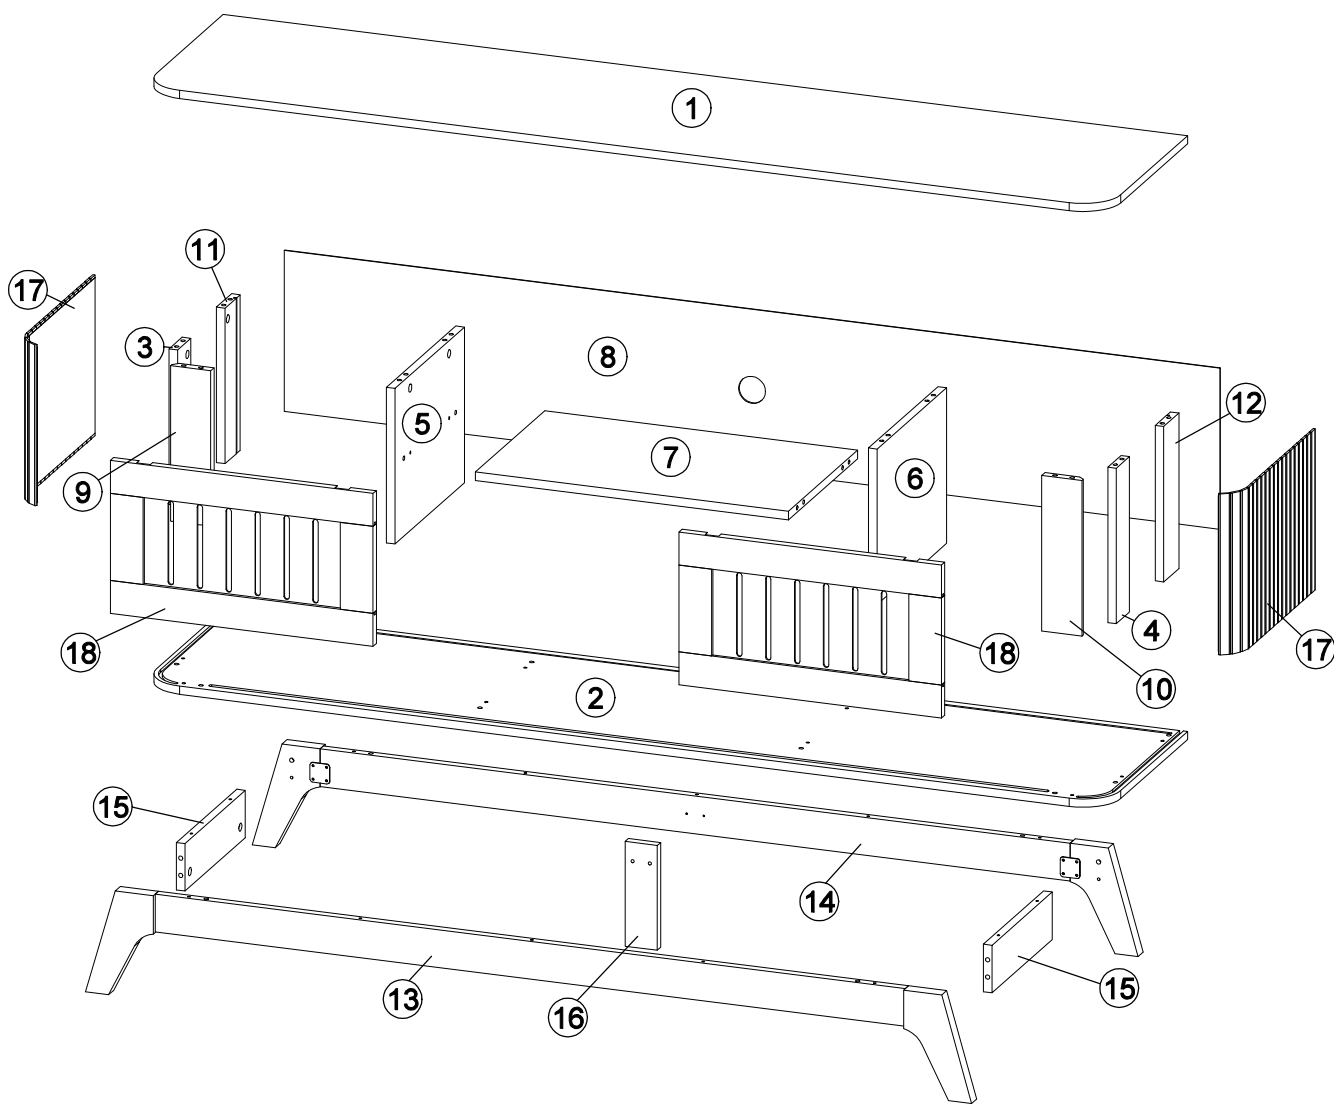


STEP 1:

- Insert hardware **A2** onto panel (1), (5) and (6).
(Repeat 14 times.)
- Insert hardware **B** onto panel (3), (4), (5), (6), (7), (9), (10), (11) and (12).
(Repeat 24 times.)

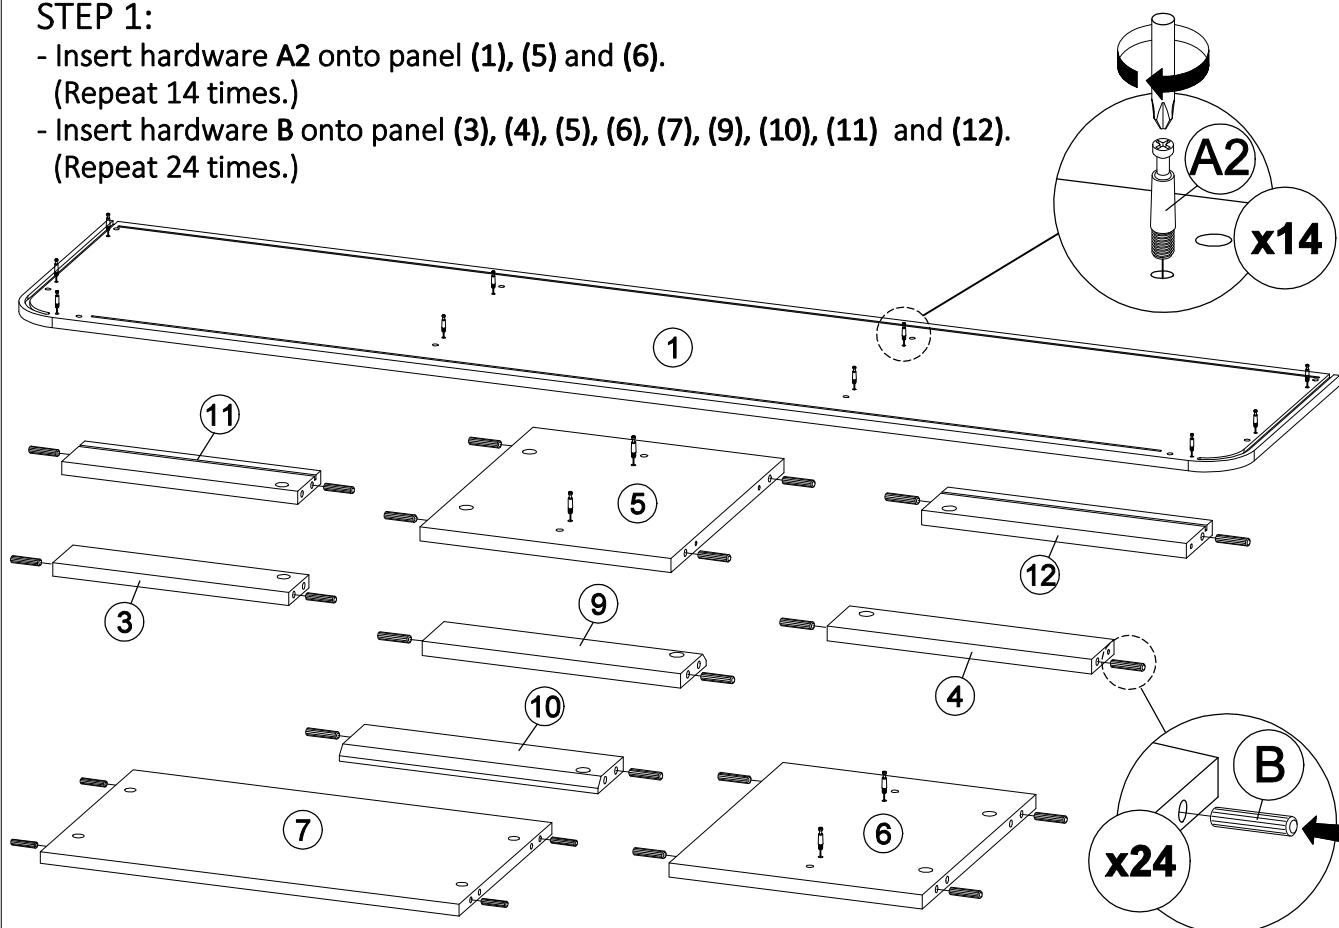


STEP 2:

- Insert hardware **A1** onto panel (7)
(Repeat 4 times.)
- Attach panel (7) to panel (5) and (6).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

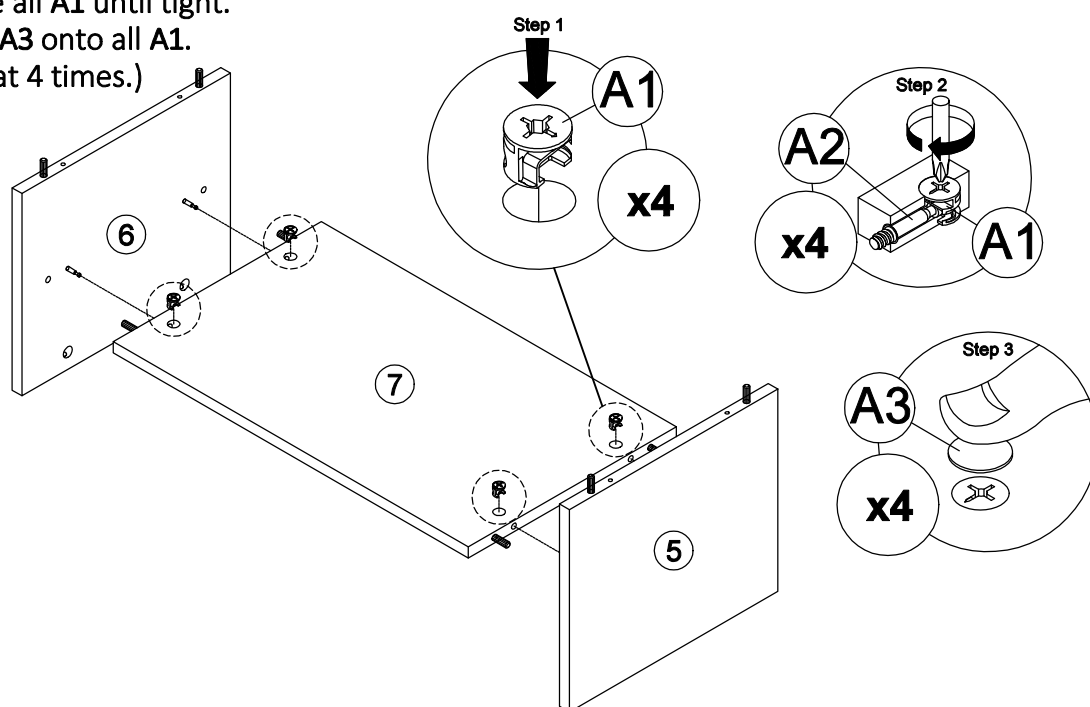


STEP 3:

- Insert hardware **A1** onto panel (5) and (6)
(Repeat 4 times.)
- Attach panel (5) and (6) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

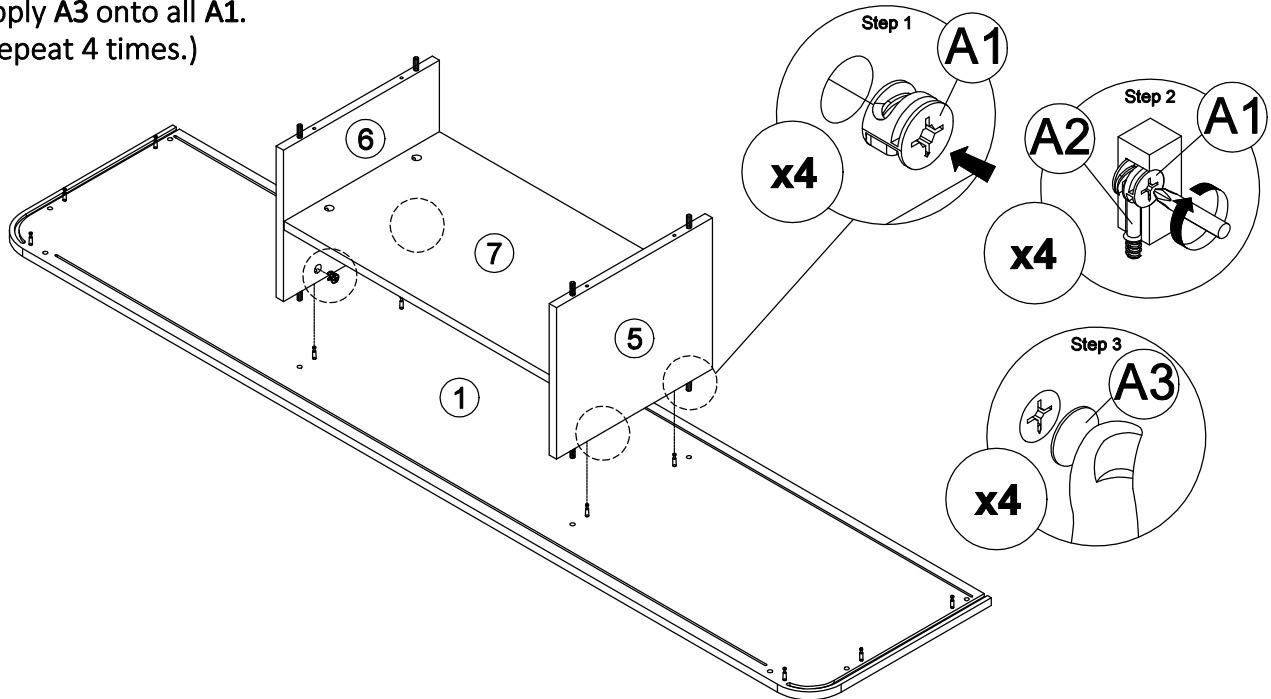


STEP 4:

- Insert hardware **A1** onto panel (3), (4), (9), (10), (11) and (12)
(Repeat 6 times.)
- Attach panel (3), (4), (9), (10), (11) and (12) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

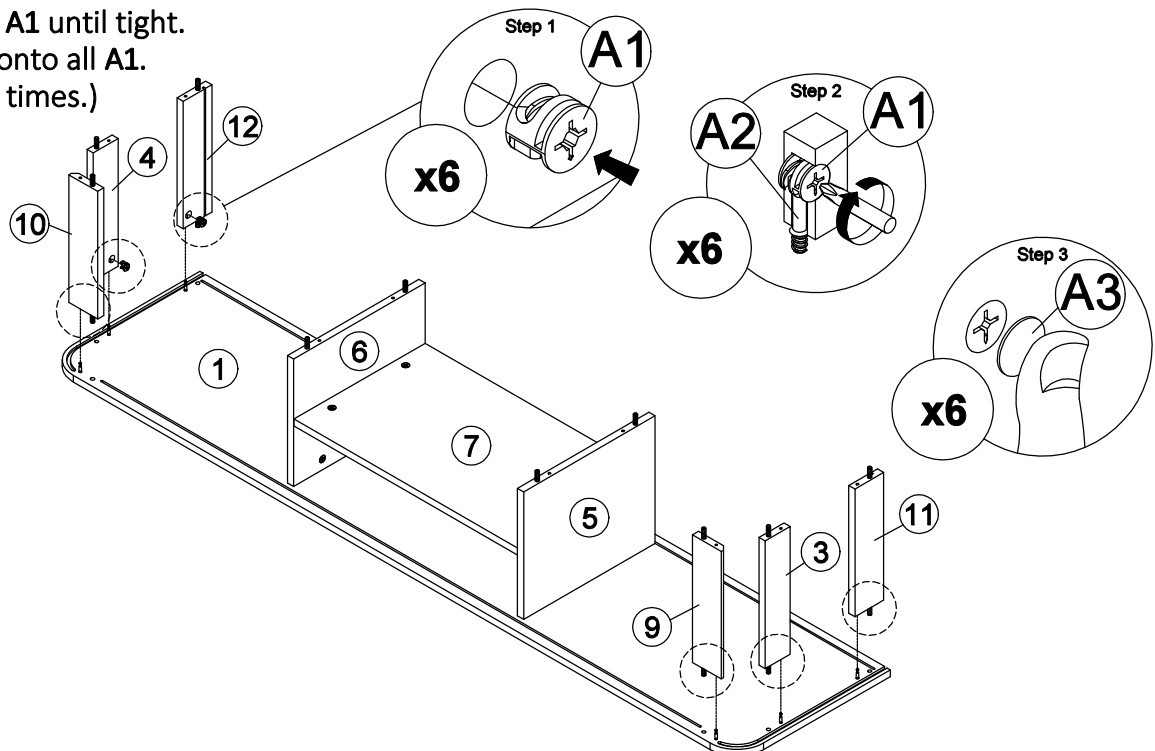


STEP 5:

- Insert the panel (8) along the slot.
(Repeat 1 times.)

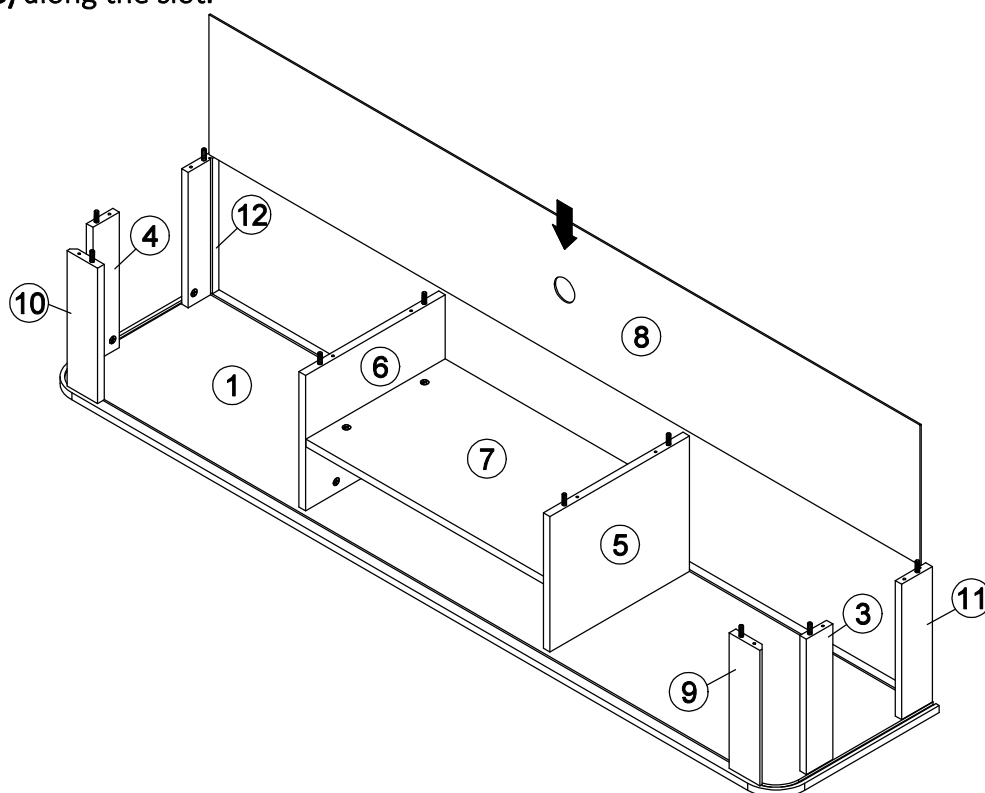


STEP 6:

- Connect panel (2) to panel (3), (4), (5), (6), (9), (10), (11) and (12)
by using hardware C and D.
(Repeat 10 times.)

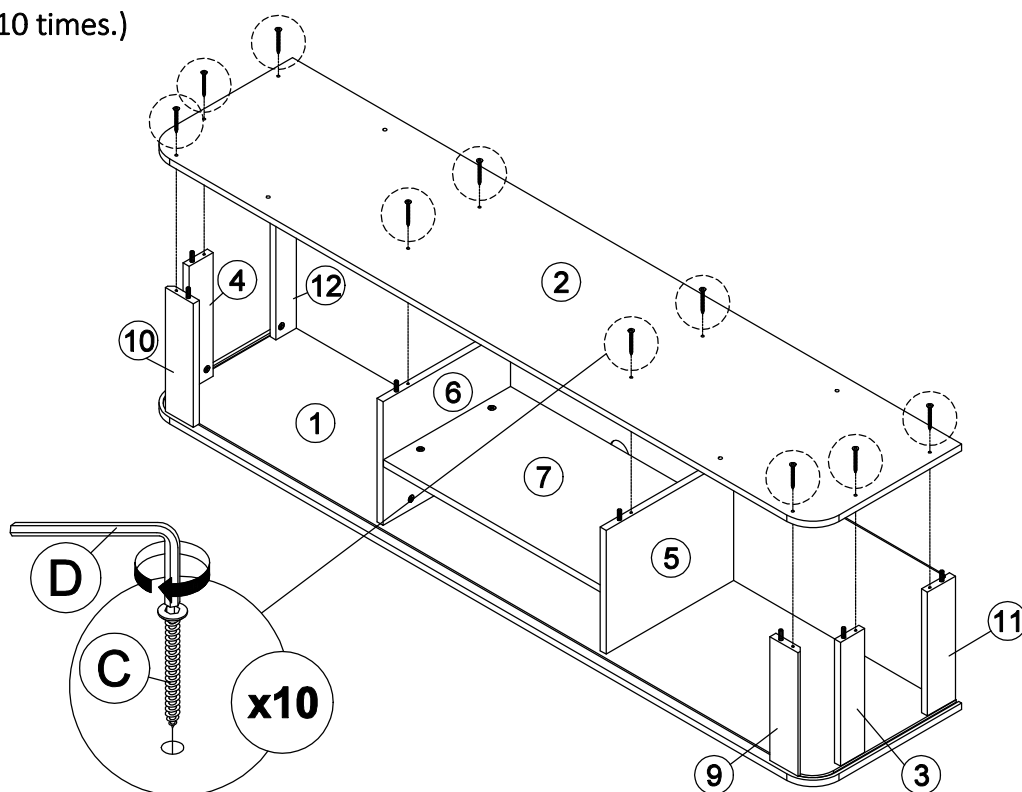


STEP 7:

- Insert hardware I1 into slot at panel (1), (2), (3), (11) and (12).
- Assemble hardware I2 by using screw are included.
(Repeat 8 times.)

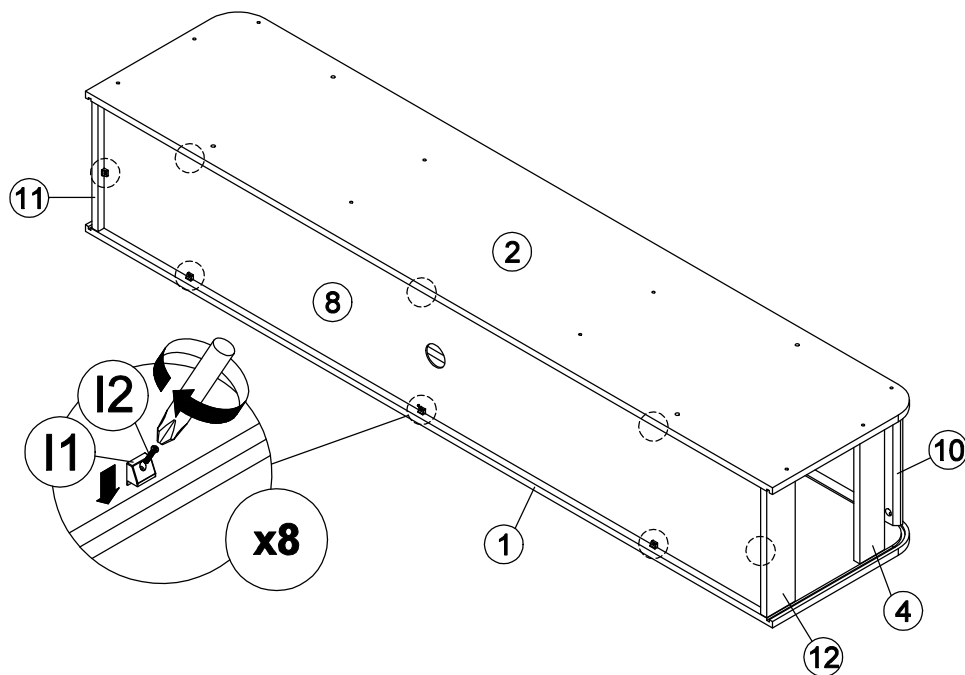


STEP 8:

- Insert hardware A2 onto panel (13) and (14).
(Repeat 4 times.)
- Insert hardware B onto panel (13), (14) and (15).
(Repeat 8 times.)

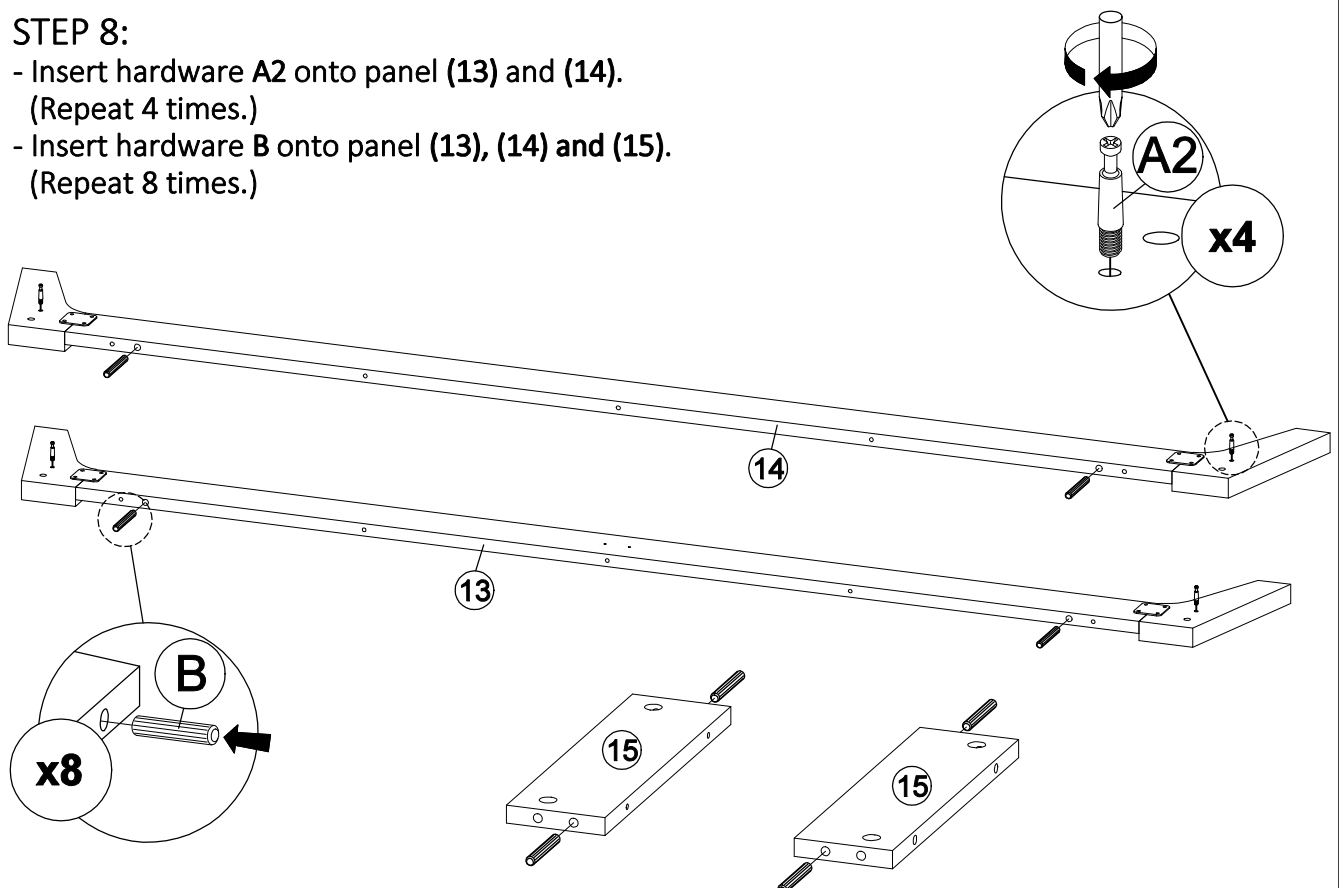


STEP 9:

- Insert hardware **A1** onto panel **(15)**
(Repeat 4 times.)
- Attach panel **(13)** and **(14)** to panel **(15)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

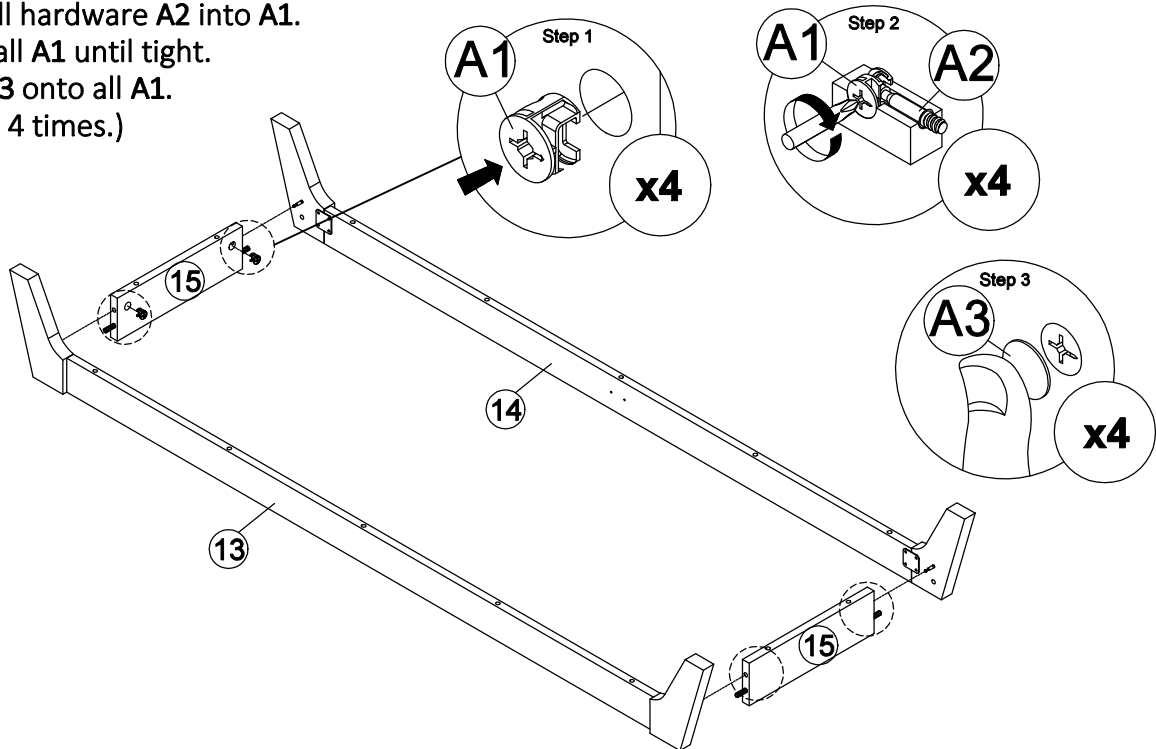


STEP 10:

- Connect panel **(13)**, **(14)** and **(15)** to panel **(2)**
by using hardware **G**.
(Repeat 14 times.)

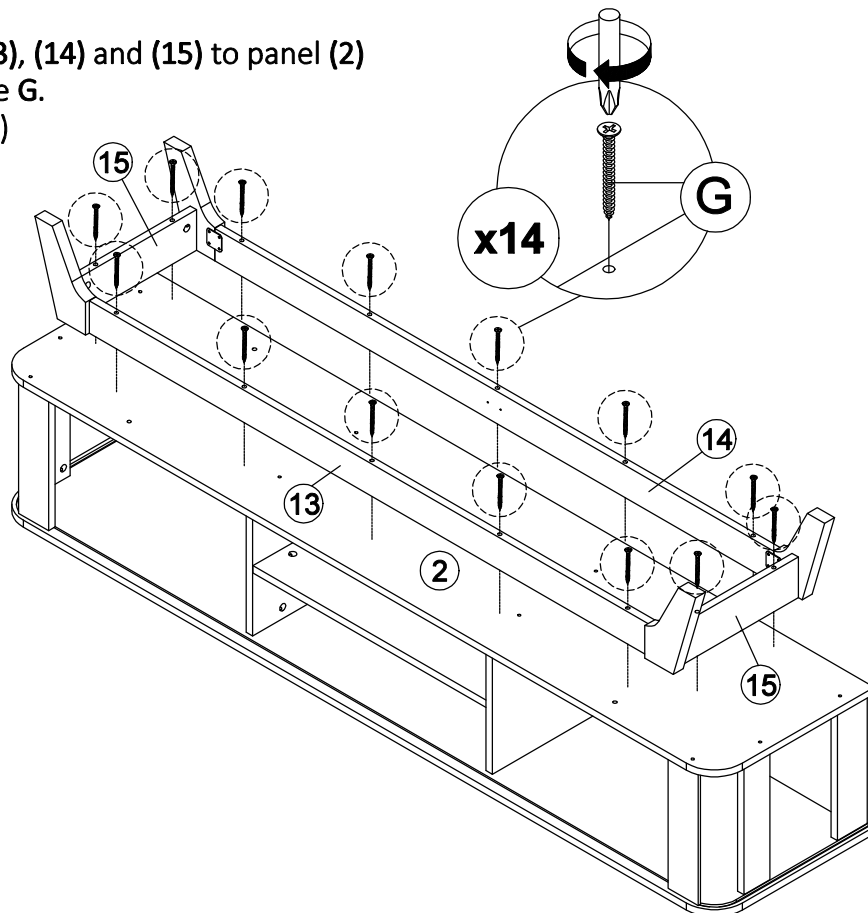


STEP 11:

- Connect panel (16) to panel (14) by using hardware F. (Repeat 2 times.)

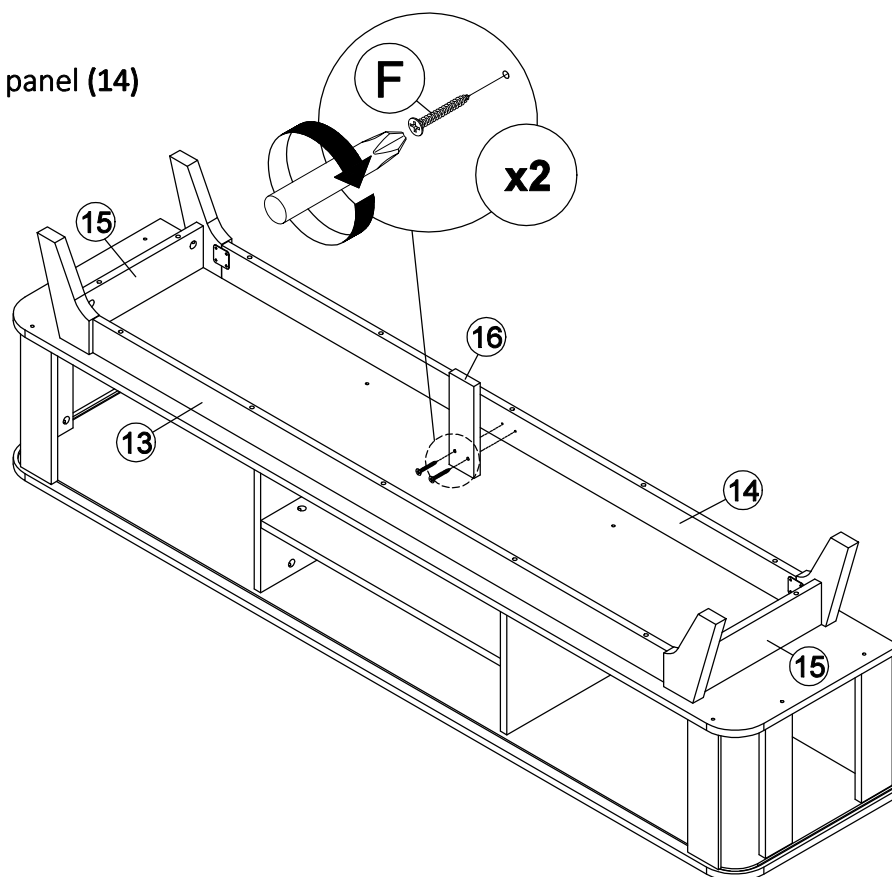


STEP 12:

- Hit hardware H into leg. (Repeat 5 times.)

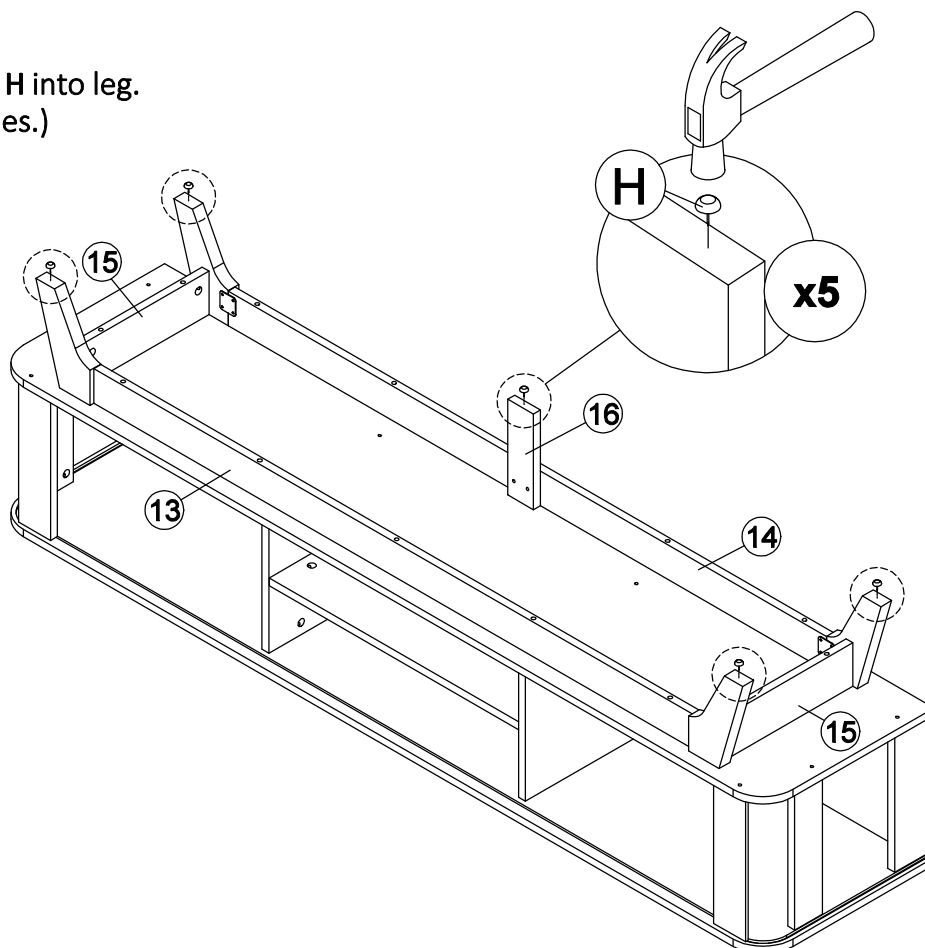


STEP 13:

- Insert the panel (17) along the slot.
(Repeat 1 times.)

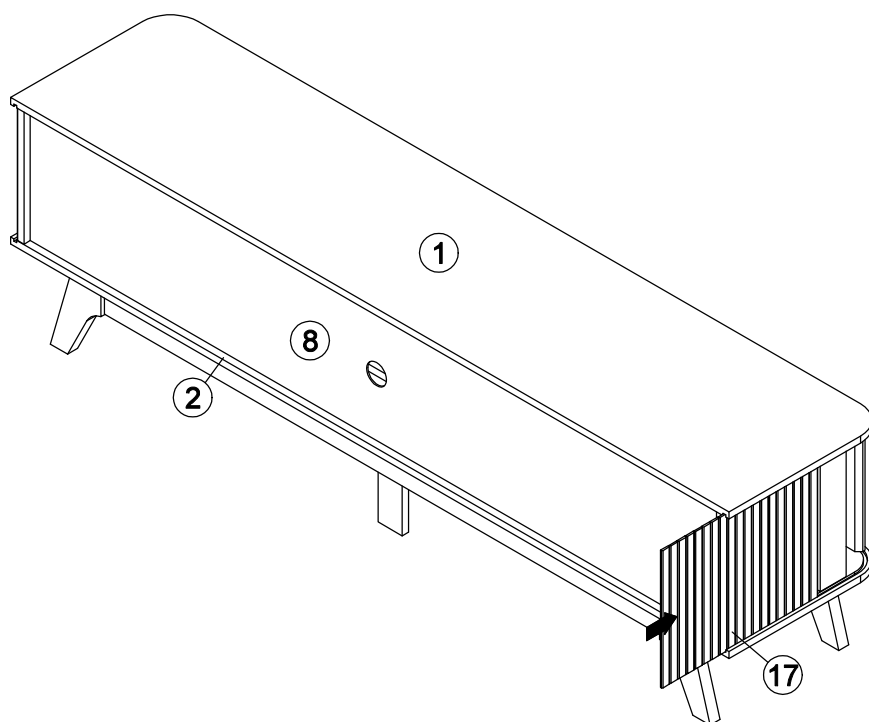


STEP 14:

- Insert the panel (17) along the slot.
(Repeat 1 times.)

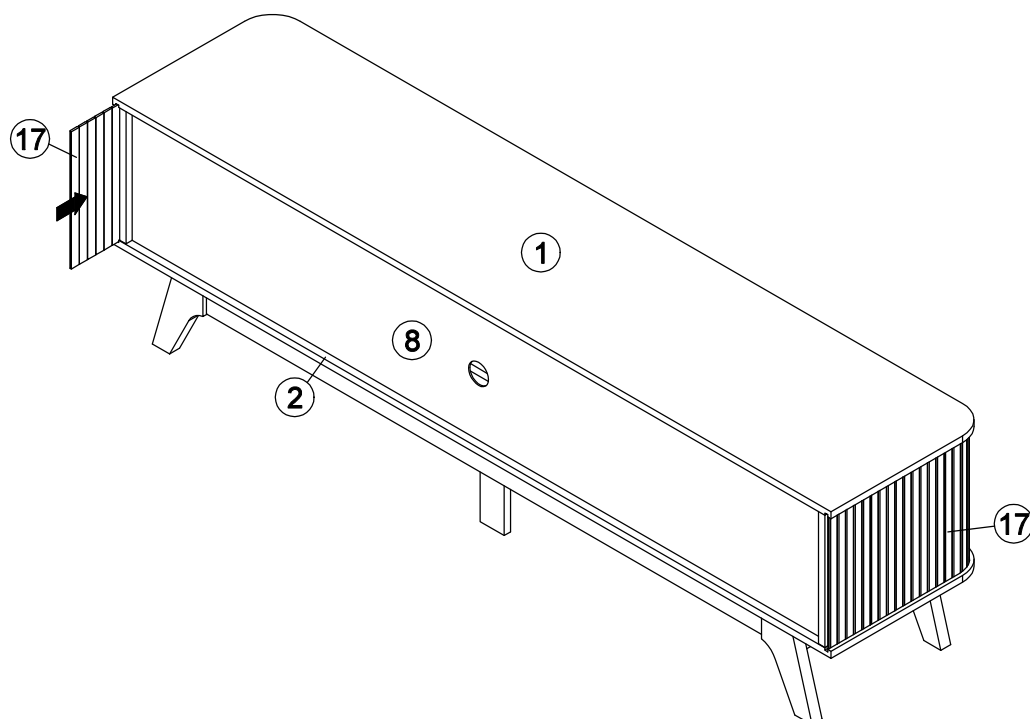


STEP 15:

- Assemble hardware J1 and J2 to panel (18) with hardware E.
(Repeat 2 times for each hardware.)

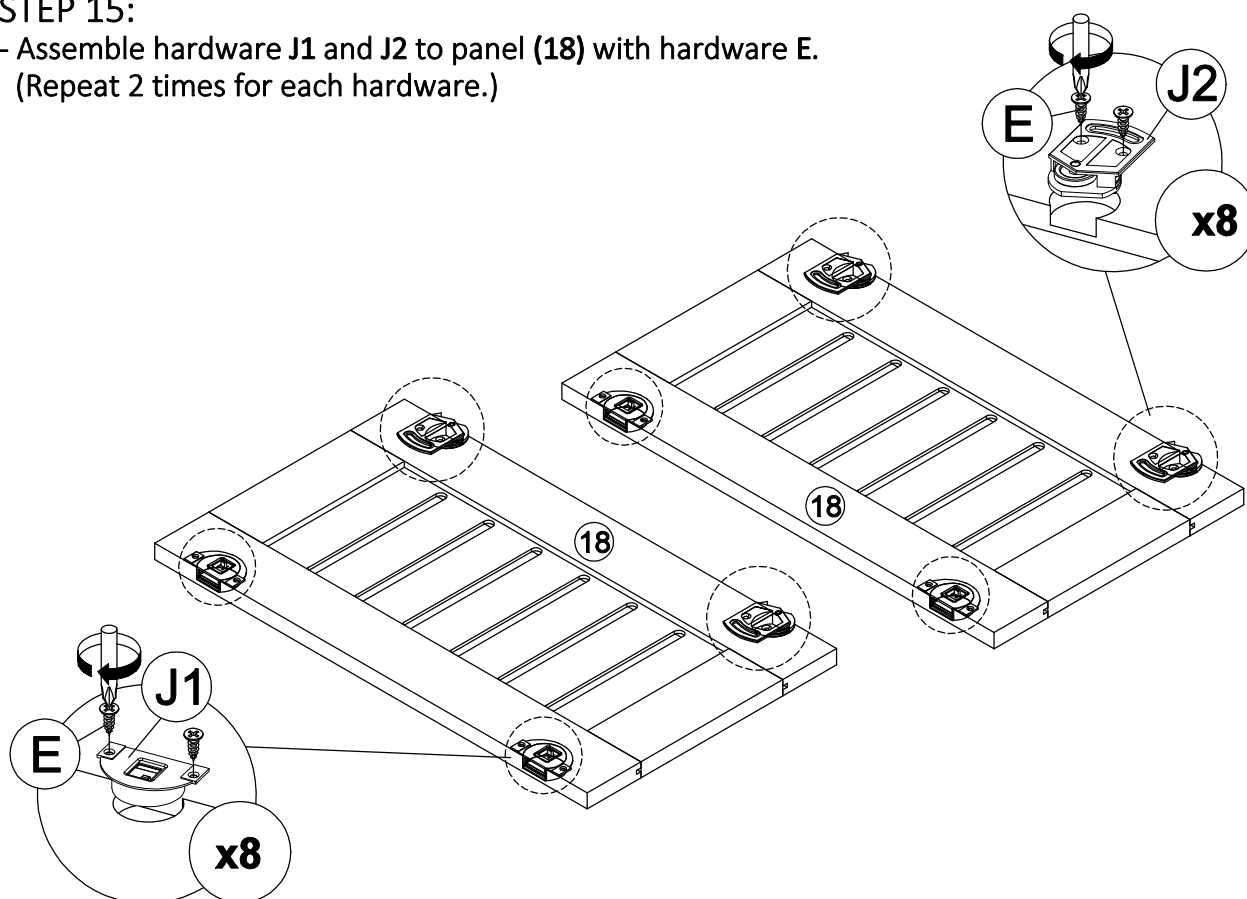


STEP 16:

- Put the panel (18) in place.
(Repeat 2 times.)

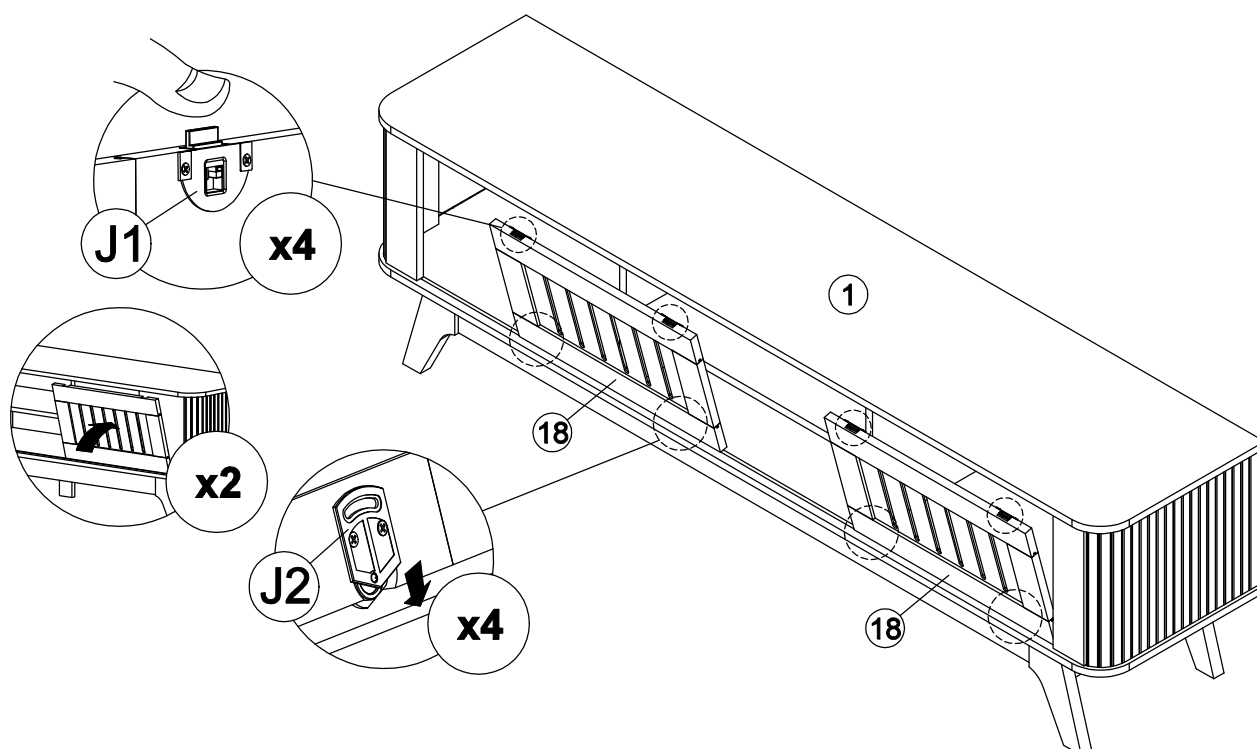

ASSEMBLY IS COMPLETE

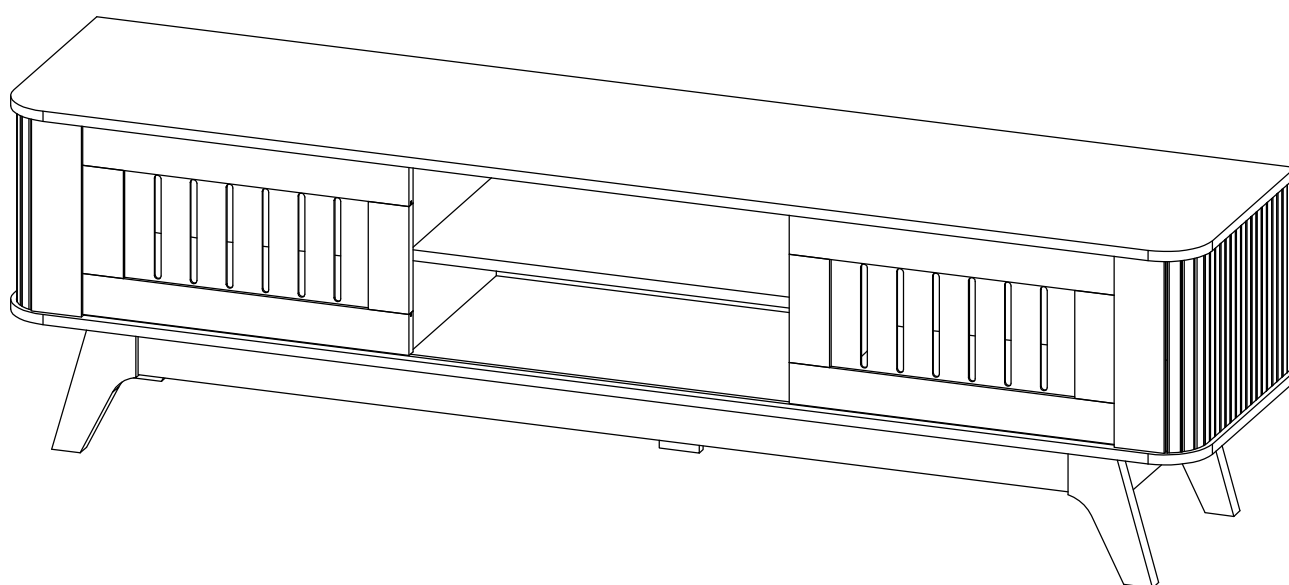

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.


HARDWARE



Metal Bracket
X4




Cable Tie
X2



Wall Screw
X2



Pan Head Screw
X2

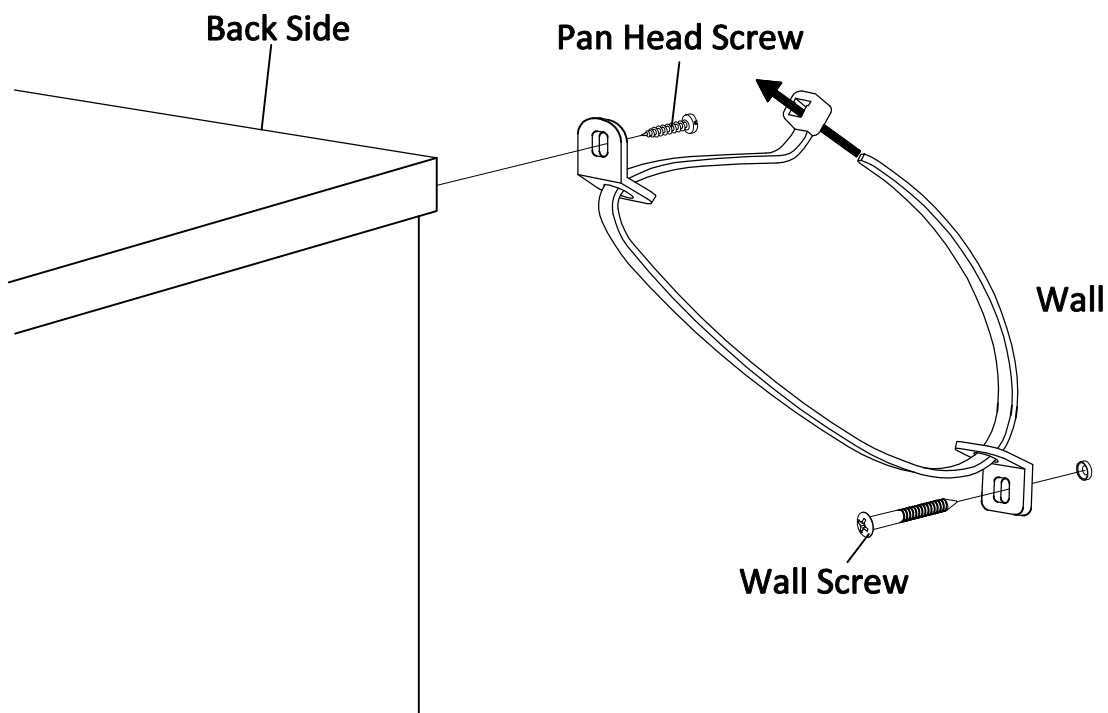

CARE AND MAINTENANCE

To protect your furniture, we suggest the following :

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under window.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause server finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.