


# ASSEMBLY INSTRUCTION GLACIAL FILING CABINET ITEM CODE 69413

Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

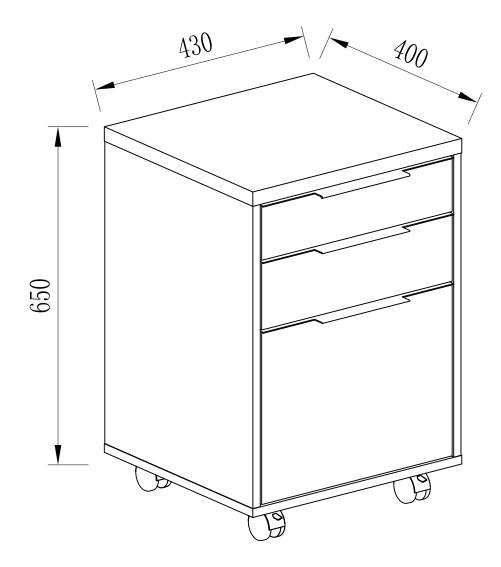


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

### PRE-ASSEMBLY PREPARATION

# Before you start:

- 1. Choose a clean,level,spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.

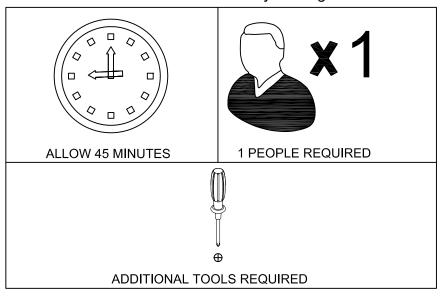




# **CAM Lock and Pins**

# step 1


#### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

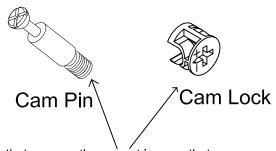

Ensure that you use the correct images that are representative of the hardware used in the product

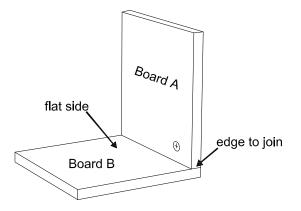


# step 2

#### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

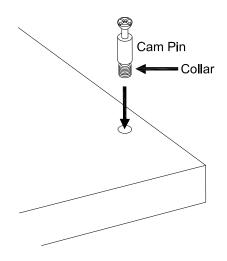

# step 3

# To use Cam Lock Fasteners


Now fit the hole in the edge of the joining board over the Cam Pin

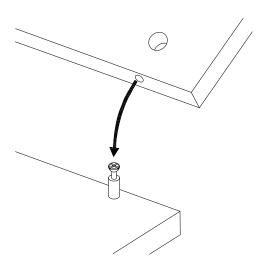

#### step 4

# To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

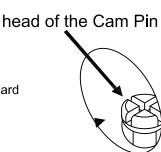

# To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin




Cam Lock

# step 5

# To use Cam Lock Fasteners


In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

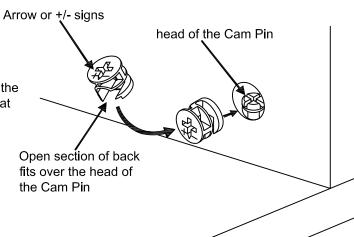


# step 6

#### To use Cam Lock Fasteners


Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

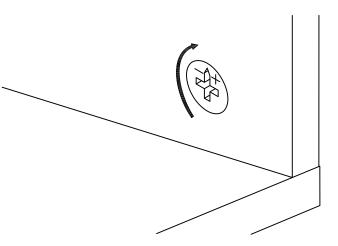


# **PARTS LIST**

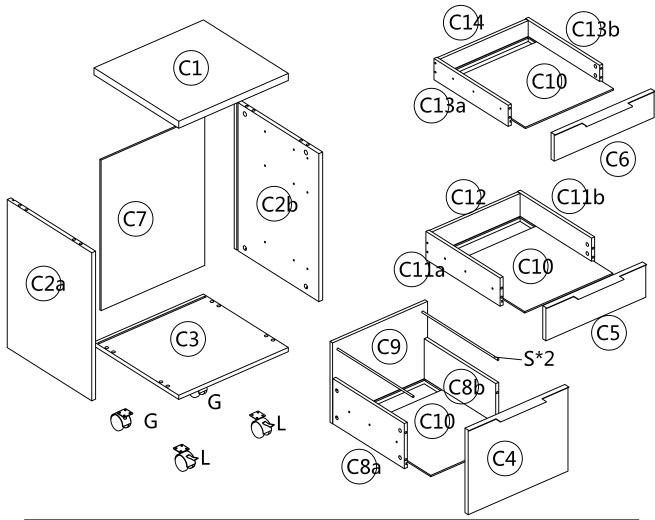


C1	Top panel	C8b	Drawer Right Side Panel
C2a	Left Side Panel	C9	Drawer Back Panel
C2b	Right Side Panel	C10	Drawer Bottom Panel
C3	Bottom Panel	C11a	Drawer Left Side Panel
C4	Drawer Front Panel	C11b	Drawer Right Side Panel
C5	Drawer Front Panel	C12	Drawer Back Panel
C6	Drawer Front Panel	C13a	Drawer Left Side Panel
C7	Back Panel	C13b	Drawer Right Side Panel
C8a	Drawer Left Side Panel	C14	Drawer Back Panel

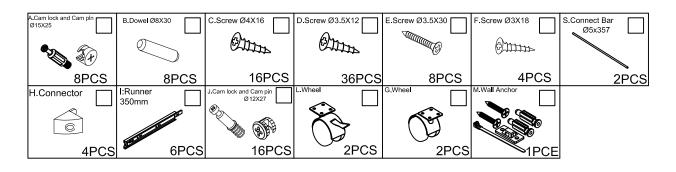


Runner slide separately(I=I1+I2)
Carefully pull out the runner slide(I2) and press plastic clip to fully separate runner slide as diagram shown

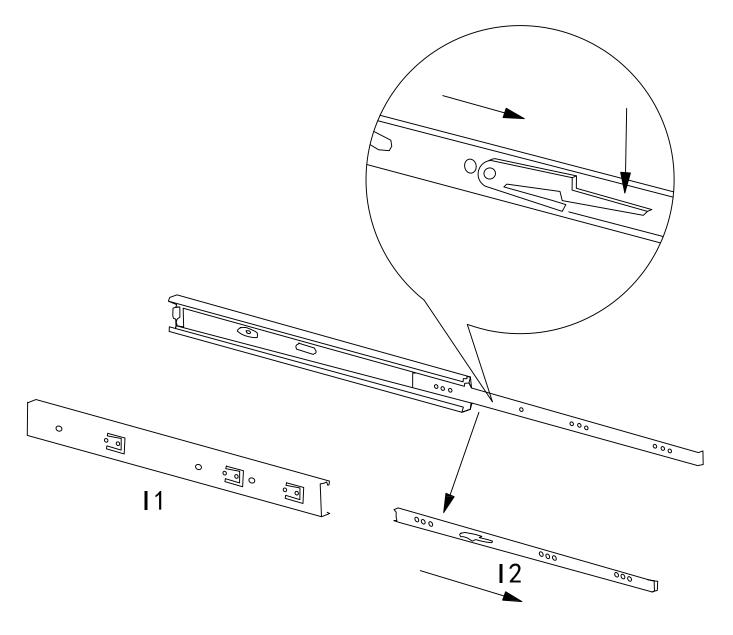


STEP 1: Insert the Dowel(B) to the Side Panel(C2a,C2b),Use a Phillips Head Screwdriver to insert the Cam Pin(A) Bottom Panel(C3),Assemble the Side Panel(C2a,C2b) to the Bottom Panel(C3),Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).

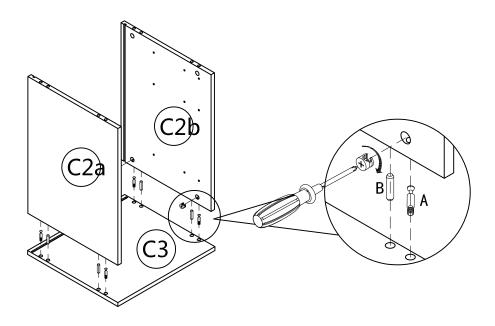


STEP 2: Slide the Back Panel (C7) into the slot of the Side Panels(C2a,Cab).

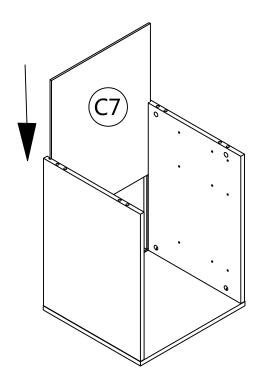


STEP 3: Insert the Dowel(B) to the Side Panel(C2a,C2b),Use a Phillips Head Screwdriver to Insert the Cam Pin(A) to the Top Panel(C1), Assemble the Top Panel (C1) to Side Panels (C2a,C2b),Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).

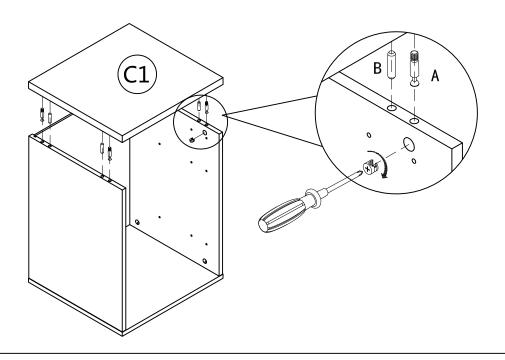


STEP 4: Tighten the Wheel(L,G) to the Bottom Panel(C3) with Screw(C).

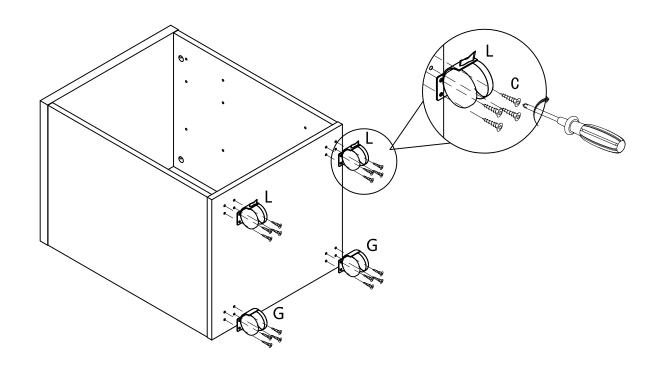

STEP 5: Tighten the Connector(H) to the back corner with Screw(F)

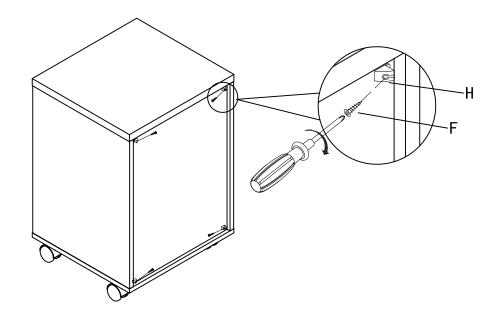


STEP 6: Tighten the Runner(I) to the Side Panels (C2a,C2b) with Screw(D).

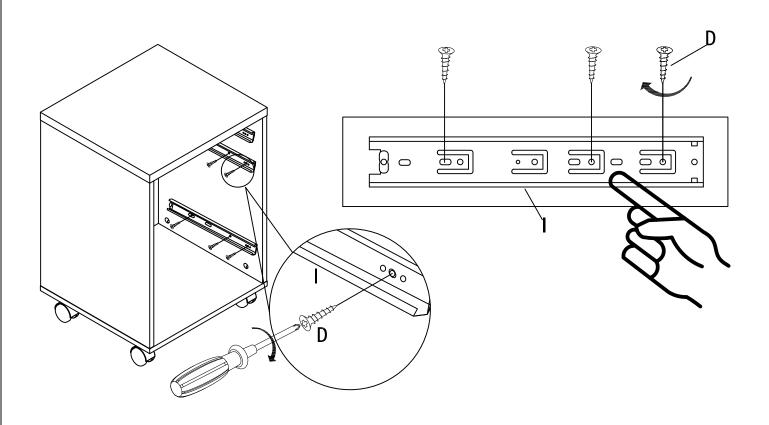


9-14

STEP 7: Tighten the Drawer Side Panel(C13a,C13b) to the Drawer Back Panel (C14) with Screw(E), Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel (C13a,C13b), Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Front Panel (C6), Assemble the Drawer Side Panel (C13a,C13b) to Drawer Front Panel (C6), Use a Phillips Head Screwdriver to turn the Cam Lock(J)to lock onto the head of Cam Pin(J).

Use a Phillips Head Screwdriver to turn the Cam Lock(J)to lock onto the head of Cam Pin(J).

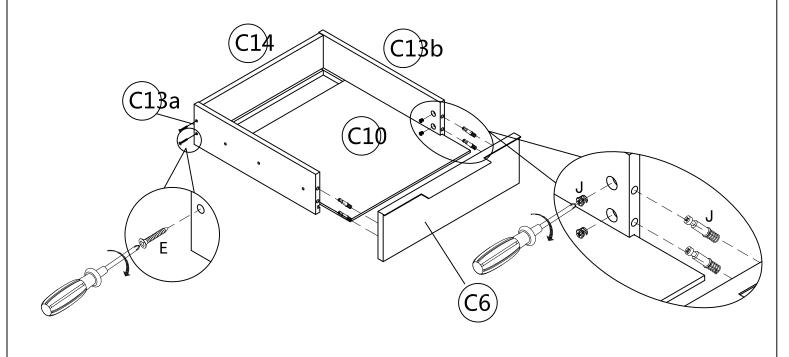


STEP 8: Tighten the Runner(I) to the Drawer Side Panels (C13a,C13b) with Screw(D).

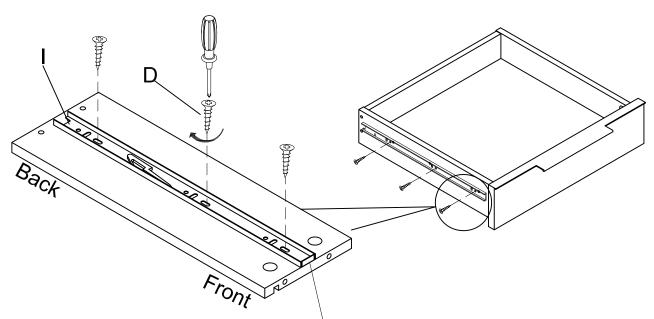


Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 9: Tighten the Drawer Side Panel(C11a,C11b) to the Drawer Back Panel (C12) with Screw(E), Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel (C11a,C11b), Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Front Panel (C5), Assemble the Drawer Side Panel (C11a,C11b) to Drawer Front Panel (C5), Use a Phillips Head Screwdriver to turn the Cam Lock(J)to lock onto the head of Cam Pin(J).

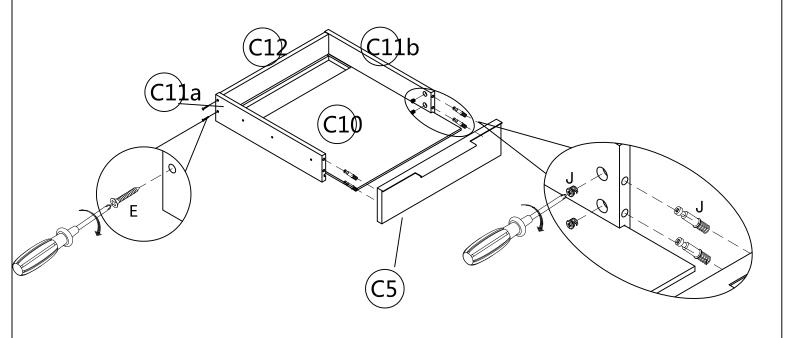


STEP 10: Tighten the Runner(I) to the Drawer Side Panels (C11a,C11b) with Screw(D).

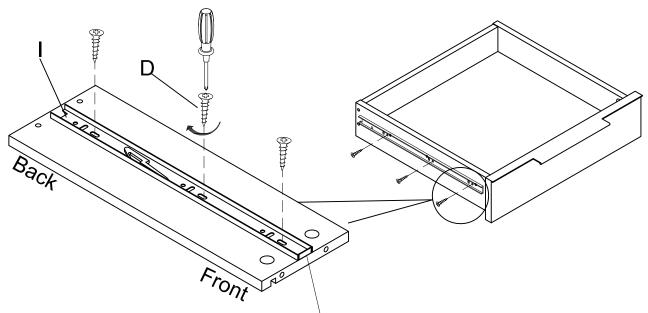


Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 11: Use a Phillips Head Screwdriver to insert the Cam Pin(J) to the Drawer Back Panel (C9) and Drawer Front Panel(C4), Assemble the Drawer Side Panel (C8a,C8b) to the Drawer Back Panel (C9),Use a Phillips Head Screwdriver to turn the Cam Lock(J) to lock onto the head of Cam Pin(J),Slide the Drawer Bottom Panel (C10) into the slot of the Drawer Side Panel(C8a,C8b),insert the Connect Bar(I) to the Drawer Back Panel (C9) and Drawer Front Panel (C4),Assemble the Drawer Side Panel(C8a,C8b) to the Drawer Front Panel (C4),Use a Phillips Head Screwdriver to turn the Cam Lock(J) to lock onto the head of Cam Pin(J).

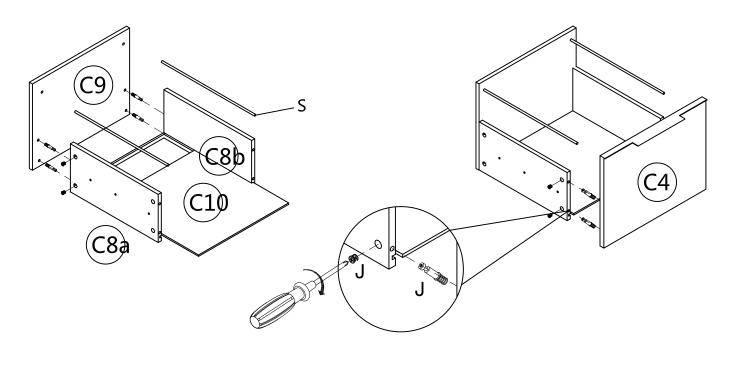


STEP 12: Tighten the Runner(I) to the Drawer Side Panels (C8a,C8b) with Screw(D).

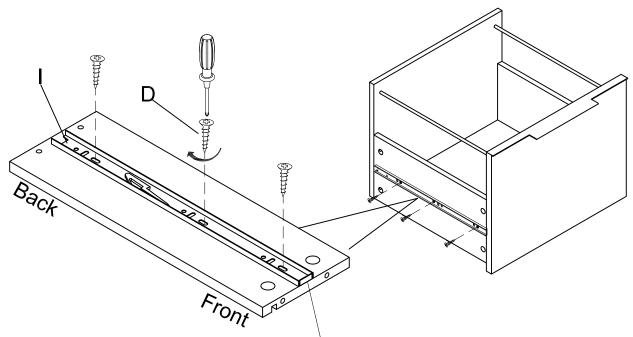

Runner slide must be flush with the drawer side panel edges during assembly step"

STEP 13: Insert the Drawers into the Body  $_{\mbox{\tiny 0}}$ 

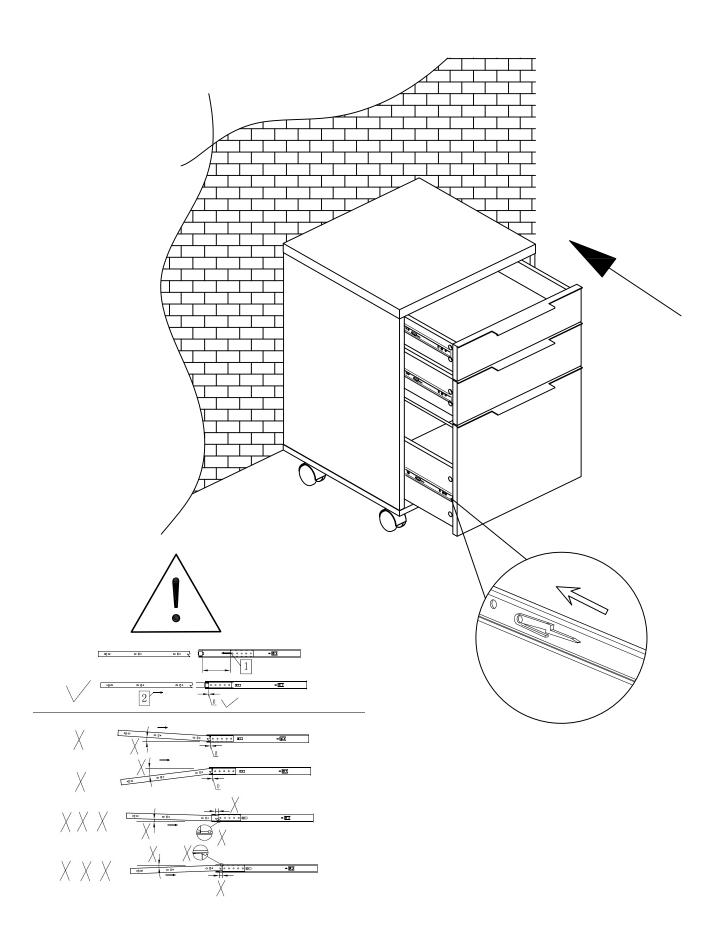


#### SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

**HARDWARE** 

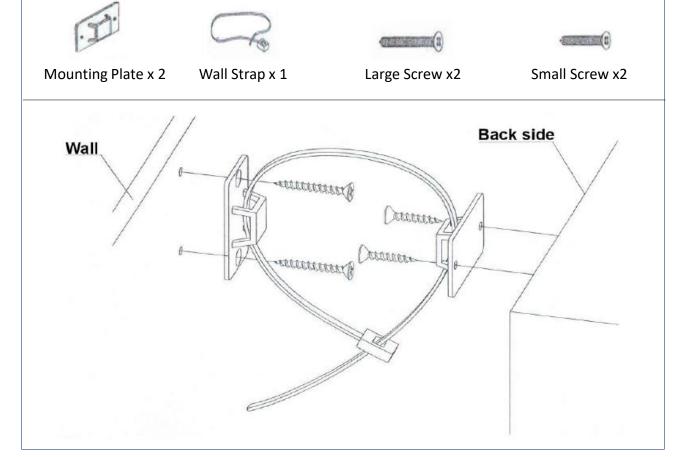

#### IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from

Amart Furniture, Australia's largest discount furniture retail store.

Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- <u>Dust frequently with a clean damp, lint-free cloth</u>. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- <u>Do not place hot objects on any furniture surface</u>. Always use a hot plate or
  placemat. Lacquer finishes provide added scratch and heat resistance to our
  furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These
  may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage
  the product. Instead use two people to lift carefully with caution from either
  end.

