




ASSEMBLY INSTRUCTION
REZA STUDY DESK
ITEM CODE 65343

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084


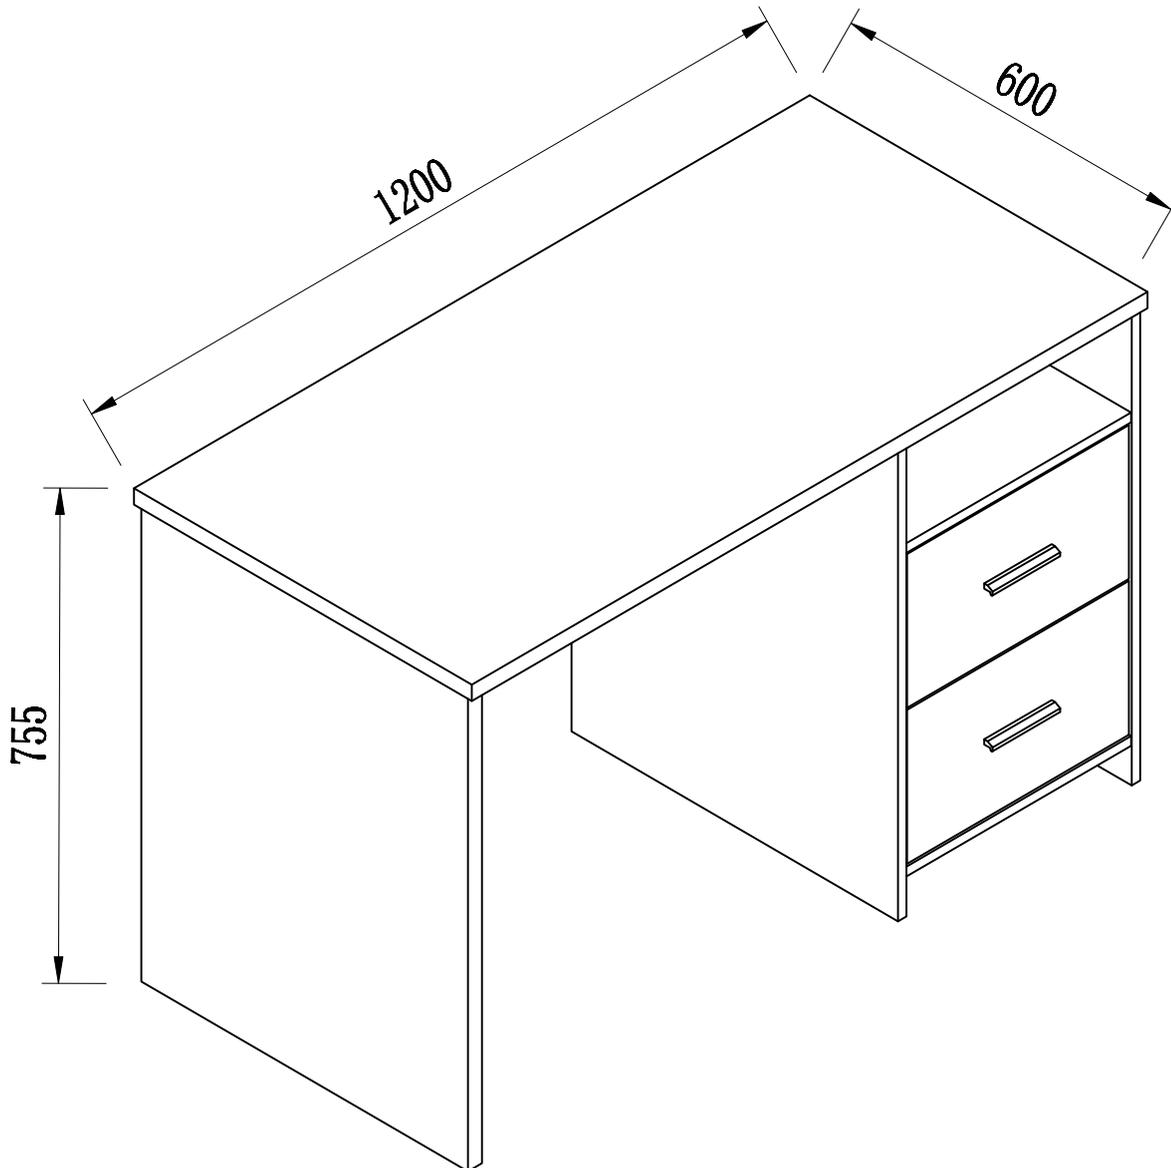



Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

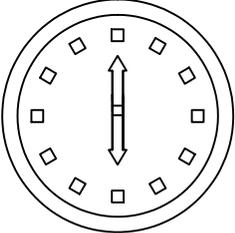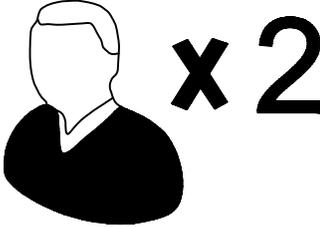 <p>ALLOW 30 MINUTES</p>	 <p>2 PEOPLE REQUIRED</p>
 <p>ADDITIONAL TOOLS REQUIRED</p>	

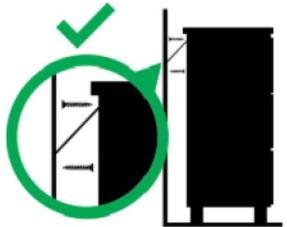⚠ WARNING		
		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture </p> <p><small>This is a permanent label. Do not remove!</small></p>



CAM Lock and Pins

step 1

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used.
The below is information on how these work.

Cam Locks are fasteners used to join two boards together,
usually the edge of one board(A) to the flat side of another board(B)

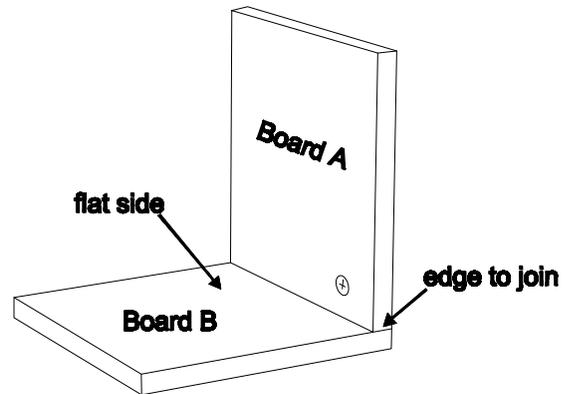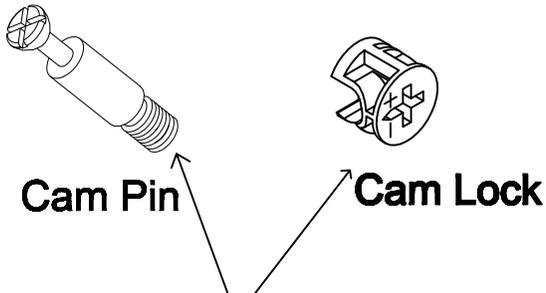


Ensure that you use the correct images that are representative
of the hardware used in the product

step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board,
it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

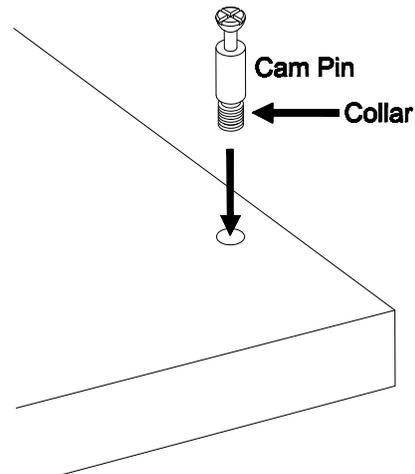

step 3

To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

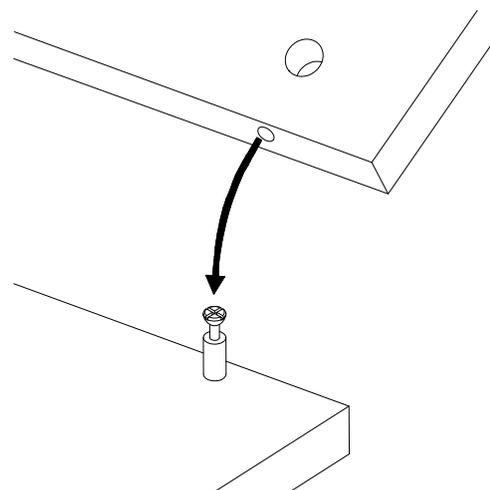


step 4

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

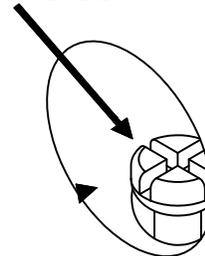

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

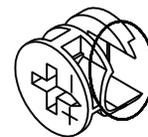

Cam Lock

step 5


To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

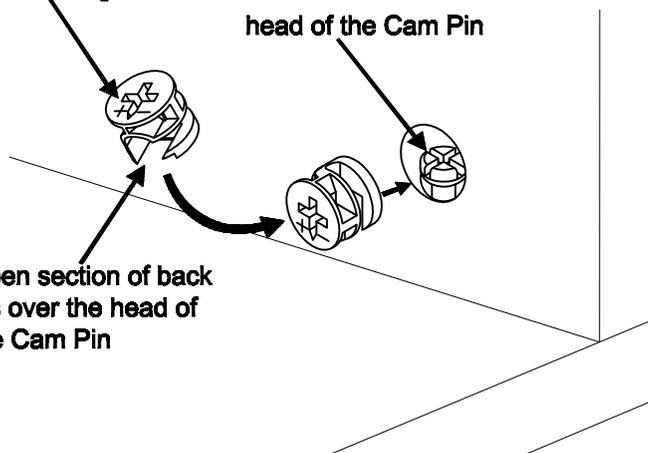


step 6

To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

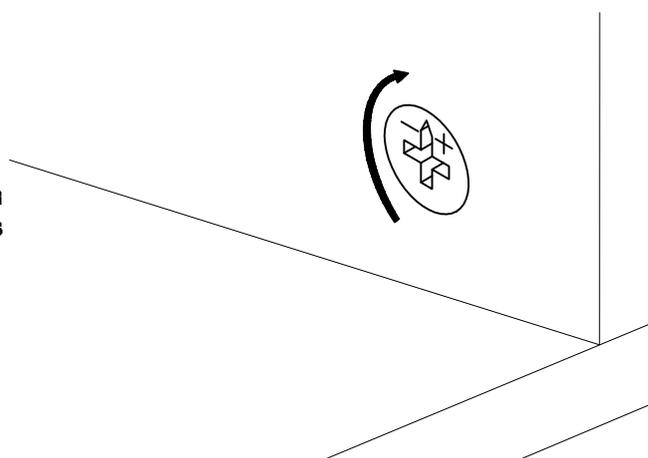

PARTS LIST

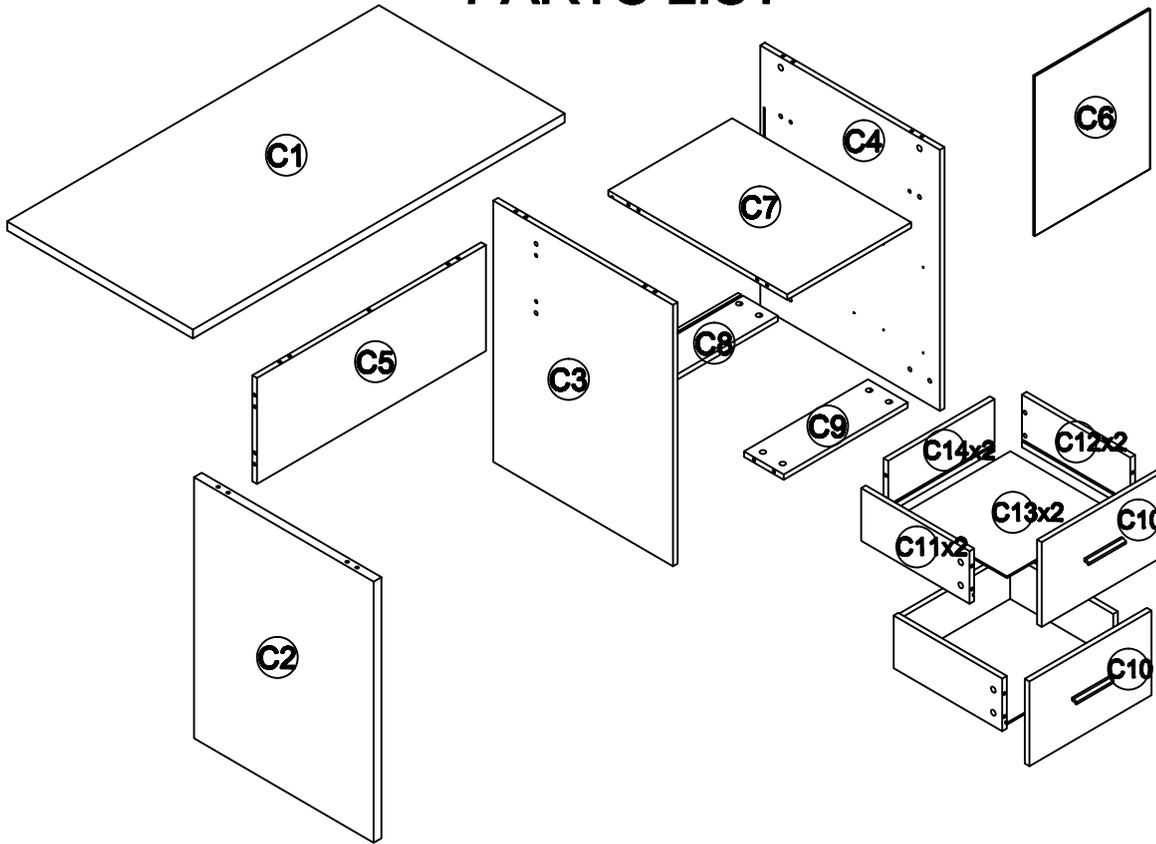


C1	Top Panel	C9	Chest Bottom Front Connect Panel
C2	Left Side Panel	C10	Drawer Front Panel
C3	Middle Side Panel	C11	Drawer Left Side Panel
C4	Right Side Panel	C12	Drawer Right Side Panel
C5	Back Panel	C13	Drawer Bottom Panel
C6	Chest Back Panel	C14	Drawer Back Panel
C7	Chest Shelf Panel		
C8	Chest Bottom Back Connect Panel		



A. Cam lock and Cam pin  <input type="checkbox"/> 46PCS	B. Dowel Ø8X30  <input type="checkbox"/> 16PCS	C. Screw Ø4X12  <input type="checkbox"/> 24PCS	D. Screw Ø3X18  <input type="checkbox"/> 4PCS	E. Connector  <input type="checkbox"/> 4PCS	F. Bolt M4X20  <input type="checkbox"/> 4PCS	G. Cover Ø20  <input type="checkbox"/> 20PCS
H. Wall Anchor  <input type="checkbox"/> 1PCE	P. Floor Protector 28x14x8mm  <input type="checkbox"/> 10PCS	J. Handle  <input type="checkbox"/> 2PCS	K: Runner (L) 350mm  <input type="checkbox"/> 2PCS	K: Runner (R) 350mm  <input type="checkbox"/> 2PCS	P. Glue  <input type="checkbox"/> 1PCE	

65343


Step 1. Take off the Runner (K,L&R)

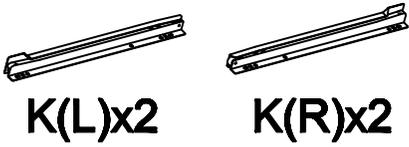


$K=K1+K2$

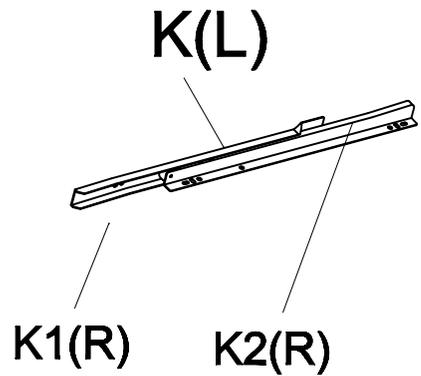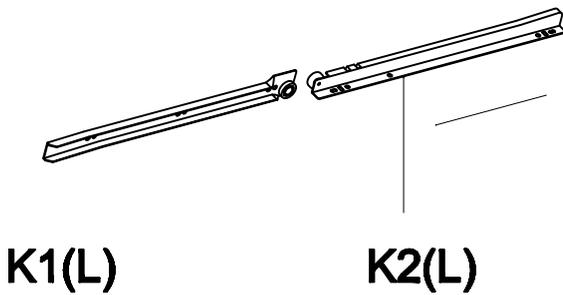


STEP 2: Tighten the Runner(K1)to the Middle Side Panel(C3)and Right Side Panel(C4) with Screw (C),Place a small amount of glue on each dowel (B) and insert into the Middle Side Panel(C3)and Right Side Panel(C4). Use a Phillips Head Screw driver to insert the Cam Pin (A) to the Middle Side Panel(C3)and Right Side Panel(C4)and Drawer Left Side Panel and Right Side Panel(C11,C12) and the Drawer Front Panel(C10).

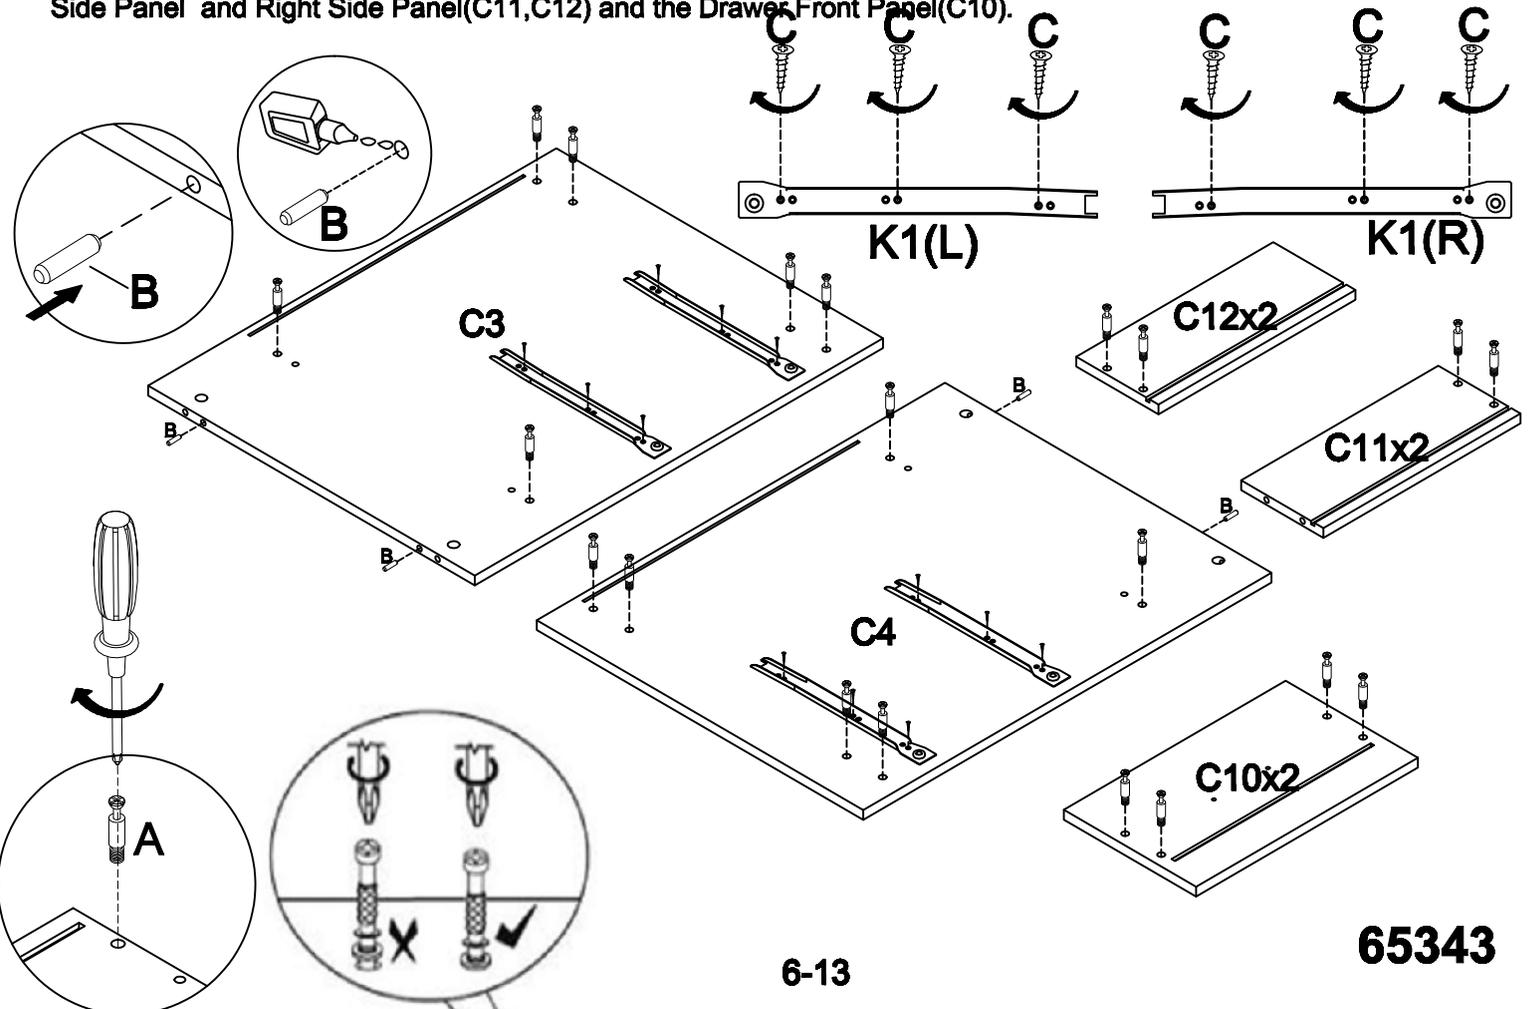


STEP 3: Use a Phillips Head Screw driver to insert the Cam Pin (A) to the Top Panel (C1) and Left Side Panel(C2).Insert the Dowel (B) to the Left Side Panel(C2) and Back Panel (C5) and Chest Shelf Panel (C7).

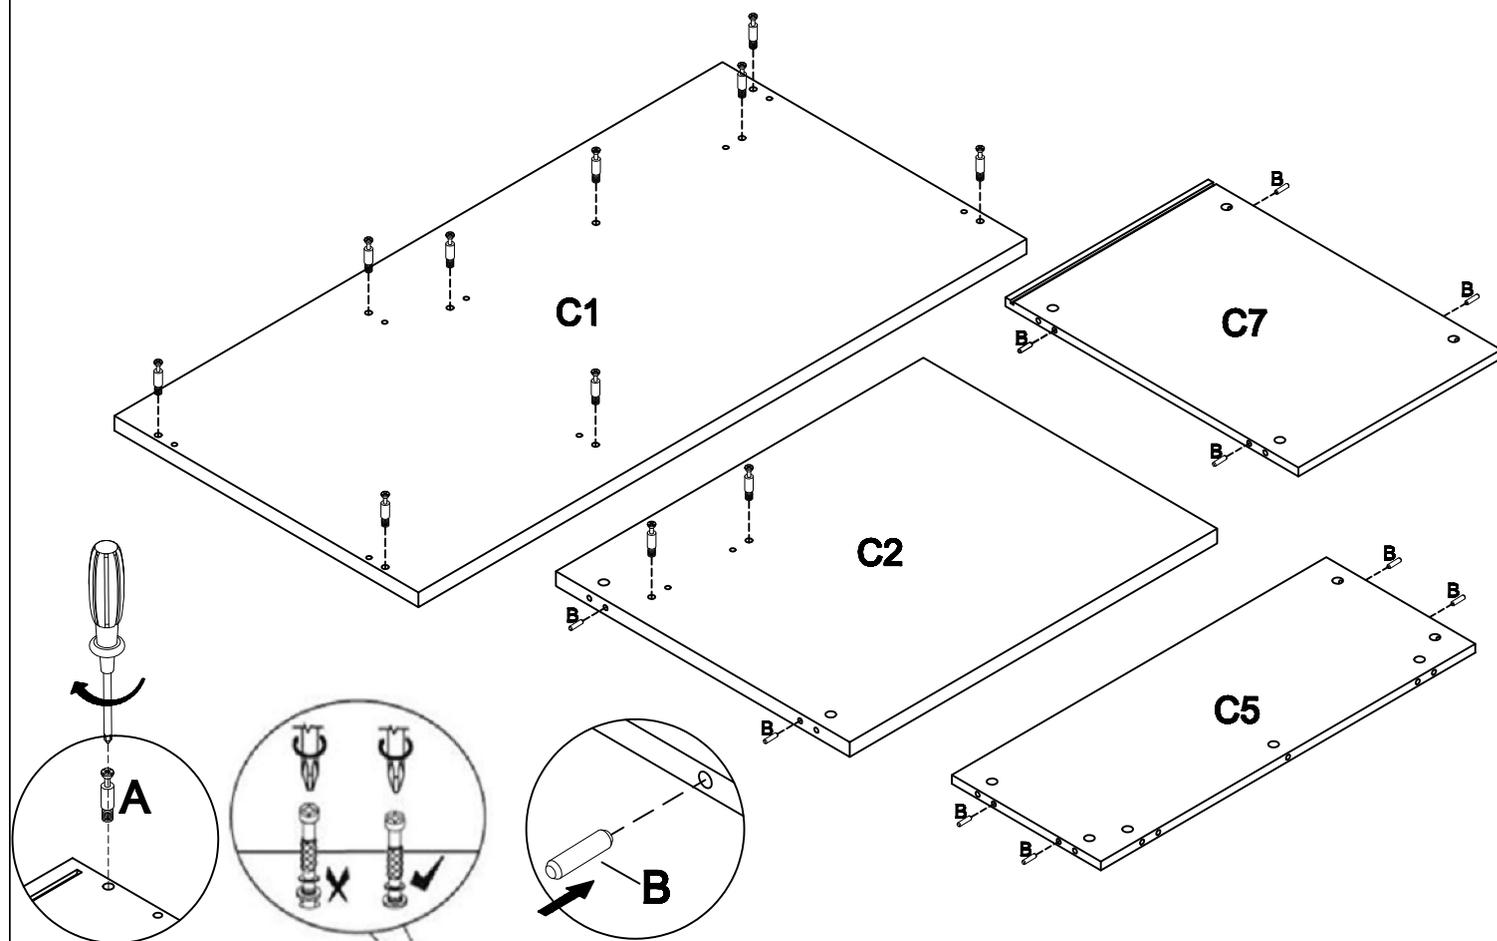


STEP 4: Insert the Chest Bottom Connect Panel (C8,C9) and Chest Shelf Panel (C7) to the Middle Side Panel (C3),Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin(A).Insert the Return Chest Back Panel (C6) to the Chest Bottom Back Connect Panel (C8) and Chest Shelf Panel (C7).

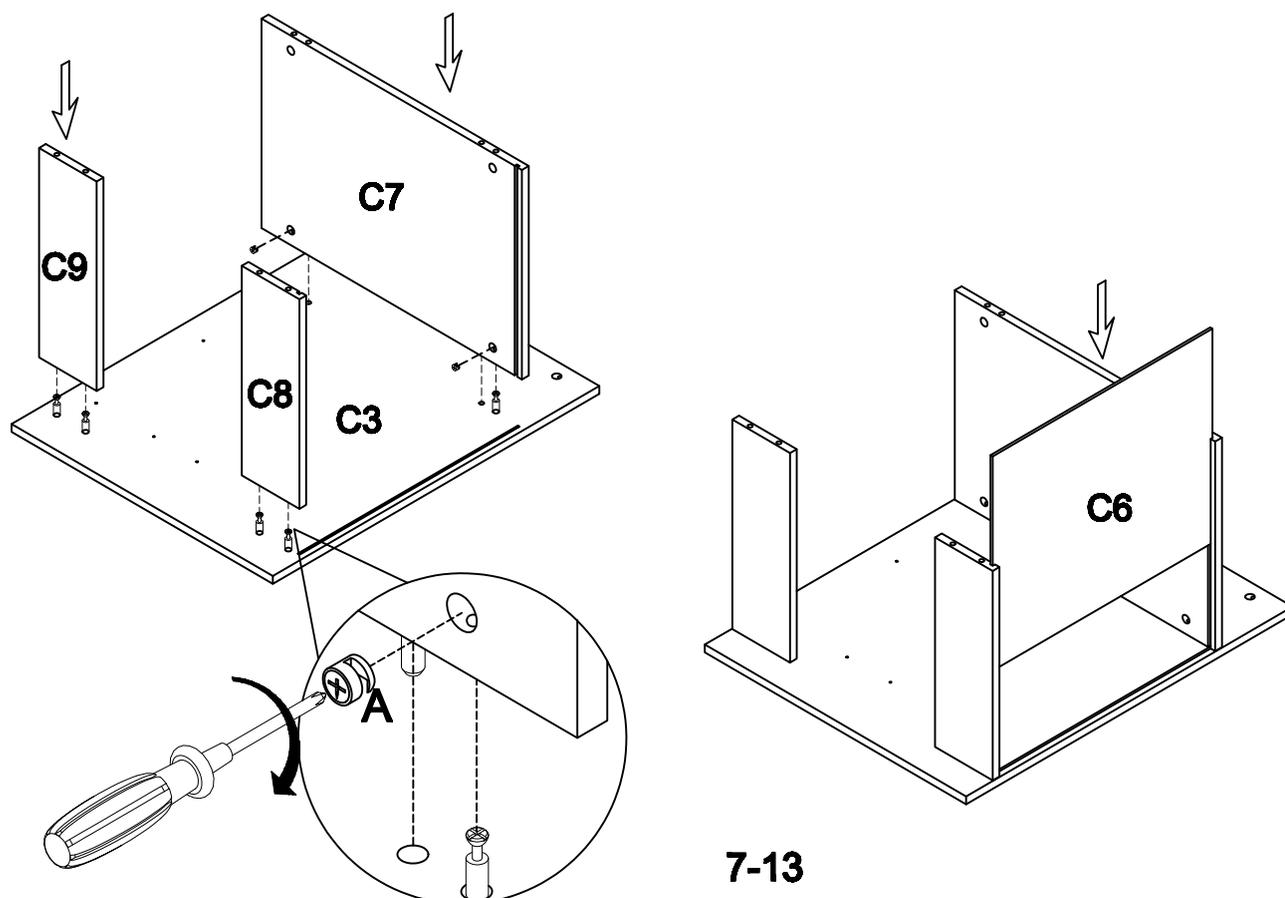


STEP 5: Assemble the Right Side Panel (C4) to the Chest Bottom Connect Panel (C8,C9) and Chest Shelf Panel (C7), Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

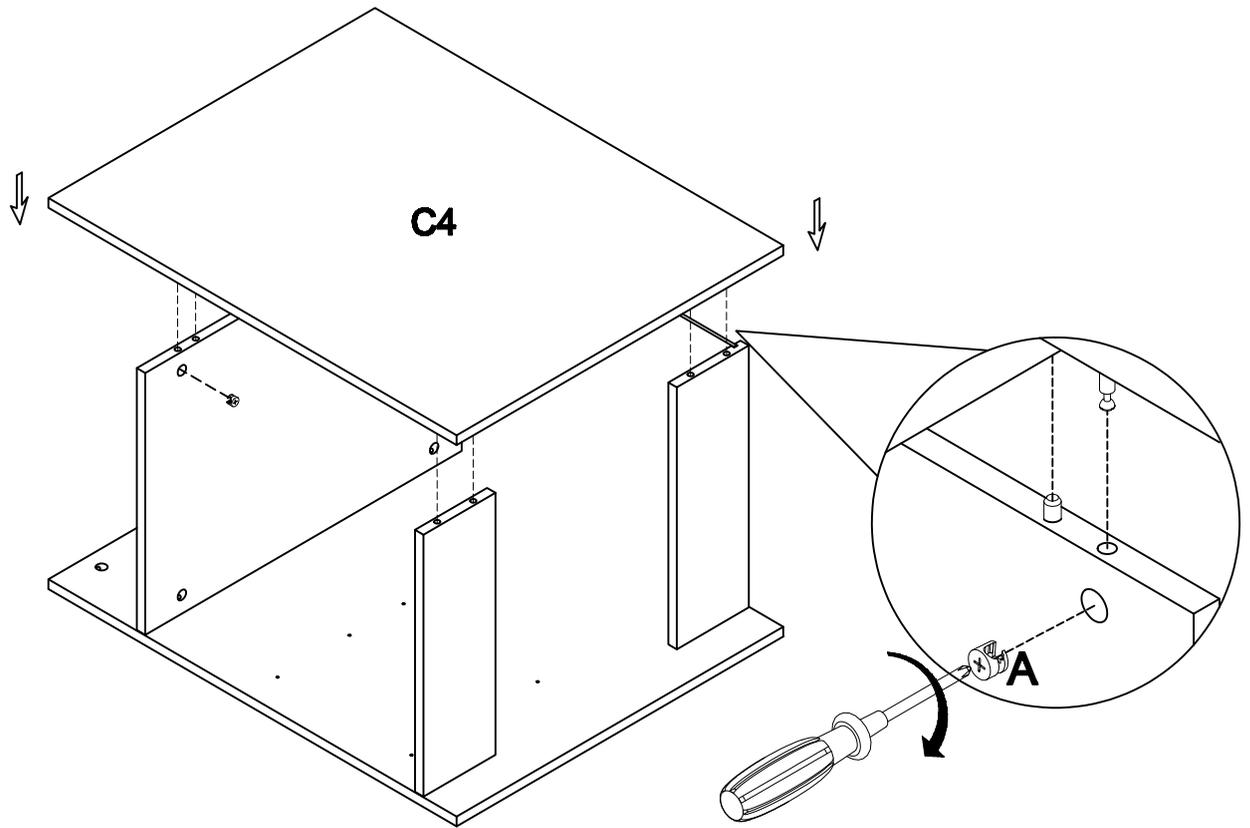


STEP 6: Assemble the Back Panel (C5) to the Middle Side Panel (C3) and Left Side Panel (C2). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

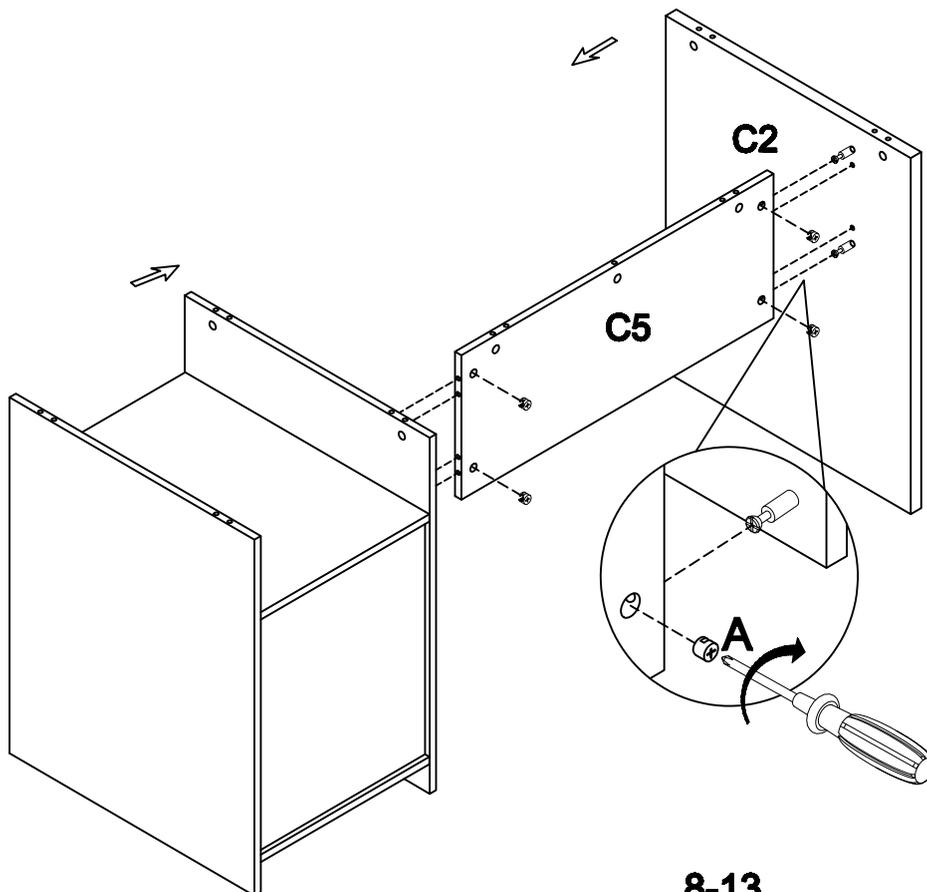


STEP 7: Assemble the Top Panel (C1) to the Left and Right Side Panel (C2,C4) and Middle Side Panel (C3) and Back Panel (C5), Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

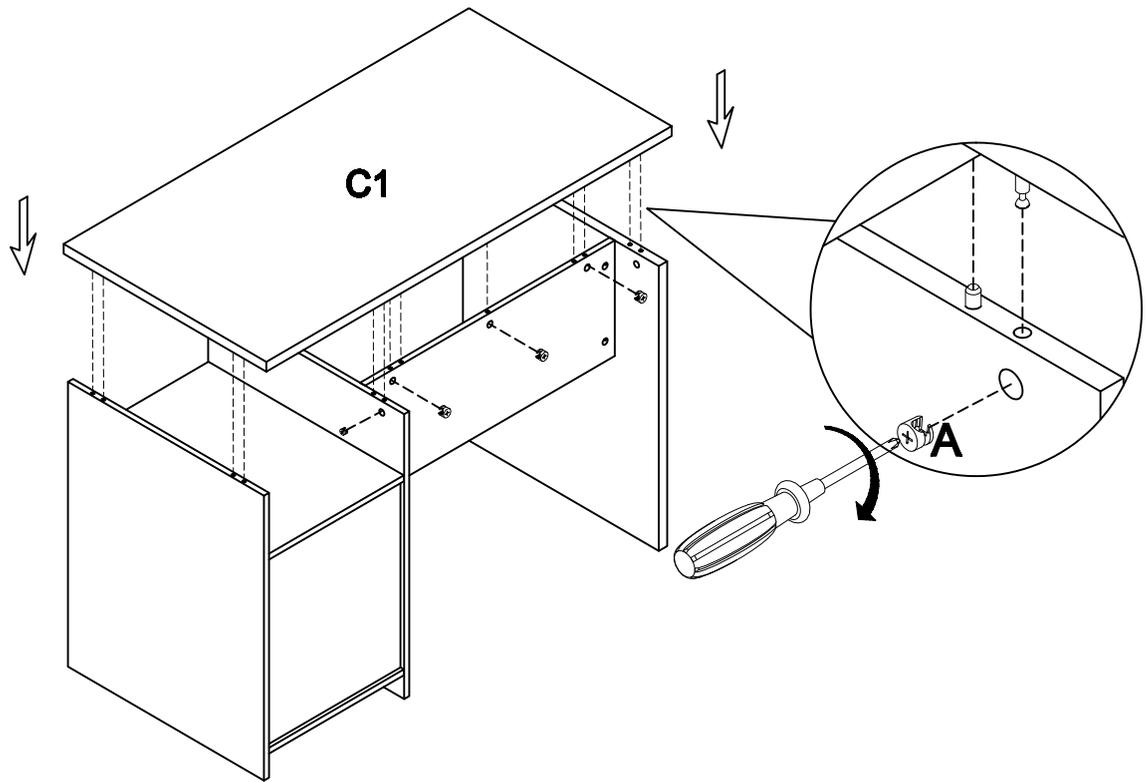

STEP 8: Use a Phillips Head Screwdriver to tighten the Belt (H) to the Back Panel (C5). Use a Phillips Head Screwdriver to tighten the Connector (E) to the Chest back corner with Screw (D).

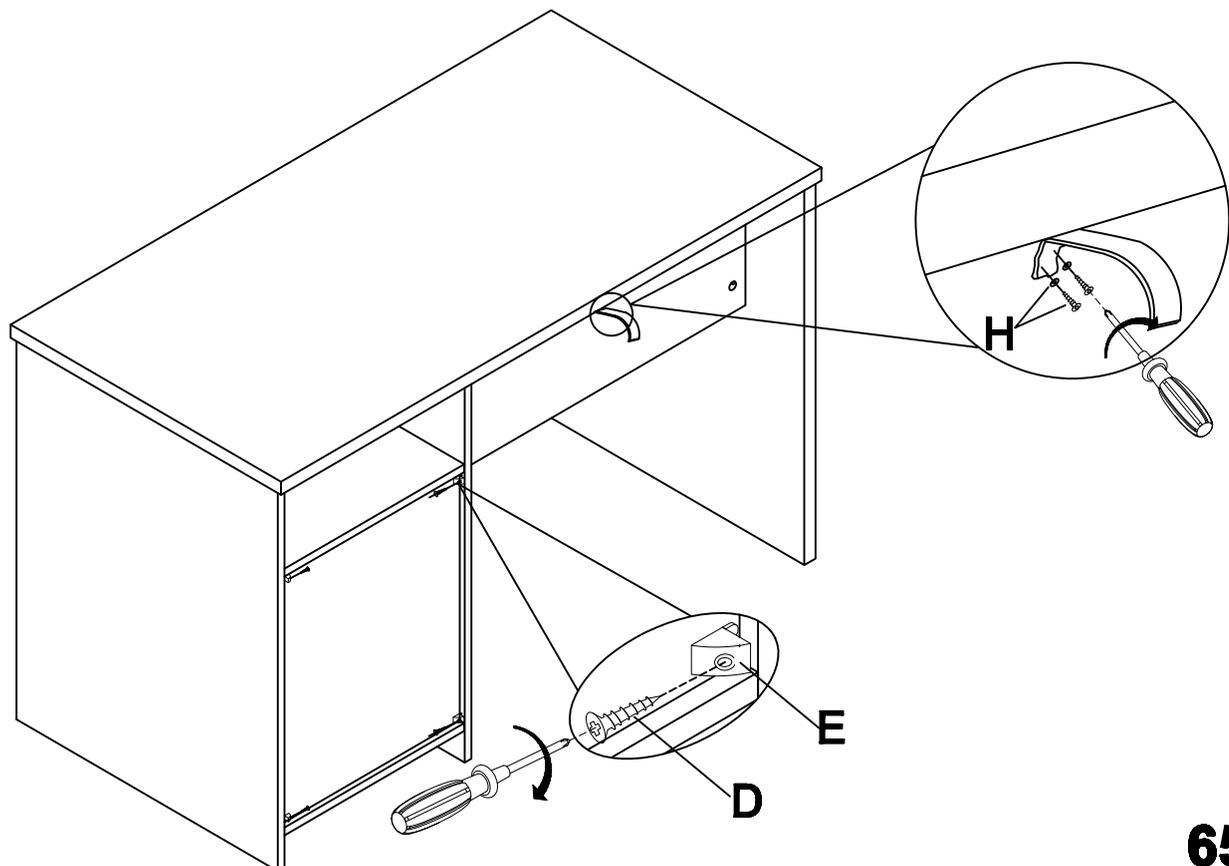


STEP 9: Assemble the Drawer Back Panel (C14) to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (C12), Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock onto the head of Cam Pin (A).

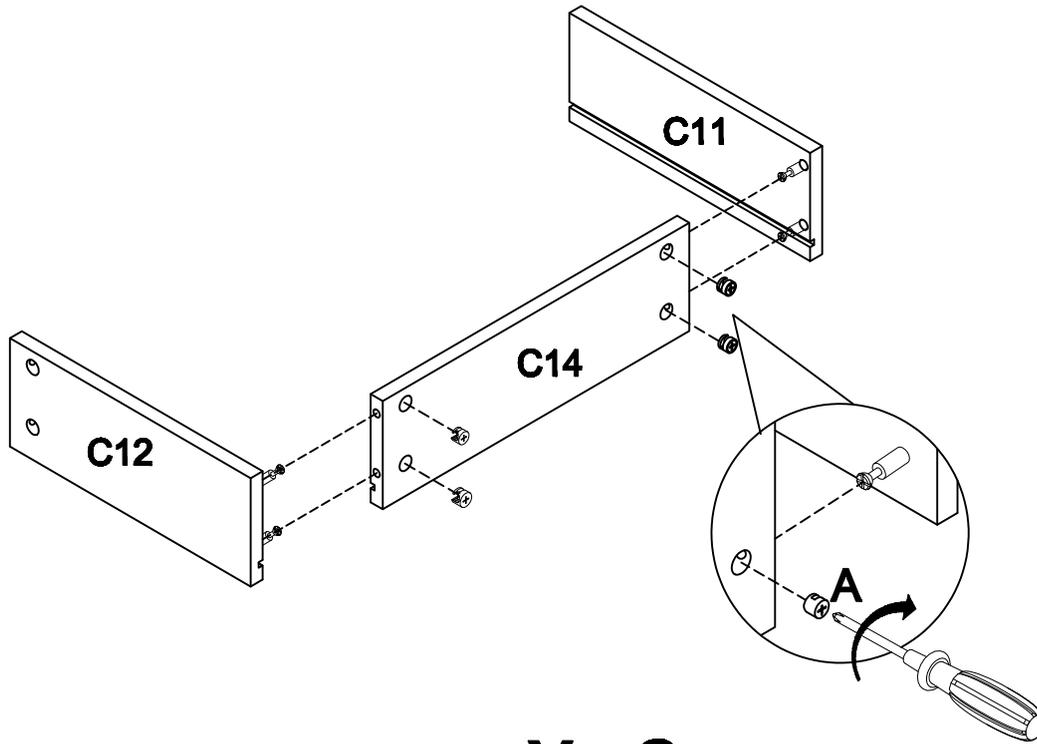

X 2


STEP 10: Insert the Drawer Bottom Panel (C13) to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (C12). Assemble the Drawer Front Panel (C10) to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (C12), Use a Phillips Head Screwdriver to turn the Cam Lock(A) to lock onto the head of Cam Pin (A).Use a Phillips Head Screwdriver to tighten the Handle (J) to the Drawer Front Panel (C10) with Bolt (F).

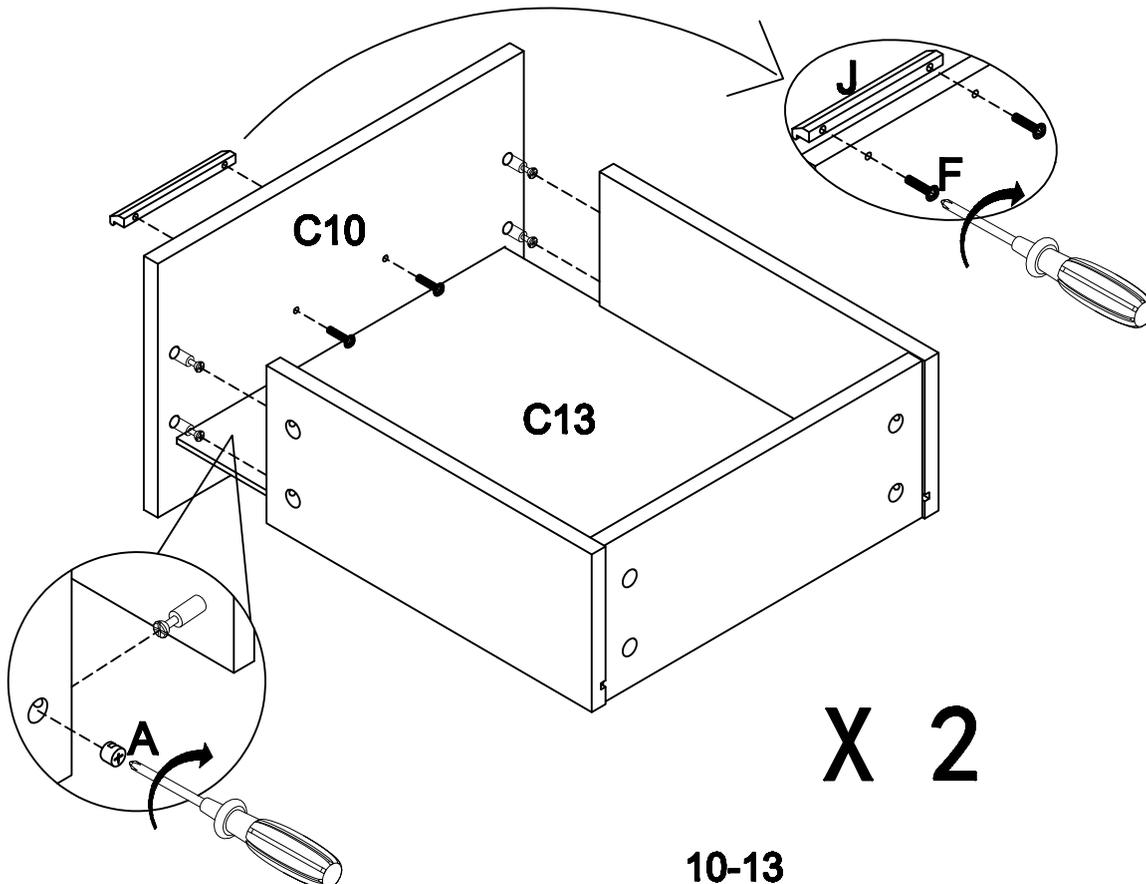


X 2

65343


STEP 11: Use a Phillips Head Screwdriver to tighten the Runner (K2) to the Drawer Left Side Panel (C11) and Drawer Right Side Panel (12) with Screw (C).

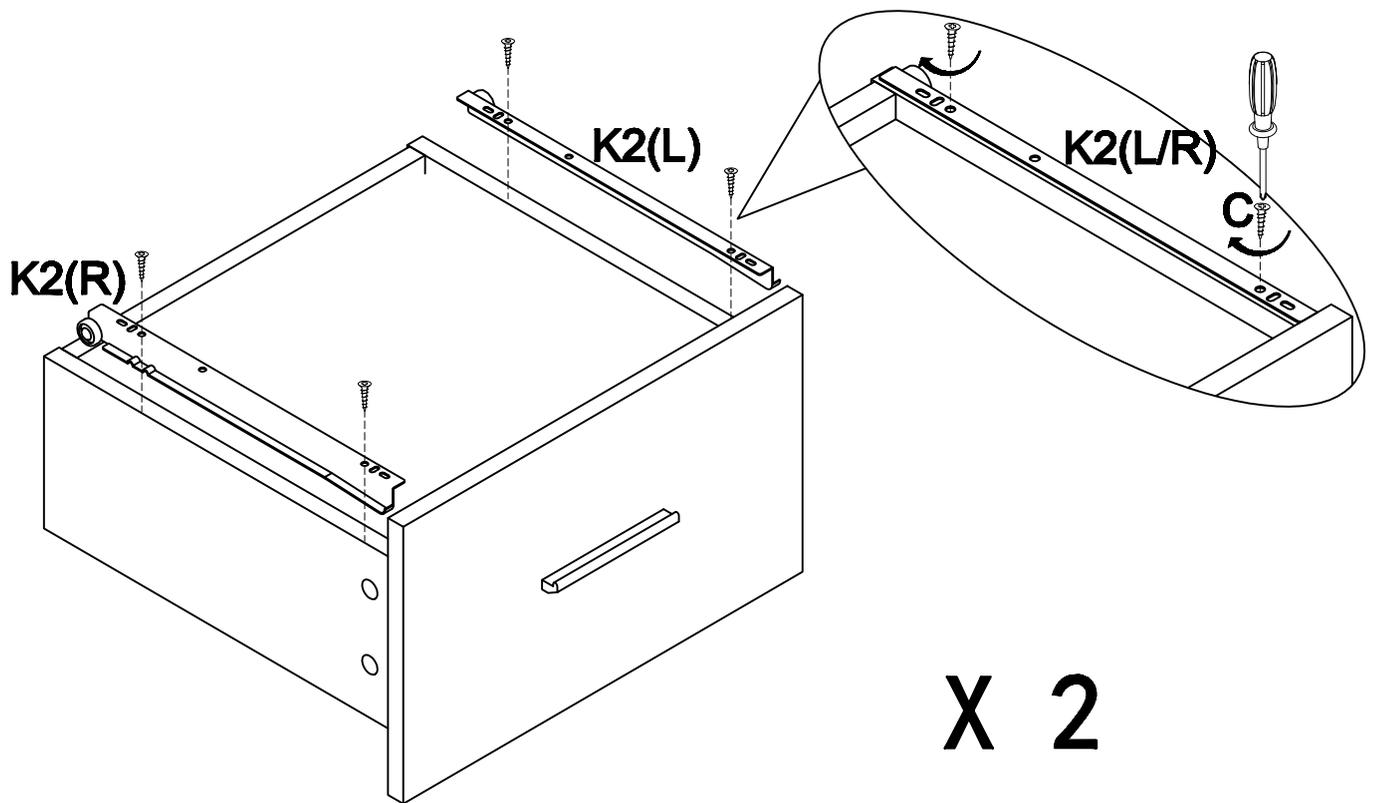


STEP 12: Insert the Drawer to the Middle Side Panel (C3) and Right Side Panel (C4).

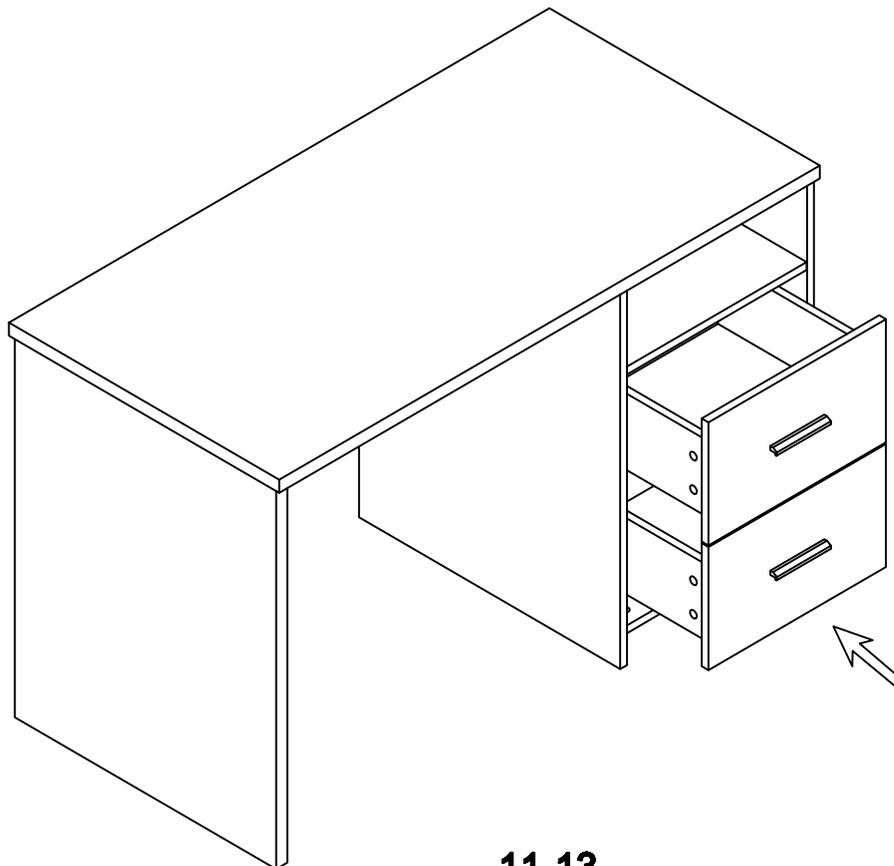

STEP 13: Use a Phillips Head Screwdriver to turn tighten the Belt (H) to the Wall with Screw (I).

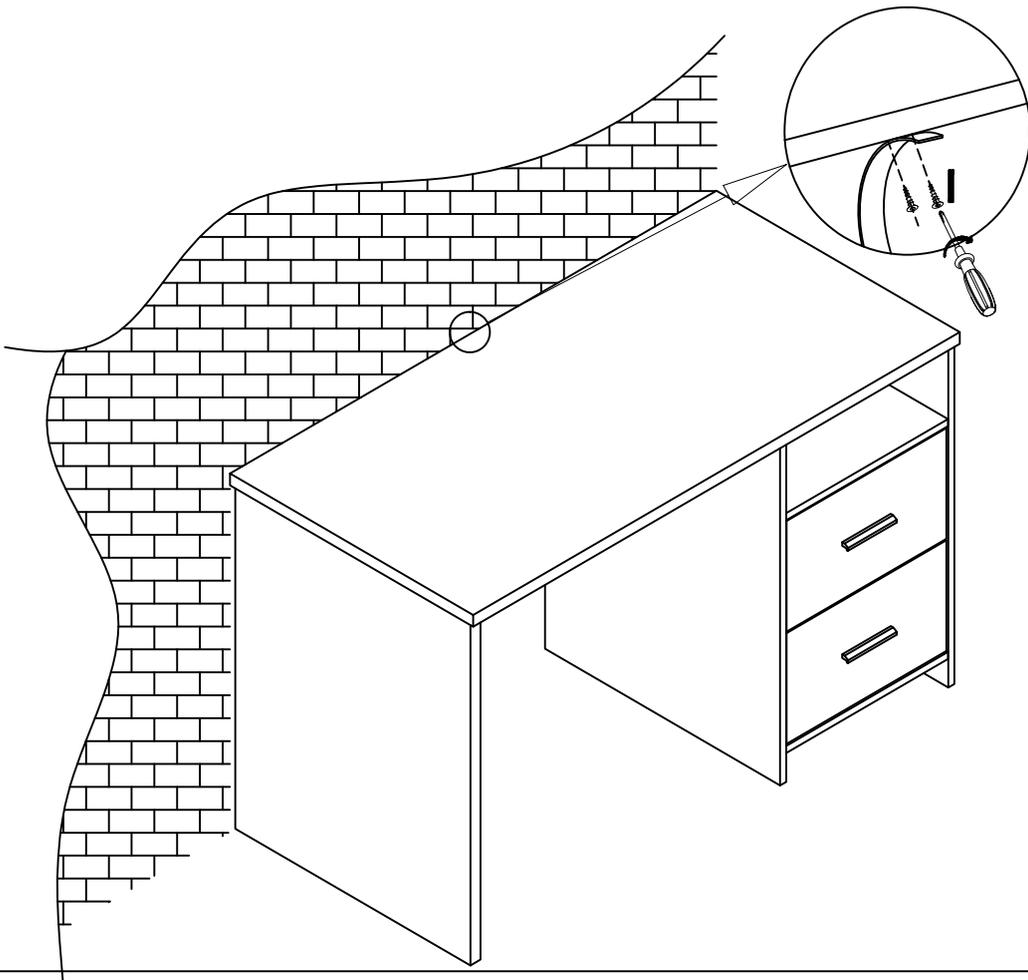


Assembly is complete

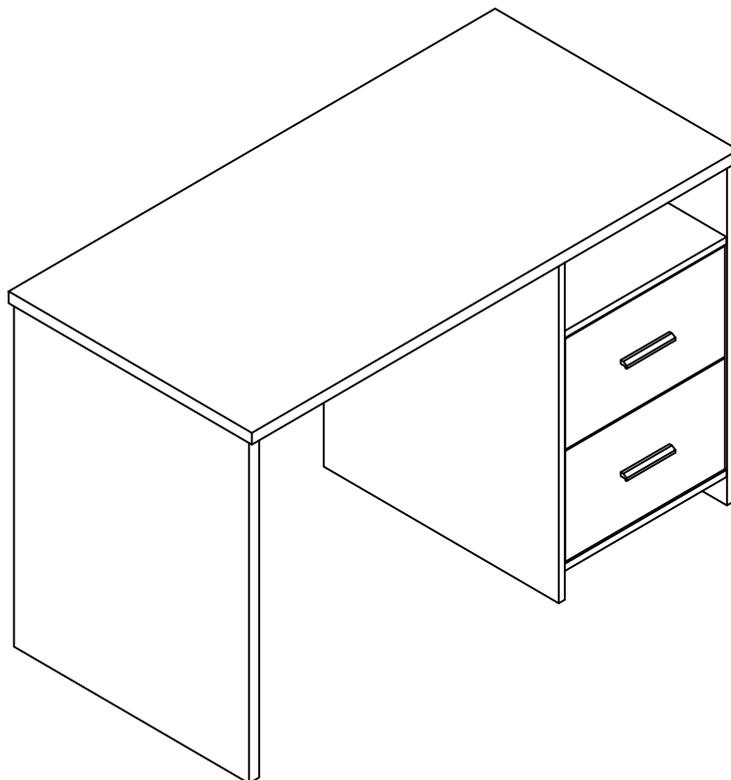

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully with caution from either end.

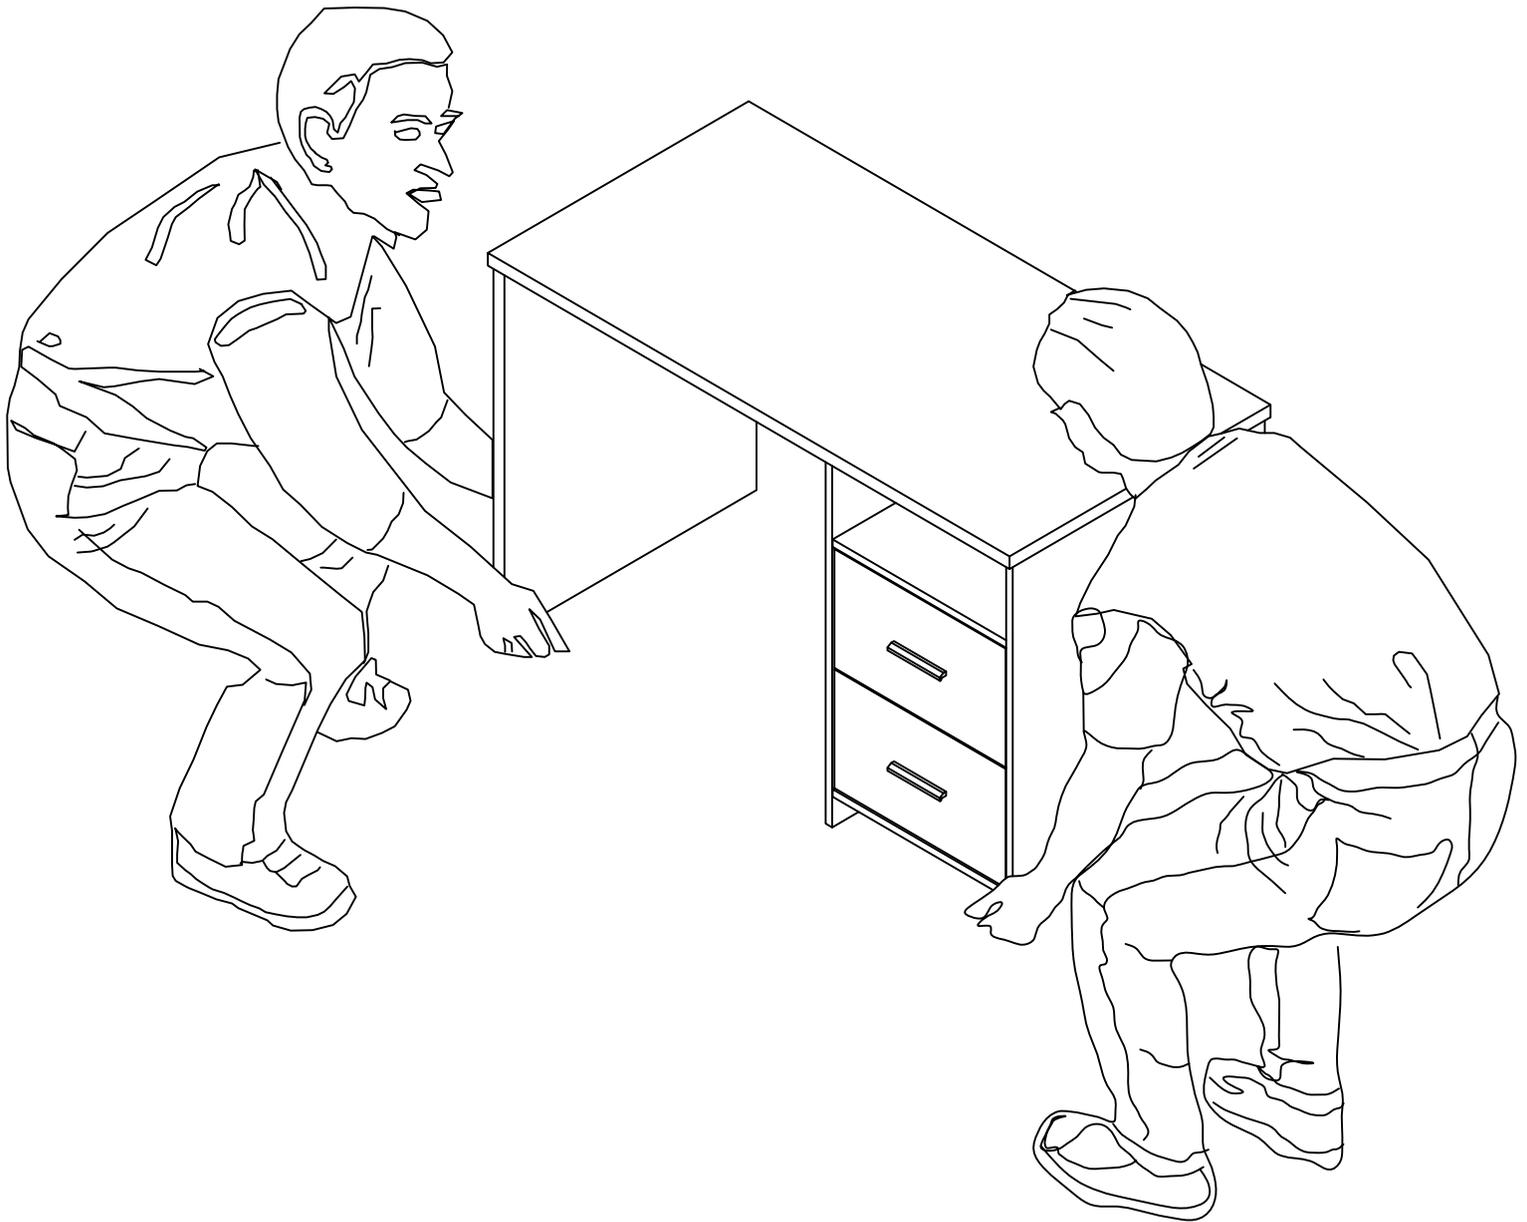

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

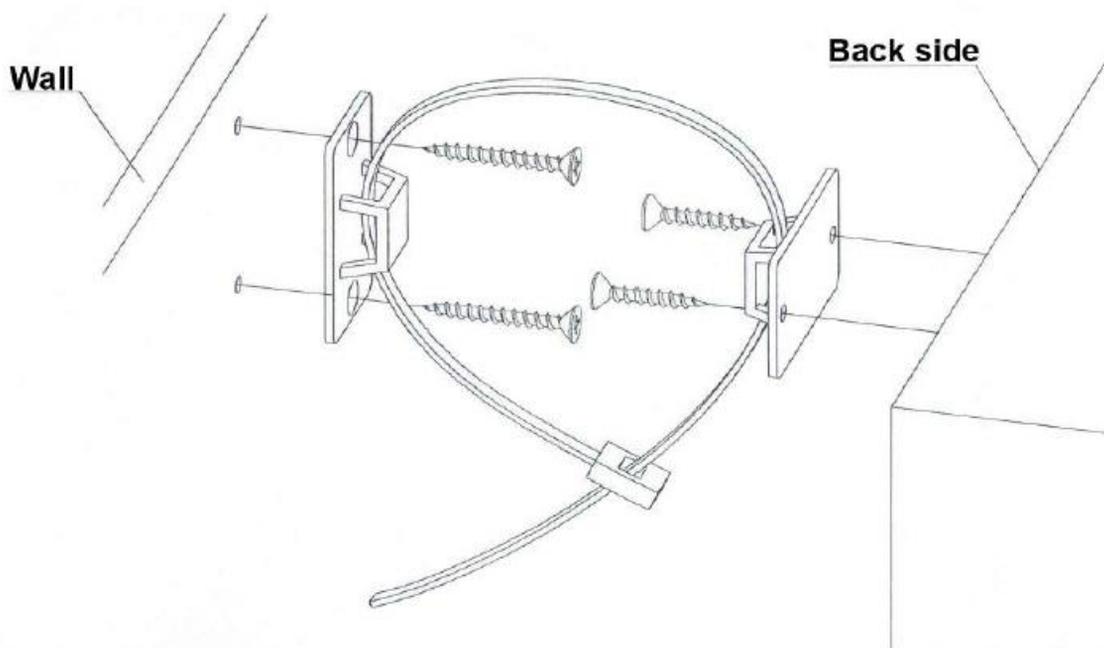

IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE

Congratulations! You have just purchased a quality product from Amart Furniture, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.