

WARNING :

**TOP BUNK AND ELEVATED BEDS
ARE DANGEROUS AND ARE NOT RECOMMENDED
FOR CHILDREN UNDER AGE OF 9**

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds

7 x greater for 9-10 year olds

3 x greater for 11-12 year olds



WARNING :

The upper bunk must be more than 2m from any ceiling fan.

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

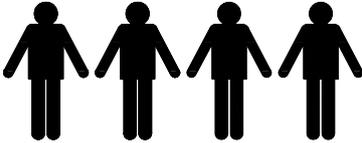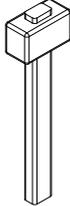	
ALLOW 120 MINUTES	4 PEOPLE REQUIRED
	
ADDITIONAL TOOLS REQUIRED	



WARNING

To help prevent serious or fatal injuries from entanglements or falls:

- Use the correct size mattress as specified
- Upper surface of mattress must be at least 160mm below upper edge of guard rails
- Follow all written instructions included with this bed
- Use guardrails on both sides of upper bunk
- Check the bunk bed periodically to ensure that the guardrails, access device and other components are maintained in the correct position and state of repair and that all connectors are tight with nothing protruding more than 8mm
- Ensure the upper bunk is more than 2m from any ceiling fan
- Prohibit horseplay on or under bed
- Prohibit more than one person on the upper bunk

TOP BUNK AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9.

DO NOT REMOVE THIS LABEL

CAM Lock and Pins



step 1

HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used.

The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

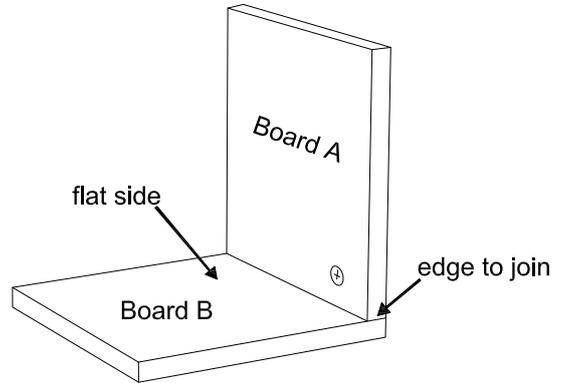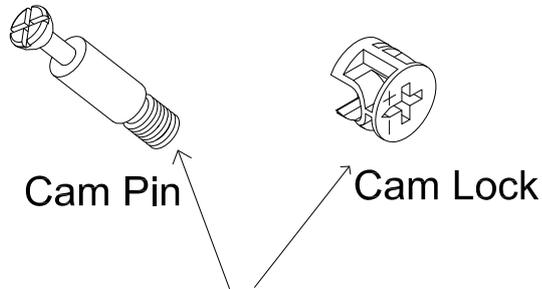


Ensure that you use the correct images that are representative of the hardware used in the product

step 2

To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- * The cam pin is kept vertical and is not put in on an angle
- * Cam Pin is inserted up to the collar
 - * Too far and it wont catch the Cam Lock (Do not Over Tighten)
 - * Not enough and the resulting product wont be stable

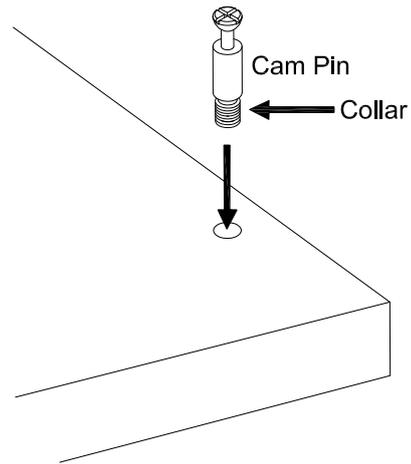

step 3

To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

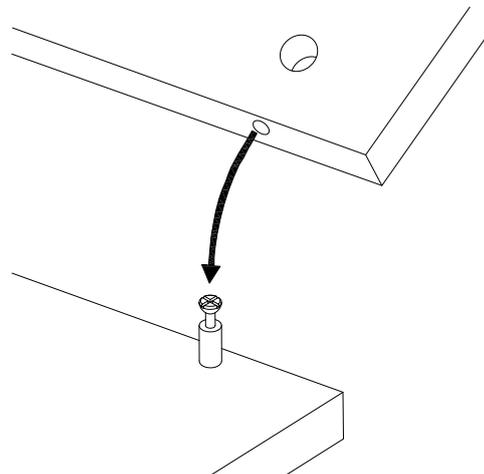


step 4

To use Cam Lock Fasteners


The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

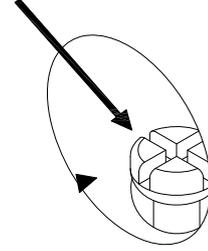

To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin

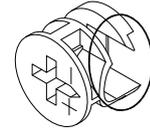

Cam Lock

step 5


To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin


Open section of back fits over the head of the Cam Pin

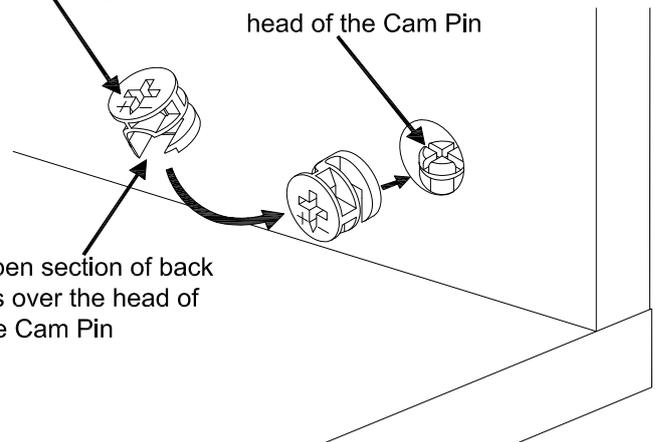


step 6

To use Cam Lock Fasteners

Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.


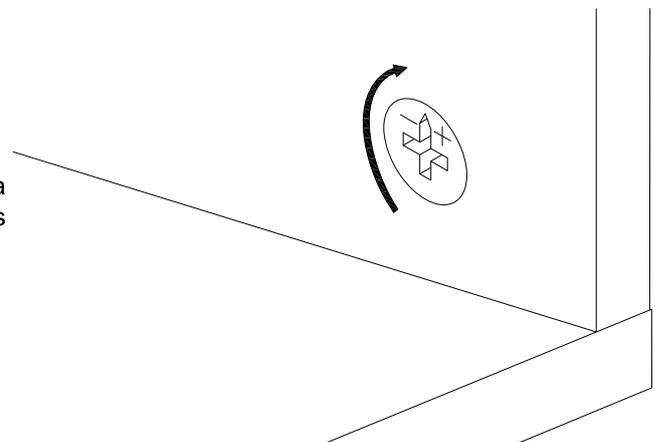


PARTS LIST

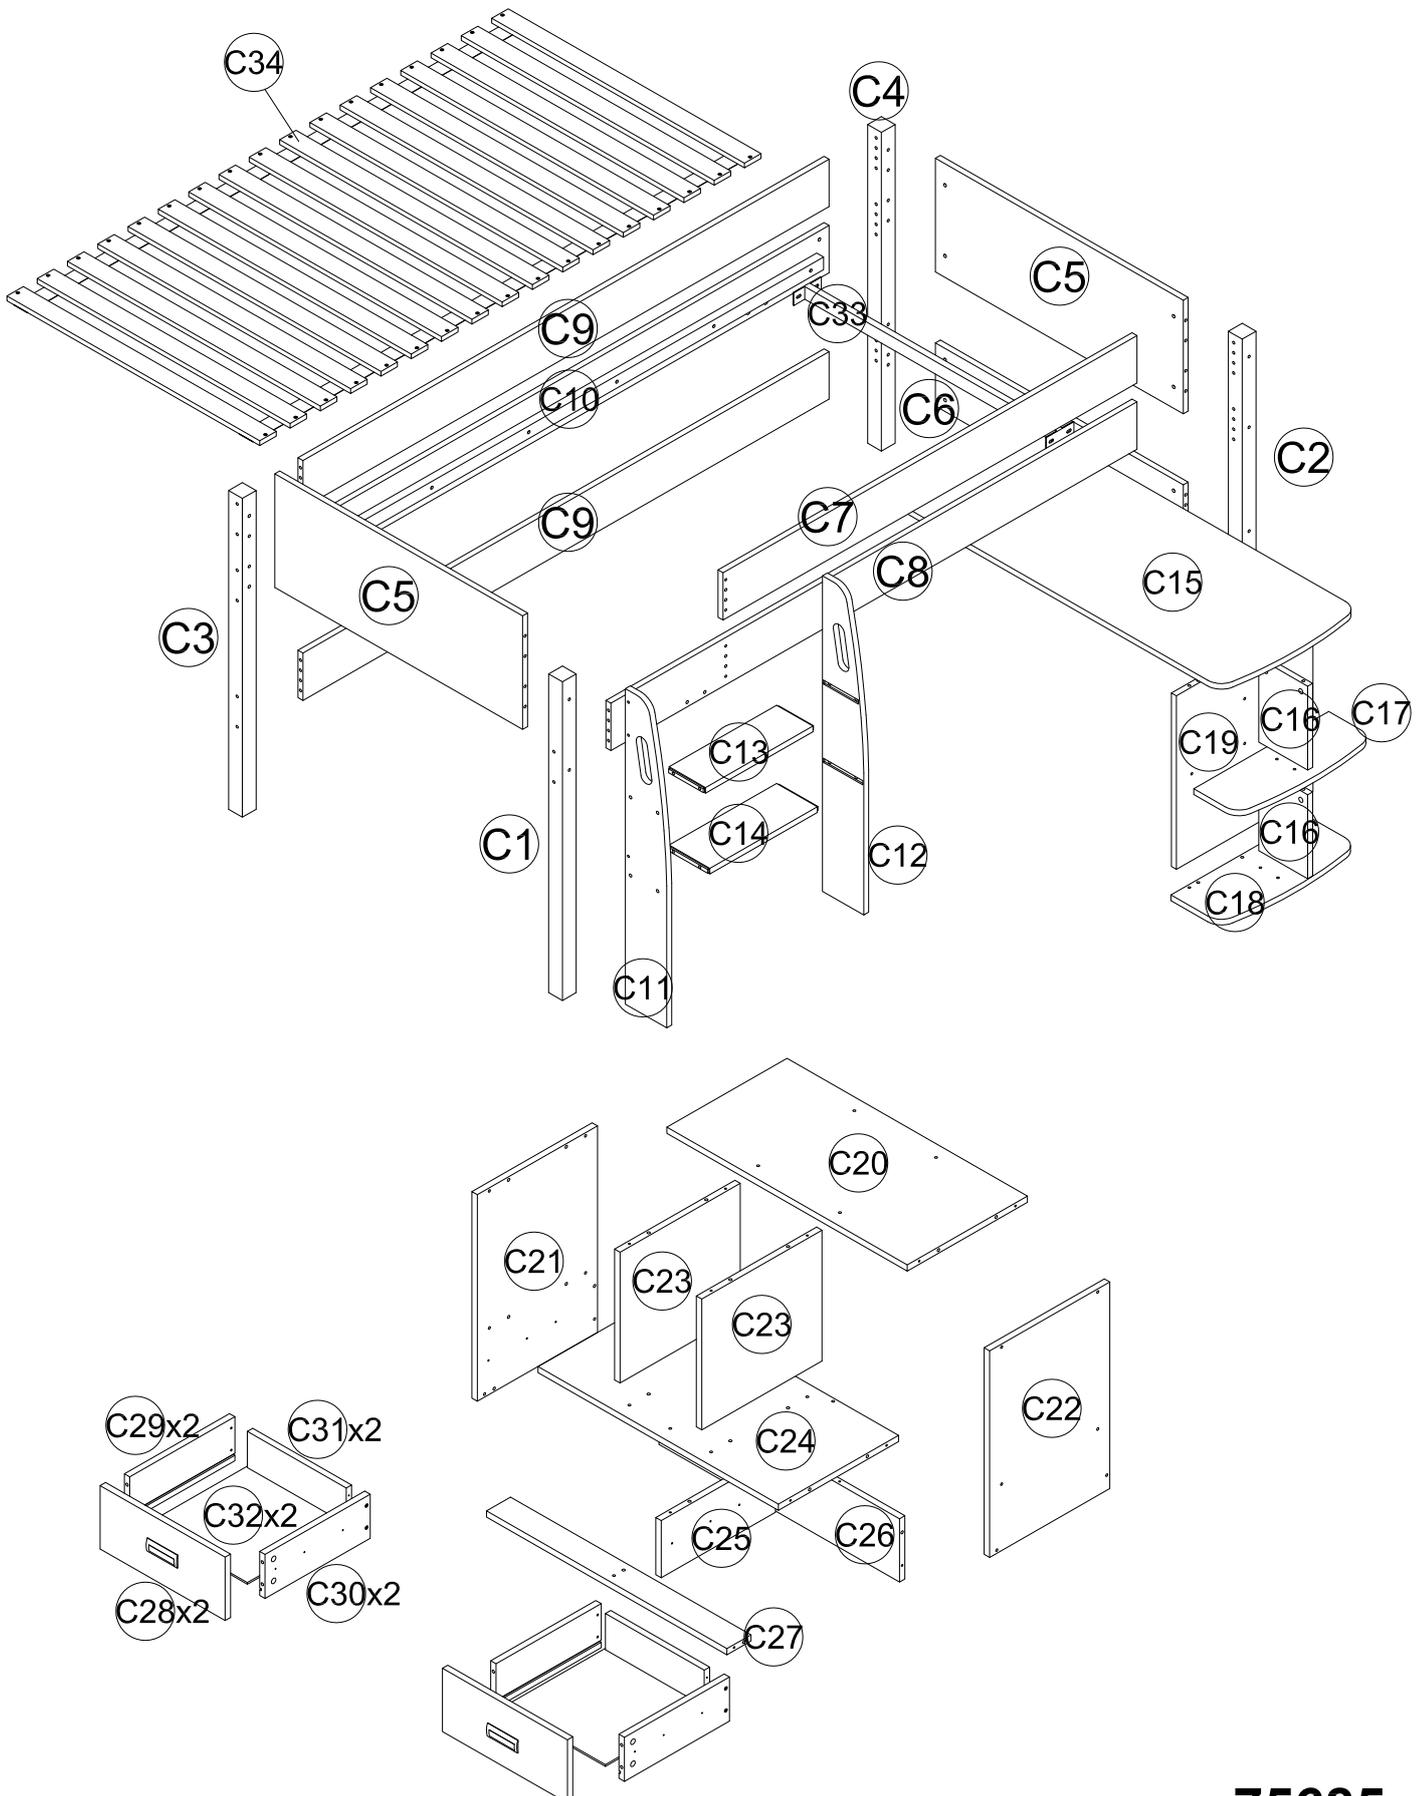

PARTS LIST


C1	Leg	C18	Shelf
C2	Leg	C19	Back Panel
C3	Leg	C20	Top Panel
C4	Leg	C21	Side Panel
C5	Side Panel	C22	Side Panel
C6	Side Panel	C23	Vertical Panel
C7	Front Safety Rail	C24	Bottom Panel
C8	Front Side Panel	C25	Side Panel
C9	Back Panel	C26	Back Pane
C10	Back Side Panel	C27	Brace
C11	Ladder Left Side Panel	C28	Drawer Front Panel
C12	Ladder Right Side Panel	C29	Drawer Left side Panel
C13	Ladder panel	C30	Drawer Right side Panel
C14	Ladder panel	C31	Drawer Back Panel
C15	Desk Top	C32	Drawer Bottom Panel
C16	Vertical Panel	C33	Tube
C17	Shelf	C34	Slat
		C35	Back Panel

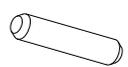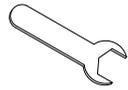A. Cam lock and Cam pin Ø15X35 <input type="checkbox"/>	B. Dowel Ø8X30 <input type="checkbox"/>	C. Dowel Ø8X40 <input type="checkbox"/>	D. Screw Ø3.5X12 <input type="checkbox"/>	E. Screw Ø3.5X30 <input type="checkbox"/>	F. Bolt Ø7X50 <input type="checkbox"/>	G. Bolt M4X8 <input type="checkbox"/>
 15PCS	 38PCS	 30PCS	 24PCS	 42PCS	 45PCS	 4PCS
H. Bolt Ø6X13 <input type="checkbox"/>	I. Bolt M6X15 <input type="checkbox"/>	J. Bolt M6X45 <input type="checkbox"/>	K. Bolt M6X90 <input type="checkbox"/>	L. Runner 300mm <input type="checkbox"/>	M. Bolt M6X60 <input type="checkbox"/>	N. Wrench M14 <input type="checkbox"/>
 40PCS	 4PCS	 1PCE	 30PCS	 2PCS	 10PCS	 1PCE
O. Protect foam Ø35X5mm <input type="checkbox"/>	P. Floor Protector 20X15X5mm <input type="checkbox"/>	Q. Washer Ø8 <input type="checkbox"/>	R. Hex key M4 <input type="checkbox"/>	S. Handle <input type="checkbox"/>	T. Wheel <input type="checkbox"/>	U. Glue <input type="checkbox"/>
 4PCS	 12PCS	 1PCE	 1PCE	 2PCS	 2PCS	 1PCE
V. Screw Ø4X16 <input type="checkbox"/>	W. Metal Brace <input type="checkbox"/>					
 24PCS	 3PCS					


STEP 1:

Runner slide separately(L=L1+L2)


Carefully pull out the runner slide(L2)and press plastic clip to fully separate runner slide as diagram shown

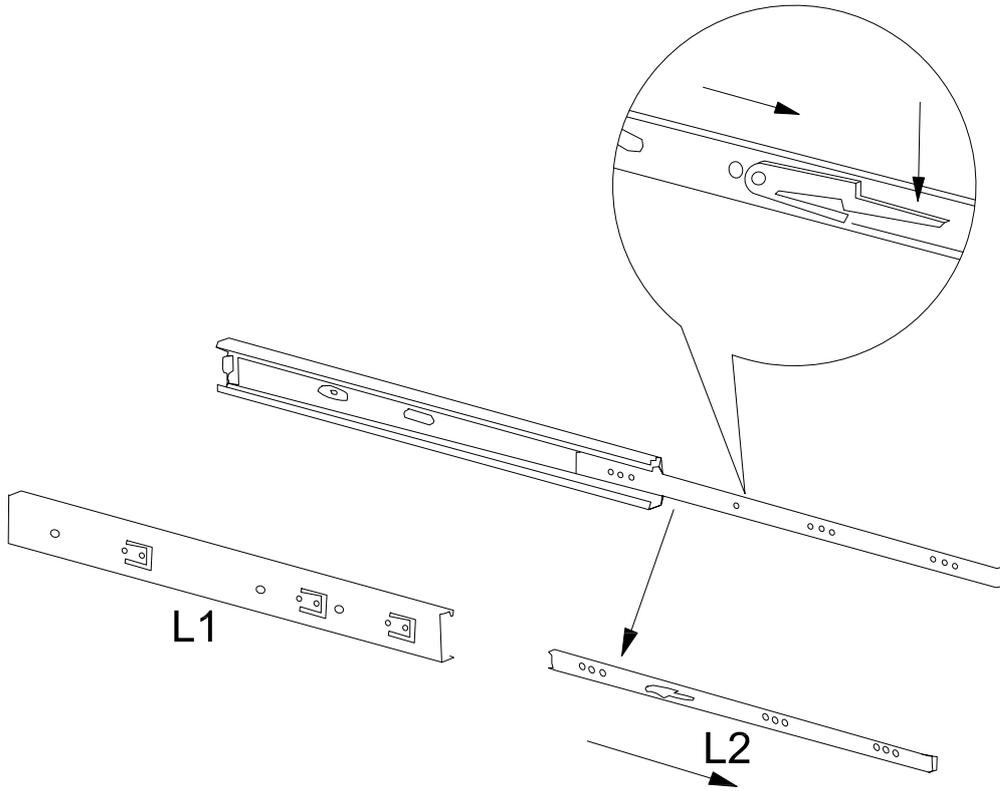


STEP 2: Place a small amount of glue on each dowel Insert the Dowel(C) to the Leg(C1,C2,C3,C4). Use the Hex Key(R) to tighten the Leg(C1,C3) to the Side Panel(C5) with Bolt(K).Use the Hex Key(R) to tighten the Leg(C2,C4) to the Side Panel(C5) and Side Panel(C6) with Bolt(K).Use a Phillips Head Screwdriver to insert the Bolt (H) to the Side Panel(C5,C6) .Attach the Protect Foam(O) to the bottom of the Legs(C1,C2,C3,C4).

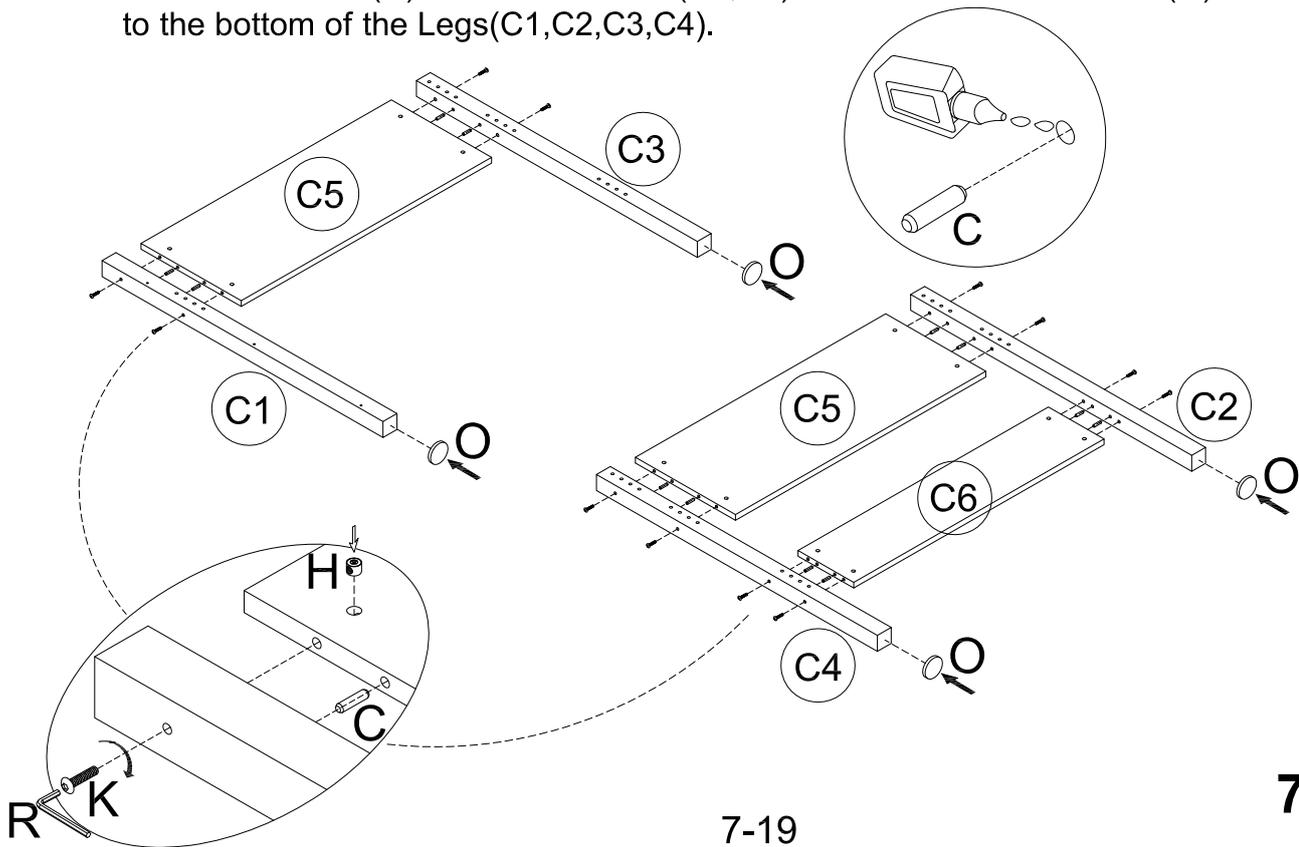

STEP 3: Place a small amount of glue on each dowel Insert the Dowel(C) to the Front Side Panel(C8) and Back Panel(C9) and Back Side Panel(C10).Use the Hex Key(R) to tighten the Side Panel(C8) and Back Panel(C9)and Back Side Panel(C10) to the Leg(C1,C2,C3,C4) with Bolt(K). Use a Phillips Head Screwdriver to insert the Bolt (H) to the Front Side Panel(C8) and Back Panel(C9)and Back Side Panel(C10).

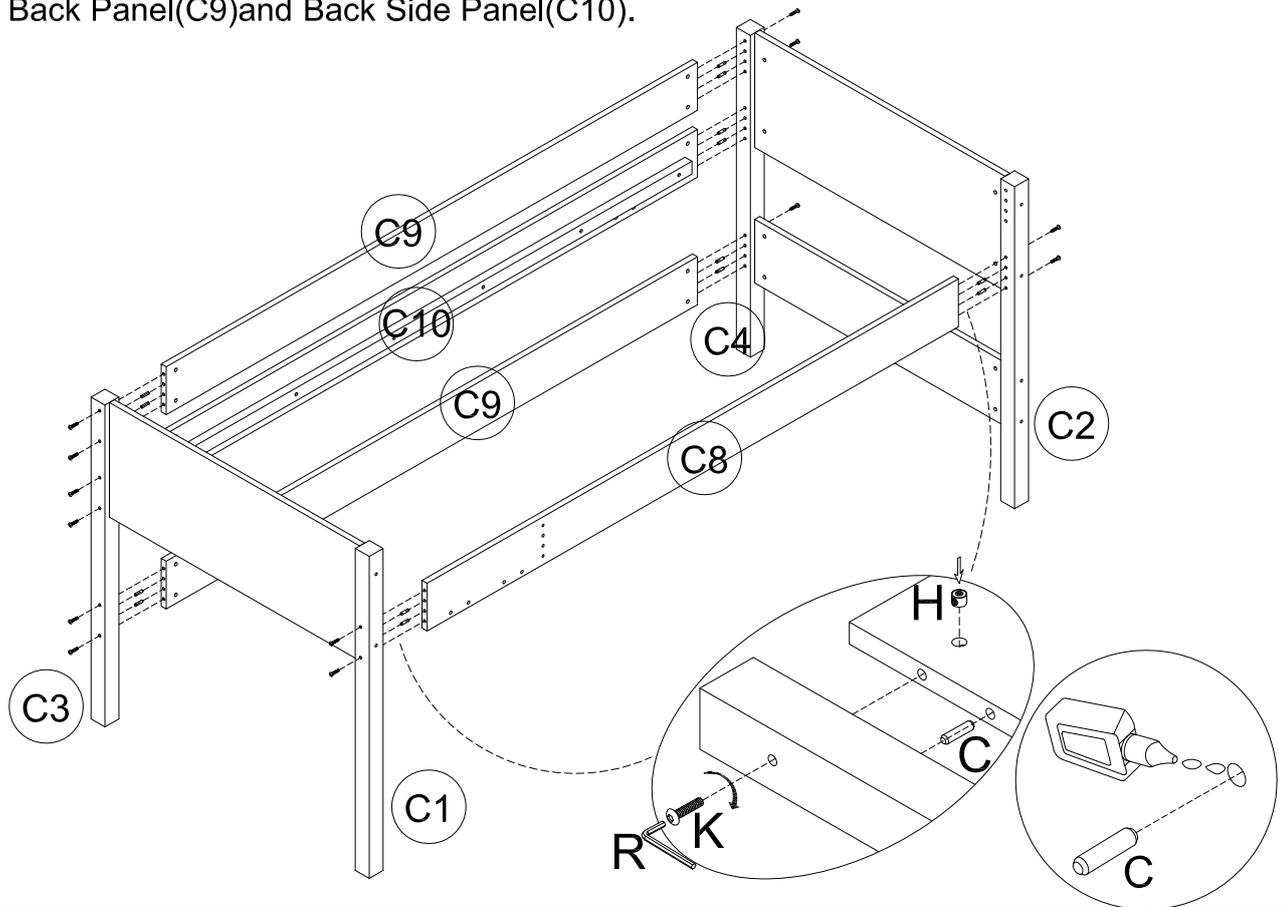


STEP 4: Use the Hex Key(R) to tighten the Ladder panel (C13,C14) to the Ladder Left Side Panel(C11) and Ladder Right Side Panel(C12) with Bolt(M).Use a Phillips Head Screwdriver to insert the Bolt (H) to the Ladder panel (C13,C14).Attach the Protect Foam(P) to the bottom of the Ladder Left Side Panel(C11)and Ladder Right Side Panel(C12).

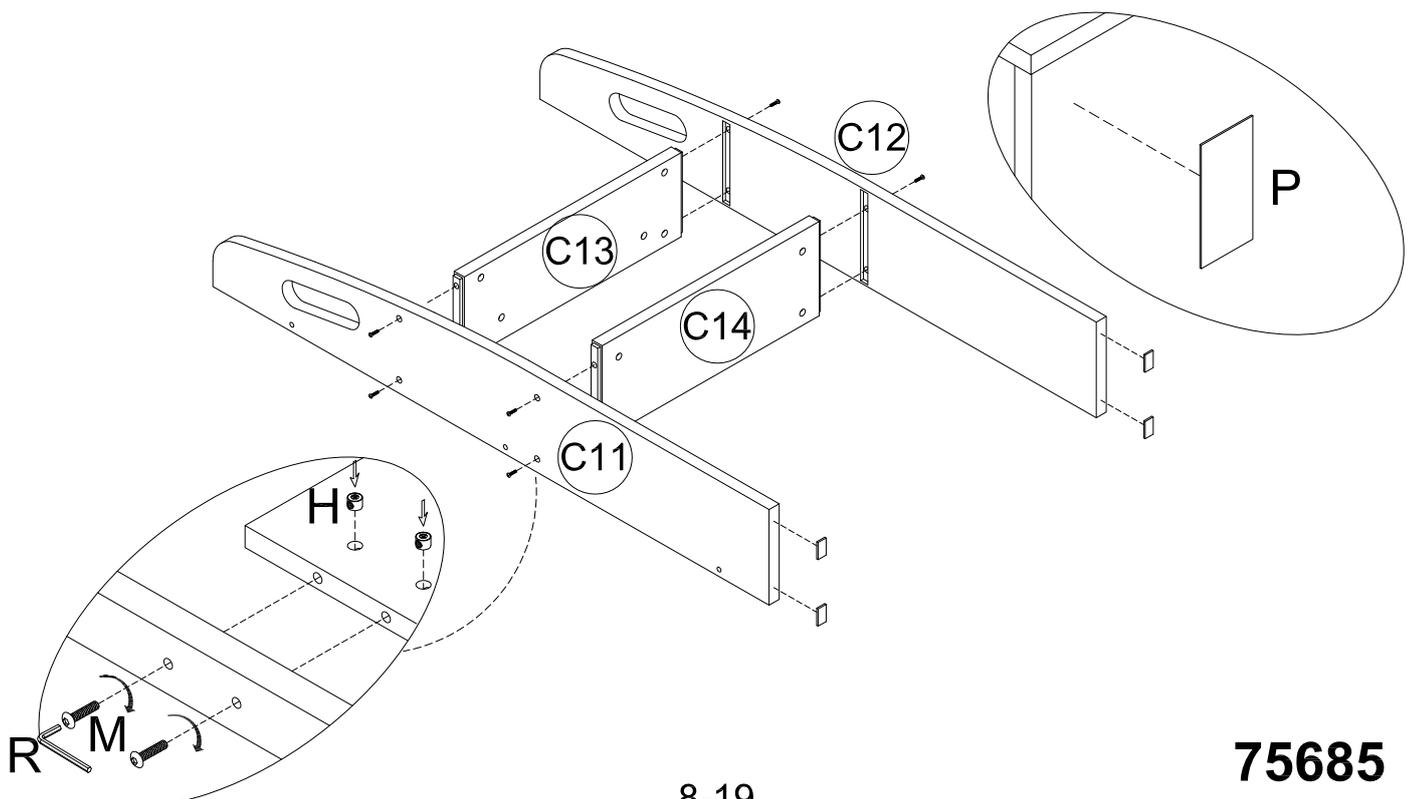


75685


STEP 5: Place a small amount of glue on each dowel. Insert the Dowel(C) to the Front Safety Rail(C7). Use the Hex Key(R) to tighten the Front Safety Rail(C7) to the Leg(C2) with Bolt(K). Use the Hex Key(R) to tighten the Front Safety Rail(C7) to Ladder Right Side Panel(C12) with Bolt(F). Use the Hex Key(R) to tighten the Ladder Left Side Panel(C11) to the Leg(C1) with Bolt(F).

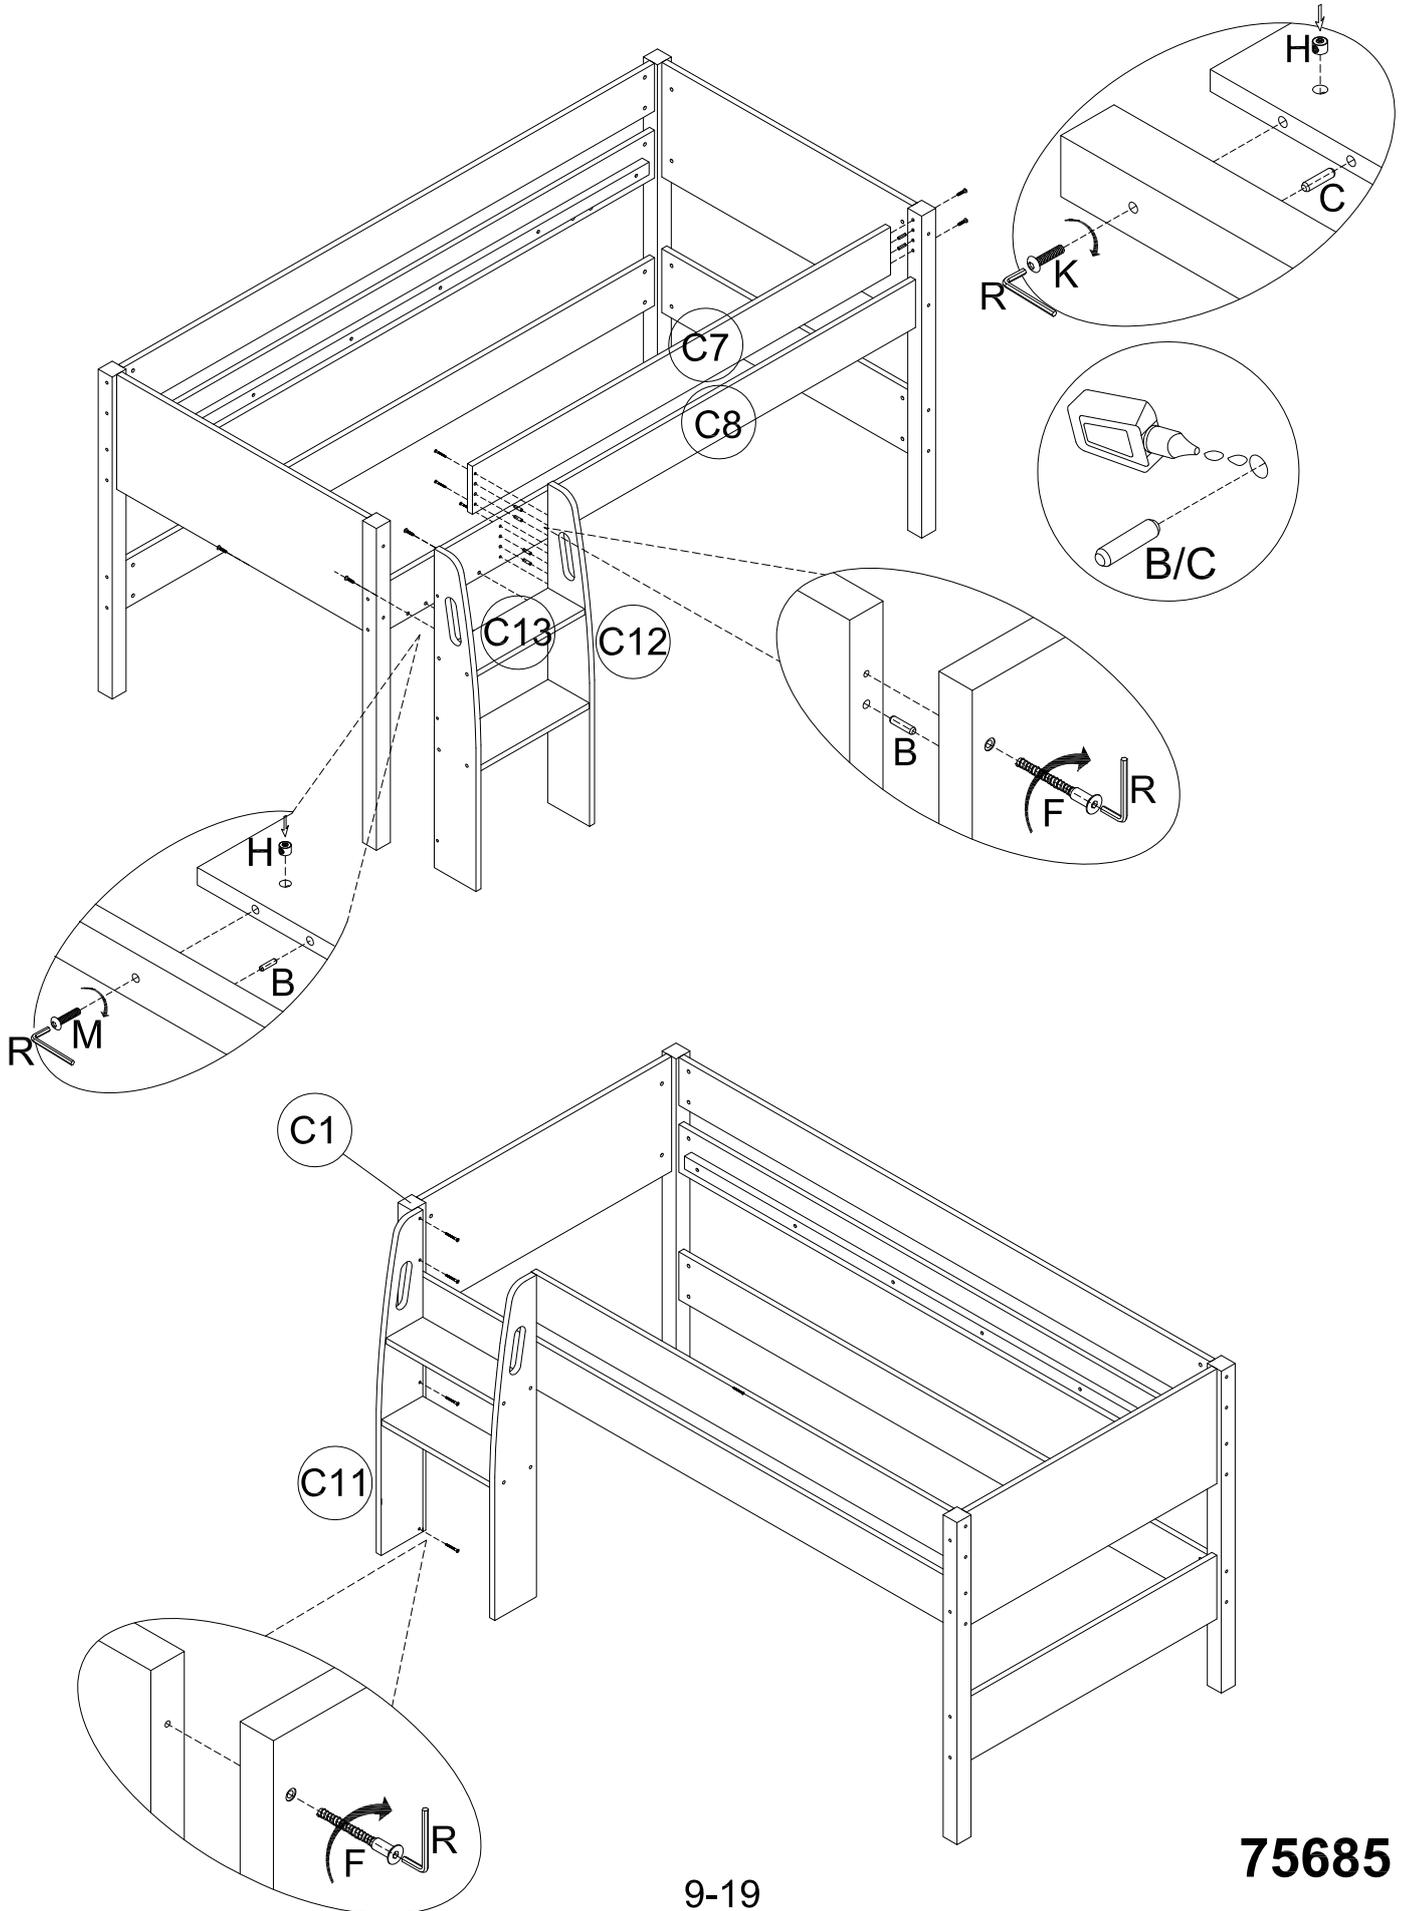

STEP 6: Use the Hex Key(R) to tighten the Vertical Panel(C16)to the Shelf(C17,C18) with Bolt(F).
Use a Phillips Head Screwdriver to insert the Cam Pin(A)to the Vertical Panel(C16).

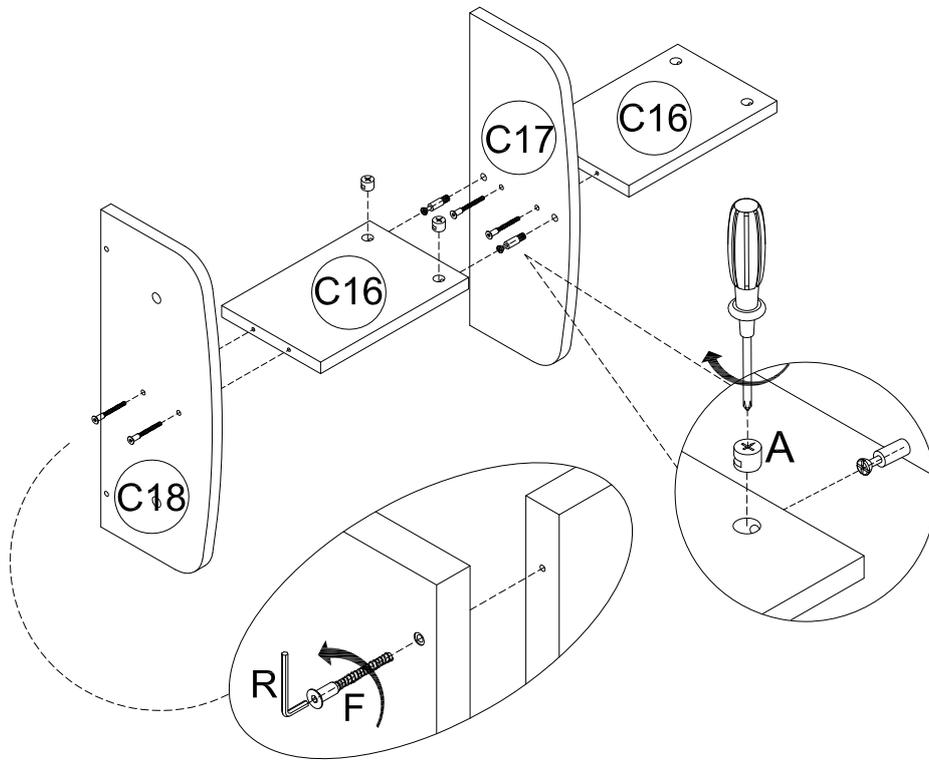


STEP 7: Place a small amount of glue on each dowel. Insert the Dowel(B)to the Back Panel(C19) .
Use the Hex Key(R) tighten the Back Panel(C19)
to the Vertical Panel(C16) and the Shelf(C17,C18) with Bolt(F).

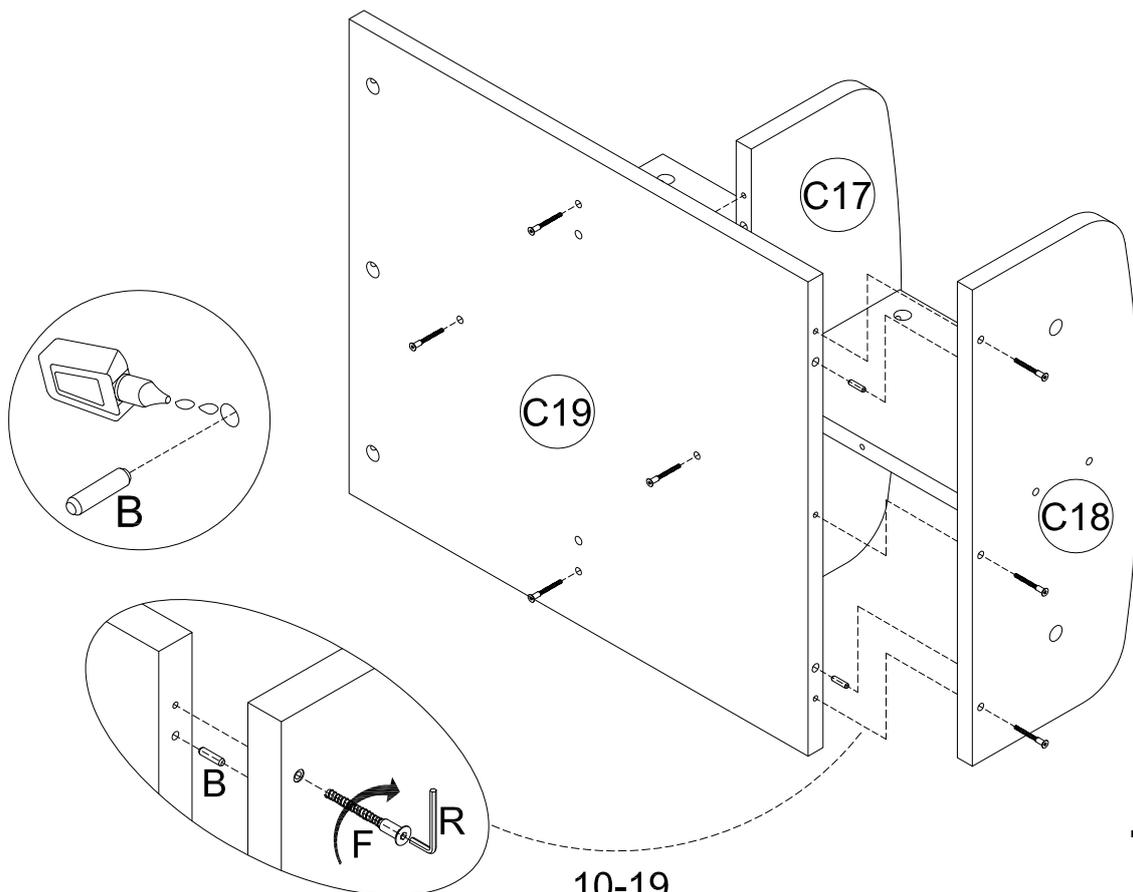


75685


STEP 8: Place a small amount of glue on each dowel. Insert the Dowel(B) to the Back Panel(C19). Attach the Desk Top(C15) to the Back Panel(C19). Use a Phillips Head Screwdriver to turn the Cam Pin(A) to lock onto the head of Cam pin(A). Use the Wrench(N) to assemble the Wheel(T) to the Shelf(C18).

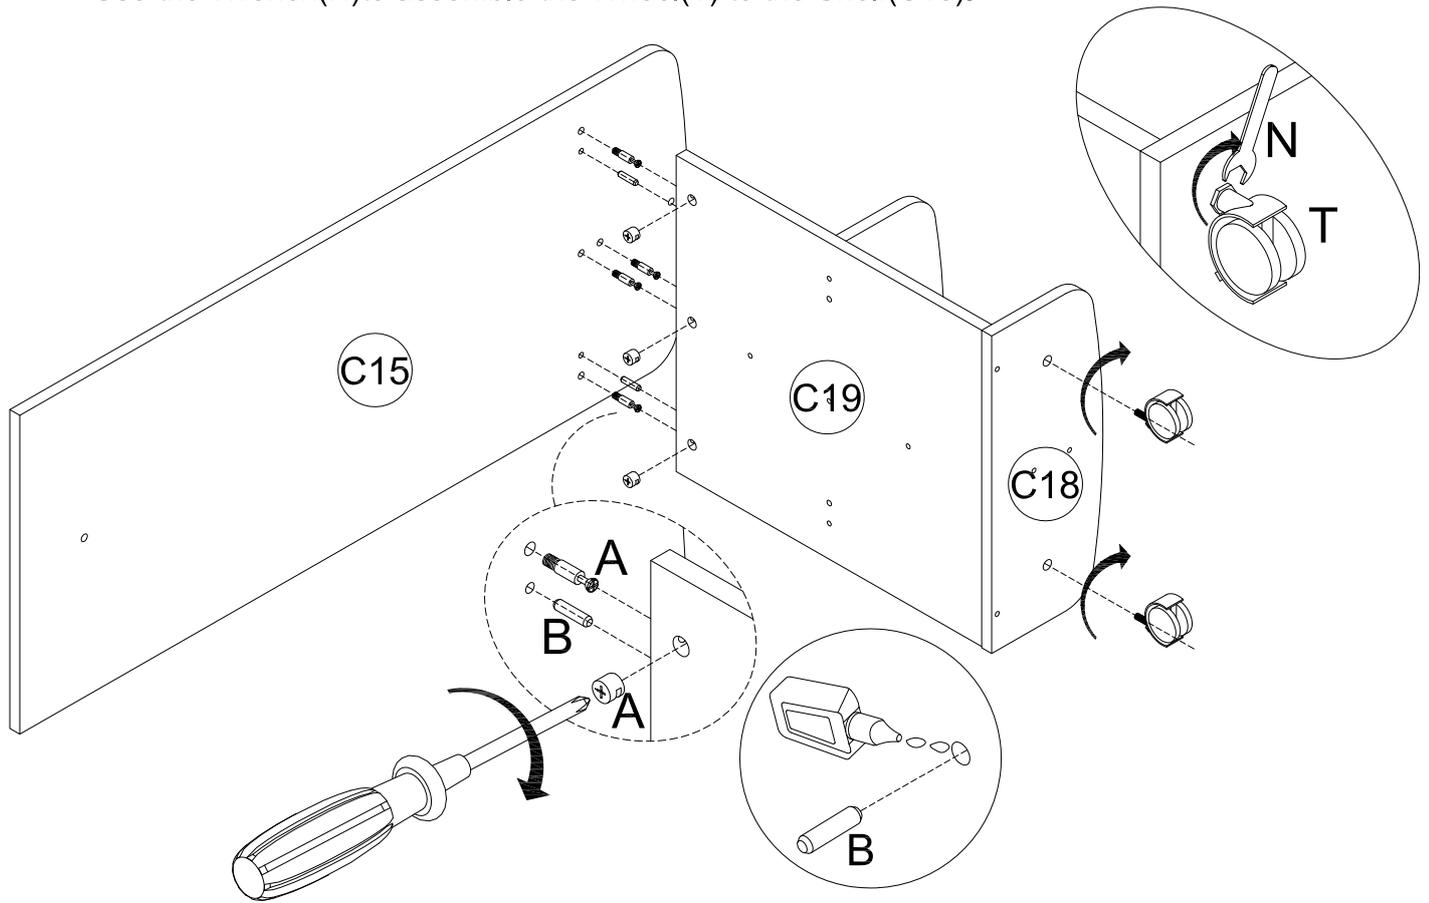


STEP 9: Use the Hex Key(R) to tighten the Tube(C33) to the Front Side Panel(C8) and Back Side Panel(C10) with Bolt(I).

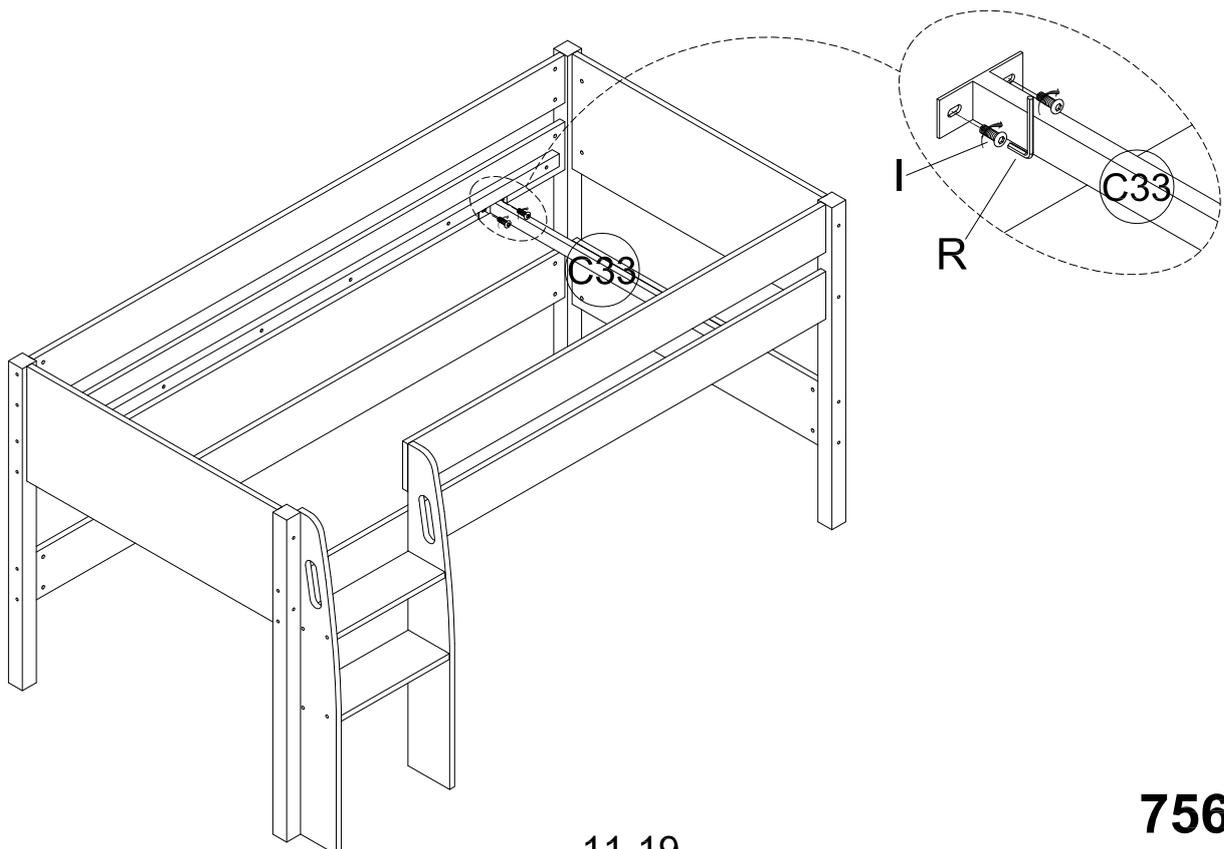


STEP 10: Use the Hex Key(R) to tighten the Desk Top(C15) to the Tube(C33) with and Washer(Q)and Bolt(J).

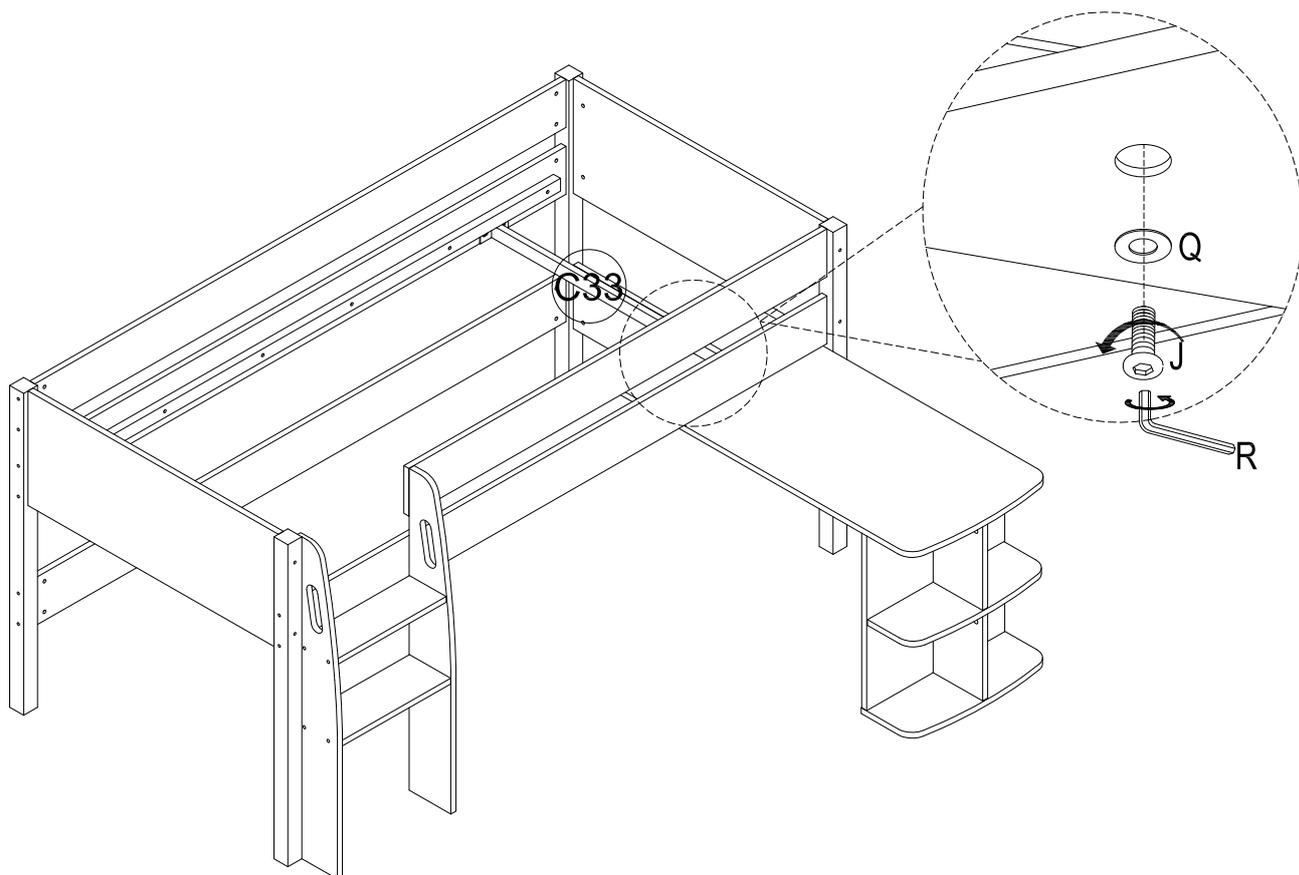


STEP 11: Use a Phillips Head Screwdriver to tighten the Runner(L) to the Side Panel(C21,C22) and Side Panel(C25)with Screw(D).

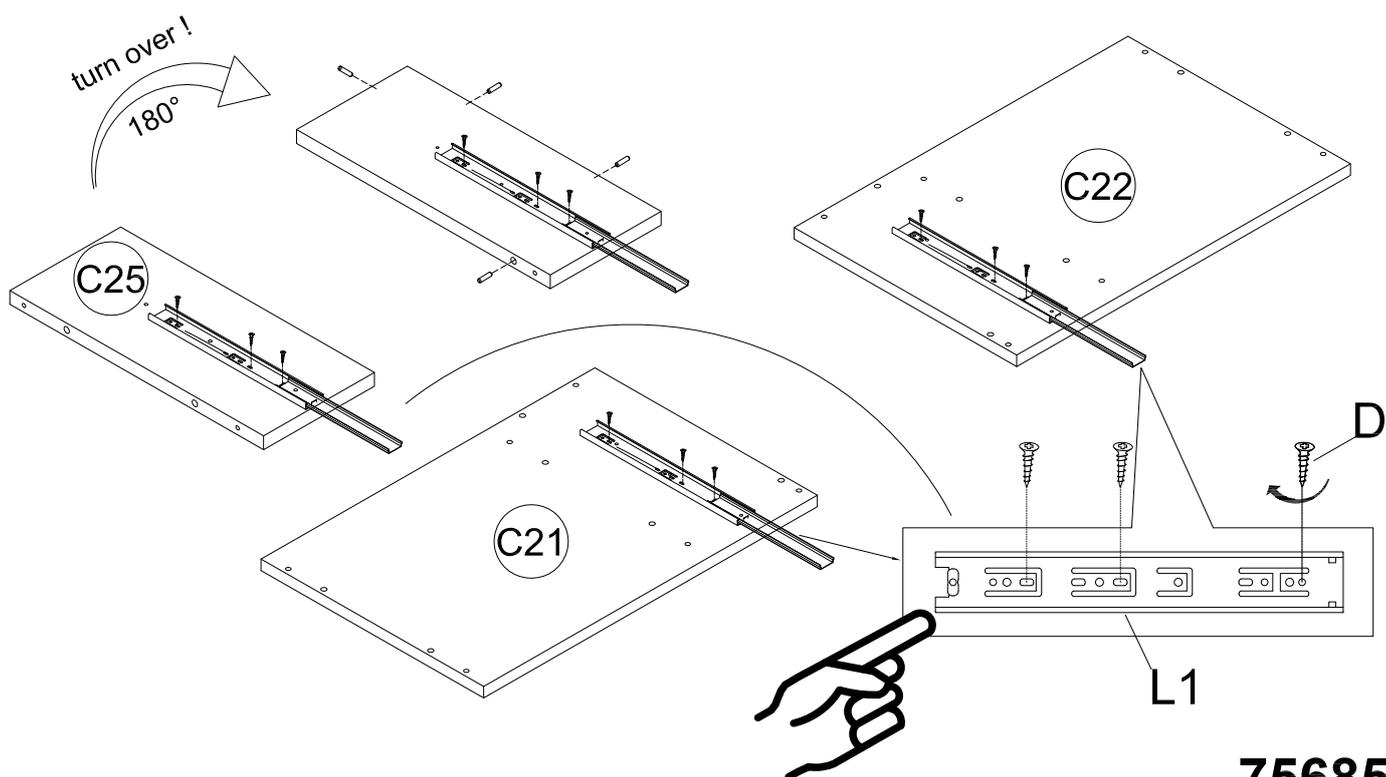


STEP 12: Place a small amount of glue on each dowel Use the Hex Key(R) to Assemble the Side Panel(C25) to the Back Pane(C26) and Brace(C27)with Bolt(F).

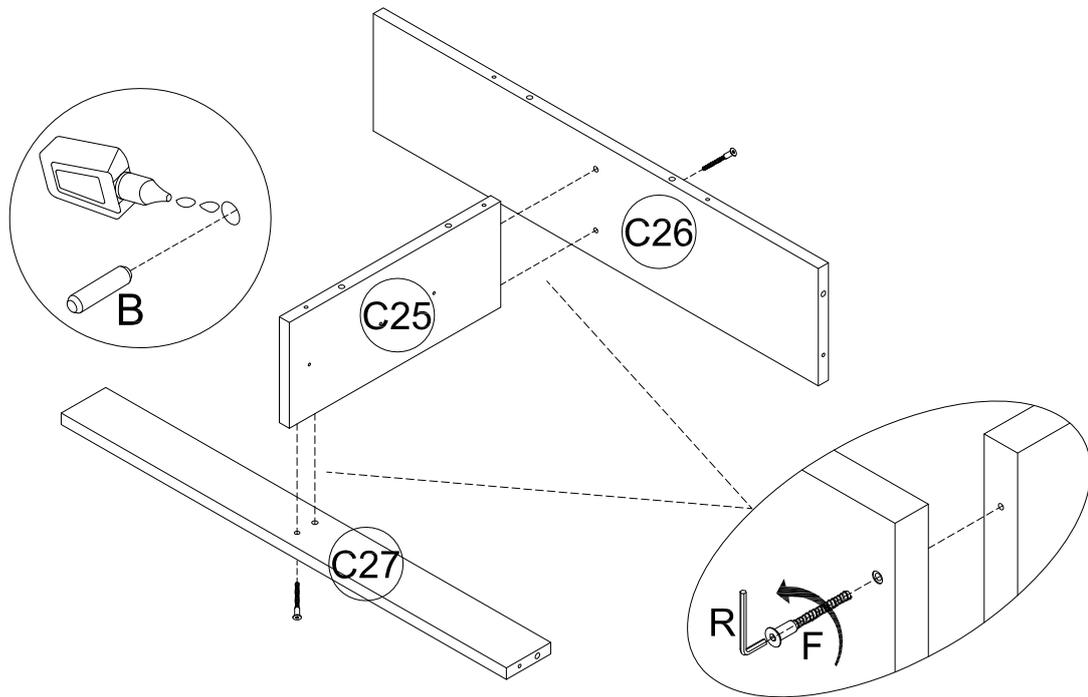


STEP 13: Place a small amount of glue on each dowel Use the Hex Key(R) to Assemble the Bottom Panel(C24) to the Side Panel(C25) and Back Pane(C26) with Bolt(F).

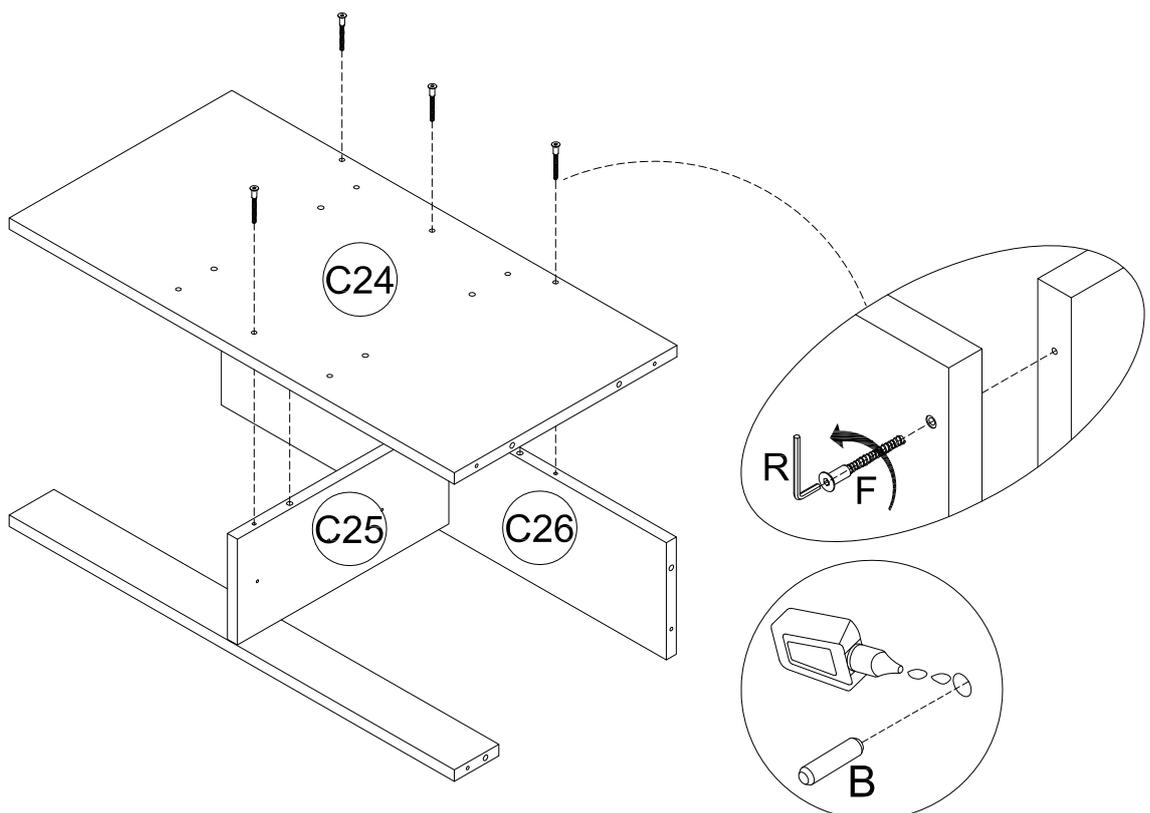


STEP 14: Place a small amount of glue on each dowel Use the Hex Key(R) to Assemble the Vertical Panel(C23) to the Bottom Panel(C24) with Bolt(F).

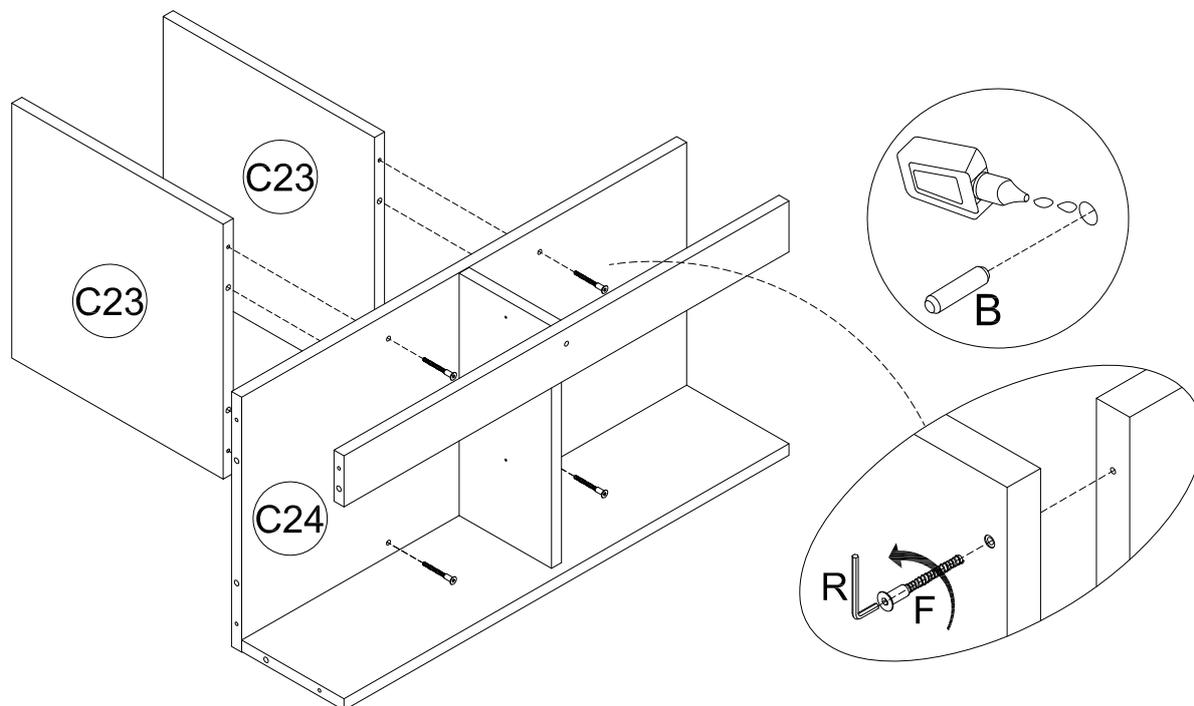


STEP 15: Place a small amount of glue on each dowel Insert the Dowel(B) to the Vertical Panel(C23) .Use the Hex Key(R) to Assemble the Top Panel(C20) to the Vertical Panel(C23) with Bolt(F).

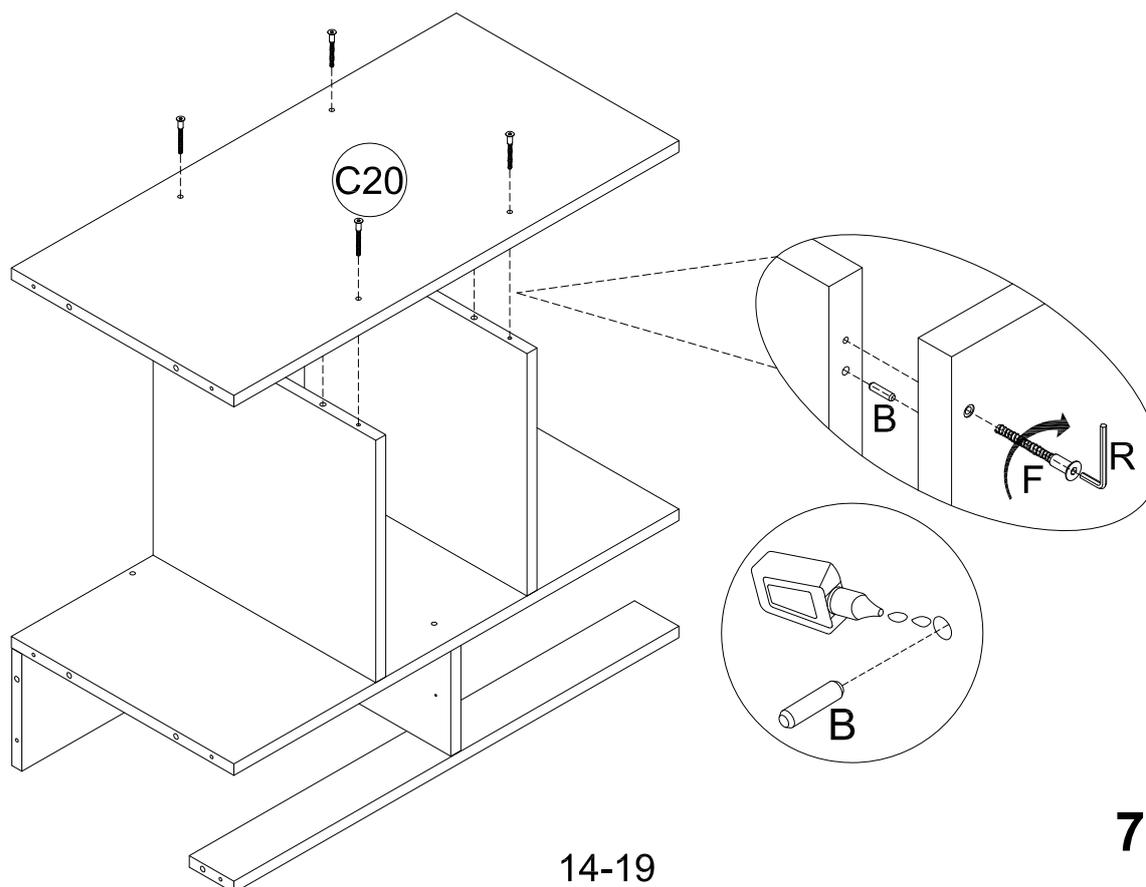


STEP 16: Place a small amount of glue on each dowel Use the Hex Key(R) to Assemble the Side Panel(C21,C22) to the Bottom Panel(C24) and Top Panel(C20) and Brace(C27)with Bolt(F).

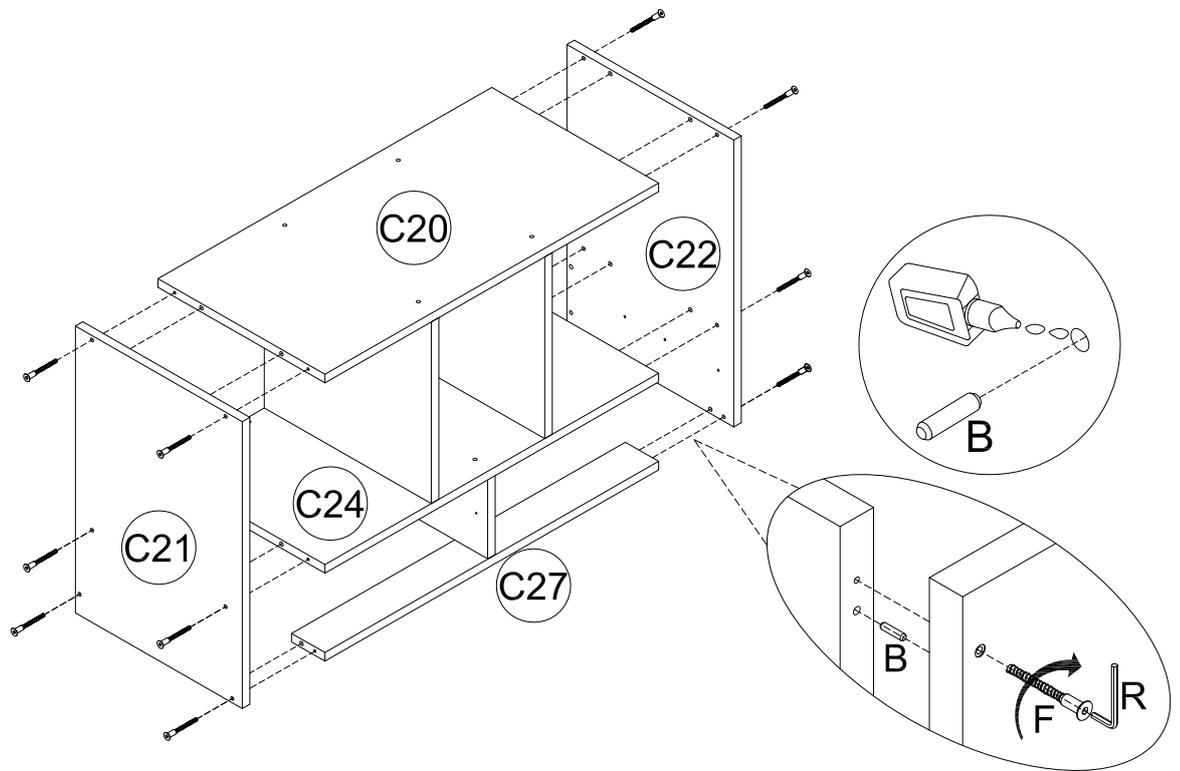


STEP 17: Attach the Protector(P) to the Side Panel(C21,C22) and Back Pane(C26) and Brace(C27).

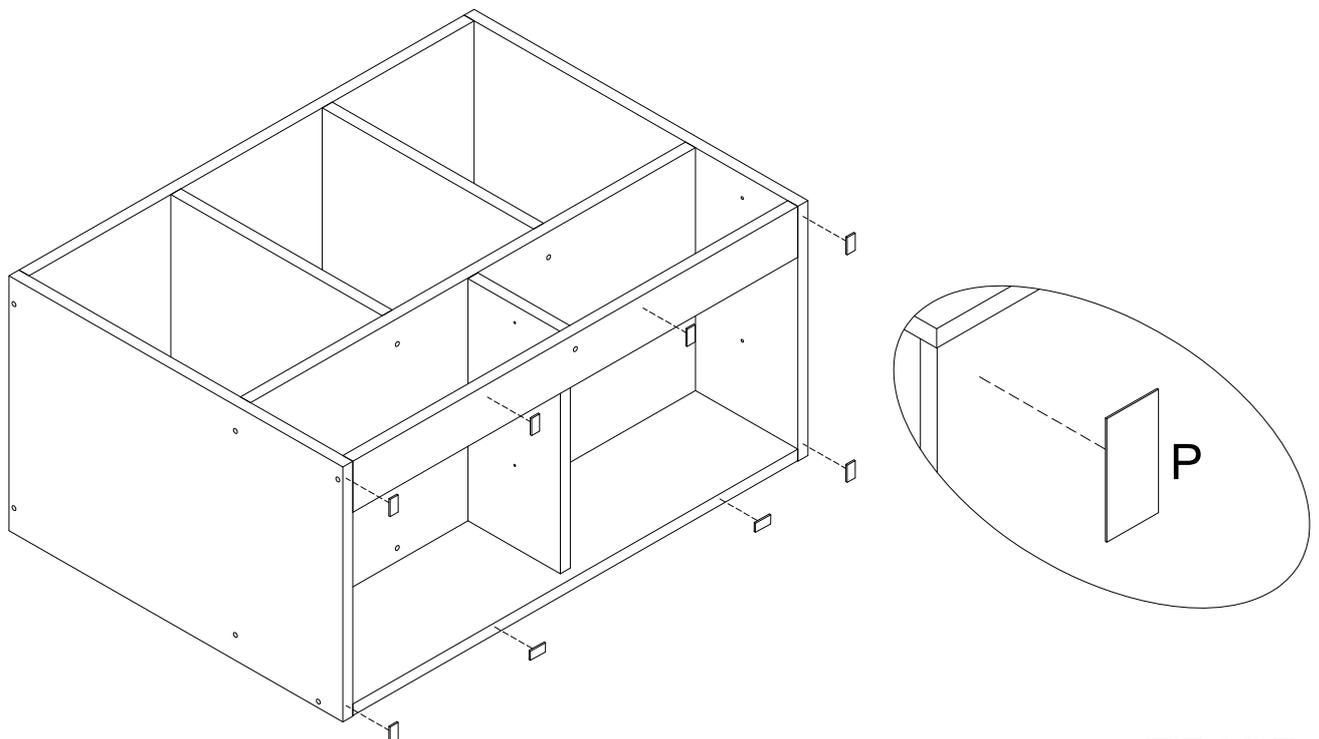

STEP 18: Use a Phillips Head Screwdriver to insert the Cam Pin(A) to Drawer Front Panel(C28). Attach the Drawer Left side Panel(C29) and Drawer Right side Panel(C30) to the Drawer Front Panel(C28). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to lock into the head of the Cam Pin(A).

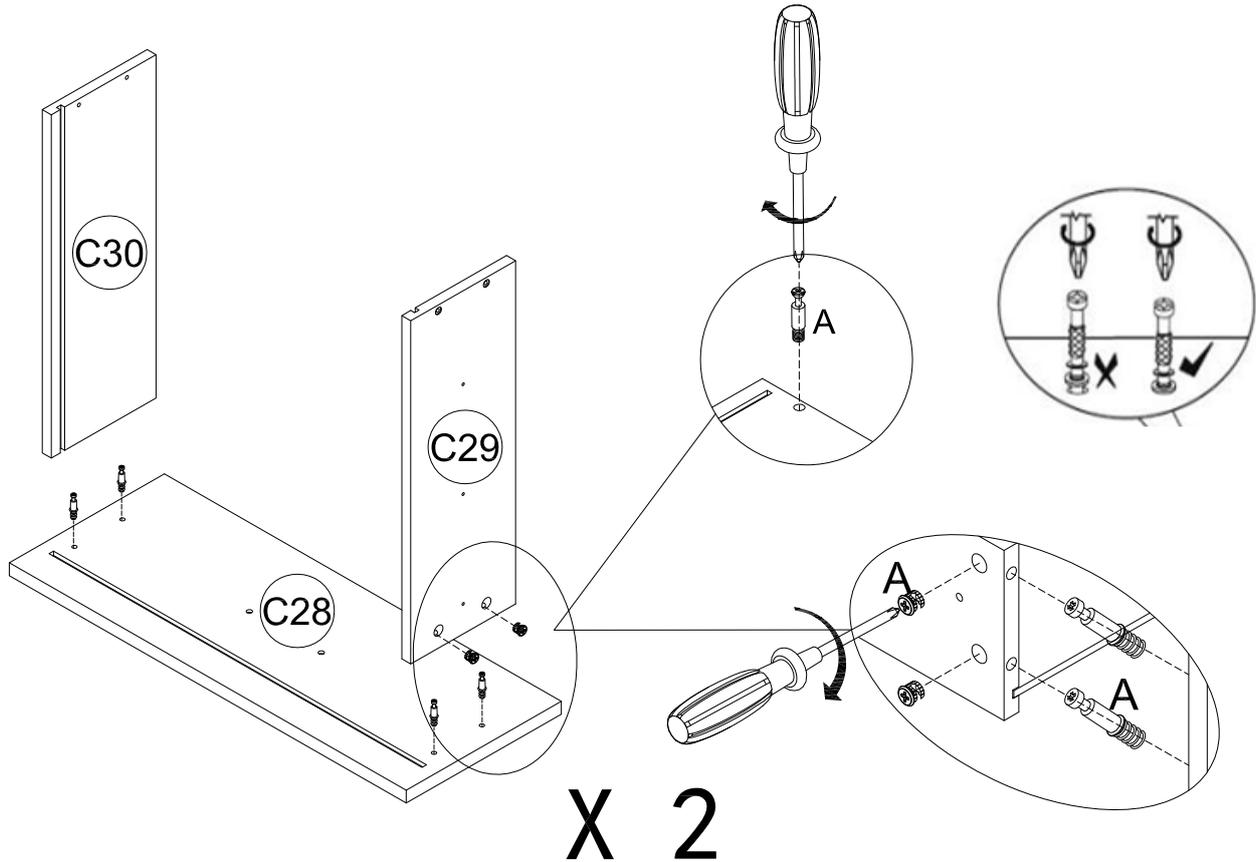


STEP 19: Insert the Drawer Bottom Panel(C32) to the groove. Use a Phillips Head Screwdriver to attach Drawer Back Panel(C31) to the Drawer Left side Panel(C29) and Drawer Right side Panel(C30) with Screw(E).


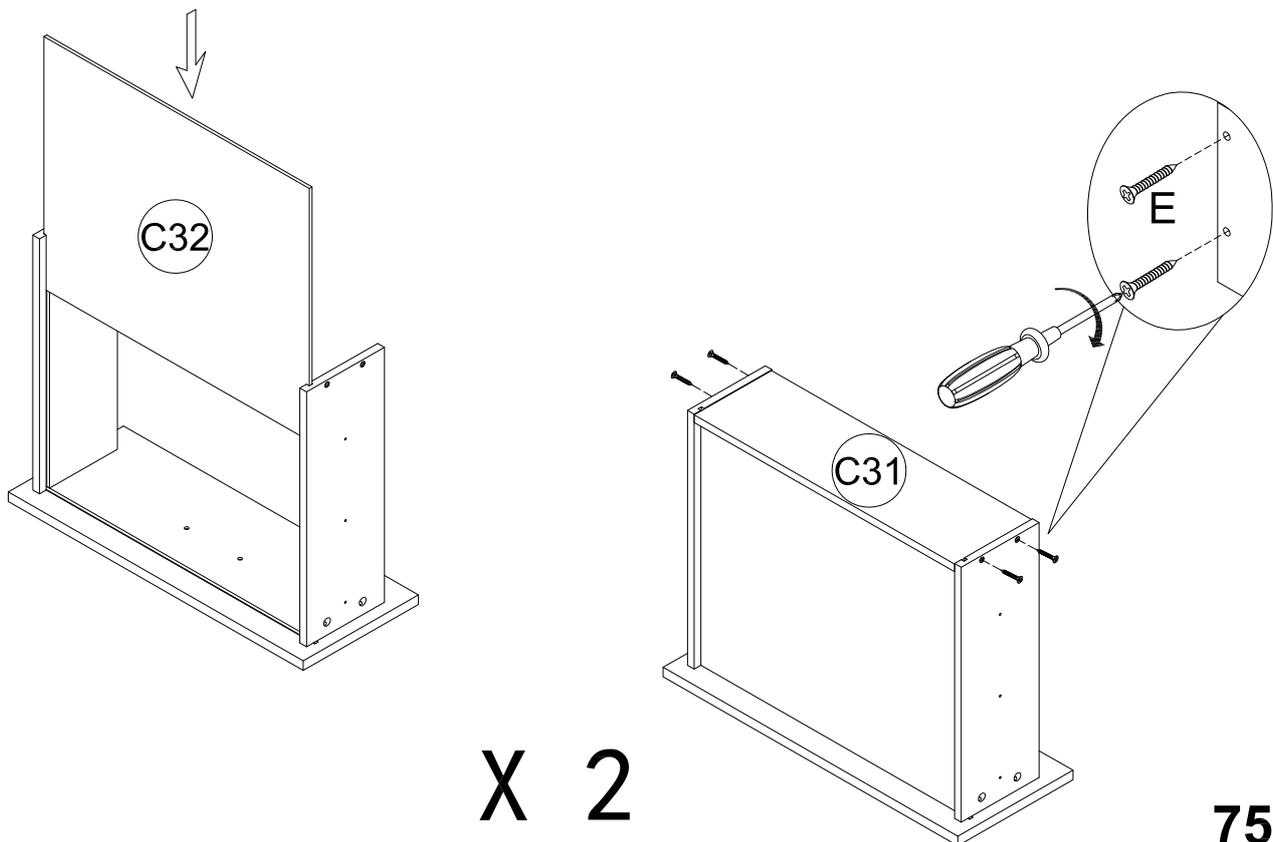


75685


STEP 20: Use a Phillips Head Screwdriver to attach the Runner(L) to the Drawer Left side Panel(C29) and Drawer Right side Panel(C30) with Screw(D). Use a Phillips Head Screwdriver to assemble the Handle(S) to the Drawer Front Panel(C28) with Bolt(G).

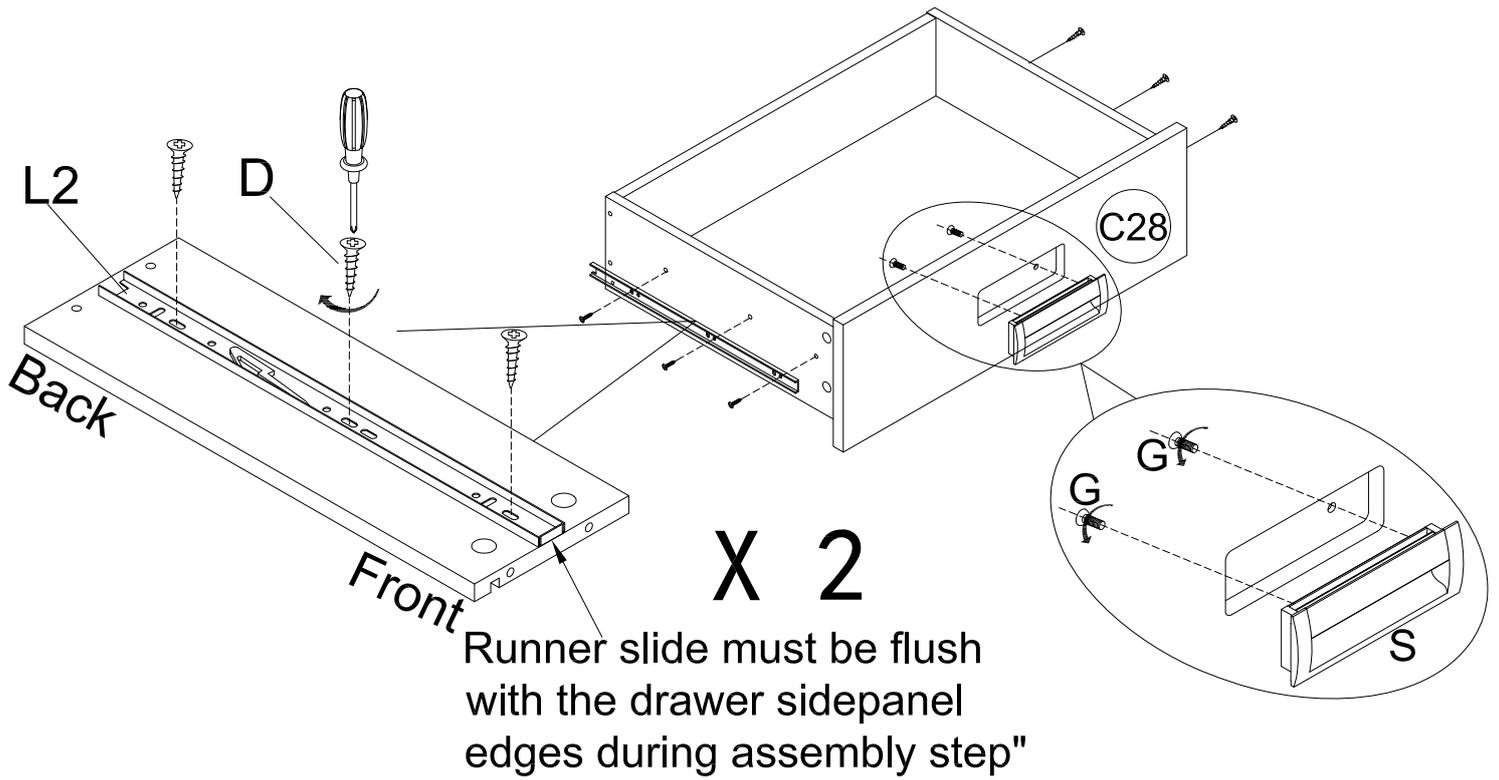



STEP 21: Insert the Drawer to the body.

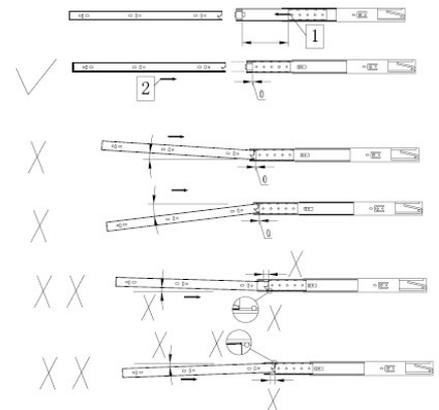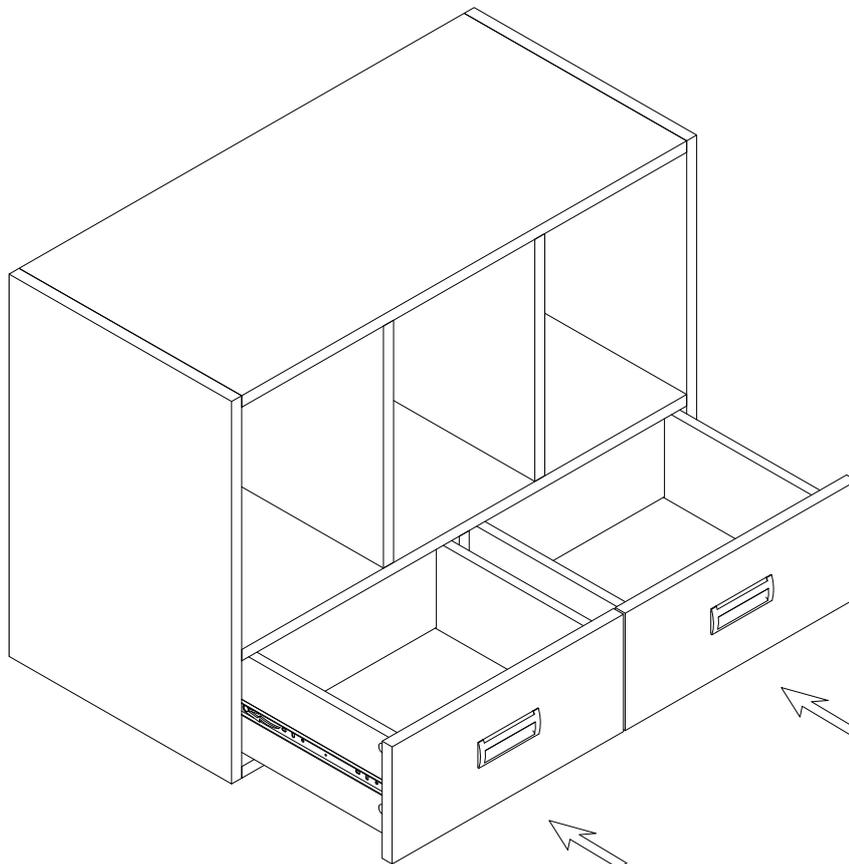

STEP 22: Use a Phillips Head Screwdriver to tighten the Slat(C34) to the Front Side Panel(C8) and Back Side Panel(C10) with Screw(E).

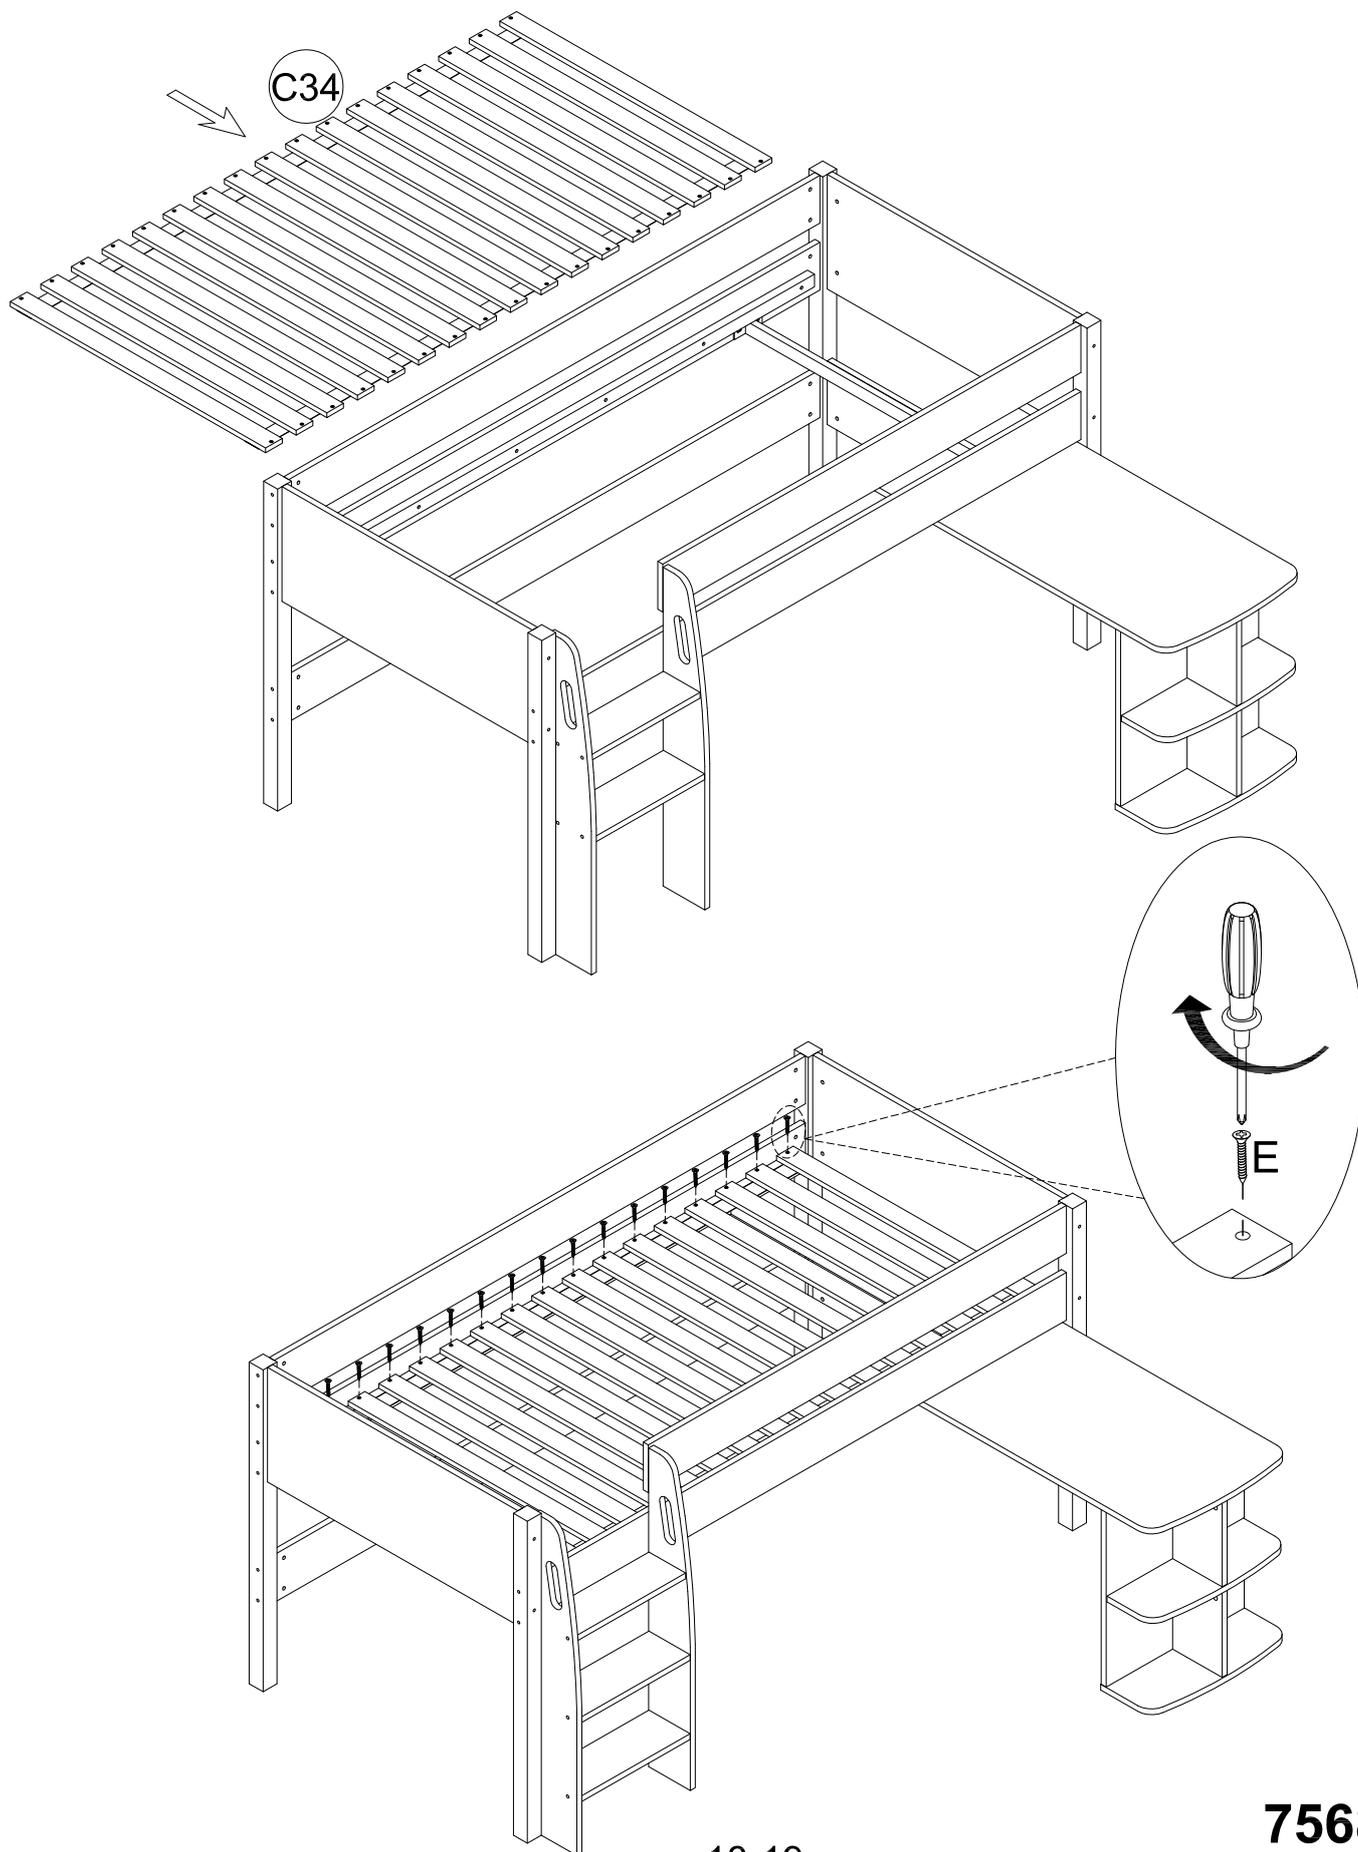

STEP 23: Use a Phillips Head Screwdriver to tighten Metal Brace(W) to the Front Safety Rail(C7) and Front Side Panel(C8) with Screw(V). Use a Phillips Head Screwdriver to tighten Metal Brace(W) to the Back Panel (C9) and Back Side Panel(C10) with Screw(V). Insert the Bookslide to the body.

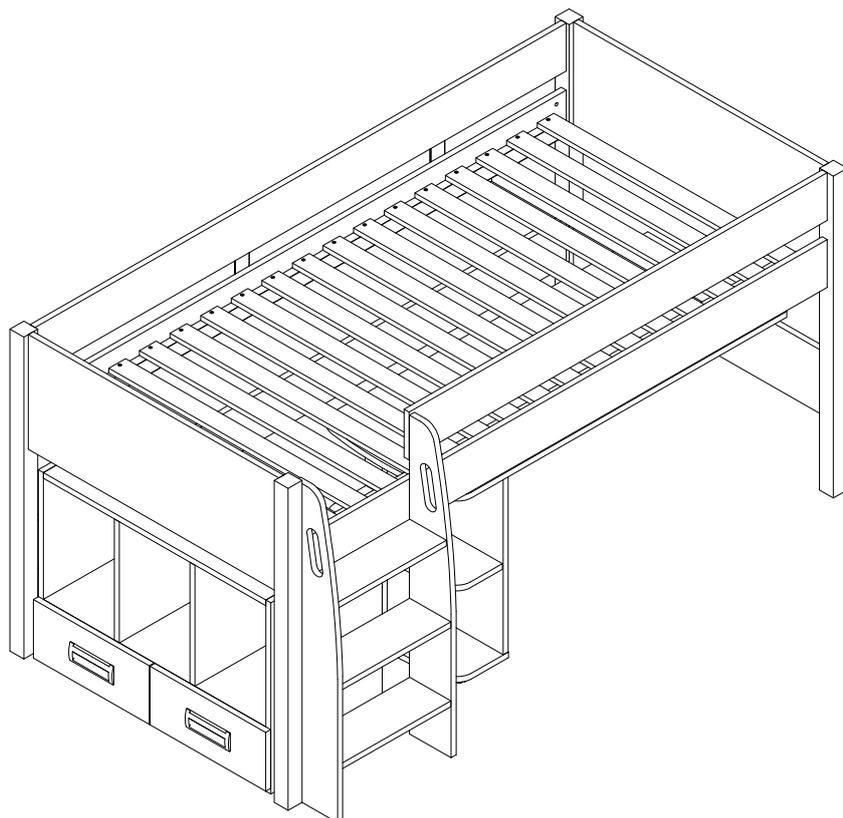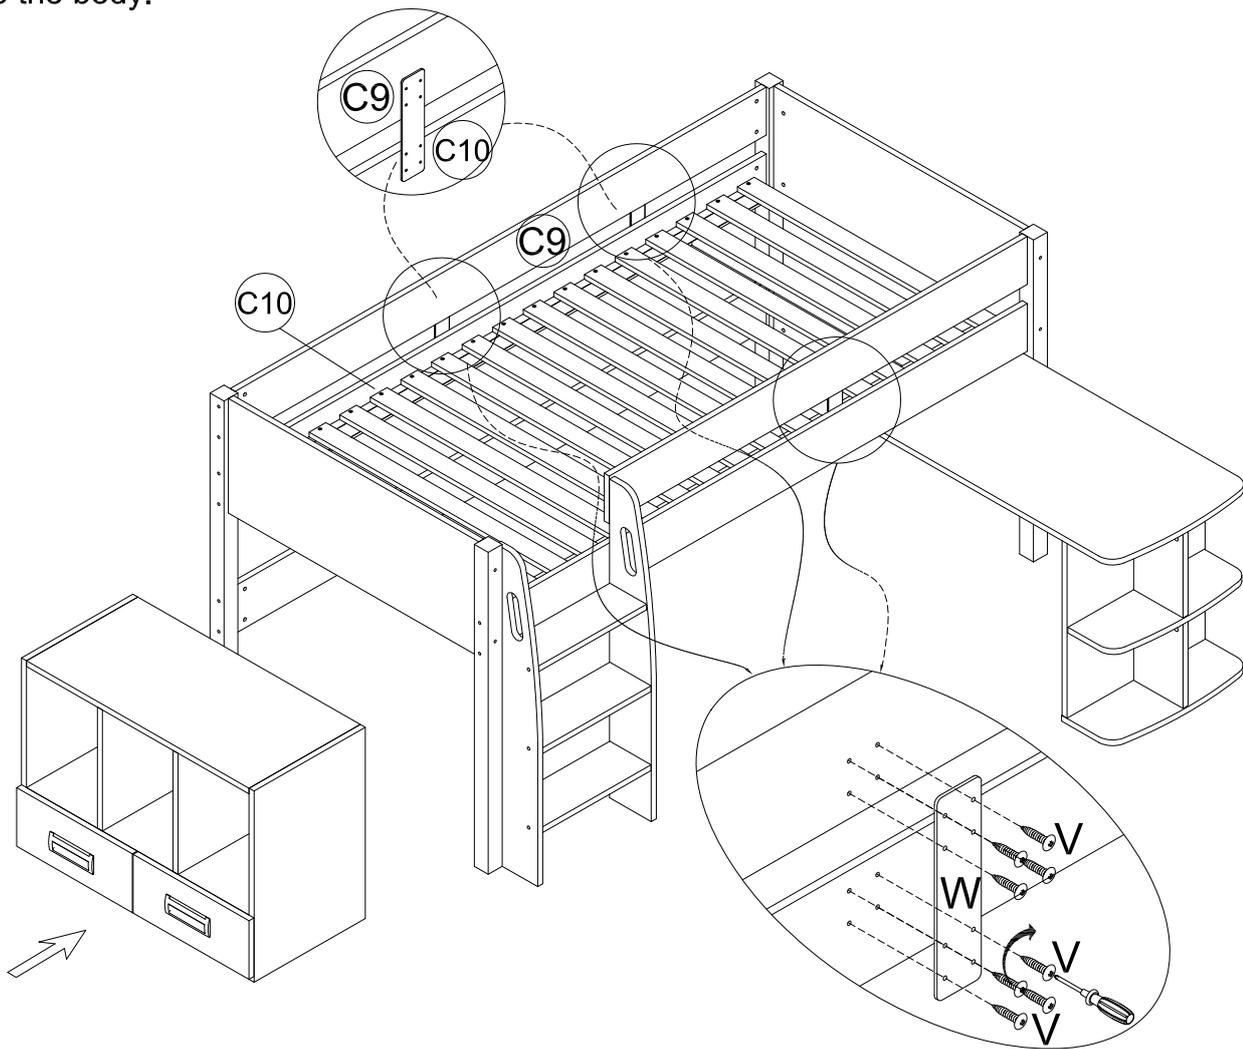

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- NOTE: If the above care advise is not adhered to your product warranty may become void